<u>^</u>

NOTICE


CDs and adapters that cannot be used

Do not use the following types of CDs or 3 in. (8 cm) CD adapters or Dual Disc.


Doing so may damage the CD player and/or the CD insert/eject function.




 CDs that have a diameter that is not 4.7 in. (12 cm)

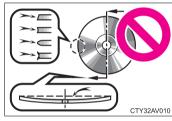

Low-quality and deformed CDs

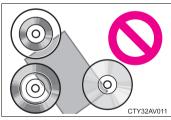

 CDs with a transparent or translucent recording area

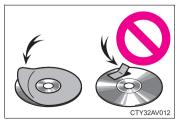

 CDs that have had tape, stickers or CD-R labels attached to them, or that have had the label peeled off