■ **Control panel**

Power   Volume

Random playback

Playback/pause

Selecting a file/ displaying folder lists

Back button

Repeat play

Displaying text messages

Searching playback

Selecting a folder

Selecting a file, fast-forwarding or reversing
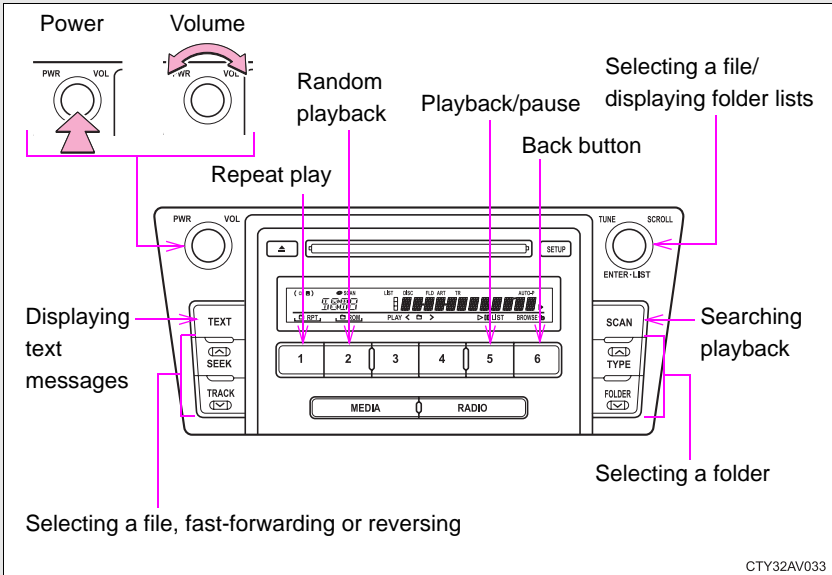
CTY32AV033

Selecting and scanning a folder

■ **Selecting a folder**

Press [TYPE] or [FOLDER] to select the desired folder.

■ **Returning to the first file of the first folder**

Press and hold [FOLDER] until you hear a beep.

3

Interior features

273