
Turn signal lever

The turn signal lever can be used to show the following intentions of the driver:

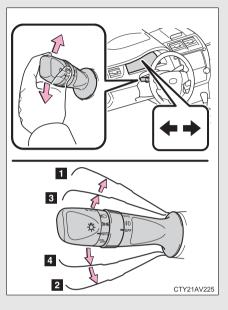

- Right turn
- 2 Left turn
- Lane change to the right (push and hold the lever partway)

The right hand signals will flash until you release the lever.

4 Lane change to the left (push and hold the lever partway)

The left hand signals will flash until you release the lever.

■Turn signals can be operated when

Vehicles without a smart key system: The engine switch is in the "ON" position.

Vehicles with a smart key system: The "ENGINE START STOP" switch is in IGNITION ON mode.

■ If the indicators flashes faster than usual.

Check that a light bulb in the front or rear turn signal lights has not burned out.