

Taking out the jack

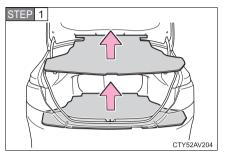

Remove the luggage floor cover and spare tire cover.

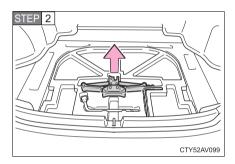

Remove the jack.