Selecting a track from a track list

STEP 1 Press ⓞ .

The track list will be displayed.

STEP 2 Turn and press ⓞ to select a track.

To return to the previous display, press ⌐ 6 ⌐ (⤺).

Scanning tracks

STEP 1 Press ⌐ SCAN ⌐ .

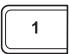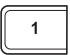The first 10 seconds of each track will be played.

To cancel, press ⌐ SCAN ⌐ again.

STEP 2 Press ⌐ SCAN ⌐ again when the desired track is reached.

Fast-forwarding and reversing tracks

Press and hold ⌐ SEEK ⌐ or ⌐ TRACK ⌐ .

Repeat play

Press ⌐ 1 ⌐ (RPT).

The current track is played repeatedly until ⌐ 1 ⌐ (RPT) is pressed again.