Using the multi-information display


Using the content display area

The content display area is operated using the meter control switches.

- Scroll screens*, change the displayed content* and move the cursor
- ② Press: Enter/Set

Press and hold: Reset/Display the next screen

3 Return to the previous screen

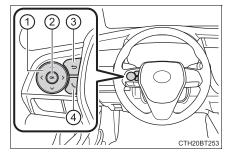

Pressing and holding the switch will display the first screen of the selected menu icon.

(4) Call sending/receiving and history display

Linked with the hands-free system, sending or receiving call is displayed. For details regarding the hands-free system, refer to "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

*: When the screen can be scrolled or different content can be displayed, a mark, such as an arrow, will be displayed to suggest which switch to operate.

Using the odometer/trip meter

Items in this area are operated using the "ODO/TRIP" switch.

Press: Change displayed item

Each time the switch is pressed, the displayed item will be changed.

Press and hold: Reset

Display the desired trip meter and press and hold the switch to reset the trip meter.

