


# Low Power High Performance 2.4 GHz GFSK Transceiver

### **Features**

- 2400-2483.5 MHz ISM band operation
- Support 1 and 2 Mbps air data rate
- Programmable output power (-40dBm to 5dBm)
- Low power consumption
- Tolerate +/- 60ppm 16 MHz crystal
- Variable payload length from 1 to 32bytes
- Automatic packet processing
- 6 data pipes for 1:6 star networks
- 1.9V to 3.6V power supply
- 4-pin SPI interface with maximum 8 MHz clock rate
- Compact 20-pin 4x4 mm QFN package and dice

## **Pin Assignments**

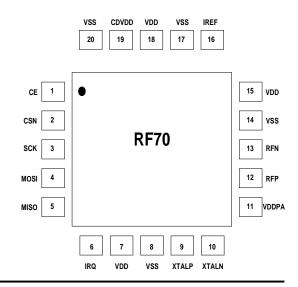


# **Applications**

- Wireless PC peripherals
- Wireless mice and keyboards
- Wireless gamepads
- Wireless audio
- VOIP and wireless headsets

- Remote controls
- Consumer electronics
- Home automation
- Toys
- Personal health and entertainment

# **Block Diagram**

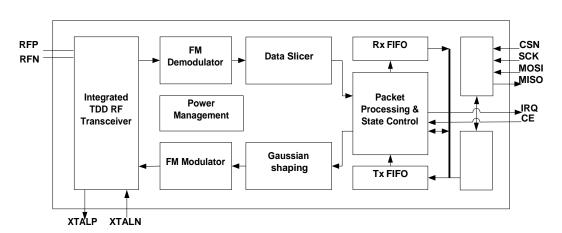



# **Table of Contents**

1		al Description	
2		viations	
3		formation	
4		Control	
		te Control Diagram	
		ver Down Mode	
		ndby-I Mode	
		ndby-II Mode	
		Mode	
		Mode	
5		t Processing	
		ket Format	. 8
	5.1.1	Preamble	
	5.1.2	Address	
	5.1.3	Packet Control	
	5.1.4	Payload	
	5.1.5	CRC	
		ket Handling	
6		and Control Interface	
		/RX FIFO	
		errupt	
		Interface	
	6.3.1	SPI Command	
	6.3.2	SPI Timing	
7		er Map	
	,	gister Bank 0	
	,	gister Bank 1	
8	Electr	ical Specifications	21
9		al Application Schematic	
10		ge Information	
11		Information	
12	! Conta	ct Information	25



## **1** General Description

RF70 is a GFSK transceiver operating in the world wide ISM frequency band at 2400-2483.5 MHz. Burst mode transmission and up to 2Mbps air data rate make them suitable for applications requiring ultra low power consumption. The embedded packet processing engines enable their full operation with a very simple MCU as a radio system. Auto re-transmission and auto acknowledge give reliable link without any MCU interference.

RF70 operates in TDD mode, either as a transmitter or as a receiver.

The RF channel frequency determines the center of the channel used by RF70. The frequency is set by the RF\_CH register in register bank 0 according to the following formula: F0= 2400 + RF CH (MHz). The

resolution of the RF channel frequency is 1MHz.

A transmitter and a receiver must be programmed with the same RF channel frequency to be able to communicate with each other.

The output power of RF70 is set by the RF\_PWR bits in the RF\_SETUP register.

Demodulation is done with embedded data slicer and bit recovery logic. The air data rate can be programmed to 1Mbps or 2Mbps by RF\_DR register. A transmitter and a receiver must be programmed with the same setting.

In the following chapters, all registers are in register bank 0 except with explicit claim.

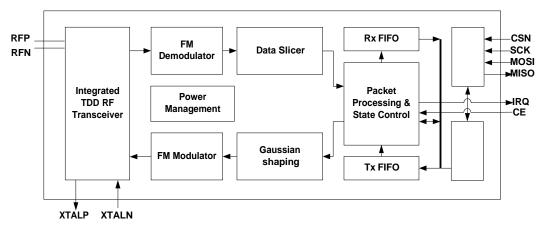


Figure 1 RF70 Chip Block Diagram



### 2 Abbreviations

ACK Acknowledgement

ARC Auto Retransmission Count ARD Auto Retransmission Delay

CD Carrier Detection
CE Chip Enable

CRC Cyclic Redundancy Check

CSN Chip Select Not

DPL Dynamic Payload Length

FIFO First-In-First-Out

GFSK Gaussian Frequency Shift Keying

GHz Gigahertz

LNA Low Noise Amplifier IRQ Interrupt Request

ISM Industrial-Scientific-Medical

LSB Least Significant Bit
MAX\_RT Maximum Retransmit
Mbps Megabit per second
MCU Microcontroller Unit

MHz Megahertz

MISO Master In Slave Out
MOSI Master Out Slave In
MSB Most Significant Bit
PA Power Amplifier
PID Packet Identity Bits

PLD Payload
PRX Primary RX
PTX Primary TX
PWD\_DWN Power Down
PWD\_UP Power Up

RF\_CH Radio Frequency Channel

RSSI Received Signal Strength Indicator

RX Receive

RX\_DR Receive Data Ready

SCK SPI Clock

SPI Serial Peripheral Interface TDD Time Division Duplex

TX Transmit

TX\_DS Transmit Data Sent

XTAL Crystal



# **3** Pin Information

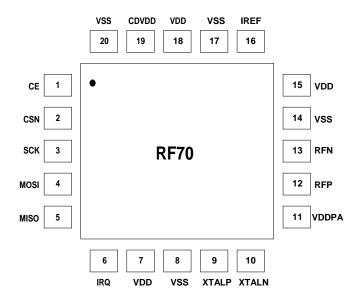


Figure 2 RF70 pin assignments (top view) for the QFN20 4x4 package

PIN	Name	Pin Function	Description
1	CE	Digital Input	Chip Enable Activates RX or TX mode
2	CSN	Digital Input	SPI Chip Select, Active low
3	SCK	Digital Input	SPI Clock
4	MOSI	Digital Input	SPI Slave Data Input
5	MISO	Digital Output	SPI Slave Data Output with tri-state option
6	IRQ	Digital Output	Maskable interrupt pin, Active low
7	VDD	Power	Power Supply (1.9 V to 3.6 V DC)
8	VSS	Ground	Ground (0 V)
9	XTALP	Analog Output	Crystal oscillator, node P (inverter output)
10	XTALN	Analog Input	Crystal oscillator, node N (inverter input)
11	VDDPA	Power	1.8V Regulator output for PA,TX:1.8V,RX:0V
12	RFP	RF port	RF output (PA) /input (LNA), port P.
13	RFN	RF port	RF output (PA) /Input (LNA), port N.
14	VSS	Ground	Ground (0 V)
15	VDD	Power	Power Supply (1.9 V to 3.6 V DC)
16	IREF	Analog Output	Reference current generation. A 22Kohm external resistor connected to ground.
17	VSS	Ground	Ground (0 V)
18	VDD	Power	Power Supply (1.9 V to 3.6 V DC)
19	CDVDD	Analog Output	Digital regulator output decoupling capacitor
20	VSS	Ground	Ground (0 V)

Table 1 RF70 pin functions



### 4 State Control

### 4.1 State Control Diagram

- Pin signal: VDD, CE
- SPI register: PWR\_UP, PRIM\_RX, EN\_AA, NO\_ACK, ARC, ARD
- System information: Time out, ACK received, ARD elapsed, ARC\_CNT, TX FIFO empty, ACK packet transmitted, Packet received

RF70 has built-in state machines that control the state transition between different modes.

When auto acknowledge feature is disabled, state transition will be fully controlled by MCU.

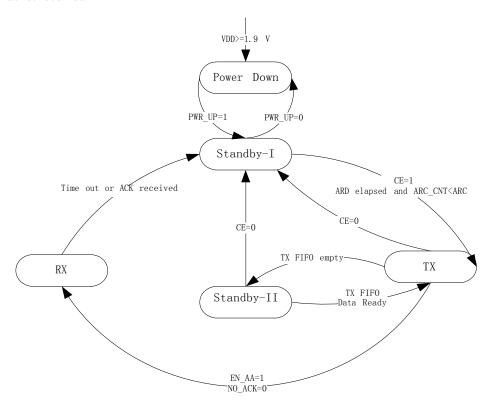


Figure 3 PTX (PRIM\_RX=0) state control diagram



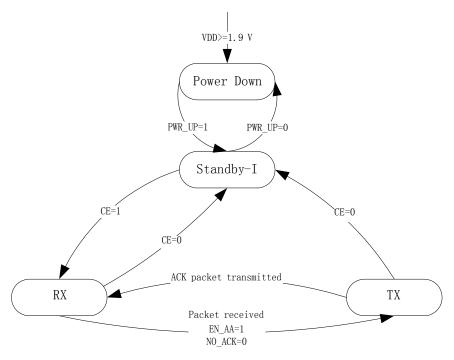


Figure 4 PRX (PRIM\_RX=1) state control diagram

#### 4.2 Power Down Mode

In power down mode RF70 is in sleep mode with minimal current consumption. SPI interface is still active in this mode, and all register values are available by SPI. Power down mode is entered by setting the PWR\_UP bit in the CONFIG register to low.

### 4.3 Standby-I Mode

By setting the PWR\_UP bit in the CONFIG register to 1 and de-asserting CE to 0, the device enters standby-I mode. Standby-I mode is used to minimize average current consumption while maintaining short start-up time. In this mode, part of the crystal oscillator is active. This is also the mode which the RF70 returns to from TX or RX mode when CE is set low.

### 4.4 Standby-II Mode

In standby-II mode more clock buffers are active than in standby-I mode and much more current is used. Standby-II occurs when CE is held high on a PTX device with empty TX FIFO. If a new packet is uploaded to the TX FIFO in this mode, the device will automatically enter TX mode and the packet is transmitted.

### 4.5 TX Mode

### ■ PTX device (PRIM\_RX=0)

The TX mode is an active mode where the PTX device transmits a packet. To enter this mode from power down mode, the PTX device must have the PWR\_UP bit set high, PRIM\_RX bit set low, a payload in the TX FIFO, and a high pulse on the CE for more than  $10\mu s$ .



The PTX device stays in TX mode until it finishes transmitting the current packet. If CE = 0 it returns to standby-I mode. If CE = 1, the next action is determined by the status of the TX FIFO. If the TX FIFO is not empty the PTX device remains in TX mode, transmitting the next packet. If the TX FIFO is empty the PTX device goes into standby-II mode.

If the auto retransmit is enabled (EN\_AA=1) and auto acknowledge is required (NO\_ACK=0), the PTX device will enter TX mode from standby-I mode when ARD elapsed and number of retried is less than ARC.

#### ■ PRX device (PRIM\_RX=1)

The PRX device will enter TX mode from RX mode only when EN\_AA=1 and NO\_ACK=0 in received packet to transmit acknowledge packet with pending payload in TX FIFO.

#### 4.6 RX Mode

### ■ PRX device (PRIM\_RX=1)

The RX mode is an active mode where the RF70 radio is configured to be a receiver. To enter this mode from standby-I mode, the PRX device must have the PWR\_UP bit set high, PRIM\_RX bit set high and the CE pin

set high. Or PRX device can enter this mode from TX mode after transmitting an acknowledge packet when EN\_AA=1 and NO\_ACK=0 in received packet.

In this mode the receiver demodulates the signals from the RF channel, constantly presenting the demodulated data to the packet processing engine. The packet processing engine continuously searches for a valid packet. If a valid packet is found (by a matching address and a valid CRC) the payload of the packet is presented in a vacant slot in the RX FIFO. If the RX FIFO is full, the received packet is discarded.

The PRX device remains in RX mode until the MCU configures it to standby-I mode or power down mode.

In RX mode a carrier detection (CD) signal is available. The CD is set to high when a RF signal is detected inside the receiving frequency channel. The internal CD signal is filtered before presented to CD register. The RF signal must be present for at least 128  $\mu s$  before the CD is set high.


#### ■ PTX device (PRIM\_RX=0)

The PTX device will enter RX mode from TX mode only when EN\_AA=1 and NO\_ACK=0 to receive acknowledge packet.

## 5 Packet Processing

#### 5.1 Packet Format

The packet format has a preamble, address, packet control, payload and CRC field.



**Figure 5 Packet Format** 



#### 5.1.1 Preamble

The preamble is a bit sequence used to detect 0 and 1 levels in the receiver. The preamble is one byte long and is either 01010101 or 10101010. If the first bit in the address is 1 the preamble is automatically set to 10101010 and if the first bit is 0 the preamble is automatically set to 01010101. This is done to ensure there are enough transitions in the preamble to stabilize the receiver.

#### 5.1.2 Address

This is the address for the receiver. An address ensures that the packet is detected by the target receiver. The address field can be configured to be 3, 4, or 5 bytes long by the AW register.

The PRX device can open up to six data pipes to support up to six PTX devices with unique addresses. All six PTX device addresses are searched simultaneously. In PRX side, the data pipes are enabled with the bits in the EN\_RXADDR register. By default only data pipe 0 and 1 are enabled.

Each data pipe address is configured in the RX\_ADDR\_PX registers.

Each pipe can have up to 5 bytes configurable address. Data pipe 0 has a unique 5 byte address. Data pipes 1-5 share the 4 most significant address bytes. The LSB byte must be unique for all 6 pipes.

To ensure that the ACK packet from the PRX is transmitted to the correct PTX, the PRX takes the data pipe address where it received the packet and uses it as the TX address when transmitting the ACK packet.

On the PRX the RX\_ADDR\_Pn, defined as the pipe address, must be unique. On the PTX the TX\_ADDR must be the same as the RX\_ADDR\_P0 on the PTX, and as the pipe address for the designated pipe on the PRX.

No other data pipe can receive data until a complete packet is received by a data pipe that

has detected its address. When multiple PTX devices are transmitting to a PRX, the ARD can be used to skew the auto retransmission so that they only block each other once.

#### 5.1.3 Packet Control

When Dynamic Payload Length function is enabled, the packet control field contains a 6 bit payload length field, a 2 bit PID (Packet Identity) field and, a 1 bit NO\_ACK flag.

#### Payload length

The payload length field is only used if the Dynamic Payload Length function is enabled.

#### ■ PID

The 2 bit PID field is used to detect whether the received packet is new or retransmitted. PID prevents the PRX device from presenting the same payload more than once to the MCU. The PID field is incremented at the TX side for each new packet received through the SPI. The PID and CRC fields are used by the PRX device to determine whether a packet is old or new. When several data packets are lost on the link, the PID fields may become equal to the last received PID. If a packet has the same PID as the previous packet, RF70 compares the CRC sums from both packets. If the CRC sums are also equal, the last received packet is considered a copy of the previously received packet and discarded.

### ■ NO ACK

The NO\_ACK flag is only used when the auto acknowledgement feature is used. Setting the flag high, tells the receiver that the packet is not to be auto acknowledged.

The PTX can set the NO\_ACK flag bit in the Packet Control Field with the command: W\_TX\_PAYLOAD\_NOACK.However, the function must first be enabled in the FEATURE register by setting the EN\_DYN\_ACK bit. When you use this option,



the PTX goes directly to standby-I mode after transmitting the packet and the PRX does not transmit an ACK packet when it receives the packet.

#### 5.1.4 Payload

The payload is the user defined content of the packet. It can be 0 to 32 bytes wide, and it is transmitted on-air as it is uploaded (unmodified) to the device.

The RF70 provides two alternatives for handling payload lengths, static and dynamic payload length. The static payload length of each of six data pipes can be individually set.

The default alternative is static payload length. With static payload length all packets between a transmitter and a receiver have the same length. Static payload length is set by the RX\_PW\_Px registers. The payload length on the transmitter side is set by the number of bytes clocked into the TX\_FIFO and must equal the value in the RX\_PW\_Px register on the receiver side. Each pipe has its own payload length.

Dynamic Payload Length (DPL) is an alternative to static payload length. DPL enables the transmitter to send packets with variable payload length to the receiver. This means for a system with different payload lengths it is not necessary to scale the packet length to the longest payload.

With DPL feature the RF70 can decode the payload length of the received packet automatically instead of using the RX\_PW\_Px registers. The MCU can read the length of the received payload by using the command: R\_RX\_PL\_WID.

In order to enable DPL the EN\_DPL bit in the FEATURE register must be set. In RX mode the DYNPD register has to be set. A PTX that transmits to a PRX with DPL enabled must have the DPL\_P0 bit in DYNPD set.

#### 5.1.5 CRC

The CRC is the error detection mechanism in the packet. The number of bytes in the CRC is set by the CRCO bit in the CONFIG register. It may be either 1 or 2 bytes and is calculated over the address, Packet Control Field, and Payload.

The polynomial for 1 byte CRC is  $X^8 + X^2 + X + 1$ . Initial value is 0xFF. The polynomial for 2 byte CRC is  $X^{16} + X^{12} + X^5 + 1$ . Initial value is 0xFFFF.

No packet is accepted by receiver side if the CRC fails.

### **5.2** Packet Handling

RF70 uses burst mode for payload transmission and receive.

The transmitter fetches payload from TX FIFO, automatically assembles it into packet and transmits the packet in a very short burst period with 1Mbps or 2Mbps air data rate.

After transmission, if the PTX packet has the NO\_ACK flag set, RF70 sets TX\_DS and gives an active low interrupt IRQ to MCU. If the PTX is ACK packet, the PTX needs receive ACK from the PRX and then asserts the TX\_DS IRQ.

The receiver automatically validates and disassembles received packet, if there is a valid packet within the new payload, it will write the payload into RX FIFO, set RX\_DR and give an active low interrupt IRQ to MCU.

is When auto acknowledge enabled (EN AA=1),the PTX device automatically wait for acknowledge packet after transmission, and re-transmit original packet with the delay of ARD until an acknowledge packet is received or the number of re-transmission exceeds a threshold ARC. If the later one happens, RF70 will set MAX\_RT and give an active low interrupt



IRQ to MCU. Two packet loss counters (ARC\_CNT and PLOS\_CNT) are incremented each time a packet is lost. The ARC\_CNT counts the number of retransmissions for the current transaction. The PLOS\_CNT counts the total number of retransmissions since the last channel change. ARC\_CNT is reset by initiating a new transaction. PLOS\_CNT is reset by writing to the RF\_CH register. It is possible to use the information in the OBSERVE\_TX register to make an overall assessment of the channel quality.

The PTX device will retransmit if its RX FIFO is full but received ACK frame has payload.

As an alternative for PTX device to auto retransmit it is possible to manually set the RF70 to retransmit a packet a number of times. This is done by the REUSE\_TX\_PL command.

When auto acknowledge is enabled, the PRX device will automatically check the NO\_ACK field in received packet, and if NO\_ACK=0, it will automatically send an acknowledge packet to PTX device. If EN\_ACK\_PAY is set, and the acknowledge packet can also include pending payload in TX FIFO.

#### 6 Data and Control Interface

#### 6.1 TX/RX FIFO

The data FIFOs are used to store payload that is to be transmitted (TX FIFO) or payload that is received and ready to be clocked out (RX FIFO). The FIFO is accessible in both PTX mode and PRX mode.

There are three levels 32 bytes FIFO for both TX and RX, supporting both acknowledge mode or no acknowledge mode with up to six pipes.

- TX three levels, 32 byte FIFO
- RX three levels, 32 byte FIFO

Both FIFOs have a controller and are

accessible through the SPI by using dedicated SPI commands. A TX FIFO in PRX can store payload for ACK packets to three different PTX devices. If the TX FIFO contains more than one payload to a pipe, payloads are handled using the first in first out principle. The TX FIFO in a PRX is blocked if all pending payloads are addressed to pipes where the link to the PTX is lost. In this case, the MCU can flush the TX FIFO by using the FLUSH TX command.

The RX FIFO in PRX may contain payload from up to three different PTX devices.

A TX FIFO in PTX can have up to three payloads stored.

The TX FIFO can be written to by three commands, W\_TX\_PAYLOAD and W\_TX\_PAYLOAD\_NO\_ACK in PTX mode and W\_ACK\_PAYLOAD in PRX mode. All three commands give access to the TX\_PLD register.

The RX FIFO can be read by the command R\_RX\_PAYLOAD in both PTX and PRX mode. This command gives access to the RX\_PLD register.

The payload in TX FIFO in a PTX is NOT removed if the MAX\_RT IRQ is asserted.

In the FIFO\_STATUS register it is possible to read if the TX and RX FIFO are full or empty. The TX\_REUSE bit is also available in the FIFO\_STATUS register. TX\_REUSE is set by the SPI command REUSE\_TX\_PL, and is reset by the SPI command: W\_TX\_PAYLOAD or FLUSH TX.

#### 6.2 Interrupt

In RF70 there is an active low interrupt (IRQ) pin, which is activated when TX\_DS IRQ, RX\_DR IRQ or MAX\_RT IRQ are set high by the state machine in the STATUS register. The IRQ pin resets when MCU writes

'1' to the IRQ source bit in the STATUS register. The IRQ mask in the CONFIG



register is used to select the IRQ sources that are allowed to assert the IRQ pin. By setting one of the MASK bits high, the corresponding IRQ source is disabled. By default all IRQ sources are enabled.

The 3 bit pipe information in the STATUS register is updated during the IRQ pin high to low transition. If the STATUS register is read during an IRQ pin high to low transition, the pipe information is unreliable.

#### **6.3** SPI Interface

#### 6.3.1 SPI Command

The SPI commands are shown in Table 2. Every new command must be started by a high

to low transition on CSN.

In parallel to the SPI command word applied on the MOSI pin, the STATUS register is shifted serially out on the MISO pin.

The serial shifting SPI commands is in the following format:

- <Command word: MSB bit to LSB bit (one byte)>
- <Data bytes: LSB byte to MSB byte, MSB bit in each byte first> for all registers at bank 0 and register 9 to register 14 at bank 1

Command name    Command word word (binary)   # Data bytes		Operation			
R_REGISTER	000A AAAA	1 to 5 LSB byte first	Read command and status registers. AAAAA = 5 bit Register Map Address		
W_REGISTER	W_REGISTER 001A AAAA 1 to 5 LSB byte first		Write command and status registers. AAAAA = 5 bit Register Map Address Executable in power down or standby modes only.		
R_RX_PAYLOAD	RX_PAYLOAD 0110 0001 1 to 32 LSB byte first		Read RX-payload: 1 – 32 bytes. A read operation always starts at byte 0. Payload is deleted from FIFO after it is read. Used in RX mode.		
W_TX_PAYLOAD	X_PAYLOAD 1010 0000 1 to 32 LSB byte first		Write TX-payload: 1 – 32 bytes. A write operation always starts at byte 0 used in TX payload.		
FLUSH_TX	1110 0001	0	Flush TX FIFO, used in TX mode		
FLUSH_RX	1110 0010	0	Flush RX FIFO, used in RX mode Should not be executed during transmission of acknowledge, that is, acknowledge package will not be completed.		
REUSE_TX_PL	REUSE_TX_PL 1110 0011 0		Used for a PTX device Reuse last transmitted payload. Packets are repeatedly retransmitted as long as CE is high. TX payload reuse is active until W_TX_PAYLOAD or FLUSH TX is executed. TX payload reuse must not be activated or deactivated during package transmission		



ACTIVATE	0101 0000	1	This write command followed by data 0x73 activates the following features:  R_RX_PL_WID  W_ACK_PAYLOAD  W_TX_PAYLOAD_NOACK  A new ACTIVATE command with the same data deactivates them again. This is executable in power down or stand by modes only.  The R_RX_PL_WID, W_ACK_PAYLOAD, and W_TX_PAYLOAD_NOACK features registers are initially in a deactivated state; a write has no effect, a read only results in zeros on MISO. To activate these registers, use the ACTIVATE command followed by data 0x73. Then they can be accessed as any other register. Use the same command and data to deactivate the registers again.  This write command followed by data 0x53 toggles the register bank, and the current register bank number can be read out from REG7 [7]
R_RX_PL_WID	0110 0000		Read RX-payload width for the top R_RX_PAYLOAD in the RX FIFO.
W_ACK_PAYLOAD	1010 1PPP	1 to 32 LSB byte first	Used in RX mode. Write Payload to be transmitted together with ACK packet on PIPE PPP. (PPP valid in the range from 000 to 101). Maximum three ACK packet payloads can be pending. Payloads with same PPP are handled using first in - first out principle. Write payload: 1- 32 bytes. A write operation always starts at byte 0.
W_TX_PAYLOAD_NO ACK	1011 0000	1 to 32 LSB byte first	Used in TX mode. Disables AUTOACK on this specific packet.
NOP	1111 1111	0	No Operation. Might be used to read the STATUS register

Table 2 SPI command

### 6.3.2 SPI Timing

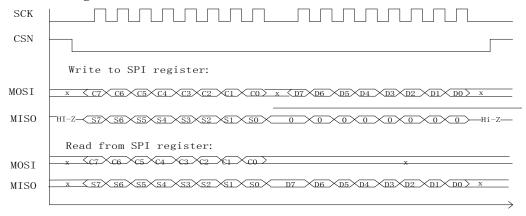


Figure 6 SPI timing



Cn: SPI command bit Sn: STATUS register bit

Dn: Data Bit (LSB byte to MSB byte, MSB bit in each byte first)

Note: The SPI timing is for bank 0 and register 9 to 14 at bank 1. For register 0 to 8 at bank 1, the byte order is inversed that the MSB byte is R/W before LSB byte.

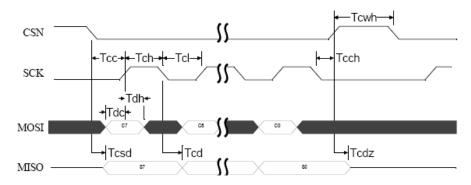


Figure 7 SPI NOP timing diagram

Symbol	Parameters	Min	Max	Units
Tdc	Data to SCK Setup	10		ns
Tdh	SCK to Data Hold	2		ns
Tcsd	CSN to Data Valid		38	ns
Tcd	SCK to Data Valid		55	ns
Tcl	SCK Low Time	40		ns
Tch	SCK High Time	40		ns
Fsck	SCK Frequency	0	8	MHz
Tr,Tf	SCK Rise and Fall		100	ns
Tcc	CSN to SCK Setup	2		ns
Tcch	SCK to CSN Hold	2		ns
Tcwh	CSN Inactive time	50		ns
Tcdz	CSN to Output High Z		38	ns

**Table 3 SPI timing parameter** 



# 7 Register Map

There are two register banks, which can be toggled by SPI command "ACTIVATE" followed with 0x53 byte, and bank status can be read from Bank0\_REG7 [7].

## 7.1 Register Bank 0

Address (Hex)	Mnemonic	Bit	Reset Value	Туре	Description
00	CONFIG				Configuration Register
	Reserved	7	0	R/W	Only '0' allowed
	MASK_RX_DR	6	0	R/W	Mask interrupt caused by RX_DR  1: Interrupt not reflected on the IRQ pin  0: Reflect RX_DR as active low interrupt on the IRQ pin
	MASK_TX_DS	5	0	R/W	Mask interrupt caused by TX_DS  1: Interrupt not reflected on the IRQ pin  0: Reflect TX_DS as active low interrupt on the IRQ pin
	MASK_MAX_RT	4	0	R/W	Mask interrupt caused by MAX_RT  1: Interrupt not reflected on the IRQ pin  0: Reflect MAX_RT as active low interrupt on the IRQ pin
	EN_CRC	3	1	R/W	Enable CRC. Forced high if one of the bits in the EN_AA is high
	CRCO	2	0	R/W	CRC encoding scheme '0' - 1 byte '1' - 2 bytes
	PWR_UP	1	0	R/W	1: POWER UP, 0:POWER DOWN
	PRIM_RX	0	0	R/W	RX/TX control, 1: PRX, 0: PTX
01	EN_AA				Enable "Auto Acknowledgment" Function
	Reserved	7:6	00	R/W	Only '00' allowed
	ENAA_P5	5	1	R/W	Enable auto acknowledgement data pipe 5
	ENAA_P4	4	1	R/W	Enable auto acknowledgement data pipe 4
	ENAA_P3	3	1	R/W	Enable auto acknowledgement data pipe 3
	ENAA_P2	2	1	R/W	Enable auto acknowledgement data pipe 2
	ENAA_P1	1	1	R/W	Enable auto acknowledgement data pipe 1
	ENAA_P0	0	1	R/W	Enable auto acknowledgement data pipe 0
02	EN_RXADDR				Enabled RX Addresses
	Reserved	7:6	00	R/W	Only '00' allowed
	ERX_P5	5	0	R/W	Enable data pipe 5.
	ERX_P4	4	0	R/W	Enable data pipe 4.
	ERX_P3	3	0	R/W	Enable data pipe 3.
	ERX_P2	2	0	R/W	Enable data pipe 2.
	ERX_P1	1	1	R/W	Enable data pipe 1.
	ERX_P0	0	1	R/W	Enable data pipe 0.



03	SETUP_AW				Setup of Address Widths
					(common for all data pipes)
	Reserved	7:2	000000	R/W	Only '000000' allowed
	AW	1:0	11	R/W	RX/TX Address field width
	AW	1.0	11	IX/ VV	'00' - Illegal
					'01' - 3 bytes
					'10' - 4 bytes
					'11' - 5 bytes
					LSB bytes are used if address width is
					below 5 bytes
04	SETUP_RETR				Setup of Automatic Retransmission
	ARD	7:4	0000	R/W	Auto Retransmission Delay
					"0000" – Wait 250 us
					"0001" – Wait 500 us
					"0010" – Wait 750 us
					1111" Weit 4000 we
					"1111" – Wait 4000 us
					(Delay defined from end of transmission to
					start of next transmission) Auto Retransmission Count
	ARC	3:0	0011	R/W	
	AKC	3:0	0011	K/W	"0000" –Re-Transmit disabled
					"0001" – Up to 1 Re-Transmission on fail of AA
					"1111" - Up to 15 Re-Transmission on fail
					of AA
05	RF_CH				RF Channel
03	Reserved	7	0	R/W	Only '0' allowed
	RF_CH	6:0	0000010	R/W	Sets the frequency channel
	Kr_Cn	0.0	0000010	IX/ VV	Sets the frequency channel
06	RF_SETUP				RF Setup Register
	Reserved	7	0	R/W	Reserved
		6	0	R/W	Reserved
		5	1	R/W	Reserved
		4	1		Reserved
	RF_DR	3	1	R/W	Air Data Rate
					"0" – 1Mbps
					"1" – 2Mbps
]					Set RF output power in TX mode
					RF_PWR[1:0]
	RF_PWR[1:0]	2:1	11	R/W	'00'10 dBm
			11	IX/ VV	'01'5 dBm
	i				'10' - 0 dBm
				1	1
					'11' - 5 dBm
					Setup LNA gain
	LNA_HCURR	0	1	R/W	Setup LNA gain 0:Low gain(20dB down)
	LNA_HCURR	0	1	R/W	Setup LNA gain
	LNA_HCURR	0	1	R/W	Setup LNA gain 0:Low gain(20dB down) 1:High gain
07	_	0	1	R/W	Setup LNA gain 0:Low gain(20dB down) 1:High gain  Status Register (In parallel to the SPI
07	LNA_HCURR STATUS	0	1	R/W	Setup LNA gain 0:Low gain(20dB down) 1:High gain  Status Register (In parallel to the SPI command word applied on the MOSI pin,
07	_	0	1	R/W	Setup LNA gain 0:Low gain(20dB down) 1:High gain  Status Register (In parallel to the SPI command word applied on the MOSI pin, the STATUS register is shifted serially out
07	_	0	1	R/W	Setup LNA gain 0:Low gain(20dB down) 1:High gain  Status Register (In parallel to the SPI command word applied on the MOSI pin, the STATUS register is shifted serially out on the MISO pin)  Register bank selection states. Switch
07	STATUS				Setup LNA gain 0:Low gain(20dB down) 1:High gain  Status Register (In parallel to the SPI command word applied on the MOSI pin, the STATUS register is shifted serially out on the MISO pin)  Register bank selection states. Switch
07	_	7	0	R/W	Setup LNA gain 0:Low gain(20dB down) 1:High gain  Status Register (In parallel to the SPI command word applied on the MOSI pin, the STATUS register is shifted serially out on the MISO pin)



				1	1. Dagistar bank 1
	RX_DR	6	0	R/W	1: Register bank 1 Data Ready RX FIFO interrupt
	KA_DK	0	U	IX/ VV	Asserted when new data arrives RX FIFO
					Write 1 to clear bit.
	TX_DS	5	0	R/W	Data Sent TX FIFO interrupt
	IA_DS		0	10/ 11	Asserted when packet transmitted on TX. If
					AUTO_ACK is activated, this bit is set high
					only when ACK is received.
					Write 1 to clear bit.
					Maximum number of TX retransmits
	MAX_RT	4	0	R/W	interrupt
	_				Write 1 to clear bit. If MAX_RT is asserted
					it must be cleared to enable further
					communication.
	RX_P_NO	3:1	111	R	Data pipe number for the payload available
					for reading from RX_FIFO
					000-101: Data Pipe Number
					110: Not used
					111: RX FIFO Empty
	TX_FULL	0	0	R	TX FIFO full flag.
					1: TX FIFO full
					0: Available locations in TX FIFO
08	OBSERVE_TX				Transmit observe register
	PLOS_CNT	7:4	0000	R	Count lost packets. The counter is overflow
	T LOS_CIVI	7.4	0000	IX.	protected to 15, and discontinues at max
					until reset. The counter is reset by writing to
					RF_CH.
					Count retransmitted packets. The counter is
	ARC_CNT	3:0	0000	R	reset when transmission of a new packet
					starts.
00	CD				
09	CD	7.1	000000	D	
	Reserved	7:1	000000	R	Camian Data at
	CD	0	0	R	Carrier Detect
					Danis allow lets size 0.5 Dates
0A	RX_ADDR_P0	39:0	0xE7E7E	R/W	Receive address data pipe 0. 5 Bytes
			7E7E7		maximum length. (LSB byte is written first. Write the number of bytes defined by
		+		1	SETUP_AW)
0B	RX_ADDR_P1	39:0	0xC2C2C	R/W	Receive address data pipe 1. 5 Bytes maximum length. (LSB byte is written first.
			2C2C2		Write the number of bytes defined by
0C	RX_ADDR_P2	7:0	0xC3	R/W	SETUP_AW)  Receive address data pipe 2. Only LSB
00	KA_ADDK_F2	7.0	UXCS	IX/ VV	MSB bytes is equal to RX_ADDR_P1[39:8]
0D	RX_ADDR_P3	7:0	0xC4	R/W	Receive address data pipe 3. Only LSB
עט	KA_ADDK_P3	7.0	UXC4	IX/ VV	MSB bytes is equal to RX_ADDR_P1[39:8]
0E	RX_ADDR_P4	7:0	0xC5	R/W	Receive address data pipe 4. Only LSB.
OL	KA_ADDK_F4	7.0	UACS	IX/ VV	MSB bytes is equal to RX_ADDR_P1[39:8]
		1		1	Receive address data pipe 5. Only LSB.
0F	RX_ADDR_P5	7:0	0xC6	R/W	MSB bytes is equal to RX_ADDR_P1[39:8]
		+		+	Transmit address. Used for a PTX device
		1			
10		39:0	0xE7E7E	R/W	only. (LSB byte is written first)
10	TX_ADDR	39.0	7E7E7	IX/ VV	Set RX_ADDR_P0 equal to this address to
		1	/E/E/		
		1			handle automatic acknowledge if this is a
					PTX device



11	RX_PW_P0				
	Reserved	7:6	00	R/W	Only '00' allowed
	RX_PW_P0	5:0	000000	R/W	Number of bytes in RX payload in data pipe 0 (1 to 32 bytes). 0: not used 1 = 1 byte 32 = 32 bytes
10	DAY DAY D1				
12	RX_PW_P1	7.6	00	D/W	0.1.1001.111
	Reserved RX_PW_P1	5:0	000000	R/W R/W	Only '00' allowed  Number of bytes in RX payload in data pipe 1 (1 to 32 bytes). 0: not used 1 = 1 byte 32 = 32 bytes
13	DV DW D2				
13	RX_PW_P2 Reserved	7:6	00	R/W	Only '00' allowed
	RX_PW_P2	5:0	000000	R/W	Number of bytes in RX payload in data pipe 2 (1 to 32 bytes). 0: not used 1 = 1 byte
					 32 = 32 bytes
14	RX_PW_P3				
	Reserved	7:6	00	R/W	Only '00' allowed
	RX_PW_P3	5:0	000000	R/W	Number of bytes in RX payload in data pipe 3 (1 to 32 bytes). 0: not used 1 = 1 byte 32 = 32 bytes
15	RX_PW_P4				
	Reserved  RX_PW_P4	5:0	000000	R/W R/W	Only '00' allowed  Number of bytes in RX payload in data pipe 4 (1 to 32 bytes). 0: not used 1 = 1 byte 32 = 32 bytes
16	RX_PW_P5			1	
	Reserved	7:6	00	R/W	Only '00' allowed
	RX_PW_P5	5:0	000000	R/W	Number of bytes in RX payload in data pipe 5 (1 to 32 bytes). 0: not used 1 = 1 byte 32 = 32 bytes
17	FIFO_STATUS	+			FIFO Status Register
1 /	Reserved	7	0	R/W	Only '0' allowed
	TX_REUSE	6	0		Reuse last transmitted data packet if set
	111_112002			R	high.



					The packet is repeatedly retransmitted as long as CE is high. TX_REUSE is set by the SPI command REUSE_TX_PL, and is reset by the SPI command W_TX_PAYLOAD
	TX_FULL	5	0	R	or FLUSH TX TX FIFO full flag 1: TX FIFO full; 0: Available locations in TX FIFO
	TX_EMPTY	4	1	R	TX FIFO empty flag. 1: TX FIFO empty 0: Data in TX FIFO
	Reserved	3:2	00	R/W	Only '00' allowed
	RX_FULL	1	0	R	RX FIFO full flag 1: RX FIFO full 0: Available locations in RX FIFO
	RX_EMPTY	0	1	R	RX FIFO empty flag 1: RX FIFO empty 0: Data in RX FIFO
N/A	ACK_PLD	255:0	X	W	Written by separate SPI command ACK packet payload to data pipe number PPP given in SPI command Used in RX mode only Maximum three ACK packet payloads can be pending. Payloads with same PPP are handled first in first out.
N/A	TX_PLD	255:0	X	W	Written by separate SPI command TX data pay-load register 1 - 32 bytes. This register is implemented as a FIFO with three levels. Used in TX mode only
N/A	RX_PLD	255:0	X	R	Read by separate SPI command RX data payload register. 1 - 32 bytes. This register is implemented as a FIFO with three levels. All RX channels share the same FIFO.
1C	DYNPD				Enable dynamic payload length
ic	Reserved	7:6	0	R/W	Only "00" allowed
	DPL_P5	5	0	R/W	Enable dynamic payload length data pipe 5. (Requires EN_DPL and ENAA_P5)
	DPL_P4	4	0	R/W	Enable dynamic payload length data pipe 4. (Requires EN_DPL and ENAA_P4)
	DPL_P3	3	0	R/W	Enable dynamic payload length data pipe 3. (Requires EN_DPL and ENAA_P3)
	DPL_P2	2	0	R/W	Enable dynamic payload length data pipe 2. (Requires EN_DPL and ENAA_P2)
	DPL_P1	1	0	R/W	Enable dynamic payload length data pipe 1. (Requires EN_DPL and ENAA_P1)
	DPL_P0	0	0	R/W	Enable dynamic payload length data pipe 0. (Requires EN_DPL and ENAA_P0)
1D	FEATURE			R/W	Feature Register
110	Reserved	7:3	0	R/W	Only "00000" allowed
	EN_DPL	2	0	R/W	Enables Dynamic Payload Length
	EN_ACK_PAY	1	0	R/W	Enables Payload with ACK
	EN_DYN_ACK	0	0	R/W	Enables the W_TX_PAYLOAD_NOACK command

Note: Don't write reserved registers and registers at other addresses in register bank 0

Table 4 Register Bank 0



# 7.2 Register Bank 1

Address (Hex)	Mnemonic	Bit	Reset Value	Туре	Description
00		31:0	0	W	Must write with 0x404B01E2
01		31:0	0	W	Must write with 0xC04B0000
02		31:0	0	W	Must write with 0xD0FC8C02
03		31:0	0x 03001200	W	Must write with 0x99003941
04		31:0	0	W	Must write with 0xD99E860B(High Power) For single carrier mode:0xD99E8621
		20	1	W	RF output power in TX mode: 0:Low power(-30dB down) 1:High power
05		31:0	0	W	Must write with 0x24067FA6(Disable RSSI)
	RSSI_TH	29:26		W	RSSI Threshold for CD detect 0: -97 dBm, 2 dB/step, 15: -67 dBm
	RSSI_EN	18	0	W	RSSI measurement: 0:Enable 1:Disable
06		31:0	0	W	Reserved
07		31:0	0	W	Reserved
	RBANK	7		R	Register bank selection states. Switch register bank is done by SPI command "ACTIVATE" followed by 0x53 0: Register bank 0 1: Register bank 1
08	Chip ID	31:0	0	R	BEKEN Chip ID: 0x00000063(RF70)
09			0		Reserved
0A			0		Reserved
0B			0		Reserved
0C		31:0	0		Please initialize with 0x00731200
0D	NEW_FEATURE	31:0	0		Please initialize with 0x0080B436
0E	RAMP	87:0	NA	W	Ramp curve Please write with 0xFFFFFEF7CF208104082041

Note: Don't write reserved registers and no definition registers in register bank 1

Table 5 Register Bank 1



# **8** Electrical Specifications

Name	Parameter (Condition)	Min	Typi cal	Max	Unit	Comm ent
	Operating Condition				-11	I
VDD	Voltage	1.9	3.0	3.6	V	
TEMP	Temperature	-40	+27	+85	°C	
	Digital input Pin		•	•	•	
VIH	High level	0.7VDD		5.25	V	
VIL	Low level	VSS		0.3VDD	V	
	Digital output Pin					
VOH	High level (IOH=-0.25mA)	VDD- 0.3		VDD	V	
VOL	Low level(IOL=0.25mA)	0		0.3	V	
	Normal condition					
IVDD	Power Down current			3	uA	
IVDD	Standby-I current			50	uA	
IVDD	Standby-II current			400	uA	
	Normal RF condition					
FOP	Operating frequency	2400		2527	MHz	
FXTAL	Crystal frequency		16		MHz	
RFSK	Air data rate	1		2	Mbps	
	Transmitter					
PRF	Output power	-40	0	5	dBm	
PBW	Modulation 20 dB bandwidth(2Mbps)		2.5		MHz	
PBW	Modulation 20 dB bandwidth (1Mbps)		1.3		MHz	
PRF1	Out of band emission 2 MHz		-20		dBm	
PRF2	Out of band emission 4 MHz		-40		dBm	
IVDD	Current at -40 dBm output power		11		mA	
IVDD	Current at -30 dBm output power		11		mA	
IVDD	Current at -25 dBm output power		12		mA	
IVDD	Current at -10 dBm output power		13		mA	
IVDD	Current at -5 dBm output power		15		mA	
IVDD	Current at 0 dBm output power		17		mA	
IVDD	Current at 5 dBm output power		23		mA	
	Receiver					
IVDD	Current (2Mbps)		18		mA	
IVDD	Current (1Mbps)		17		mA	
Max Input	1 E-3 BER		10		dBm	
RXSENS	1 E-3 BER sensitivity (2Mbps)		-85		dBm	
RXSENS	1 E-3 BER sensitivity (1Mbps)		-88		dBm	
C/ICO	Co-channel C/I (2Mbps)		4		dB	
C/I1ST	ACS C/I 2MHz (2Mbps)		-5		dB	]
C/I2ND	ACS C/I 4MHz (2Mbps)		-20		dB	]
C/I3RD	ACS C/I 6MHz (2Mbps)		-25		dB	]
C/ICO	Co-channel C/I (1Mbps)		4		dB	
C/I1ST	ACS C/I 1MHz (1Mbps)		4		dB	]
C/I2ND	ACS C/I 2MHz (1Mbps)		-18		dB	]
C/I3RD	ACS C/I 3MHz (1Mbps)		-19		dB	1

**Table 6 Electrical Specifications** 



# 9 Typical Application Schematic


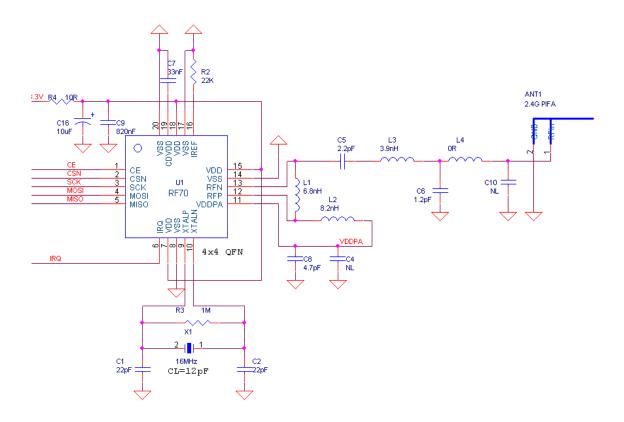


Figure 8 RF70 typical application schematic



# 10 Package Information

RF70 uses the QFN20 4x4 package, with matt tin plating.

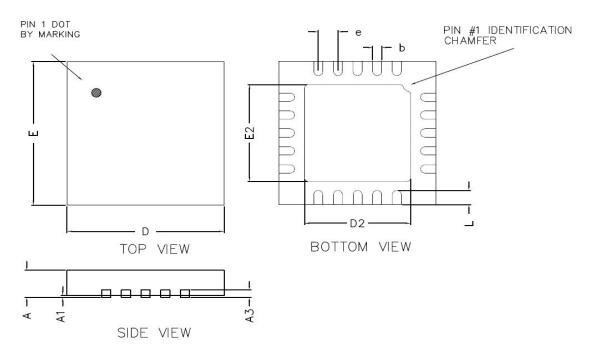

Parameter	Min	Тур	Max	Unit
A	0.70	0.75	0.80	mm
A1	0.00	-	0.05	mm
A3	0.20 REF			mm
D	3.95	4.00	4.05	mm
Е	3.95	4.00	4.05	mm
В	0.18	0.23	0.30	mm
L	0.30	0.40	0.50	mm
D2	2.55	2.70	2.80	mm
E2	2.55	2.70	2.80	mm
Е	0.50 REF			mm

Figure 9 QFN4\*4 20 Pin package diagram



# 11 Order Information

Part number	Package	Packing
RF70	QFN	Tape Reel
RF70-DICE	DICE	

Table 7 RF70 order information



## **12** Contact Information

#### HOPE MICROELECTRONICS CO.,LTD

4/F, Block B3, East Industrial Area, Huaqiaocheng, Shenzhen, Guangdong,

China

Tel: 86-755-86096602
Fax: 86-755-86096587
Email: sales@hoperf.com
Website: http://www.hoperf.com
http://www.hoperf.cn

http://hoperf.en.alibaba.com

This document may contain preliminary information and is subject to change by Hope Microelectronics without notice. Hope Microelectronics assumes no responsibility or liability for any use of the information contained herein. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Hope Microelectronics or third parties. The products described in this document are not intended for use in implantation or other direct life support applications where malfunction may result in the direct physical harm or injury to persons. NO WARRANTIES OF ANY KIND, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MECHANTABILITY OR FITNESS FOR A ARTICULAR PURPOSE, ARE OFFERED IN THIS DOCUMENT.

©2006, HOPE MICROELECTRONICS CO.,LTD. All rights reserved.