



Massachusetts: 413.566.0100
Pennsylvania: 267.603.5582
info@nexasamerica.com
Hampden, MA 01036



Revision Manager®⊕

USER GUIDE
Version 1.0

Contents

I.	INTRODUCTION.....	3
II.	INSTALLATION GUIDE	4
III.	GETTING STARTED	5
a.	Logging In.....	5
b.	Facility Selection Screen	5
c.	Main Screen	6
d.	Settings.....	6
IV.	USING THE PRODUCT	9
	Step 1: Part Identification.....	9
	Step 2: Operation Identification and Creation	10
	Step 3: Associate a Machine.....	10
	Step 4: Import CNC Program(s)	11
	Step 5: Authorization Process.....	11
	Step 6: Send to Machine	12
V.	MACHINES.....	12
a.	Add a Machine Type	13
b.	Add a Machine.....	13
VI.	ARCHIVE	15
VII.	CONTACT INFORMATION.....	16

I. INTRODUCTION

Welcome to the [AuditMate MFG Revision Manager](#), a web-based platform designed to streamline the way manufacturers and operators manage CNC programs and related documents.

The system provides a centralized hub where users can store, organize, preview, and transfer CNC programs while ensuring version control, data security, and compliance with company standards. With advanced search capabilities, user permission management, and direct machine communication, the platform equips teams with the tools they need to reduce errors, save time, and maintain complete control of the CNC program lifecycle.

By integrating document restrictions, backup/restore options, and subprogram management, the [AuditMate MFG Revision Manager](#) supports both day-to-day operations and long-term process reliability. It is built to boost productivity while ensuring every program, file, and communication is managed with accuracy and consistency.

This guide will help you navigate the system, understand its features, and get the most out of its capabilities.

II. INSTALLATION GUIDE

III. GETTING STARTED

a. Logging In

Use your web browser to open your **AuditMate MFG Revision Manager**.

Web address: <http://excellerant-add-on.local:3003/login>

Default Username: **ExcellerantAdmin**

Default Password: **Testingpw24#**

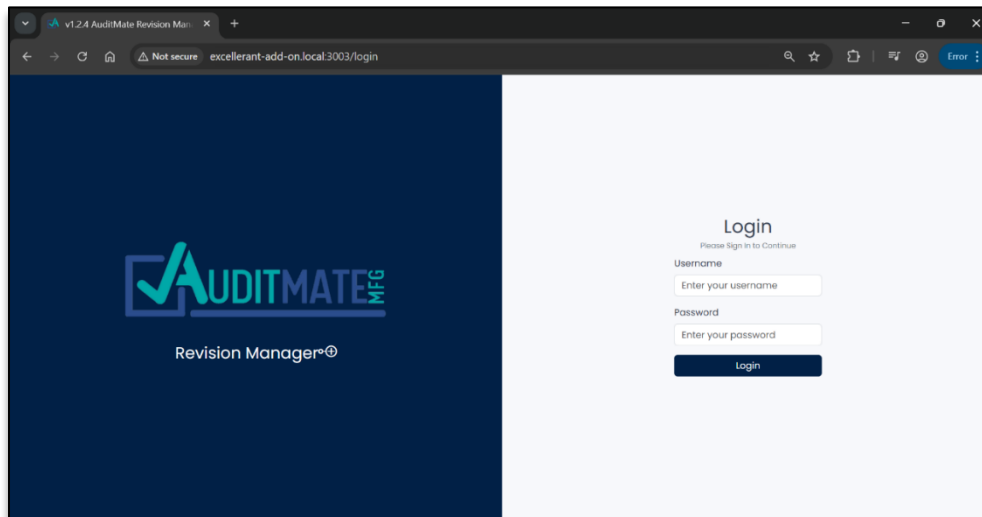


Figure 1: Login Screen

b. Facility Selection Screen

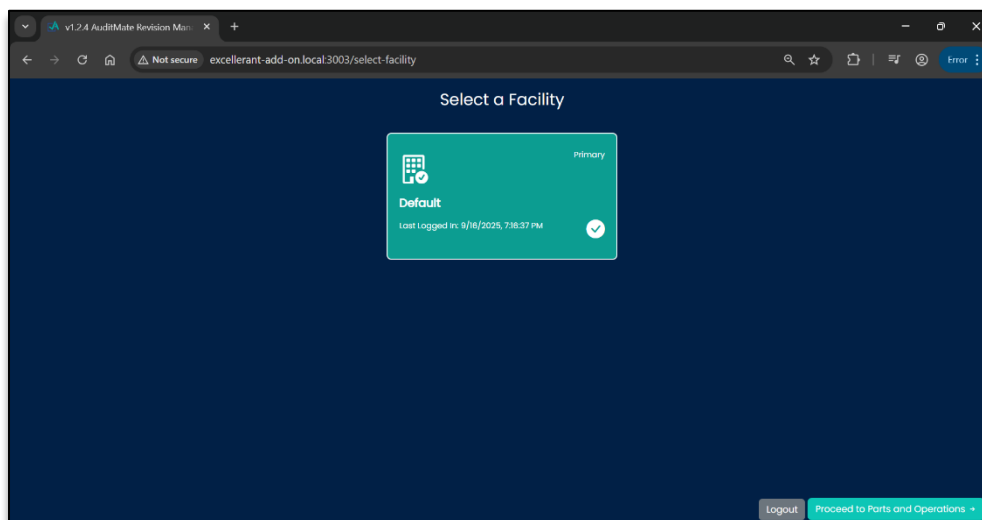


Figure 2: Facility Selection Screen

After login, the Facility Selection Screen displays your assigned facilities. Select a facility and click **Proceed to Parts and Operations** to enter the Main Screen.

c. Main Screen

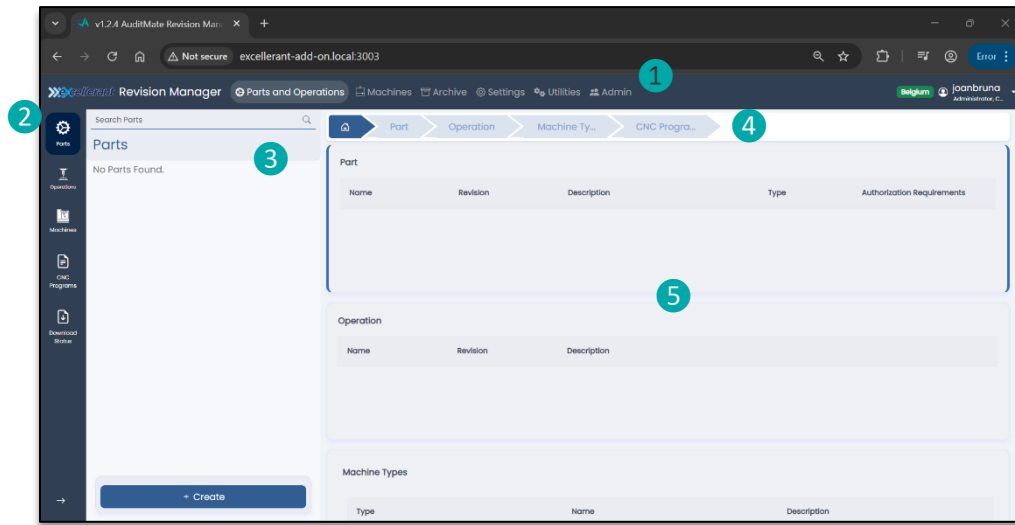


Figure 3: Main Screen

- 1 Top Menu** Provides access to core functions, navigation options, and system settings
- 2 Left Menu** Displays context-specific options for the selected top-menu item
- 3 Left Panel** Displays the list of created entities for the selected entity (all Parts, Operations for a Part, Machines for an Operation, or CNC Programs for a Machine)
- 4 Center Menu** Provides quick navigation across process entities (Part, Operation, Machine, CNC Program)
- 5 Center Panel** Displays the detailed information of the process entity selected

d. Settings


The Settings menu is accessible from the Left Panel and provides configuration options for both system-wide behavior and individual user preferences. It is divided into two categories: Global Settings and User Settings.

Setting Item Description	Image
GLOBAL SETTINGS	
Part Authorization Types Define which user role(s) are authorized to approve Parts, Operations, Machines, and CNC Programs before moving to Production status. Click the three dots to the left of an Authorization Type to view the list of user role(s) authorized to approve.	

Download Status Authorization

Control which user role(s) can authorize CNC Programs to be downloaded or sent to machines.


Toggle the user role's switch to grant or remove its authorization to change the download status of CNC Programs.

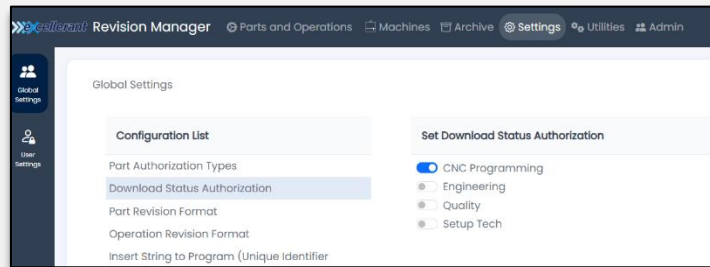

The screenshot shows the 'Revision Manager' interface with the 'Global Settings' tab active. In the 'Configuration List' on the left, 'Download Status Authorization' is highlighted. On the right, the 'Set Download Status Authorization' section shows a toggle switch for 'CNC Programming' which is currently turned on. Other options like 'Engineering', 'Quality', and 'Setup Tech' are shown as radio buttons and are not selected.

Part Revision Format


Specify the format of revision identifiers for parts.

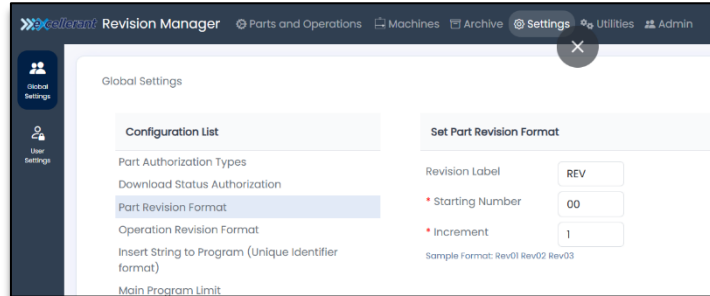

The screenshot shows the 'Revision Manager' interface with the 'Global Settings' tab active. In the 'Configuration List' on the left, 'Part Revision Format' is highlighted. On the right, the 'Set Part Revision Format' section shows a 'Revision Label' dropdown set to 'REV'. Below it, 'Starting Number' is a text input with '00' and 'Increment' is a text input with '1'. A 'Sample Format' is displayed as 'Rev01 Rev02 Rev03'.

Operation Revision Format


Define the revision format for operations, ensuring consistent versioning.

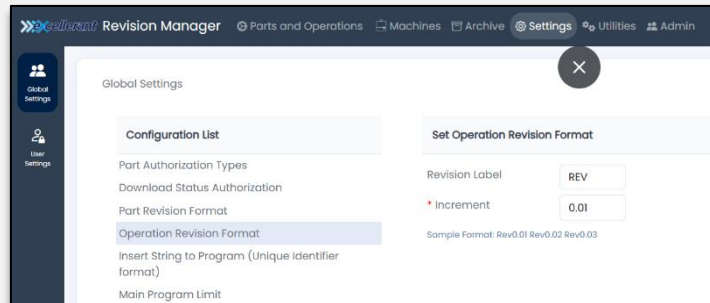

The screenshot shows the 'Revision Manager' interface with the 'Global Settings' tab active. In the 'Configuration List' on the left, 'Operation Revision Format' is highlighted. On the right, the 'Set Operation Revision Format' section shows a 'Revision Label' dropdown set to 'REV'. Below it, 'Increment' is a text input with '0.01'. A 'Sample Format' is displayed as 'Rev0.01 Rev0.02 Rev0.03'.

Insert String to Program (Unique identifier format)

Set the identifier string automatically inserted into CNC Programs for tracking and traceability.

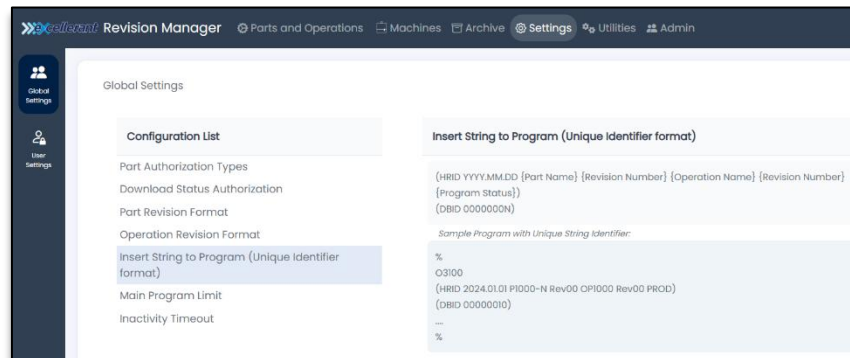

The screenshot shows the 'Revision Manager' interface with the 'Global Settings' tab active. In the 'Configuration List' on the left, 'Insert String to Program (Unique identifier format)' is highlighted. On the right, the 'Insert String to Program (Unique Identifier format)' section shows a text area containing a template string: '{HBID YYYY.MM.DD [Part Name] [Revision Number] [Operation Name] [Revision Number] [Program Status]] (DBID 0000000N)'. Below this, a 'Sample Program with Unique String Identifier' is shown with a multi-line string: '% O3100 (HBID 2024.01.01 P1000-N Rev00 CP1000 Rev00 PROD) (DBID 00000010) %'.

Main Program Limit

Configure the maximum number of main programs allowed per part or operation.

The screenshot shows the 'Revision Manager' application with the 'Global Settings' tab selected. On the left, a 'Configuration List' includes 'Main Program Limit'. On the right, the 'Set Main Program Limit' dialog is open, showing a numeric input field with the value '2' and minus/plus buttons.

Inactivity Timeout

Set the inactivity period (in minutes) after which the system auto-logs out users.

The screenshot shows the 'Revision Manager' application with the 'Global Settings' tab selected. On the left, a 'Configuration List' includes 'Inactivity Timeout'. On the right, the 'Set Inactivity Timeout' dialog is open, showing a numeric input field with the value '10' and the unit 'Minutes'. A note below states: 'Users will be automatically logged out after the specified period of inactivity.'

USER SETTINGS

Change Password

Update the login password for the user account.

The screenshot shows the 'Revision Manager' application with the 'User Settings' tab selected. The 'Change Password' sub-tab is active. It contains three input fields: 'Current Password', 'New Password', and 'Confirm New Password'. A 'Save' button is at the bottom right.

CNC Program Editor

Access the built-in editor to view and modify imported CNC Programs.

The screenshot shows the 'Revision Manager' application with the 'User Settings' tab selected. The 'CNC Program Editor' sub-tab is active. It shows a text input field for 'CNC Program Editor Path' with the value 'C:\Windows\system32\notepad.exe'. Below it, a message says: 'Please input the complete path for preferred CNC Editor, i.e.: C:\Windows\system32\notepad.exe'. At the bottom, there is a 'Download Editor Handler' button.

IV. USING THE PRODUCT

AuditMate MFG Revision Manager guides you through the full CNC program lifecycle—from part creation to machine transfer—ensuring traceability, quality, and compliance at every stage of manufacturing.

Follow these steps to create, validate, and release CNC programs:

Step 1: Part Identification

Identify the part to be manufactured by entering the part name, revision number, authorization type, and description.

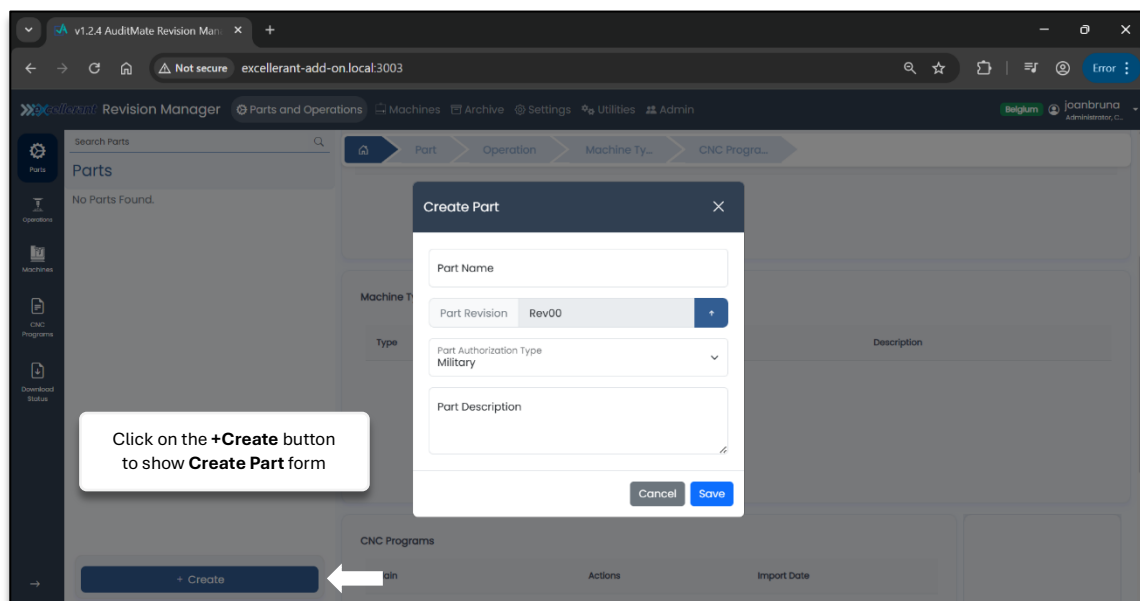


Figure 4: Create Part

Step 2: Operation Identification and Creation

Once the part is defined, the required operation is created. An operation represents a specific manufacturing activity performed on a part. Each operation is assigned an operation name and description.

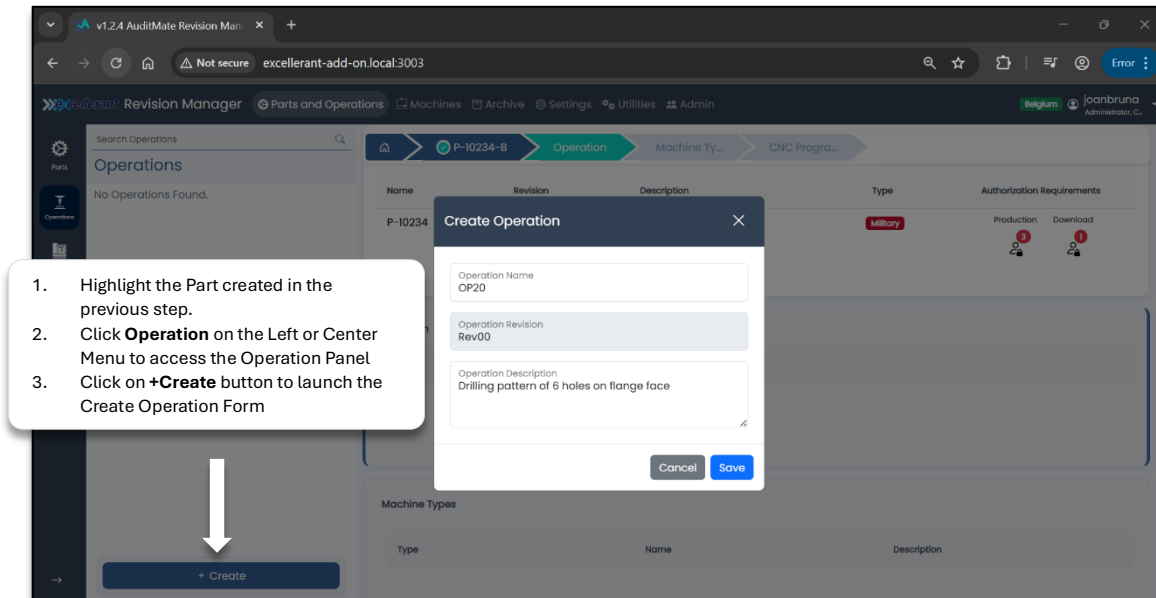


Figure 5: Create Operation

Step 3: Associate a Machine

The operation is then associated with a machine that has the required capabilities and is available within the facility.

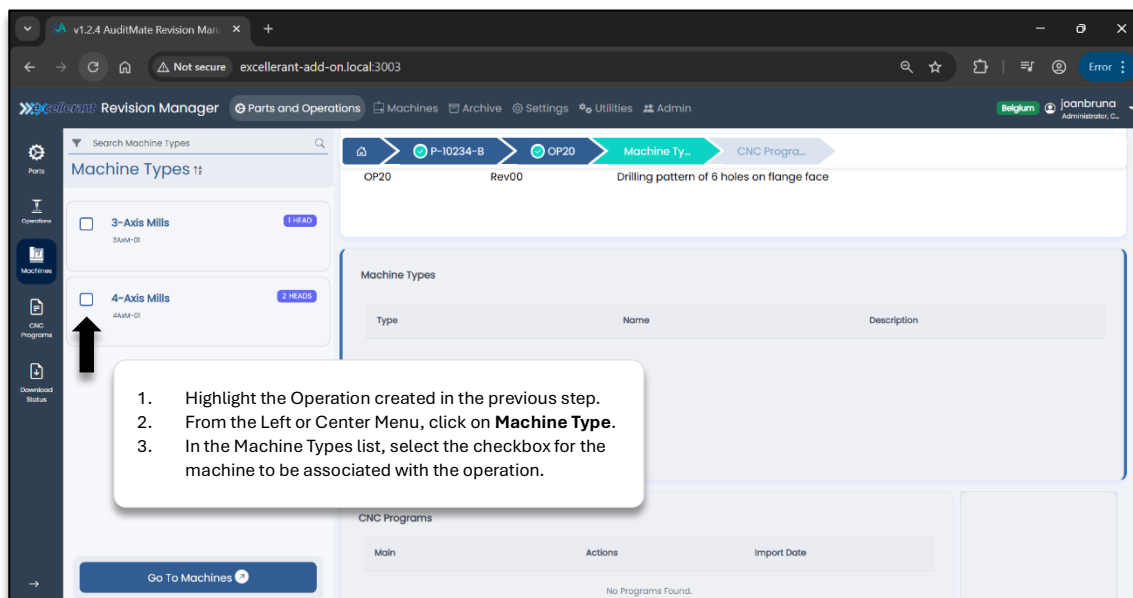


Figure 6: Associate a Machine

Step 4: Import CNC Program(s)

CNC Programs are not created within the system but are generated using external programming tools (e.g. CAM Software). These programs are then imported into the system and tied to the correct machine and operation.

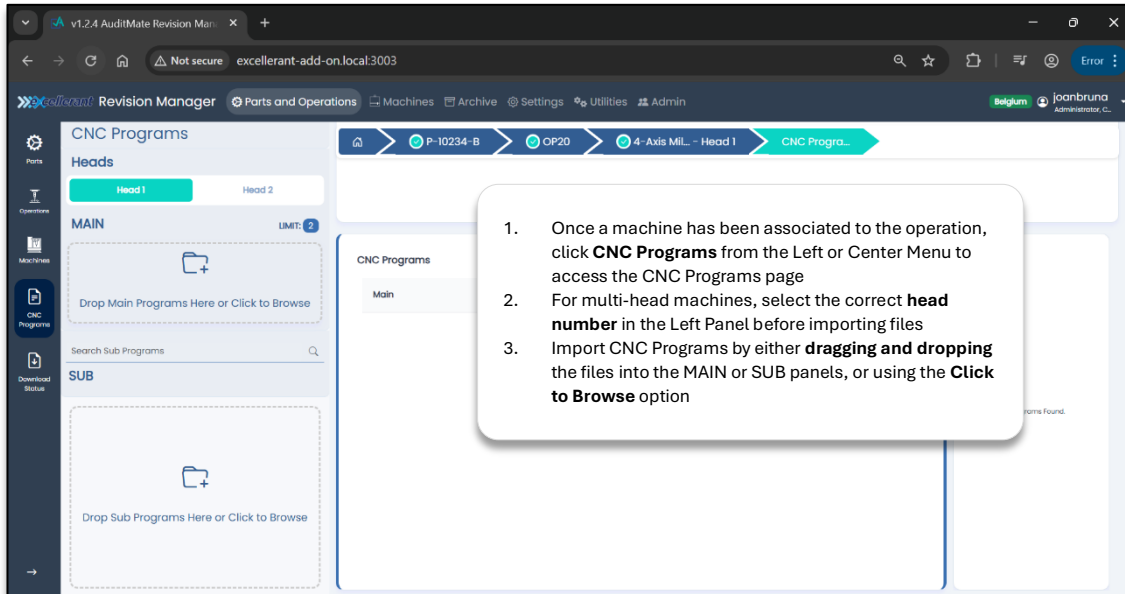


Figure 7: Import CNC Program(s)

Step 5: Authorization Process

Before execution, the entire setup — including Part, Operation, Machine, and CNC Program — must be approved based on the assigned Authorization Type. This ensures that only designated user roles can authorize programs for production. All approvals are logged for traceability and compliance.

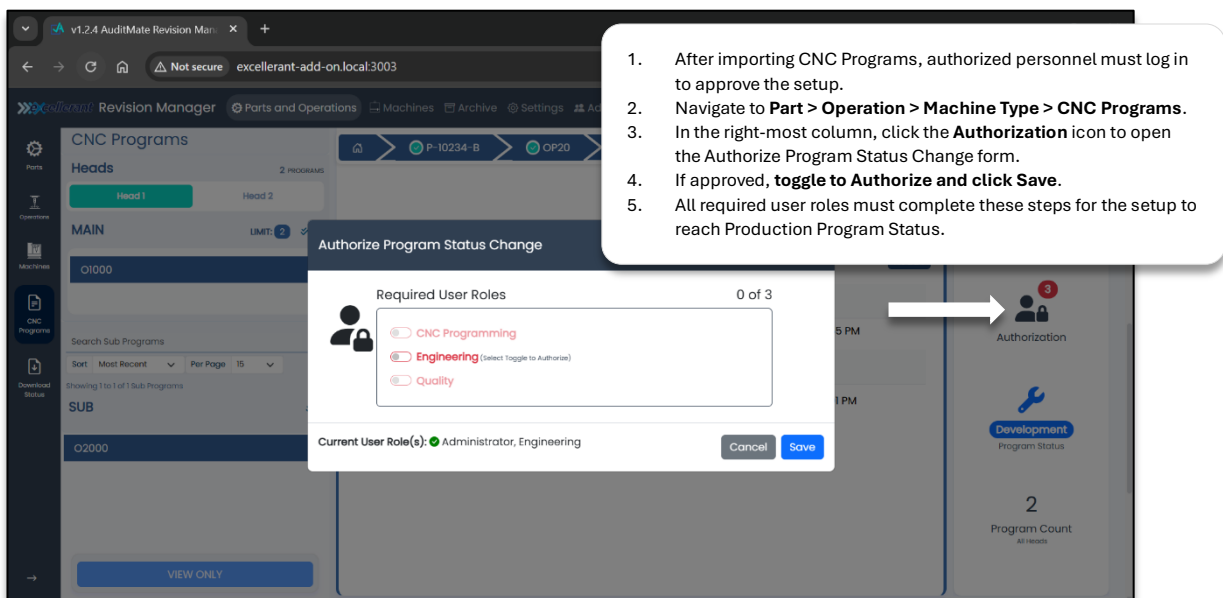


Figure 8: Authorization

Step 6: Send to Machine

Once all approvals are complete, the CNC Programs(s) can be sent directly to the machine for execution. This step ensures that the operator receives the correct and authorized program for the assigned machine and head.

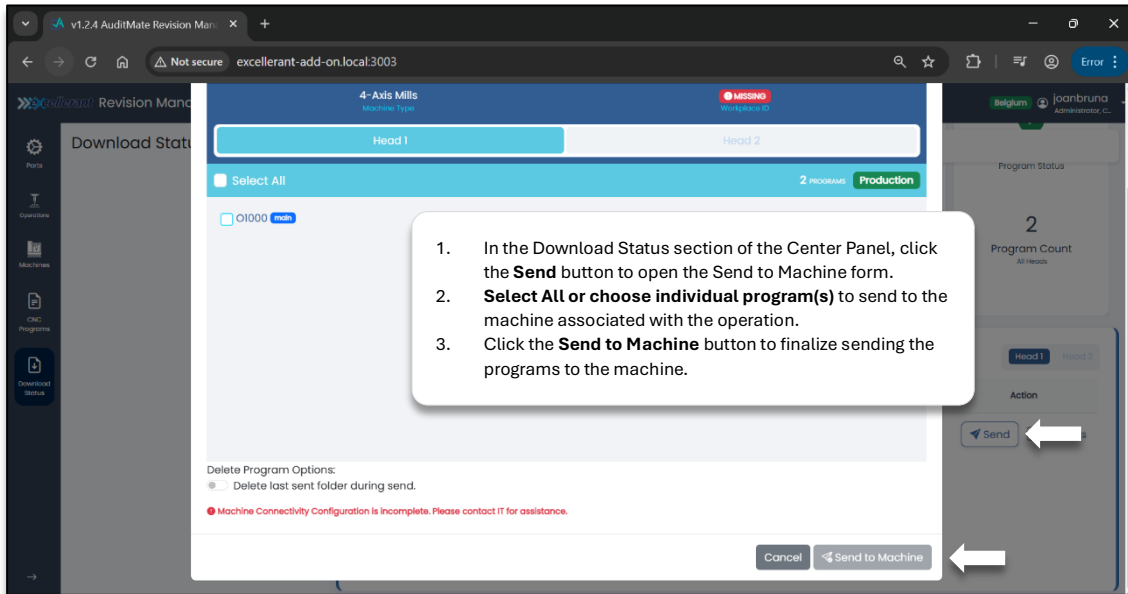


Image 9: Send to Machine

V. MACHINES

The Machines page acts as a central library of machine resources within the system. It organizes equipment into Machine Types (e.g., Milling, Turning, Drilling) and the specific machines that belong to each type.



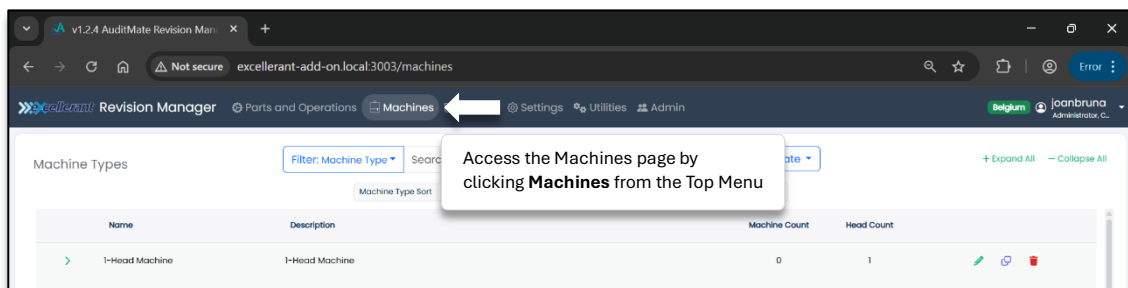


Figure 10: Machines

a. Add a Machine Type

1. On the **Machines** page, click the **Create** button, then select **Machine Type** from the dropdown.
2. In the form that appears, enter the required details:
 - **Machine Type Name**
 - **Machine Type Description**
 - **Machine Head Count**
3. Click **Save** to create the new machine type.

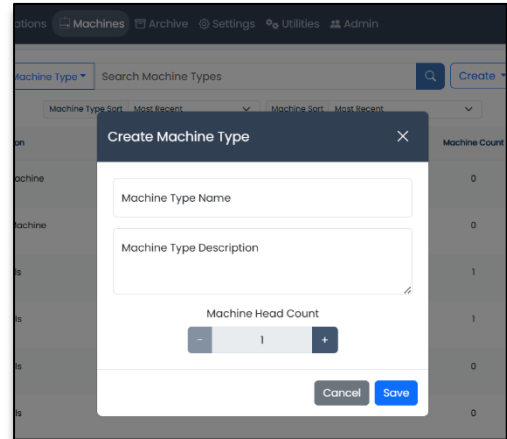
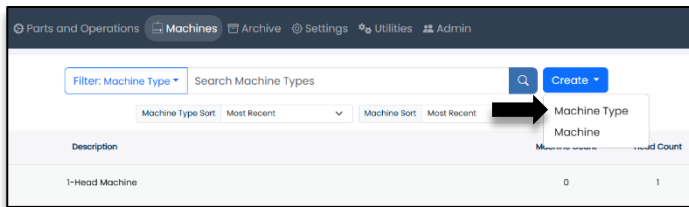


b. Add a Machine

There are two ways to add a machine under a machine type:


OPTION 1

1. On the **Machines** page, click the **Create** button and select **Machine** from the dropdown.
2. The **Choose Machine Type** form will appear, displaying all machine types available in your facility/facilities.
3. Select the machine type where the new machine will be created, then click **Next**.
4. The **Create Machine** form will appear.

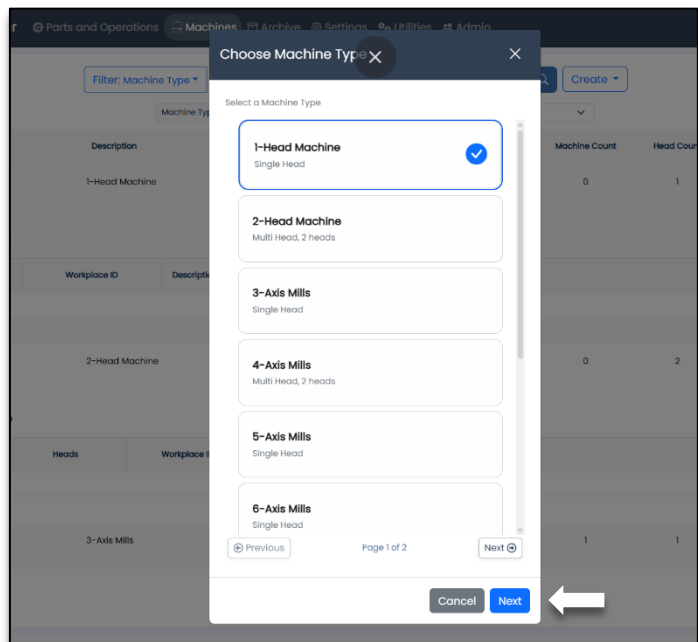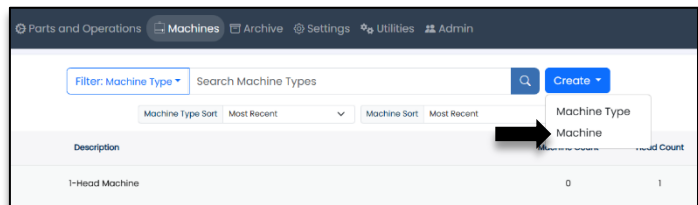

OPTION 2

1. **Expand** the machine type where the new machine will be created.
2. Click the **+ Add Machine** button.
3. The **Create Machine** form will appear.

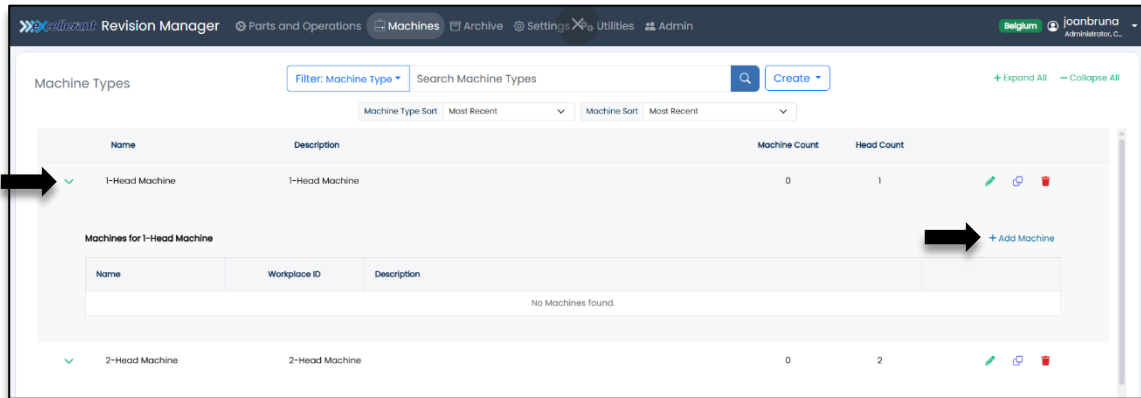

The Create Machine form that appears will depend on the machine head count of the machine type previously selected.

Figure 11: Create Machine: Single Head Machine Type

Figure 12: Create Machine: Multi-Head Machine Type

Fill out the machine details and click **Save** to create the machine.

VI. ARCHIVE

The Archive page serves as a central repository for all archived Parts, Operations, and CNC Programs. This feature ensures that important data is never permanently lost and can be retrieved whenever necessary.

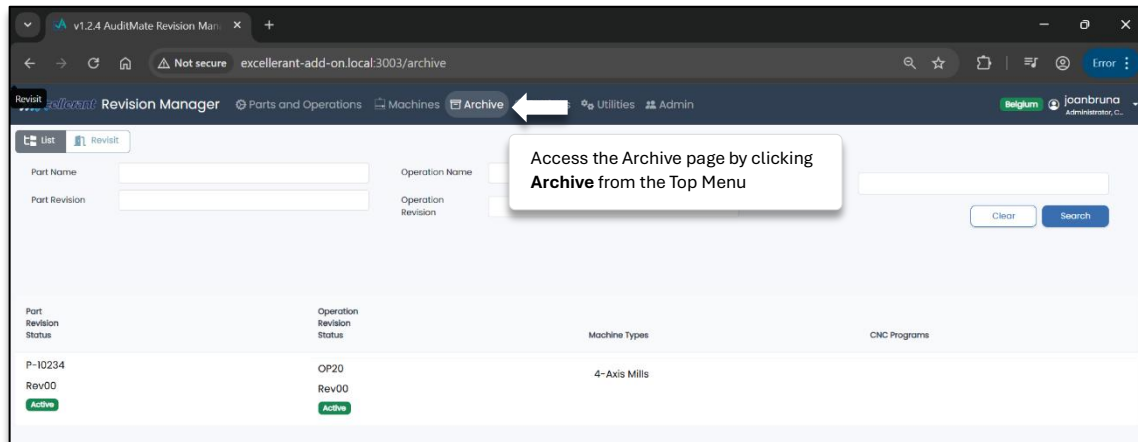


Figure 13: Archive

Authorized users can perform the following actions on the Archive page:

-  **View History:** Open the history log of archived items to see details such as revisions, approvals, and user actions.
-  **Download:** Retrieve archived files and store them locally for offline access or backup.
-  **Revisit:** Review previously archived Parts, Operations, and CNC Programs for reference or auditing purposes.
-  **Restore:** Reinstate archived items back into the active system so they can be used again in production workflows.
-  **Blacklist:** Mark archived Parts, Operations, and CNC Programs to prevent them from being restored or downloaded, avoiding accidental reuse of invalid or disallowed files.

Archiving plays a critical role in maintaining version control and traceability. By preserving historical versions of Parts, Operations, and CNC Programs, users can:

- Track changes made over time.
- Compare current setups with older versions.
- Recover from accidental deletions or incorrect modifications.

This makes the Archive an essential tool for both **compliance** and **operational continuity**, ensuring users always have access to prior versions without cluttering the active workspace.

VII. CONTACT INFORMATION



OUR OFFICES:

Pennsylvania
Hatfield, PA 19440

Massachusetts
Hampden, MA 01036



Massachusetts: 413.566.0100
Pennsylvania: 267.603.5582



info@nexasamerica.com