The Touch Screen

Panning

Many documents are too large to be viewed at a readable size within the *Device Screen*, the solution is to view the document at a readable size and pan the document, viewing the whole document in parts. Panning is the action of moving the position of an open document (in any direction) in the device screen.

To pan an open document:

- ⇨ Touch the *Device Screen* with your *Device Stylus* (over an open document)
- ⇨ Drag the *Device Stylus* in the direction you want the document to be moved – the open document follows the *Device Stylus*
- ⇨ Lift the *Device Stylus* – the document stays where you "dropped" it

The ePAGE™ applications allow *Panning* of any document like this.

Zooming

	The trick to *Zooming* effectively, is the "double-tap and hold" action. This involves tapping the *Device Screen* twice quickly with the *Device Stylus*, without lifting it after the second tap.	

Sometimes an open document appears too large, or too small to be readable, the solution is to *Zoom* (to change the apparent size) the document. You can:

- *Zoom-in* to make the document appear larger
- *Zoom-out* to make the document appear smaller

Zooming-in – Method One (Tap and Stroke):

- ⇨ Double-tap and hold the *Device Screen* with your *Device Stylus* (over an open document)
- ⇨ Drag the *Device Stylus* toward the top of the *Device Screen* – the document appears to grow larger
- ⇨ Lift the *Device Stylus* – the document stays at the new *Zoomed* size

Zooming-in – Method Two (Zoom Box):

- ⇨ Double-tap and hold the *Device Screen* with your *Device Stylus* (over an open document)
- ⇨ Drag the *Device Stylus* to the right, or left (slightly above or below the horizontal) – the pink *Zoom Box* appears
- ⇨ Lift the *Device Stylus* – the approximate area you covered with the *Zoom Box* now fills the screen

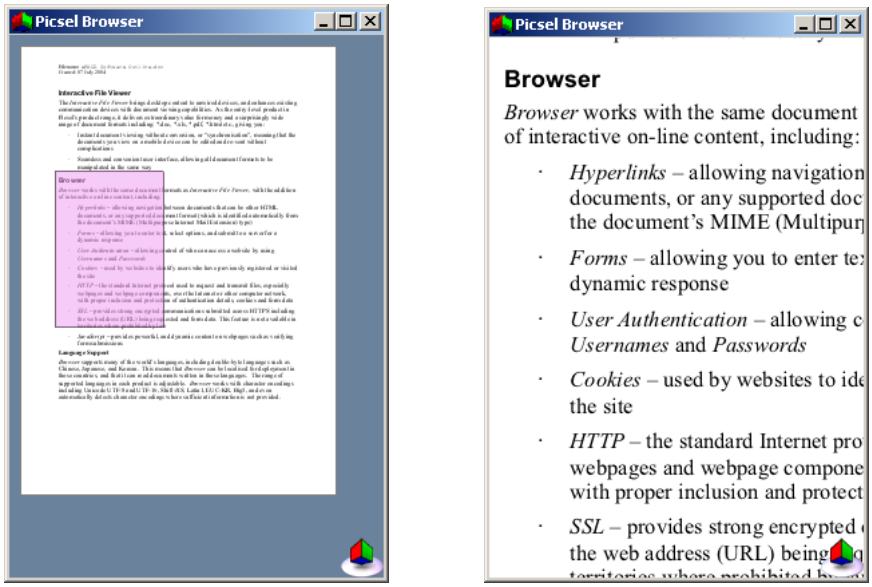

Figure 10 – Using The *Zoom Box* (Before And After)

Zooming-out

- ⇨ Double-tap and hold the *Device Screen* with your *Device Stylus* (over an open document)
- ⇨ Drag the *Device Stylus* toward the bottom of the *Device Screen* – the document appears to grow smaller
- ⇨ Lift the *Device Stylus* – the document stays at the new *Zoomed* size

The ePAGE™ applications allow *Zooming* of any document like this.

Page Turning

Many of the documents you open will have more than one page, and you'll want to move between them. There are two *Page Turning* methods.

Method One (*Page Flicking*)

The ePAGE™ *Page Flicking* metaphor is very much like "flicking-through" a magazine with your fingers.

	The trick to *Page Flicking* effectively, is to make the *Page Flicking* stroke long enough.	

To move the document to the page after the *Current Page*:

- ⇨ Touch the *Device Screen* with your *Device Stylus* near the centre-bottom of the *Device Screen*
- ⇨ Move your *Device Stylus* to the left
- ⇨ Lift your *Device Stylus* – the page after the *Current Page* appears, and its page number is shown (briefly) in the top-right corner of the *Device Screen*

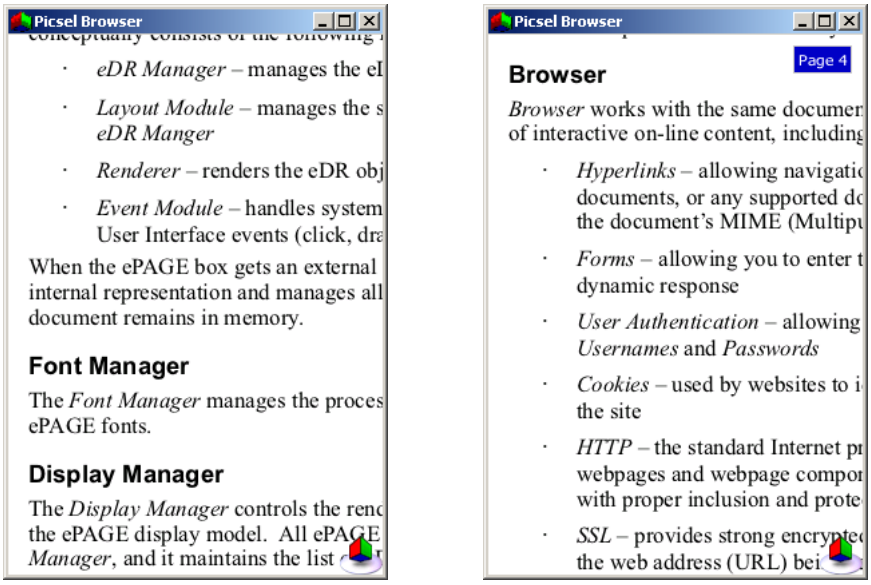

Figure 11 – *Page Flicking* (After Current)

To move the document to the page before the *Current Page*:

- ⇨ Touch the *Device Screen* with your *Device Stylus* near the centre-bottom of the *Device Screen*
- ⇨ Move your *Device Stylus* to the right
- ⇨ Lift your *Device Stylus* – the page before the *Current Page* appears, and its page number is shown (briefly) in the top-right corner of the *Device Screen*

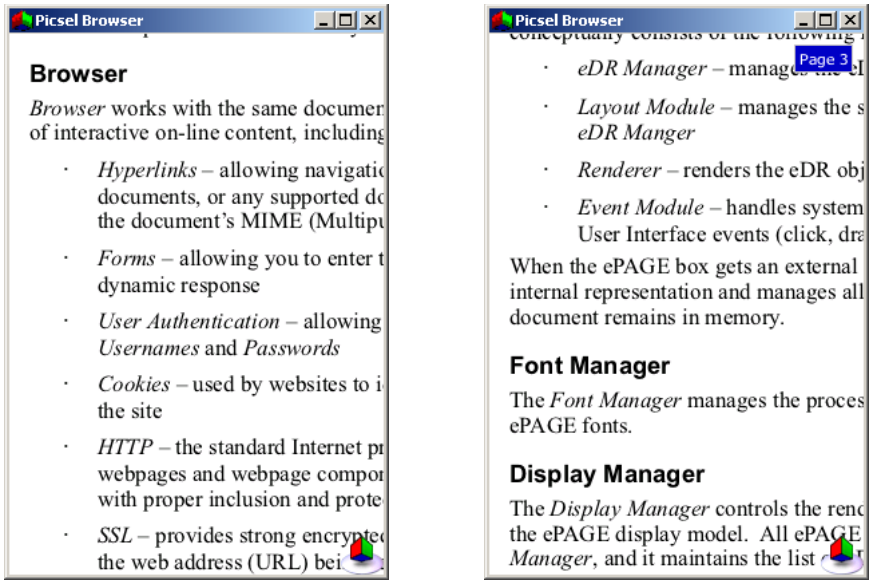

Figure 12 – *Page Flicking* (Before Current)

Method Two (*Tumbnails*)

⇨ Touch the ePAGE™ icon (at the bottom right of the *Device Screen*) with your *Device Stylus* – the ePAGE™ carousel opens (see illustration below) displaying *Thumbnails* of the open document's pages at the bottom of the *Device Screen*

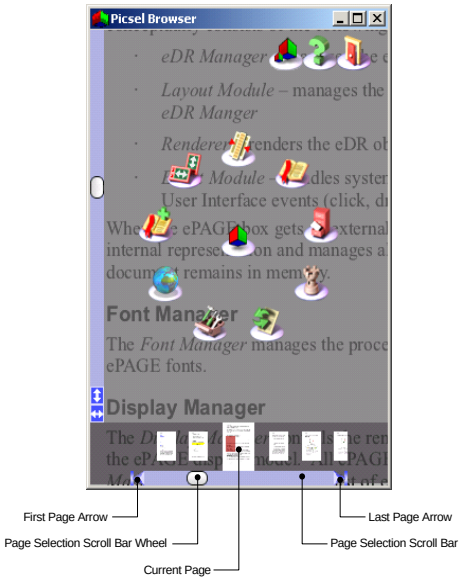

Figure 13 – Document Thumbnails

- The *Thumbnail* of the *Current Page* is shown near the bottom centre of the *Device Screen*, and the viewing area of the *Current Page* shown in the *Device Screen* is highlighted by the pink *Zoom Box*
- The relative position of the *Current Page* in the document is indicated by the position of the *Page Selection Scroll Bar Wheel*

Using the *Device Stylus* and:

- Touching any of the page *Thumbnails* will open that page making it the *Current Page*, and move its *Thumbnail* to the bottom centre of the *Device Screen*
- Touching the *First Page Arrow*, will make the first page of the document the *Current Page* and move its *Thumbnail* to the bottom centre of the *Device Screen*
- Touching the *Last Page Arrow*, will make the last page of the document the *Current Page,* and move its *Thumbnail* to the bottom centre of the *Device Screen*
- Touching the *Page Selection Scroll Bar Wheel*, and dragging it left will make the *Current Page* move toward the first page of the document
- Touching the *Page Selection Scroll Bar Wheel*, and dragging it right will make the *Current Page* move toward the last page of the document