

BLIND FLIGHT

Quick Start Guide

Controls

The control panel has three inputs:

- **Rotary Encoder (center knob)** —Turn to scroll through menus. Press (click) to select. Long-press for special actions.
- **Left & Right Buttons** —Context-sensitive. Labels shown on screen.


The display shows button labels at the bottom of each screen. Left is typically BACK, right is typically SELECT or a contextual action.

Home Screen

On power-up, the device homes its motor (aligns the carousel), then shows this screen.

- **SETTINGS (left button)** —Opens the Settings menu.
- **MENU (right button or knob click)** —Opens the Mode Select menu.


The home screen shows battery level and four glass position indicators. "Ready" confirms the motor is homed.

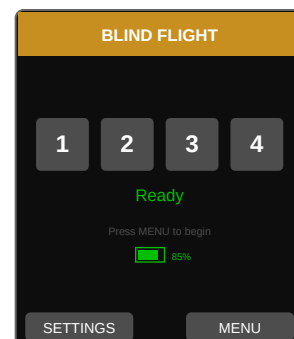

Select Mode


Turn the knob to highlight a mode, then press SELECT. Modes with a right arrow open a sub-menu.

- **Quick Flight** —Numbered glasses, no names. Fastest way to run a flight.
- **Full Flight** —Browse the whiskey library to name each glass before pouring. Names appear on the reveal screen.
- **Ranked Flight** —Like Full Flight, plus rank your glasses from favorite to least favorite before the reveal.

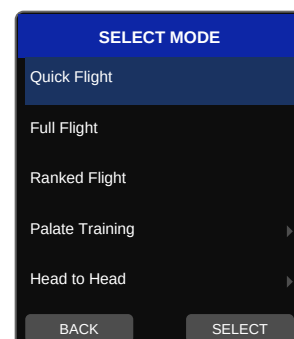

Palate Training (Sub-menu)

- **Best Guess** —Name each glass, then try to guess which whiskey is in which glass after tasting.
- **Guess + Ranked** —Best Guess + Ranked combined.
- **Twin Pour** —3 bottles, one poured twice. Find the matching pair.
- **Find the Ringer** —2 bottles, 3+1 split. Find the odd one out.

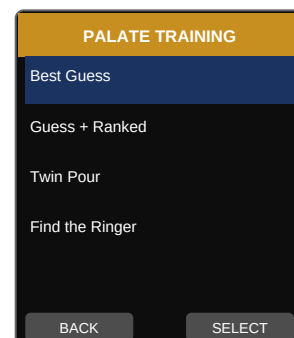

Head to Head is a multiplayer mode where players connect via phone and compete to identify whiskeys. Requires Wi-Fi to be enabled.


Running a Flight

All flight modes follow the same basic sequence:

1. Choose Glass Count

Turn the knob to choose 2, 3, or 4 glasses. The lit boxes show which positions will be used. Press START.

In Full Flight and Palate Training modes, you'll browse the whiskey library to name each glass before this step.

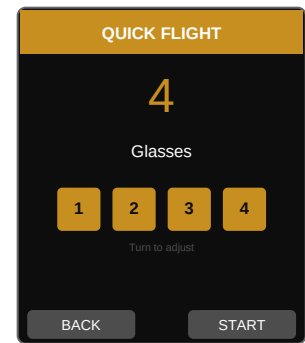


2. Pour

The carousel rotates to position a glass under the pour spout. The screen shows the pour number.

- Pour into the glass and press DONE.
- Press SKIP to end the flight early (fewer glasses).

Repeat for each glass. The device randomizes glass order so you don't know which position gets which pour.

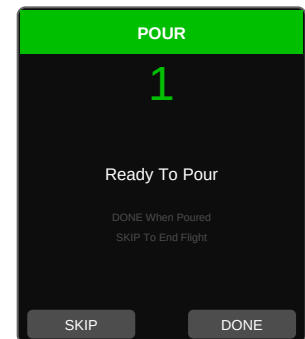


3. Taste & Reveal

After all glasses are poured, the tasting screen appears. Take your time tasting each glass.

When ready, press NEXT. In Best Guess mode, you'll guess which whiskey is in each glass. In Ranked mode, you'll rank them. In Quick/Full Flight, you go straight to the reveal.


The reveal shows each glass's contents one at a time. At the end, choose NEW for another flight or EXIT to return home.

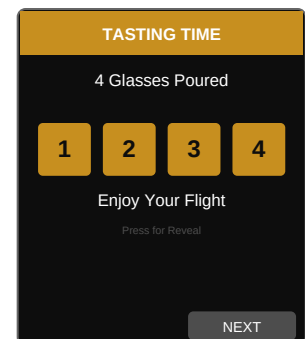

Settings

Press SETTINGS from the home screen. Scroll with the knob, press SELECT to edit a value, then turn to adjust and press OK.

- **Sound** —Toggle and volume level.
- **Brightness** —Five levels.
- **Wi-Fi** —Enable to use phone interface.
- **Spin Speed** —Fast, Normal, Slow carousel speed.
- **Pour Side** —Which side the pour spout is on.
- **Glasses** —Default glass count (2–4).
- **Re-Home** —Re-aligns the carousel motor.

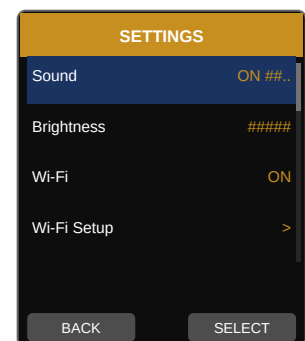

Connecting Your Phone

The device can be controlled from a phone browser. Enable Wi-Fi in Settings, then:

Default (AP mode) — no router needed:

- Connect your phone to the "BlindFlight" Wi-Fi network (no password).
- A captive portal page should open automatically. If not, open a browser and go to <http://flight.local>.

STA mode — device joins your home Wi-Fi (configure in Settings > Wi-Fi Setup):

- Keep your phone on the same Wi-Fi network. Browse to <http://flight.local> or the IP shown on the About screen.

The phone interface mirrors the device display and lets you name whiskeys, submit guesses, and control the flight.

Charging & Updates

- **Battery** —Charge via the USB-C port on the side. The home screen shows battery level.
- **OTA Updates** —In STA mode, go to Settings > Update to install firmware updates over Wi-Fi.