



Produced by
Psion Teklogix Ltd

Time User Guide

Contents

Introduction	1
Using alarms	1
Setting an alarm	1
Responding to an alarm	2
Changing & deleting alarms	2
Silencing alarms	2
Viewing alarms	3
Using the map	3
Selecting a country or city	3
Adding a town or city	4
Adding a country	5
Customising Time	5
<i>Setting summer time</i>	5
When you travel	6

Introduction

You can use the Time program to set, display and manage alarms, and to display a map of the world that gives you information on cities, times and dialling codes.

The Time program has two views: the **Map view** and **Alarms view**. To switch views, tap the [Map](#) or [Alarms](#) button on the Toolbar, or use the commands on the [View](#) menu.




Displaying on-line help

To display on-line help, select the [Help on Time](#) option from the [Tools](#) menu.

Using alarms

You can use the Alarms view to set alarms that will ring even when your netpad is switched off, e.g. a 'repeating' wake-up alarm that will ring each day you work, and 'once only' alarms to remind you of appointments.

The Alarms view allows you to set up to 8 alarms, each up to 7 days ahead, and control their sounds.

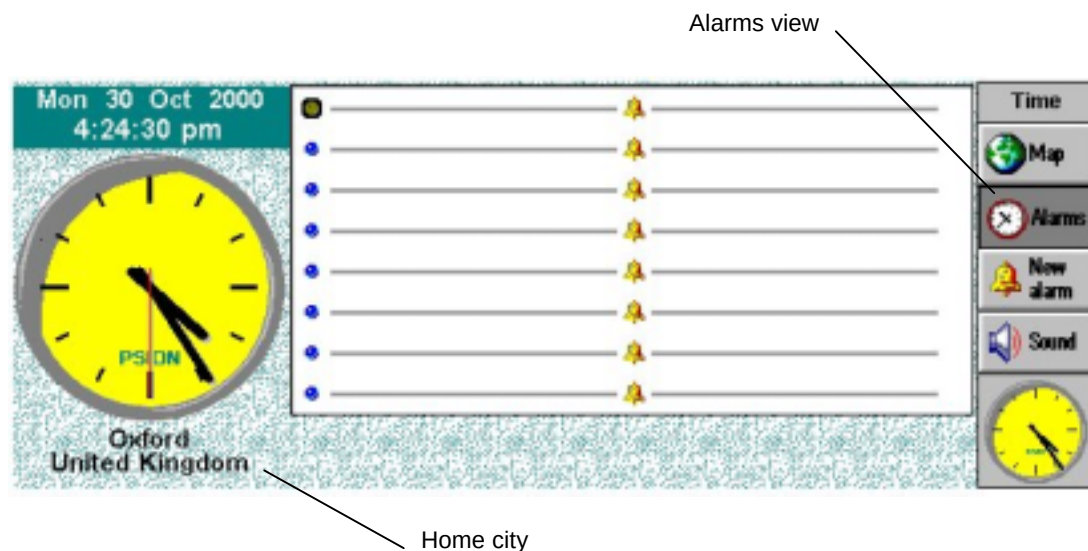

Setting an alarm

To set a new alarm, move to a blank line and then tap on it or press Enter (or just start typing the alarm text or the time you wish the alarm to ring). Alternatively, select the [New alarm](#) command from the [Edit](#) menu or Toolbar.

1. Set the time at which you wish the alarm to ring.
2. Select one of the following alarm types in the [Occurrence](#) line:
 - 'Next 24 hours', if the alarm is to ring once at the specified time during the next 24 hours, or '
 - 'Once only', followed by a day, if you wish the alarm to ring once at the specified time more than 24 hours from now.
 - 'Daily', if you wish the alarm to ring every day of the week at the specified time, or
 - 'Weekly', and specify a day, if you wish the alarm to ring at the specified time on that particular day every week.

- 'Workdays', if you wish the alarm to ring at the specified time on each day you work. If your workdays are not Monday to Friday, select the [Workdays](#) command from the [Tools](#) menu.
3. Type the text you wish to be displayed when the alarm rings. This text will remain on screen until you respond to the alarm, so do not enter anything you do not wish others to see.
 4. Select the required alarm sound, or 'Silent' if you wish the alarm to ring "silently" (you'll still see the alarm text on screen). To hear the selected sound now, press the [Test sound](#) button.

Note: A selection of alarm sounds is supplied with the netpad, but you can also select any sound that you have created as an alarm sound yourself. See the 'Record User Guide' document for more details.

[Responding to an alarm](#)

When the time and date correspond to an alarm that has been set in Time or Agenda, the alarm rings and the alarm text is displayed on screen.

- **To clear the alarm:** press the [Clear](#) button. If it is a once only alarm, it is removed. If it is a repeating alarm, it is automatically set to the next time it is due to ring.
- **To silence the alarm but leave the text displayed:** press the [Silence](#) button.
- **To 'snooze' the alarm (i.e. to stop it from ringing) for 5 minutes:** press the [Snooze](#) button - each further press adds 5 minutes to the 'snooze' time, up to a maximum of one hour. You can carry on using the netpad while the alarm is 'snoozed'.

The alarm will snooze automatically for 5 minutes if you press a Program icon to move to another program, while an alarm is ringing. You don't have to press the [Snooze](#) button. After this time, the alarm will ring again.

Note: If you are recording a voice note or other sound when an alarm is due to ring, the alarm will be delayed until you have finished the recording.



[Changing & deleting alarms](#)

If you wish to change any aspect of an alarm you have set, e.g. the time or the alarm text, move to the relevant line and tap, or select the [Change alarm details](#) command from the [Edit](#) menu.

To remove an alarm, move to the relevant line, and select the [Delete](#) command from the [Edit](#) menu. You can also delete any alarms that were set using the Time program from the [View next alarms](#) list (from the [Edit](#) menu). To delete one, highlight it and press the [Delete](#) button.

Note: When you delete a 'repeating' alarm, it is deleted for all days on which it is due to repeat.

[Silencing alarms](#)

If you wish to silence alarms for a particular period, e.g. the duration of a meeting or journey:

1. Select [Sound](#) from the Toolbar or [Tools](#) menu.


- Set the 'Silent for' in the [Alarm sound](#) line and specify the duration you wish alarms should be silenced. If you wish to silence alarm sounds indefinitely, set the alarm sound to 'Off'.

Note: When a 'silenced' alarm rings, the alarm text still appears on screen, and you need to respond to it as you would for an audible alarm.

- If you wish to stop an alarm from ringing without deleting it completely, e.g. if you wish to suspend your wake-up alarm while you are on holiday, move to the relevant line and select the [Disable alarm](#) command from the [Edit](#) menu. The alarm has a line drawn through it to show that it is no longer active.
- To make the alarm active again, move to the relevant line and deselect [Disable alarm](#).

Viewing alarms

The countdown to the next alarm, whether set in Time or Agenda, is given at the bottom of the screen. Use the [View next alarms](#) command on the [Edit](#) menu to view the alarms that are to ring in the future, and the [View past alarms](#) command to list the last 8 alarms to have been cleared (e.g. if you cancel an alarm, but need to be reminded of the alarm text).

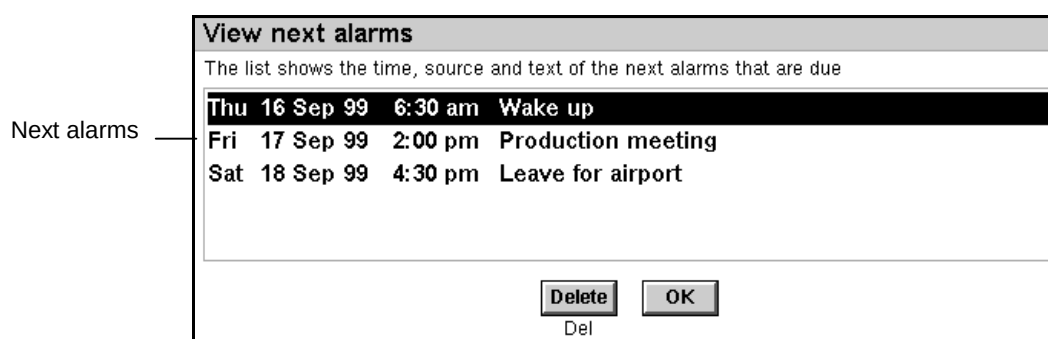

Using the map


You can use the Map view to display information for cities around the world. Set the city in which you are currently located as your 'Home' city, and then select other cities to find their time differences, dialling codes and distances from your Home city.

Important: In order for world information to be accurate, make sure you have defined your Home city, and the current time and date. Refer to the '*Getting started*' document.

Selecting a country or city

To select a particular country or city:

- Move to the country or city line at the bottom of the screen
 - Start typing the name of the required country or city. Continue typing until the correct city and country combination is displayed, or use the right and left arrow keys to scroll through the available countries and cities in alphabetical order until you come to the one you require.
- If you scroll through the countries, only the capital cities are listed.
 - If you wish to view only the cities in one particular country, select the country, and then select the [Cities in current country](#) command from the [View](#) menu. To go back to displaying cities for all countries, reselect the command.

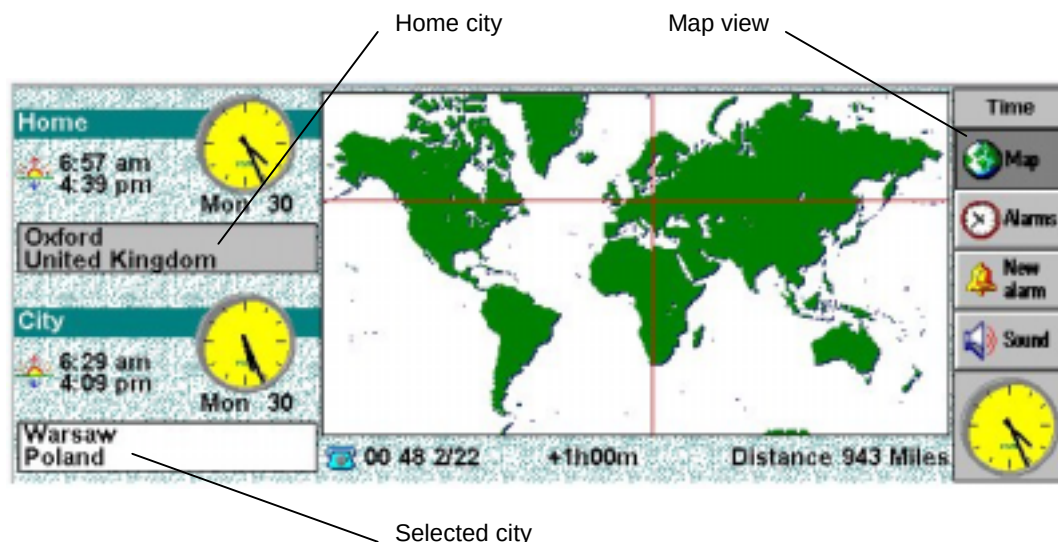

When you select a city, the cross hairs on the map move to the selected city, and information about the city appears at the bottom of the screen.

- The time difference between the Home city and selected city is displayed. This includes the difference in [GMT \(Greenwich Mean Time\) offsets](#) (the time zone difference) and includes a correction for summer time if necessary. For information about summer times, refer to 'Setting summer time' later.
- The code next to the telephone symbol at the bottom of the screen shows the digits needed to dial the selected city from the Home city.

Adding a town or city

If a place you require is not included in the Map view, you can add it:

1. Select the [Add city](#) command from the [Edit](#) menu.

The 'Add city' dialog box has a title bar 'Add city'. Below the title bar, it says 'GMT offset' is time difference from Greenwich Mean Time. The fields are: 'City' (empty), 'Country' (Brazil), 'Latitude' (15°47 S), 'Longitude' (47°55 W), 'Area code (phone)' (empty), 'Summer time zone' (Southern), and 'GMT offset' (- 03:00). There are 'Cancel' and 'OK' buttons at the bottom right.

2. Type the name of the city, its country, the latitude and longitude if known (this allows accurate distances and sunrise and sunset times to be calculated), the telephone area code, the GMT offset, and Summer time zone (see 'Setting summer time' later).
3. Position the intersection of the cross hairs on the town or city location, using the pen or the arrow keys.

You can select the command from the [Edit](#) menu to subsequently change any of the city details.

Note: You can only delete a non-capital city that you have added to the map yourself. To do this, select it at the bottom of the screen and then select the appropriate command from the [Edit](#) menu.

Adding a country

If a country you deal with is not included in the Map view, you can add it:

1. Select the [Add country](#) command from the [Edit](#) menu.
2. Type the country's name, its national dialling code, its national dialling prefix (i.e. the digit(s) that needs to be dialled immediately prior to each city area code when telephoning from one city to another within the country) and its international dialling prefix.
3. Each country must have a capital city, and a dialog is automatically displayed for you to create one. Complete it as in the previous section.
4. Position the cross hairs on the capital city's location, using the pen or arrow keys.

You can select the commands on the [Edit](#) menu to change any of the country or capital city details.

Note: You can only delete a country that you have added to the map yourself. To do this, select it at the bottom of the screen and then select the [Delete country](#) command from the [Edit](#) menu.

Customising Time

To change the city clocks from 'analog' to 'digital', or vice-versa, tap the clock that is displayed next to either the Home or selected city. You can also change the Toolbar clock by tapping it.

The distance from the Home city to the selected city is given in the currently selected units (Kilometres, Miles or Nautical miles). These units can be changed using the [Distance units](#) command on the [View](#) menu.

Tap the [Format](#) command from the [Tools](#) menu if you wish to change:

- The clock format, e.g. from 12 to 24 hours.
- The time separator (usually ':' as in '6:19 pm').
- The date format (e.g. 'Day Month Year' or 'Month Day Year').
- The date separator (e.g. '/' as in '01/03/99').

You can also set preferences for a standard alarm time if you tend to set alarms for the same time of day, or for a particular alarm sound to appear when you set a new alarm.

Setting summer time

If you are not interested in making use of world times, and are happy to use the [Time & date](#) command from the [Tools](#) menu to change the time when clocks go forward or back, you can ignore this section.

However, if you travel or wish to be precise about world times, you should set your own time to 'winter time' (in the UK, this is GMT), and modify the 'summer time' setting when the clocks go forward or back.

You can also take into account the 'summer times' used in the different areas of the world. Most of the cities on the world map can be included in one of 3 basic areas, or "Summer time zones" – 'Europe', 'Southern' and 'Northern'. The approximate 'summer times' for these zones are:

Europe	End of March to end of October.
Northern	Early April to end of October.
Southern	Late October to end of February.

Each city on the map is associated with one of these zones, or with 'None'. To check what the Summer time zone is for a city, select the city in the Map view, and then select [Change city details](#) from the [Edit](#) menu.

When the clocks are due to go forward or back in the cities in a particular Summer time zone:

1. Select the [Summer times](#) command from the [Tools](#) menu.

2. Tick the time zone if it is changing to summer time; remove the tick if it is changing back to winter time. If your Home city is in that zone, then 'Home' is ticked automatically and the netpad clock will adjust accordingly.

The clocks, and sunrise and sunset times, for each of the cities associated with the 'Summer time zone' are changed.

Note: If the Home city has a 'Summer time zone' of 'None' because it is not in one of these 3 zones, but its clocks are due to change, you can change the netpad clock to 'summer time' by ticking 'Home'.

When you travel

Whenever you travel, reset your Home city to the town or city to which you have travelled. Then, provided that the city details and 'summer time' setting are correct on the netpad for this city, the information in the Map view will be accurate.