

RING TIMERS MENU		
1-R1	+	R2 TIMERS
2-R1	+	R3 TIMERS
3-R1	+	R4 TIMERS
4-R2	+	R3 TIMERS
5-R2	+	R4 TIMERS
6-R3	+	R4 TIMERS

Figure 2-4. Ring Timers Display

This display shows a selection of ring pairs. For example, selecting 1-R1 + R2 Timers from the Ring Timers display brings up the Ring Pairs display for Rings 1 and 2. (Figure 2-5).

RING TIMERS SEQ:00 B:1:1:1:1 CHG PENDING									
RING 1		RING 2		PHS..	12345678		90123456		
MGRN 10		MGRN 10		O/N	.O.	.O.			
WALK 05		WALK 05		VEH	CRCCCRCC				
TBR 15		TBR 15		PED	.R.C.R.C				
CBR 02		CBR 03		H/O	.HO..HO.				
PASS 4		PASS 4		BACKUP	055		060		
MAX1 25		MAX1 25		STOPTIME	-	1/2			

Figure 2-5. Ring Pairs Display

While this display is active, the user may place calls by pressing the following:

- A followed by 1 to 8 for phase vehicle 1 to 8
- B followed by 1 to 8 for phase vehicle 9 to 16
- C followed by 1 to 8 for phase pedestrian 1 to 8
- D followed by 1 to 8 for phase pedestrian 9 to 16

The call remains active until the key is pressed again, the user leaves the display, and the access timer times out (10 minutes after the last key press), or power is interrupted. Calls implemented this way will be denoted by a small c in the appropriate column.

Multiple calls may be placed or removed without pressing A, B, C, or D each time. To place vehicle calls on phases 1, 2, 3, and 4, press **A1234**. The A level remains active until the user presses B, C, or D, so pressing 1234 again would remove the calls placed on phases 1, 2, 3, and 4 for the A level.

In the first line of the display, the following fields are active:

- SEQ:## (where ## is a two-digit number) Sequence that is currently running.
- B:###:### (where # is 1-4) Bank that is currently running. Banks are listed in the following order: Phase, Priority, Unit and then System Bank.
- CHG PENDING: when present, indicates that configuration changes are being withheld until the top of the coordination cycle.

Ring status (active phase) indicators include the following:

- MGRN ** – Minimum Green
- AINI ** – Added Initial
- WALK1 ** – Standard Walk

-
- WALK2 ** – Alternate Walk
 - PCLR1 ** – Standard Pedestrian Clear
 - PCLR2 ** – Alternate Pedestrian Clear
 - TBR ** – Time Before Reduction
 - CBR ## – Cars Before Reduction (## count up)
 - TTR ** – Time to Reduce
 - EGAP ** – Effective Gap (gap in effect)
 - PASS ** – Passage
 - MAX1 ** – Maximum 1
 - MAX2 ** – Maximum 2
 - Overlap A-P:
 - ♦ O_x G ** – Overlap Trailing Green
 - ♦ O_x Y ** – Overlap Trailing Yellow
 - ♦ O_x R ** – Overlap Trailing Red
 - OWALK1 ** – Standard Overlap Walk
 - OWALK2 ** – Alternate Overlap Walk
 - OPCL1 ** – Standard Overlap Pedestrian Clear
 - OPCL2 ** – Alternate Overlap Pedestrian Clear
 - OAWALK ** – Overlap Advanced Walk
 - ODWALK ** – Overlap Delayed Walk
 - GAP OUT – Gapped Out termination
 - MAX OUT – Maxed Out termination
 - FORCE – Forced Off termination
 - LST CAR – Last Car Passage
 - WLK HLD – Walk Hold state
 - WLK RST – Walk Rest state
 - GRN RST – Green Rest state
 - YEL ** – Yellow change
 - RED ** – Red clear
 - RED RST – Red Rest state
 - RRV_T ** – Red Revert
 - GDLY ** – Green Delay
 - YDLY ** – Yellow Delay
 - AWLK – Advance Walk
 - DWLK – Delay Walk

** Interval timing with countdown

Phase status indicators include the following:

- O/N (Phase on/phase next)
 - ♦ O – On: Phase is active
 - ♦ N – Next: Phase will follow
- VEH (Vehicle Call/Recall)
 - ♦ C – A vehicle actuation call
 - ♦ c – Keypad initiated call
 - ♦ b – A bicycle actuation call or non-actuated transition
 - ♦ B – Bicycle recall
 - ♦ N – Non-actuated vehicle recall
 - ♦ R – Minimum vehicle recall
 - ♦ X – Maximum vehicle recall
 - ♦ S – Soft vehicle recall
- PED (Pedestrian call/recall)
 - ♦ C – A pedestrian call
 - ♦ c – Keypad initiated call
 - ♦ N – Non-actuated pedestrian recall
 - ♦ R – A pedestrian recall
- H/O (hold/omit)
 - ♦ H – Hold input active
 - ♦ O – Phase omit active
 - ♦ P – Pedestrian omit active

2.2.1.1 Operational Mode Indicators

One of the following, or a combination depending on the Operational Mode, may appear. The first item on the line is the Control Source. The second item on the line is the Control Plan. The third item, if available, on the line is the Pattern Timing.

Time base – 055 120

Interconn – 055 120

System – 055 120

Backup – 055 120

Manual – 055 120

Time base – FREE

Interconn – FLASH

System – FLASH

Standby – FREE

Other Operational Mode indicators include the following:

STRT FLASH – Startup Flash timing
STRT FLASH w/PREEMPT – Startup Flash and active Preempt routine
STOPTIME - 1/2 – Active Stop Time input(s)
PREEMPT - 1 – Active Preempt routine
PRI CONTROL -1 – Transit priority adjustments in progress
PRIORITY - 1 –Transit Priority in service
LOCK OUT – Coordination Omitted
QUE1 LVL1 - 055 120 – Local TR QUE1 LVL1 override
QUE1 LVL2 - 055 120 – Local TR QUE1 LVL2 override
QUE2 LVL1 - 055 120 – Local TR QUE2 LVL1 override
QUE2 LVL2 - 055 120 – Local TR QUE2 LVL2 override
DIAG FLSH – Diagnostic Fault Flash (Watchdog)
DIAG FLSH W/PREEMPT – Diagnostic Fault Flash and active Preempt routine
CAB DIAG FLSH – Diagnostic Fault Flash (MMU / CMU compatibility, MMU / CMU response, or TF BIU / SIU response)
DIAG FLSH - NO XIT – Diagnostic Fault Flash has occurred three times in a 24-hour period
CAB DIAG FLSH - NO XIT – A Cabinet Diagnostic Fault Flash has occurred three times in a 24-hour period

2.2.2 Coordination Status Menu

The Coordination Status Menu display (Figure 2-6) allows the user to view the real time status of coordination timers and parameters for the active pattern.

From the Active Status menu (Figure 2-3), select **2-COORD STATUS**.

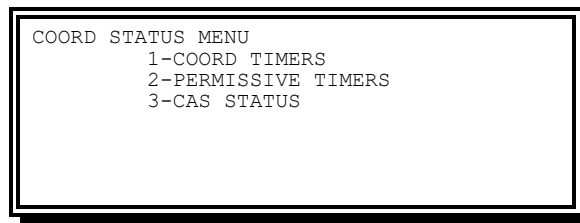


Figure 2-6. Coordination Status Menu Display

2.2.2.1 Coordination Timers

The Coordination Timers display (Figure 2-7) allows the user to view the real time status of coordination timers and parameters for the active pattern.

From the Active Status menu (Figure 2-3), select **2-COORD TIMERS**.