



CONTENTS

STORY	2
INSERTING THE BATTERY.....	3
TIME SET	4
ALARM SET.....	5
APPEARING CHARACTERS	6
HOW TO PLAY.....	7
HOW TO OPERATE	10
CAUTIONS	11
BATTERY AND LIQUID CRYSTAL	12
SPECIFICATIONS	13

STORY


Oh no! Derpy's mailbag is torn, and she's unknowingly dropping heavy packages all over the town.

The main street is full of ponies – in harm's way! Luckily, Spike happens to be on the scene.

He has a sturdy basket to catch the raining parcels and protect innocent ponies from cranial catastrophe.

INSERTING THE BATTERY (REPLACEMENT OF BATTERY)

1. Remove the battery cover from the back of the unit sliding it off in the direction shown.
 2. Install the battery with the + side facing up.
 3. Close the lid in reverse procedure of 1.
- This game uses two LR44 or SR44 batteries.
 - When the battery power weakens, the character display becomes vague and sound becomes low or completely diminished. In such cases, immediately replace the battery. (if exhausted battery is left in the unit, it may result to damaging the game.)
4. When ACL switch is pressed lightly with a sharp-pointed instrument, few seconds later 12:00 will be displayed.
 - Carefully read the instruction on the battery package.
- 
- The diagram illustrates the process of replacing the battery. It shows a top-down view of the battery compartment with two LR44/SR44 batteries installed. Arrows indicate the direction to slide the battery cover off. Below, a side view shows the battery cover being lifted away from the unit, revealing the internal compartment.

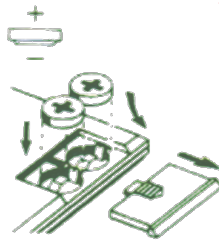

TIME SET

1. When ACL switch is pressed with a sharp-pointed instrument and released, after 2 or 3 seconds, the display shown in the diagram will appear.
2. When the left button is pressed, the hours can be adjusted. (24 hours notation)
3. When right button is pressed, the minutes can be adjusted.
4. By adjusting in accordance with above method and then pressing the TIME key, the clock will start. Pattern display moves every second.




NOTE : ACL switch should not be depressed for an extended time of period as it will result in high battery consumption.

4

ALARM SET

1. Push the ALARM key. The bell indicator should appear, if not, push the ALARM key again.
ALARM is set if the bell indicator is on screen.
 2. When the left button is pressed, the hours can be adjusted.
(24 hours notation)
 3. When right button is pressed, the minutes can be adjusted.
 4. When Time key is pressed after above steps have been completed, the Alarm is set and ready.
 5. At the Alarm time, bell pony appears and hits the bell.
Alarm sound continues on for 60 seconds.
To turn off alarm, push the TIME key.
- NOTE : When in the middle of a game at alarm time, bell pony will only show the bell hitting but there will be no sound.
6. To check Alarm time, press TIME key. Alarm time appears only while the TIME key is depressed.

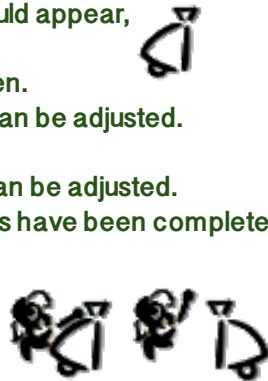

NOTE : When in the middle of a game at alarm time, bell pony will only show the bell hitting but there will be no sound.

5

APPEARING CHARACTERS



Derpy

- Because her bag is torn, unknowingly she's dropping packages everywhere.



Spike

- Will be catching the dropped packages before they can hit an innocent ponie.



Ponies

-- Our possible victims, wandering around.

6

HOW TO PLAY

CONTROL BUTTONS

- LEFT Button:** Pressed for moving to the left.
- RIGHT Button:** Pressed for moving to the right.

Game Start

- Press the Game key. While the key is depressed, the top score is displayed. When the key is released, the game starts. (Top score is erased when ACL switch is pressed or the battery is removed.)
- Derpy appears on top of the screen, flying around to deliver the mail. Ponies appear below, wandering around all doing their usual thing.

7

Game

- Derpy's mailbag is torn, and she's unknowingly dropping heavy packages all over the town. The main street is full of ponies – in harm's way!
- Luckily, Spike happens to be on the scene, with a sturdy basket to catch the raining parcels and protect innocent ponies from cranial catastrophe.
- Game A is an easier mode, with more predictable package paths.
- Game B is harder, faster, and packages can rebound off of walls to confound and surprise you!
- Let a package hit a pony or crash into the Antique Shop, and you will accrue a MISS! After three MISSES, it's GAME OVER!

8

POINTS

- Every time Spike catches a box, 1 point is earned.
- A box is only caught one step after it appears in Spike's basket. If Spike move before that one step, the box is not caught, and a miss will occur.

MISSES

- Every time Spike is not able to get hit basket under the bottom position of a box, before it makes the next step, a miss appears.
- Spike has time to get under a box at the bottom position till next step, after that next step, a miss appears.
- 3 misses ends the game.

9

HOW TO OPERATE



ACL Button : Press this button to set the time.

ALARM Button : Press this button to change the alarm time, to set or cancel the alarm.

GAME A Button : To start game A, press this button, then release it.

GAME B Button : To start game B, press this button, then release it.

TIME Button : Press this button, then release it to display the time. The alarm time can be displayed by holding down this button.


LEFT Button :
To go Left

RIGHT Button :
To go right

10

CAUTIONS

1. Do not use pencil or pin when pressing ACL or ALARM switch.
2. As the unit is made of precise electronic components, avoid the use and storage at an extreme temperature or heavy shocks.
3. Especially at low temperatures, the response speed may slow down or the lighting may fail. As the liquid crystal is destroyed at high temperature, never leave the unit in a car which is exposed to direct sun light.
4. As exhausted batteries will give an adverse effect to the unit, replace them without delay. (If the battery is exhausted, the display of the liquid crystal will become vague and difficult to look at).
5. Be careful not to press the liquid crystal display heavily. Otherwise, the display may fail.
6. Do not put the unit in the pocket at the back of trousers. The display may be damaged when you take a seat.
7. Wipe any dust with a soft dry cloth.
8. Do not use volatile oils such as thinner or benzine and alcohol for wiping.
9. The liquid crystal may be difficult to look at depending upon the angle. The best angle at which to look is as illustrates in the figure.

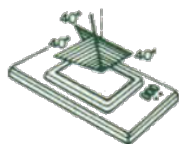

11

BATTERY AND LIQUID CRYSTAL

*Battery

1. When battery is removed from GAME & PONY, be sure to keep it out of reach of children.
2. Battery life is the same whether installed in game or removed.
3. If a battery should be swallowed, call doctor immediately.
4. Do not recharge battery or place it on metal or aluminum sheet.
Be careful not to carry two or more batteries in the pocket.
5. Do not use battery as toy. Use only as intended in GAME & PONY.

*Liquid crystal

1. The liquid crystal display uses glass parts. It should not be dropped, hit or placed under pressure. Any of these can cause damage to the liquid crystal.
2. The liquid crystal display is designed as best as possible to prevent glass from shattering and liquid leaking if the display is broken. If, however, liquid does contact the skin, wash immediately with soap and water.

12

SPECIFICATIONS

Accuracy of the clock : Average daily differential within
 ± 3 secs. (under normal temperature)

Battery : Two Button type batteries.
(LR44 or SR44)

Life of the battery. : For clock display
Aprox. 6 months on LR44
Aprox. 12 months on SR44
For one-hour-game a day
Aprox. 5 months on LR44

Working temperature : 10°C to 40°C (50°F to 104°F)

13

14



© 2018. A.Glimslam Co. Ltd.

PRINTED IN CANADA