
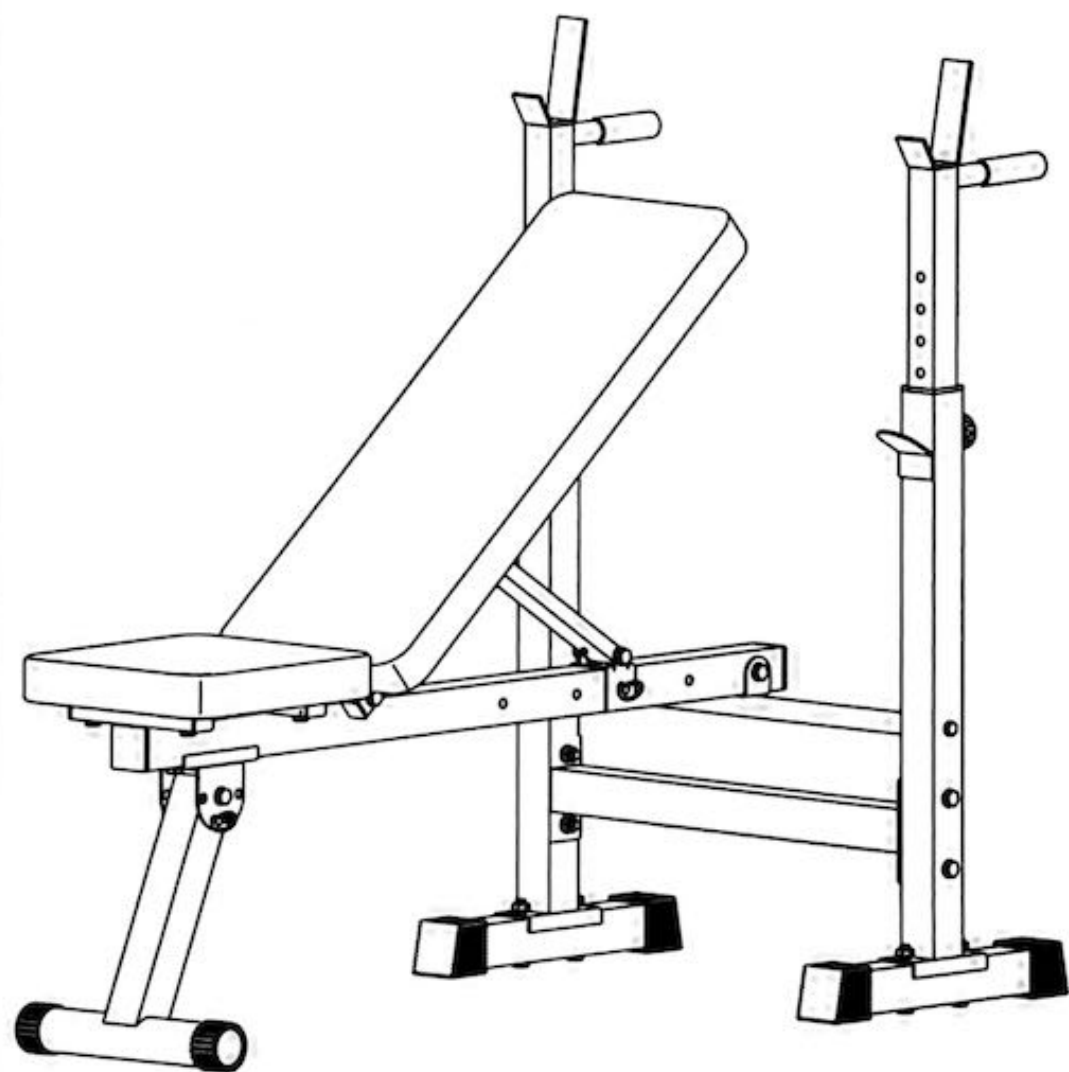
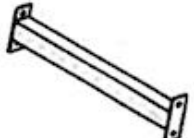

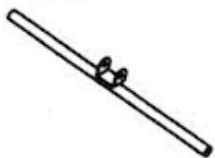


User Manual

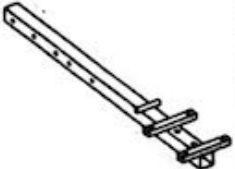

Accessories list



A. Barbell bracket left  1PCS	B. Barbell bracket right  1PCS	C. Bottom holder tube  2PCS	D. Connecting tube  1PCS
E. Adjustable tube  2PCS	F. Backrest lever adjustable tube  1PCS	G. Round tube  1PCS	H. Back cushion tube  2PCS
I. Bench leg  1PCS	J. Main tube  1PCS	K. Metal fastening  1PCS	L. Metal fastening  1PCS
M. Seat cushion  1PCS	N. Back cushion  1PCS	O. Tube cover  4PCS	

a.adjustable screw  2PCS	b.safety pin  2PCS	c.wrench 14-17  2PCS	d.screw (M8*20) +washer (M8)  2set
e.screw (M8*40) +washer (M8)  8set	f.screw (M10*70) +washer (M10) +nut (M10)  11set	g.screw (M10*150) +washer (M10) +nut (M10)  2set	h.screw (M10*55) +washer (M10)  2set

Safety Precautions:

1. Please keep all children away from exercise products when in use. Do not allow children to climb or play on them when they are not in use.
2. Keep fingers clear of moving parts.
3. For your own safety, always ensure that there is at least 0.6 meter of free space in all directions around your product while you are exercising.
4. Regularly check to see that all nuts, bolts and fittings are securely tightened. Periodically check all moving parts for obvious signs of wear or damage.

Step1

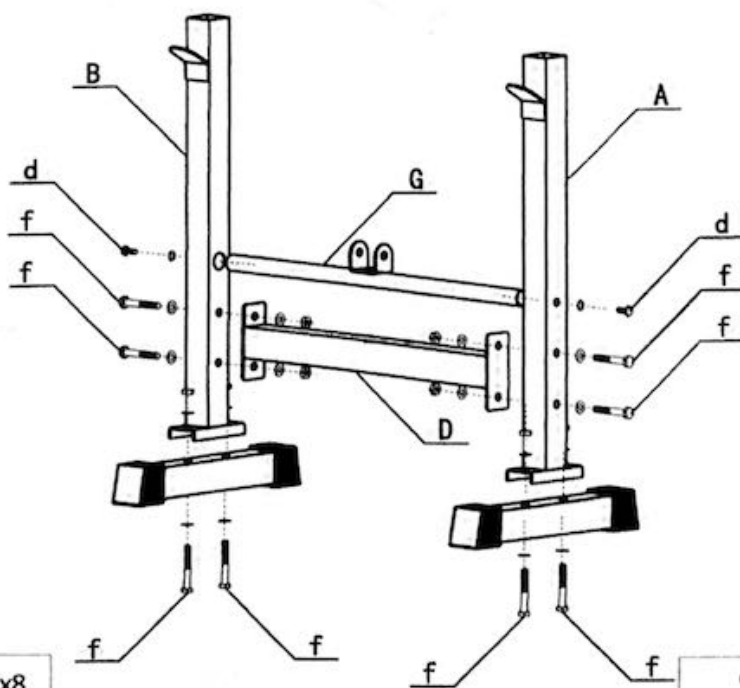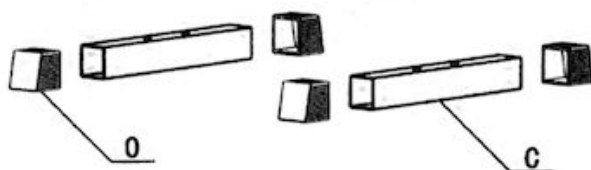


f.screw (M10*70) + washer + nut x8

f.screw (M10*70) + washer + nut

d.screw (M8*20) + washer x2


d.screw (M8*20) + washer

Step2

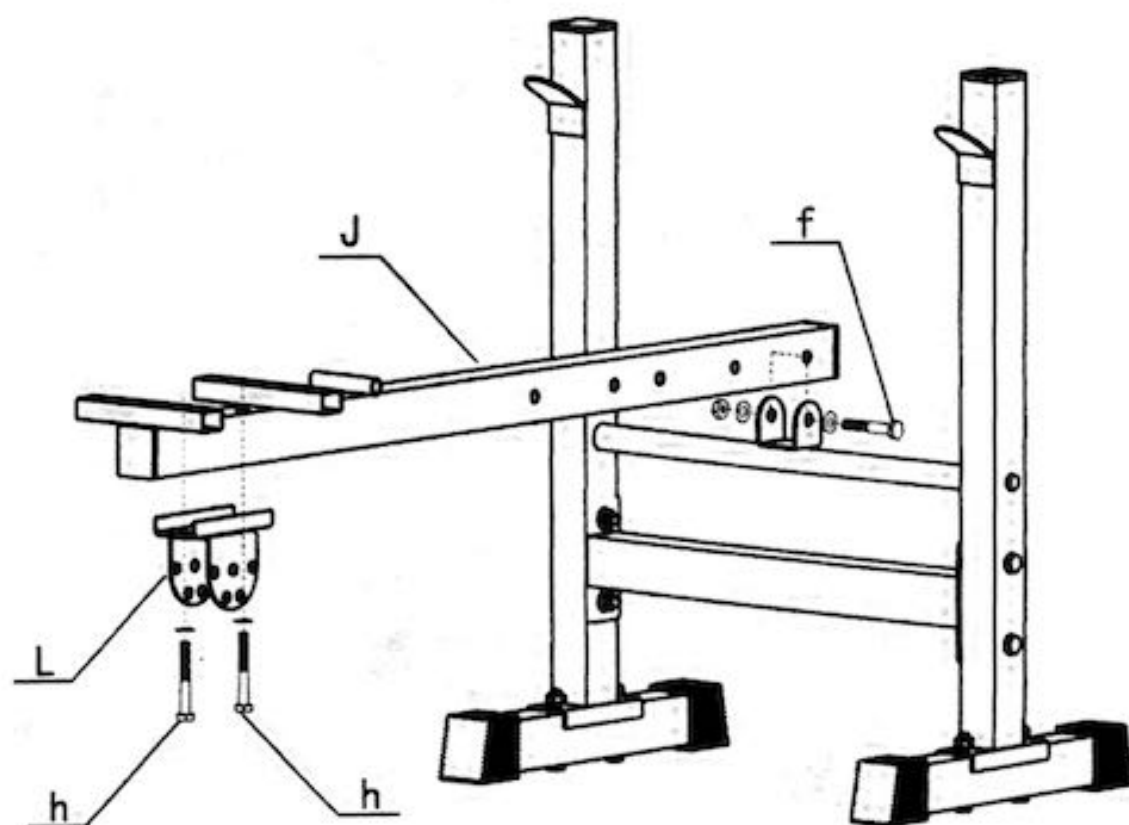


 x1	 x2
f.screw (M10*70) + washer + nut	h. screw (M10*55) + washer (M10)

Step3

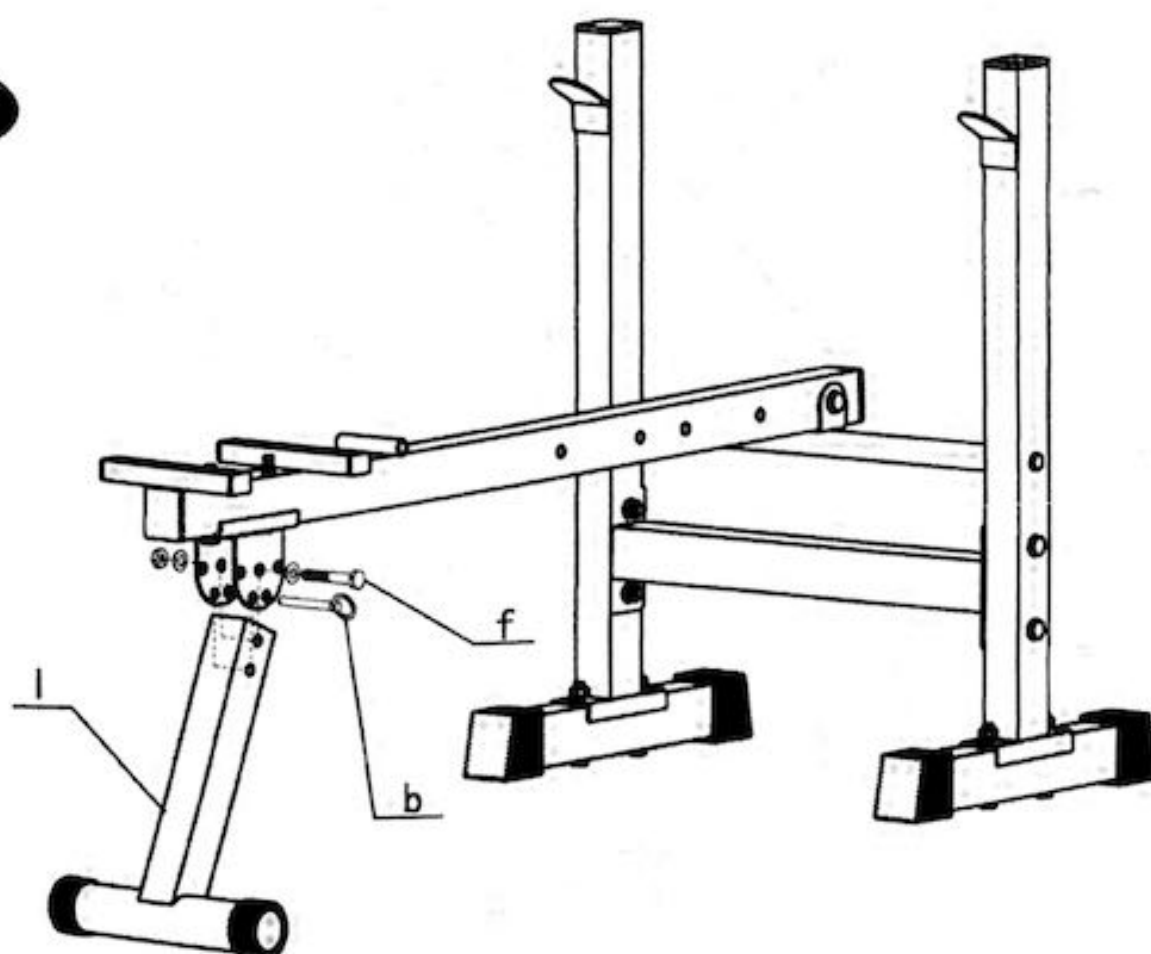


 x1	 x1
f.screw (M10*70) + washer + nut	b.safety pin

Step4

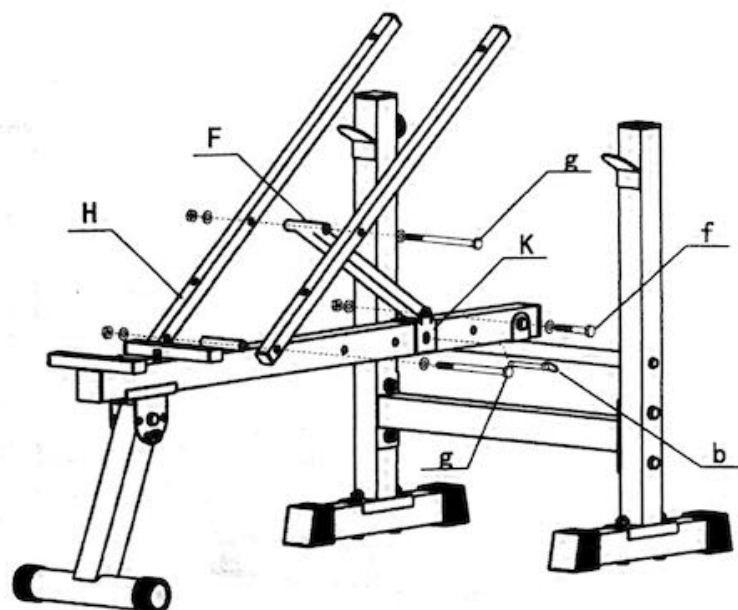

 x1	 x2	 x1
f.screw (M10*70) + washer + nut	g. screw (M10*150) + washer + nut	b.safety pin

Step5

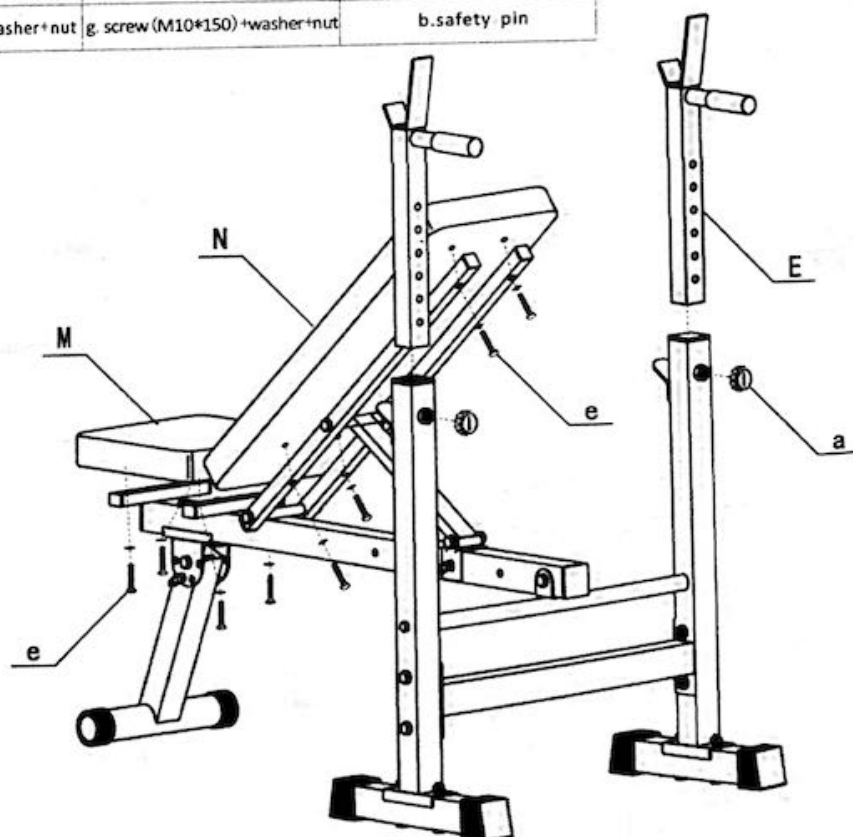

 x8	 x2
e.screw (M8*40) + washer (M8)	a.adjustable screw