Link

USER MANUAL

Link · Link Pro



A wireless remote for your hi-fi.

Phone, tablet, computer — and, with Link Pro, your TV.

Firmware 2.2.8 · September 2026

NOTE

Link is an independent product. It is **not affiliated with, endorsed by, or produced by McIntosh Laboratory, Inc.** "McIntosh" and model names such as C2700 are trademarks of their respective owners and are used here only to state, factually, which equipment Link can control.

Contents

01 What Link does 3
02 The two models 4
03 What you need 5
04 Connect it 6
05 First-time setup 7
06 Opening the remote 9
07 The main screen 10
08 Volume safety 12
09 Panel Setup 13
10 The Full view 15
11 Subwoofers and room correction 17
12 Adding other brands 19
13 On the TV 20
14 The button and the light 23
15 Updates 25
16 Keyboard shortcuts 26
17 Troubleshooting 27
18 Compatible equipment 28
19 Care, power and specifications 29

01

What Link does

Link is a small box that plugs into your preamplifier's RS-232 control port and puts it on your home network. From then on, any phone, tablet or computer in the house is a remote control.



- **Volume, mute, inputs, tone, outputs** — everything the front panel does.
- **Always in sync.** Link mirrors the preamplifier. Turn the real knob and every screen follows instantly.
- **A volume ceiling you set**, enforced inside Link — not just in the app.
- **Nothing leaves your home.** No account, no cloud, no subscription. The only thing Link ever fetches from the internet is its own software updates.
- **More than the preamp:** subwoofers, room correction, a music streamer's transport controls — and, on the Link Pro, a full ten-foot interface on your TV with live VU meters.

02

The two models

Both models run the same software and show the same remote. They differ in what is on the back.

	LINK	LINK PRO
Control ports (3.5 mm RS-232)	3	4
Network	Wi-Fi	Wi-Fi **and** Ethernet
First-time setup	Bluetooth from the Link app	Bluetooth from the Link app, or plug in Ethernet
TV output (HDMI)	—	Yes, with TV-remote control
Live VU meters	—	Yes (two RCA inputs on the back)
Other brands (Lyngdorf, Rotel, Denon, NAD…)	—	Yes
Snapshot presets	—	Yes
Status light	Multicolour	Green
Button, short press	**Sleep** (whole unit off the network)	**TV output off / on**
Button, hold	5 s → factory reset	10 s → factory reset
Power	USB-C, any 5 V charger (0.5 A or more)	USB-C, **5 V / 5 A** supply (supplied)
Cooling	Silent, no fan	Small, quiet fan
Enclosure	Compact desktop box	Metal

Everything in this manual applies to both unless a heading or a note says **Link Pro**.

03

What you need

- Your preamplifier, with a **3.5 mm RS-232 control jack** on the back (see Compatible equipment).
- A **Wi-Fi network** (2.4 GHz) — or, on the Link Pro, an Ethernet cable if you prefer a wired connection.
- A phone with the free **Link app** (App Store / Google Play) for the one-minute setup. After that, any phone, tablet or computer with a modern browser is a remote.

In the box: the Link unit, a USB-C power supply, and one 3.5 mm control cable. A second or third device needs its own 3.5 mm stereo (TRS) cable — any ordinary male-to-male "aux" cable works.

04

Connect it



Rear panel

Left to right on the back: the **control ports**, the **USB-C** power socket, the **status light** and the **button**. The Link Pro adds a fourth port, an HDMI socket, an Ethernet socket and two RCA meter inputs.

1. **Control cable.** Run the supplied 3.5 mm cable from **any PORT** on Link to the **RS-232** jack on the back of your preamplifier. It sits in the row of small jacks, usually next to IR IN. Any port works and the order does not matter — Link finds out for itself what is plugged in where.
2. **More devices.** A second preamplifier, a B&W DB1 subwoofer or a MEN220 room-correction processor each get their own cable into any free port.
3. **Link Pro, optional:** Ethernet to your router, HDMI to your TV, and your preamplifier's line or tape output to the RCA meter inputs if you want the VU meters to move.
4. **Power.** Plug in USB-C last. Link has no power switch — it is designed to stay on. The Link draws less than a phone on charge.


> **NOTE**
>
> **Leave the preamplifier's RS-232 baud rate at its factory setting** (115200). If someone has changed it in the setup menu, Link will still find it — it tries every rate — but the factory setting is fastest.

05

First-time setup

When Link powers up for the first time its light **blinks blue, twice, pause, repeat**. That means it is waiting to be set up. Your phone never has to leave your home Wi-Fi.

With the Link app (recommended)

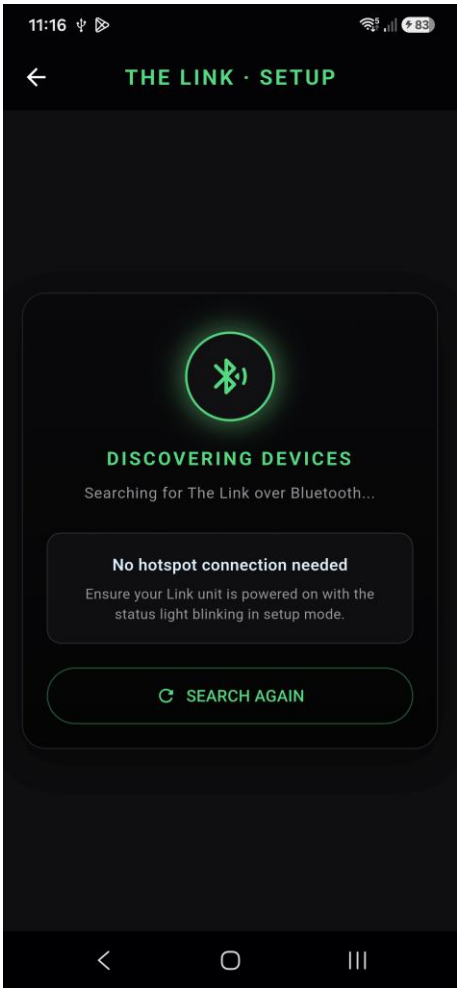


1. Install **Link** from the App Store or Google Play and open it. Allow Bluetooth when asked — it is used only for this step.
2. The app looks for a Link on your network, finds none, and starts a **Bluetooth search** by itself. Stand within a few metres of the unit.
3. It finds the unit and shows the **Wi-Fi networks the unit can see**.
4. Pick your home network and type its password. Optionally **name this Link** (do this if you own more than one — the name becomes its web address, e.g. `Studio` → `http://studio.local`).
5. Tap **Connect**. Link joins your network, the light goes **solid green**, and the app lands on the remote.

If the password was wrong the app tells you after about a minute and lets you retype it.

Link Pro shortcut: plug in Ethernet and skip all of the above — the unit is on your network the moment it boots. Wi-Fi can be added later from **Panel Setup → SYSTEM → WIFI SETUP**.

Without the app (fallback)

Use this if you cannot use Bluetooth, or if the app says **"Can't find it?"** — it offers the same path as **SET UP OVER WI-FI**.

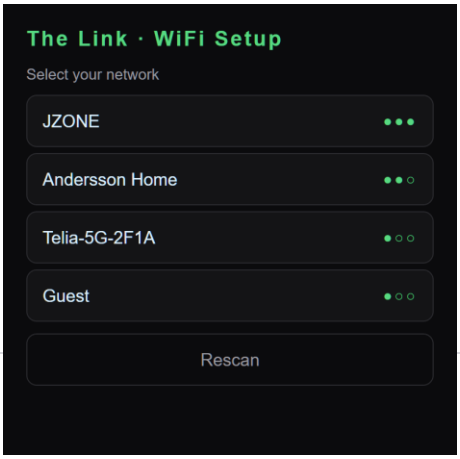

1. On your phone, tablet or computer, join the Wi-Fi network **`Link-XXXX`** (password **`linksetup`**). Accept any "no internet" warning.

2. A setup page usually opens by itself. If not, open a browser and go to `http://link.local` (or `http://192.168.4.1` if that does not load).
3. Tap your home network, type its password, optionally name the unit, and tap **Connect**. Link restarts, joins your network and the light goes solid.
4. Put your device back on your home Wi-Fi.

Per-device step-by-step for iPhone, Android, Windows and Mac: **SETUP.md**.

06

Opening the remote

The remote is a web page that Link itself serves. Nothing to download — the Link app simply hosts that same page, and a browser reaches it directly:

`http://link.local` — or `http://<the-name-you-chose>.local`.

Add it to your home screen and it opens like an app, full screen:

iPhone / iPad	Safari → **Share** → **Add to Home Screen**
Android	Chrome → menu → **Install app** / **Add to Home screen**
Windows / Mac	Chrome or Edge → address-bar menu → **Install**

Every phone, tablet and computer in the house can be open at once; they all show the same thing, because Link — not the app — owns the state.

07

The main screen

Everything is on one screen. Each piece of equipment gets its own card.



The preamplifier card

Power — the ⏻ button in the card header. When the preamplifier is off, the controls below dim; the header stays lit. Tube preamplifiers take around 15 seconds to warm up.

Volume — the big dial.

- Tap **+** and **–** either side of it. **Hold** either one to run.
- On a computer you can also **scroll the wheel** over the dial, or use the **arrow keys**.
- **Tap the number in the middle to mute.** One tap, always — and one tap back. Mute never has a confirmation step.

There is deliberately **no drag-to-set and no tap-on-dial**. Volume only ever moves one step at a time, so a slip of the thumb can never jump it.

Soft limit — the line under the dial. See Volume safety.

Tone — bass and treble, ±12 dB. Tap the word **TONE** to switch the tone controls in and out of circuit. Your preamplifier stores tone settings *per input*, so they follow the source. Models without tone controls hide the section.

Surround — appears only on A/V receivers and processors (AUTO / THROUGH / MOVIE / MUSIC / GAME).

Outputs — OUTPUT 1 and OUTPUT 2, with a lamp each. Rename them to whatever they actually drive ("MAINS", "SUBS", "HEADPHONES") in Panel Setup.

Inputs — a button per input. Hide the ones you never use and rename the rest, so the panel shows *your* system and nothing else.

The streamer card

If an Eversolo or another UPnP/DLNA music player is on your network, Link finds it and shows what's playing: cover art, title, artist, and a progress bar you can **tap to seek**. **PREV · PLAY · NEXT** control the transport.

Eversolo players are fully supported. Other UPnP/DLNA players work for transport control; their track information may be limited.

Link deliberately does **not** control the streamer's own volume — the preamplifier owns volume, full stop.

The room-correction card


Shown when a McIntosh MEN220 is connected. See section 11.

Two preamplifiers

Link can drive two preamp-class devices at once. When it detects a second one, **tabs appear at the top** of the screen. Each has its own volume, its own limit, its own input names — and its own safety apparatus. Two phones can sit on different tabs at the same time.

Themes

Six colour schemes — DARK, LIGHT, GRAPHITE, SILVER, CLASSIC and STUDIO — under **Panel Setup → SYSTEM → THEME**. The choice is per phone or browser, so everyone in the house can have their own.

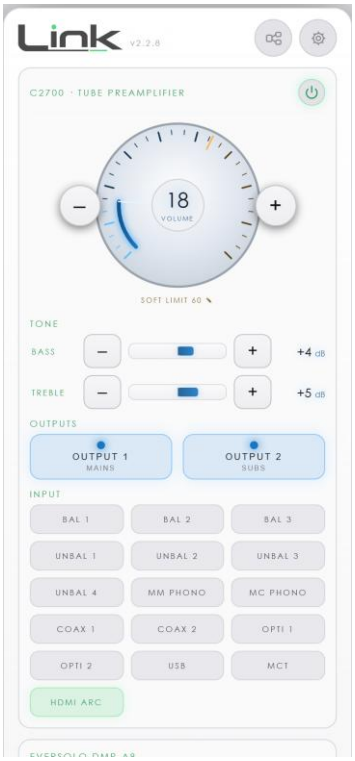


08

Volume safety

This is the part of Link that matters most, so it is worth a minute.

Link never sends an absolute volume. It only ever says "one step up" or "one step down", and it waits for the preamplifier to confirm each one. There is no code path in the product that can command a volume number — so no glitch, no stale screen and no lost connection can produce a jump.

The soft limit is a ceiling you set. Under the dial you'll see `SOFT LIMIT 60` ✎. Tap it, adjust with **–** / **+**, tap **DONE**. Volume-up requests are simply dropped at the ceiling. This is enforced inside Link, not in the app, so it holds for every phone in the house and for the TV remote.

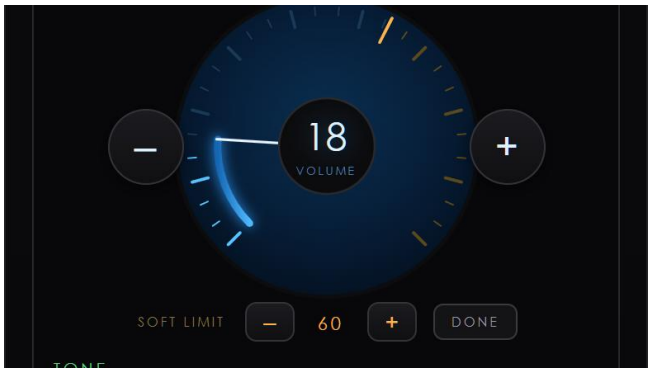

Editing the soft limit

To go louder on purpose, wait until the volume reaches the limit — an **UNLOCK >60** button then appears under the dial. Tap it and the line changes to `HIGH ZONE UNLOCKED · relocks in 30 s`. After 30 seconds the ceiling comes back by itself. It is a deliberate, temporary act — never a setting you can forget you left on. (The TV's Full view has no unlock button at all; there, raise the limit deliberately instead.)

Lowering the limit below the current volume walks the volume down to meet it, one confirmed step at a time.

Other protections, always on:


- A minimum interval between volume steps, so a stuck button or a flaky network can't sprint.
- Hold-to-repeat is the *app* sending single steps. Lose the connection and the volume stops moving that instant.
- Link never assumes. It shows what the preamplifier has confirmed.

> **NOTE**
>
> **Set the limit before you need it.** Pick a number that is loud but safe for your speakers, and leave it there.


09

Panel Setup

Tap the ⚙ **gear** in the top right. Two tabs: **DEVICES** and **SYSTEM**.

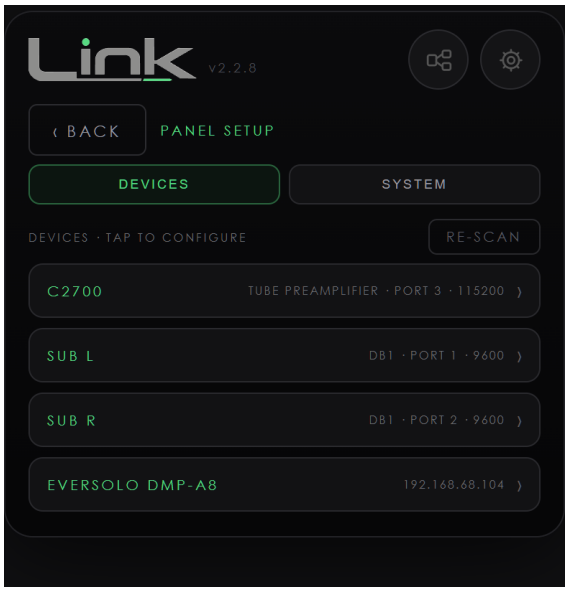

Panel Setup — devices

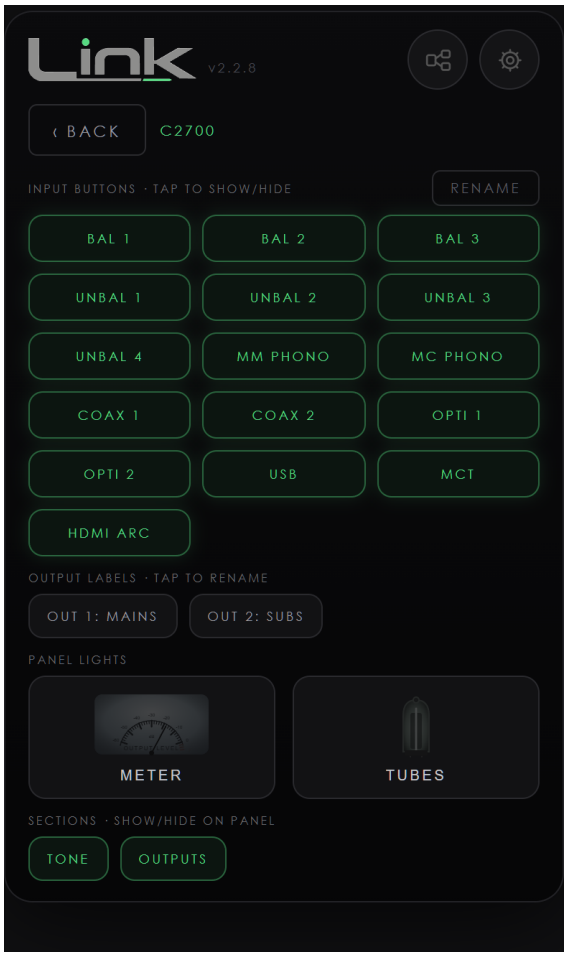

A preamplifier's own settings page

DEVICES

A list of what Link has actually found — each row shows which port it's on and at what speed. **Tap a row** to open that device's own settings page. Ports still searching appear dimmed at the bottom as "PORT n — scanning…"; that list *is* the diagnostic.

RE-SCAN in the header makes Link forget what it found and look again.

On a preamplifier's page:


- **INPUT BUTTONS** — tap to show/hide. **RENAME** to relabel them.
- **OUTPUT LABELS** — tap to rename.

- **PANEL LIGHTS** — METER and TUBES, the preamplifier's own front-panel lighting (models without them don't show the buttons).
- **SECTIONS** — show/hide TONE and OUTPUTS on the main screen.


All of this is stored **in Link**, not in your browser — so a new phone, a tablet and the TV all show the same layout. It is remembered per model, so a device keeps its names and its limit even if you move it to another port.

On a streamer's page: discovery status, **SCAN**, and whether the card appears on the panel.

On the Link Pro the list also has **VU METERS**, **+ ADD NETWORK DEVICE** and **SCAN NETWORK FOR DEVICES** — see sections 12 and 13.

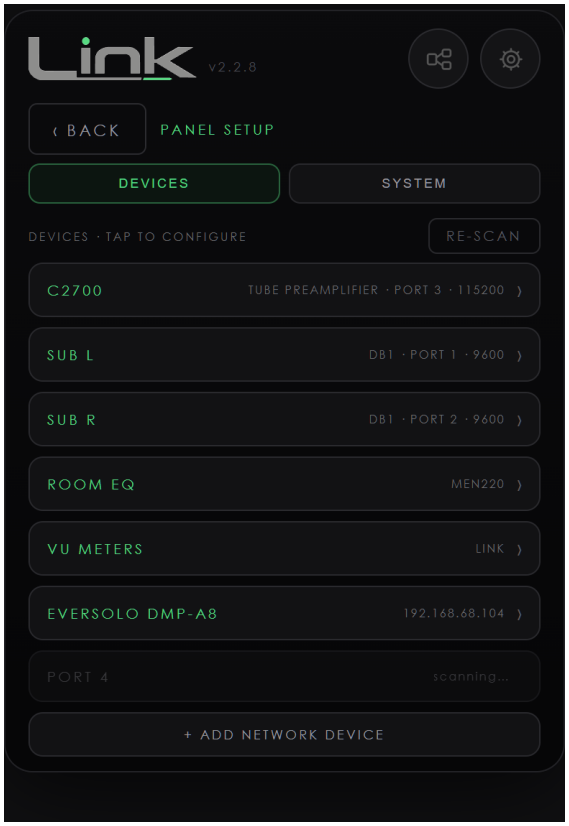

Panel Setup on the Link Pro

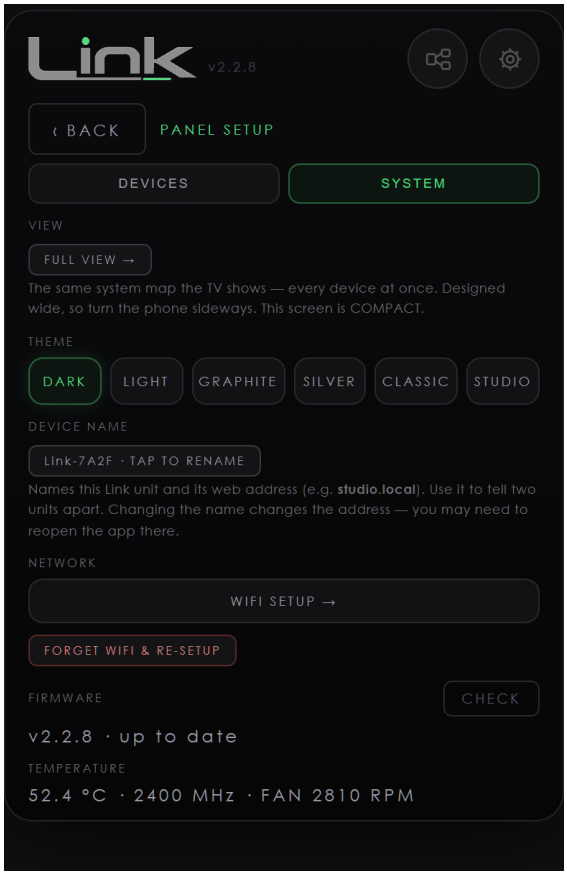

Panel Setup — SYSTEM

SYSTEM

- **VIEW** — switch this phone to the **Full view**, the same system map the TV shows. See section 10.
- **THEME** — the six colour schemes.
- **DEVICE NAME** — names this Link unit *and* its web address. Use it to tell two units apart. Changing it changes the address, so you may need to reopen the app at the new one.
- **NETWORK** — **WIFI SETUP** to join a different network (Link Pro), or **FORGET WIFI & RE-SETUP** to start the setup over.
- **FIRMWARE** — the running version, and **CHECK** for updates. See section 15.
- **TEMPERATURE** — the unit's internal temperature and fan speed, where the unit reports them.

10

The Full view

Link has two ways of drawing the same remote. **COMPACT** is the screen you have been reading about — a control panel, made for a phone held upright. **FULL** is a map of your whole system, made for a TV, and it runs just as well on a phone turned sideways or a laptop.



The Full view

- Switch with the **round button** beside the gear (COMPACT → FULL) and the matching disc in the top-right run (FULL → COMPACT). The choice is per phone or browser.
- On a phone, FULL opens **fitted to the screen** and asks for full-screen mode. **Pinch** to zoom, **drag** to pan. Every card opens into its own page and each page fits itself to the screen; **BACK** returns to the map.
- Each card is a device. Open the preamplifier's card for its full page — dial, inputs, tone faders, outputs and panel lights:




Preamplifier page in the Full view

- Faders are bracketed by **+** above and **–** below. Tapping the track itself steps it: upper half up, lower half down. The volume dial has no such shortcut — it only ever moves by its own **+** and **–** steppers.
- The **CONTROLLER** card at the top opens the unit's own page: ports, firmware, re-scan, factory reset, theme and (Link Pro) the TV resolution and meter setup.

11

Subwoofers and room correction


Subwoofers. Link supports a pair of **B&W DB1** subwoofers on their own control links — one cable each into any free port. Once found, they appear in **Panel Setup** → **DEVICES** with a near-complete replica of the manufacturer's own settings app: gain, sensitivity, polarity, low-pass filter, standby behaviour, presets, mute — plus a rename.

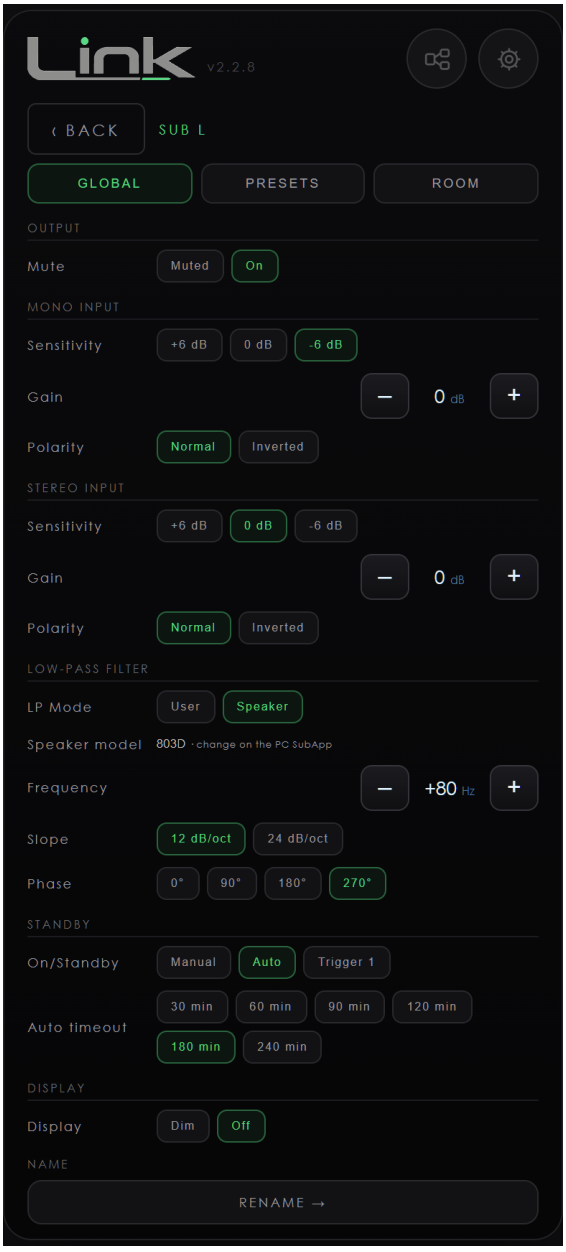

Subwoofer settings

Room measurement itself stays on a PC — it needs the manufacturer's measurement microphone hardware.

Room correction. A McIntosh **MEN220** room-correction processor appears as a **ROOM EQ** card on the main screen:

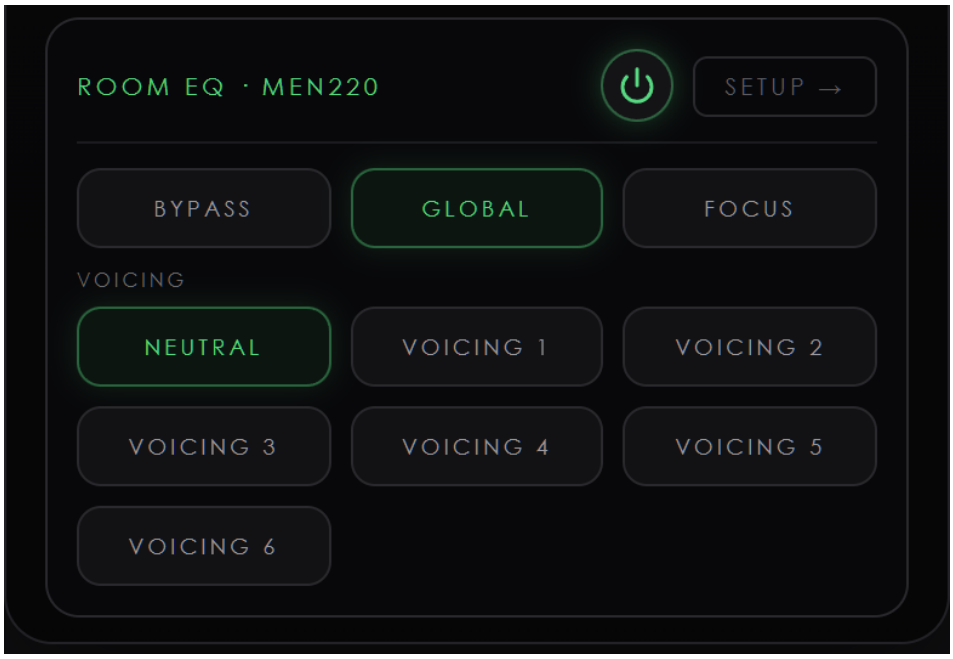

Room EQ card

- **Correction mode** — Bypass, Global, or one of the Focus positions.
- **Voicing** — Neutral plus six alternative voicings.
- Power, the focus position and rename live on its **SETUP** page.


Focus positions are the ones measured with the processor's own guided setup and microphone; Link selects between them, it does not measure them.

12

Adding other brands (Link Pro)

Link speaks more than one brand. Preamplifiers, integrated amplifiers and processors from **Lyngdorf, Rotel/Michi, Denon/Marantz, NAD, Yamaha, Onkyo/Integra, Audio Research, Arcam, Anthem, Mark Levinson, Primare, Meridian, Trinnov/JBL Synthesis, Krell** and **Classé** can be added — over the network, or wired to one of Link's own ports.

Panel Setup → DEVICES → + ADD NETWORK DEVICE

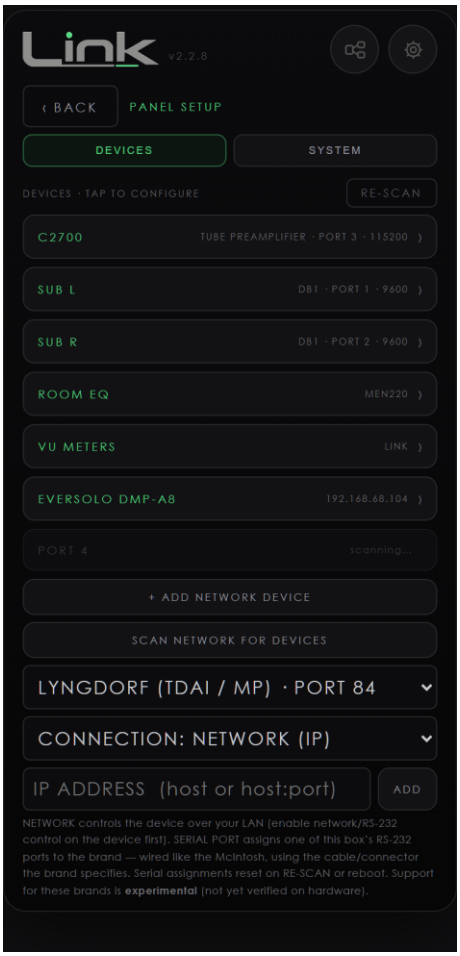

1. Pick the **brand**.
2. Pick the **connection**: NETWORK (IP), or one of Link's serial ports.
3. For a network device, type its **IP address** (add `:port` only if you have changed it from the brand default). Tap **ADD**. **SCAN NETWORK FOR DEVICES** looks for candidates on your LAN for you.

Notes:

- Enable **network control** (sometimes called "IP control" or "standby network") on the device first, or it will stop answering when it sleeps.
- Volume on every brand is relative-only and limit-protected, exactly as described in section 8. The dial shows that brand's own scale — decibels where the device works in decibels.
- **Serial assignments reset** on RE-SCAN or reboot; network devices are remembered.
- Support for non-McIntosh brands is **experimental** — transcribed from each manufacturer's published control documentation, and not yet verified against every unit. Try it at a low volume first.

13

On the TV (Link Pro)


Plug Link into a TV over HDMI and it draws the Full view at the TV's native resolution, designed to be read from the sofa and driven with the **TV's own remote** — no phone needed.

The TV remote works over HDMI-CEC (most TVs have it on by default; on some it is called Bravia Sync, Anynet+, Simplink or similar):

REMOTE	DOES
Arrows	Move between controls
OK / Enter	Open a card, press a button
Hold OK	Pin a control to the home strip, or the preset menu
Back	Close a page
Rewind / Fast-forward	Previous / next track
Play / Pause	Play / pause the streamer

> **NOTE**
>
> **The volume rocker.** TVs send their volume keys to the *audio system* on the HDMI bus, not to a player like Link, so on most sets the rocker does nothing here. Use the on-screen **–** / **+** on the preamplifier page — they go through Link's limits like every other step. Some TVs can be set to control the preamplifier directly ("Audio System" speakers); that path bypasses Link entirely, limits included, so treat it like the preamplifier's own remote.

VU meters. Feed the two RCA meter inputs from a line or tape output and the TV shows a pair of live stereo meters. **METERS** on the home screen (or **FULL SCREEN METERS** on the preamplifier page) fills the screen with them; any key, or a tap, leaves again.

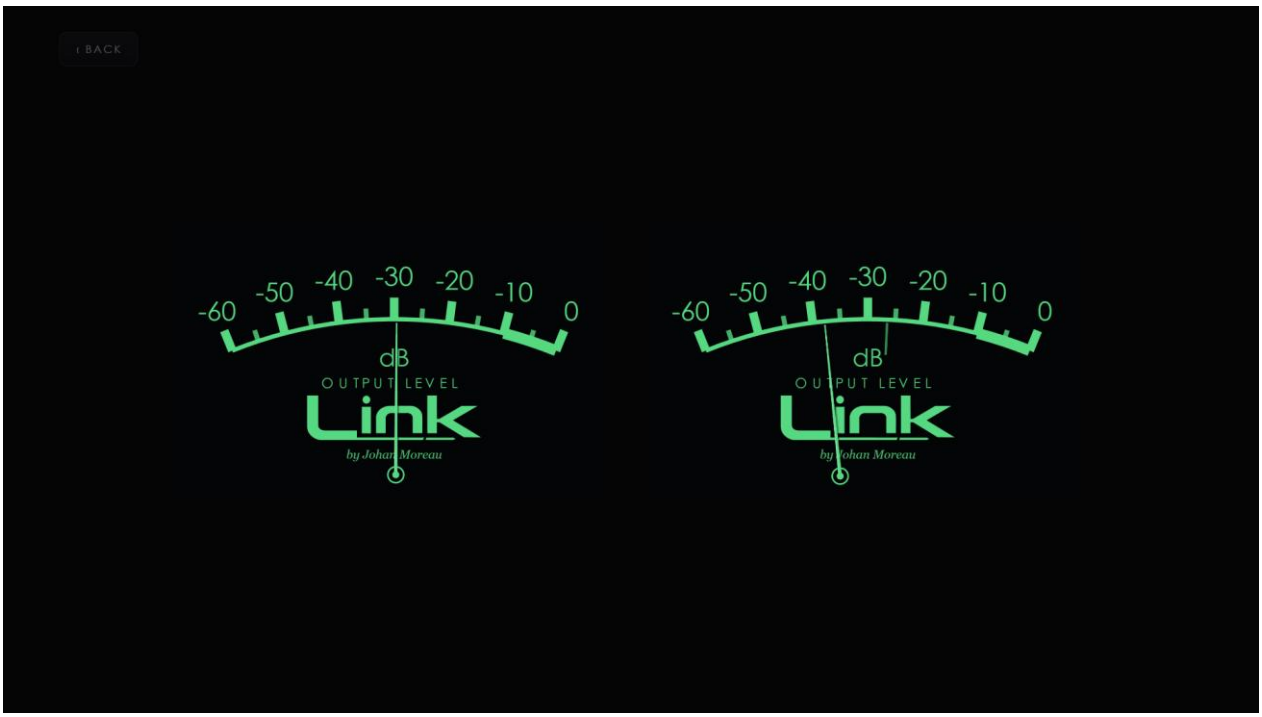


Full-screen VU meters

Choose the face, the colour and the sensitivity from the CONTROLLER card's **METER SETUP**. Put **your own text or your own image** above the meters — a room name, a logo — from **Panel Setup → DEVICES → VU METERS** on your phone, which is easier than typing on a TV. The default face is green on black.


Shortcuts. Hold **OK** on any control to **PIN TO HOME**. It appears on the strip at the bottom of the map, one click away.

Snapshot presets. Four slots, **P1–P4**, on the home strip. Hold **OK** on a slot for **SAVE CURRENT STATE**; from then on one press recalls it — input, tone, outputs, subwoofer and room-correction settings.

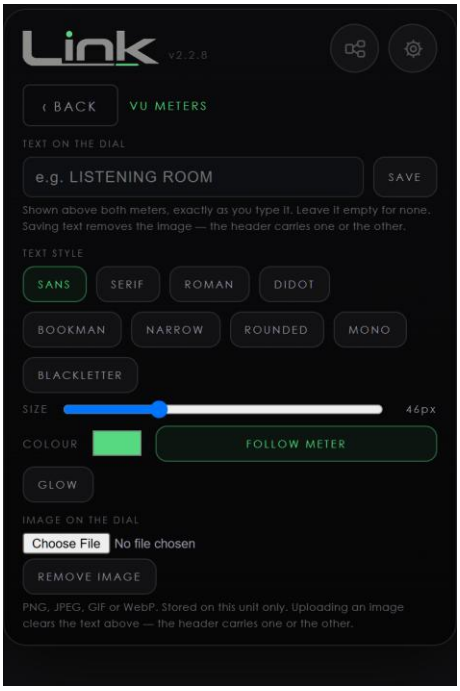

> **NOTE**
>
> **Snapshots never contain volume.** Recalling a preset will never change how loud the room is. Any control you touch during a recall cancels it.

Picture settings. Resolution is detected automatically (4K where the TV offers it). Force **HD 1080p** or **4K** from the CONTROLLER card's **TV DISPLAY** row if you prefer.

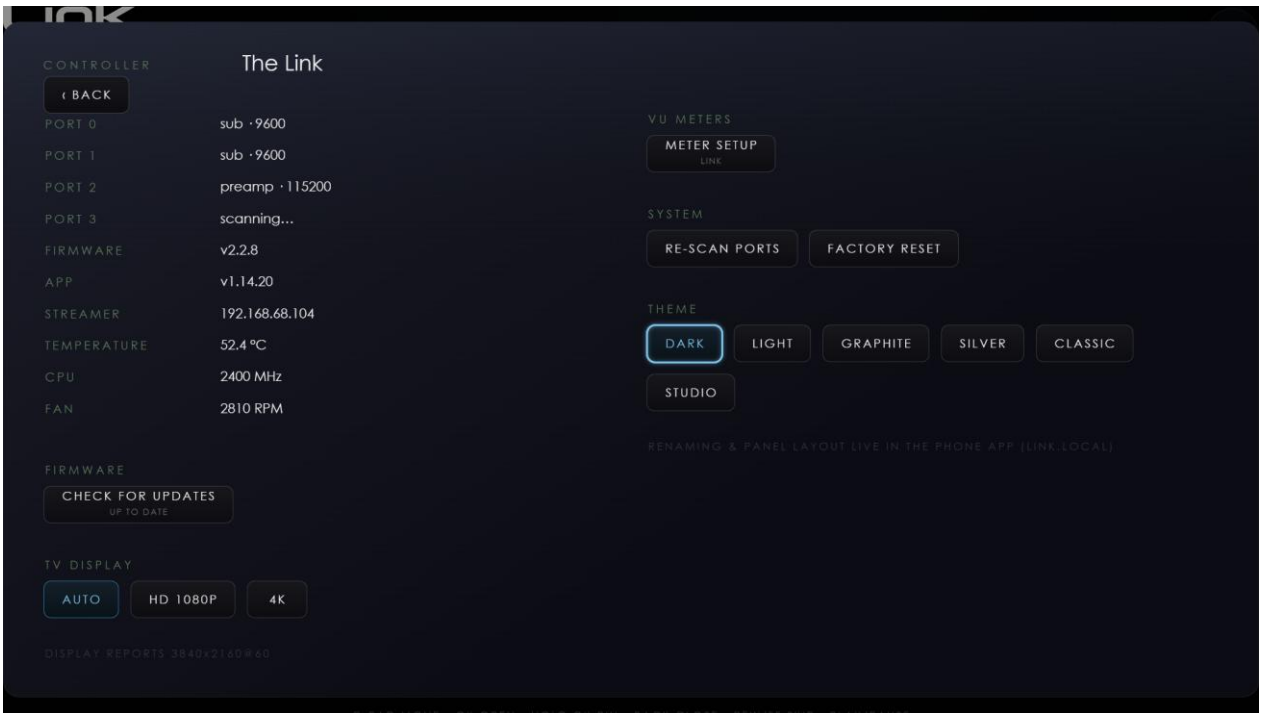


The controller page on the TV

Standby. Press the button on the Link box to turn the TV output off and back on. Link keeps controlling your system while the screen is dark — it just stops drawing, which keeps the box cool and quiet. Turning your TV off (or on) with its own remote, or switching it to another input, does the same thing automatically.

14

The button and the light

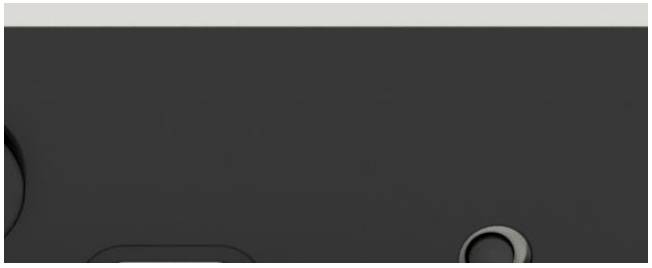

Button and status light

The button and the light sit next to the USB-C socket. They behave slightly differently on the two models.

The button

PRESS	LINK	LINK PRO
Short press	**Sleep.** The whole unit switches off: light out, radio off. Press again to wake it.	**TV output off / on.** Your system keeps playing.
Hold	**5 seconds → factory reset.** The light flashes **red** while you hold; at 5 s it goes **dark** — that is your cue to let go.	**10 seconds → factory reset.** The light flashes while you hold; at 10 s it goes **dark** — let go.

> **NOTE**
> **While the Link is asleep it is off the network, and the app cannot wake it.** Only the button can. It draws almost nothing asleep; if you would rather it were always reachable, simply never press the button.

A factory reset erases **everything**: Wi-Fi, device names, limits, layout — and reopens the `Link-XXXX` setup mode. It never touches your preamplifier's own settings. Releasing before the threshold never resets: a short press is sleep or TV standby, nothing more.

The status light

The **Link** has a multicolour light; the **Link Pro** has a green one. The rhythm means the same thing on both.

RHYTHM	COLOUR ON LINK	MEANING
Solid	green	All good — on the network, talking to your equipment
Slow breathe	amber	On the network, waiting for the equipment to answer. Check the cable.
Fast breathe	amber	Can't join the saved Wi-Fi network
Two quick blinks, pause	blue	Setup mode — waiting to be configured
Fast flashing	red	You're holding the button. Let go now to cancel.
Faint glow	—	(Link Pro only) TV output in standby
Off	—	Asleep (Link), or no power

15

Updates

Link updates itself. It checks about once a day, and when the app opens it tells you if something new is waiting: the FIRMWARE line in **Panel Setup** → **SYSTEM** changes from **CHECK** to **UPDATE**. Tap it.

- Updates are **cryptographically signed** and verified inside Link before anything is installed. An unsigned or tampered update is refused.
- The update takes about 20 seconds. **Your music keeps playing** — the preamplifier holds its own state and Link re-syncs on the way back up. You simply can't change the volume from your phone while it happens. The page reloads itself when the new version is up.
- If a new version misbehaves, Link **puts the previous one back by itself**.
- The app on your phone updates alongside it; you may see a "*A new version of the app is available — RELOAD*" bar. Tap RELOAD.

This is the only feature that talks to the internet. There is no telemetry, no account, and no cloud control.

16

Keyboard shortcuts

On a computer, with the COMPACT remote in focus:

KEY	DOES
↑ / ↓	Volume up / down (hold to repeat)
Scroll wheel over the dial	Volume
M	Mute
1 – 6	Select input 1 to 6
Space	Play / pause the streamer
N / P	Next / previous track

In the Full view the arrow keys move between controls and **Enter** presses them, exactly like the TV remote.

17

Troubleshooting

The app says NO LINK NEARBY. Check the light: it should be blinking blue. If it is solid green, the unit is already on a network — tap **ENTER AN ADDRESS** and type `link.local`. If it is dark, it is asleep (Link): press the button once. If it breathes amber, it is trying to join a network it can no longer reach: hold the button until the light goes dark and set it up again.

`link.local` doesn't open. Some Android versions and older Windows setups can't resolve `.local` names. Open your router's device list, find `link` (or the name you gave it), and use its IP address directly — then bookmark it. If you named the unit, its address is the name in lowercase with spaces as hyphens: `Living Room` → `http://living-room.local`.

The app opens but says it isn't connected to the equipment. Check the control cable at both ends, and check the preamplifier is on. Then **Panel Setup** → **DEVICES** → **RE-SCAN**. A device that is still searching shows as "PORT n — scanning…".

Volume won't go higher. You're at the soft limit. Tap **UNLOCK** under the dial, or raise the limit.

The volume moves in the app but nothing happens. The preamplifier isn't answering. Link only ever shows *confirmed* state, so if the number is moving, it is being confirmed — check the amplifier, not Link.

An input reports an error when selected. Inputs switched "Off" in your preamplifier's own setup menu refuse selection. Enable it there, or hide it in **Panel Setup**.

Two Link units clash. Both answer to `link.local` until one is named. Give one a name in **Panel Setup** → **SYSTEM** → **DEVICE NAME** (or during setup). They then live at separate addresses and keep separate settings.

The TV remote's arrows work but volume does nothing. Expected — see the note in section 13. Use the on-screen **–** / **+**.

The TV screen is black but the system works. Link is in standby. Press the button on the box, or turn the TV on with its own remote.

Starting completely over. Panel Setup → **SYSTEM** → **FORGET WIFI & RE-SETUP**, or hold the button on the box until the light goes dark.

18

Compatible equipment

Link works with equipment that has a **modern 3.5 mm RS-232 control jack** with a selectable baud rate. It detects the model automatically — there is no picker — and adapts the screen to that model's inputs and features.

McIntosh preamplifiers	C2500, C2600, C2700, C2800, C47, C48, C49, C50, C52, C53, C55, C1100, C12000
McIntosh integrated amplifiers	MA5300, MA352, MA7200, MA8900, MA8950, MA9000, MA9500, MA12000
McIntosh processors / receivers	MHT300, MX100, MX200
McIntosh digital preamplifier	D1100
Other brands (Link Pro, experimental)	Lyngdorf, Rotel/Michi, Denon/Marantz, NAD, Yamaha, Onkyo/Integra, Audio Research, Arcam, Anthem, Mark Levinson, Primare, Meridian, Trinnov/JBL Synthesis, Krell, Classé

Also supported: B&W DB1 subwoofers · McIntosh MEN220 room correction · Eversolo streamers (full) and other UPnP/DLNA players (transport control).

Not supported: equipment with only a Data Port, an IR input or trigger outputs (for example the McIntosh C2200, C2300 and MA7000). These are one-way connections — Link cannot read the state of the equipment through them, and Link never guesses. Link does not use infrared in any form.

If a receiver or processor has a **volume scale** setting, leave it on the **linear 0–99** scale.

19

Care, power and specifications

	LINK	LINK PRO
Ports	3 × 3.5 mm TRS, RS-232	4 × 3.5 mm TRS, RS-232
Network	Wi-Fi 2.4 GHz, Bluetooth LE (setup only)	Wi-Fi 2.4/5 GHz, Bluetooth LE (setup only), Gigabit Ethernet
Video	—	HDMI, up to 3840×2160 at 60 Hz, HDMI-CEC
Meter inputs	—	2 × RCA, line level
Power	USB-C, 5 V, 0.5 A minimum	USB-C, 5 V / 5 A (use the supplied supply)
Cooling	Passive, silent	Small temperature-controlled fan
Enclosure	Compact desktop box	Metal

Link. No user-serviceable parts and no fan. Keep it in open air — it is passively cooled and prefers not to sit inside a sealed cabinet or under another warm component.

Link Pro. Ships in a metal enclosure with a small temperature-controlled fan. It needs a proper 5 V / 5 A USB-C supply; a phone charger will run it but may trigger low-voltage warnings under load. Give the fan a little air, and prefer Ethernet where you can — a metal case shortens Wi-Fi and Bluetooth range a little. It reports its own temperature under **Panel Setup → SYSTEM** and stops drawing to the TV whenever the TV is off, so it runs cool most of the day.

Wipe either with a dry cloth. There is nothing inside to service.

Support

Setup details: **SETUP.md**

Link — independent, not affiliated with, endorsed by or produced by McIntosh Laboratory, Inc.