SIEMENS

Installation Instructions
Model RCC-3/-3R/-3C/-3F/-3FC/-3FR
Remote Command Center

INTRODUCTION

The Model RCC-3/-3R/-3C Remote Command Center from Siemens Industry, Inc. is an optional MXL/MXLV System remote keyboard panel (See Figure 1). The RCC-3R is red and will be referred to in the remainder of this document as the RCC-3. The RCC-3F/-3FC/-3FR Remote Command Center, which is used for flush mounting applications, has a 3/4 inch flange on all four sides of the enclosure. The RCC-3FR is red and will be referred to in the remainder of this document as the RCC-3F.

CAUTION: When preparing the opening for the RCC-3F/-3FC make sure it does not exceed the dimensions of the enclosure as shown in Figure 2, plus the dimensions of the flange.

The panel in the RCC-3/-3C/-3F/-3FC has a multi-line display that continuously updates information about the system event status. If there are multiple events (alarms, security conditions, supervisories and/or troubles), the highest priority event that occurred displays on the screen. The user can view up to 8 events at a time and can scroll through the complete list using the Up (▲) and Down (▼) keys located next to the More Info key. For further information

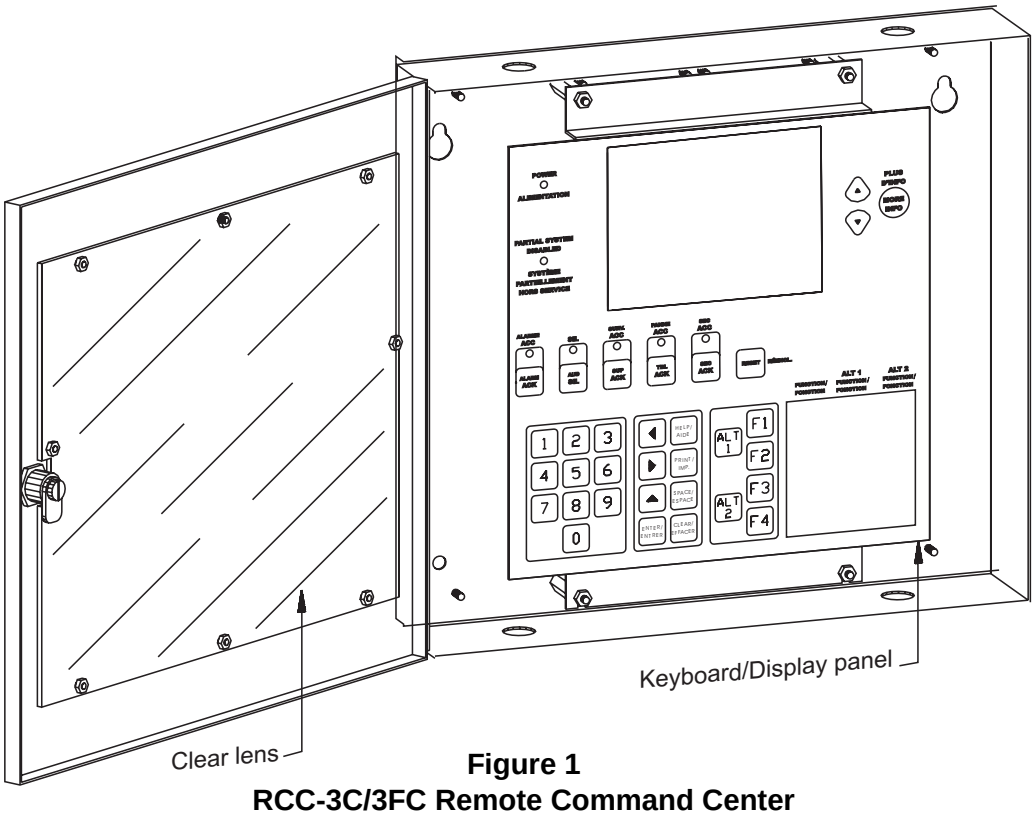


Figure 1
RCC-3C/3FC Remote Command Center

Siemens Industry, Inc.
Building Technologies Division
Florham Park, NJ

P/N 315-048665-7

Siemens Building Technologies, Ltd.
Fire Safety & Security Products
2 Kenview Boulevard
Brampton, Ontario
L6T 5E4 Canada

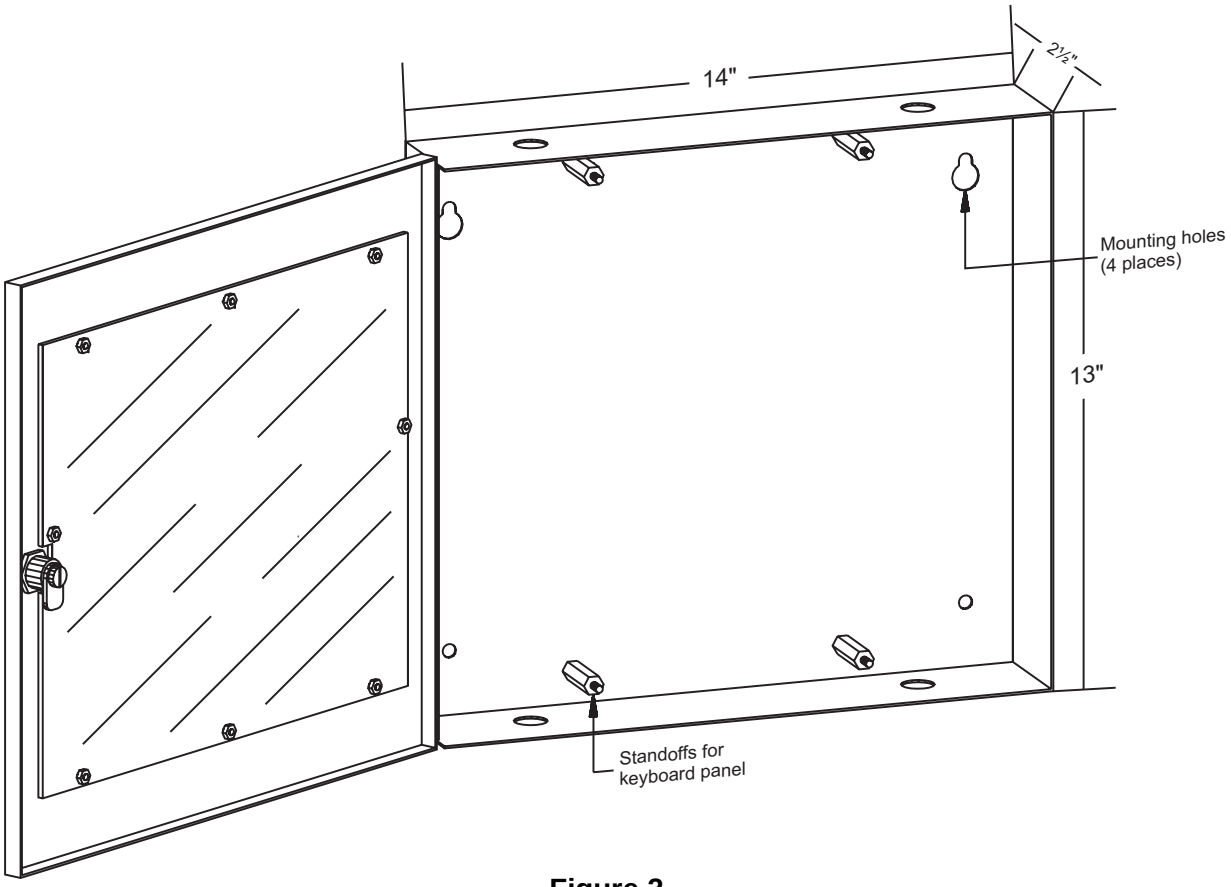


Figure 2
Mounting the RCC-3/3F

on the operation of the MXL Multi-Line Keyboard/ Display Panel, refer to the MXL Keyboard/ Display Panel Operating Instructions, P/N 315-048692, and Section 3, OPERATION, in the *MXL/MXLV Manual,* P/N 315-092036.

The keyboard/display panel has keys for the following functions:

- Acknowledging fire alarms **(ALARM ACK)**
- Silencing audibles **(AUD SIL)**
- Acknowledging supervisories **(SUPV ACK)**
- Acknowledging troubles **(TRBL ACK)**
- Acknowledging security conditions **(SEC ACK)**

There is also a separate key for resetting the Control Panel **(RESET)**

The 10-digit phone style keypad allows entry of the three levels of user passwords. It is also used to perform specific menu-driven operations, as well as programming and maintenance functions.

Separate **UP** and **DOWN** keys located next to the **MORE INFO** key allow the user to scroll forward and backwards through the entire list of events.

The **SPACE** key allows the user to input addresses faster by enabling them to reduce redundant key presses of the “0” key.

The **MORE INFO** key allows the user to instantly view all relevant information about the highlighted event, which is displayed in the last three lines of the screen.

The user can access the MXL Control menu by pressing the **ENTER** key.

The panel has System status indicator LEDs. The **ALARM** and **TROUBLE** LEDs function even if the main processor fails. (See Figure 1).

INSTALLATION

Always remove all power before installation, first the battery and then the AC.

The RCC-3/-3C/3F/-3FC comes with the keyboard/display panel installed in the enclosure and a clear lens installed in the door, as shown in Figure 1.

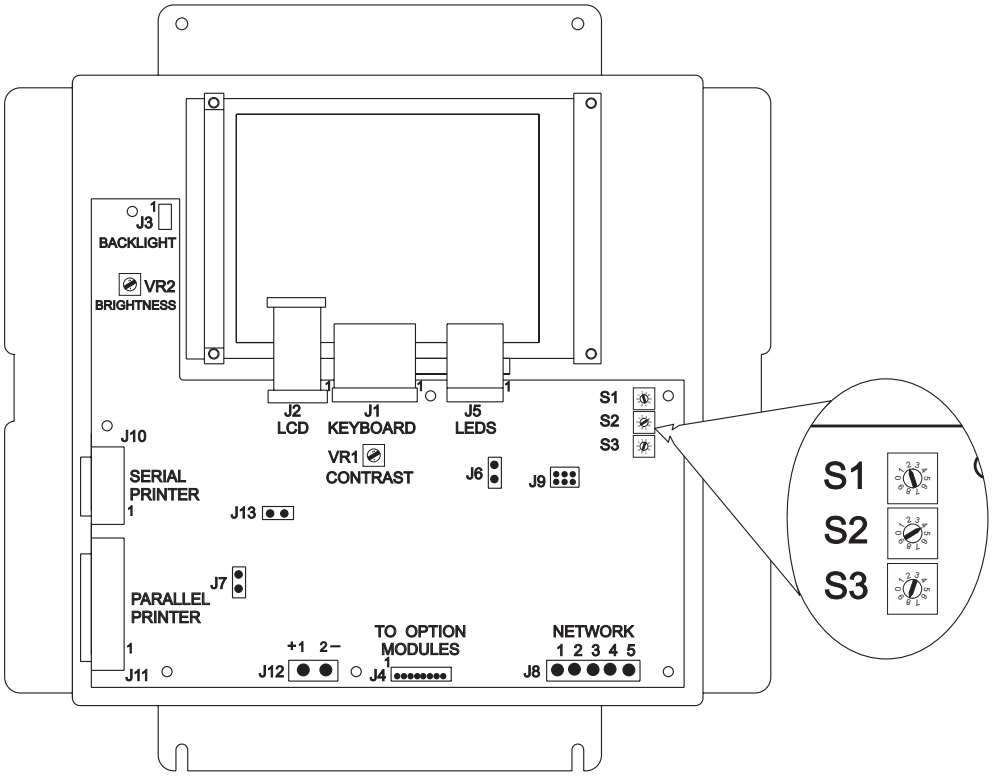


Figure 3
Rear View of Keyboard/Display Panel in RCC-3/3F

Before mounting the RCC-3/-3C/3F/-3FC, remove the four nuts from the keyboard panel and place them to one side. Carefully lift the panel up and off the standoffs. Set the panel to one side.


Consider the following when mounting the backbox:

- Mounting height for visual and manual access to the keyboard/display panel
- Weight and size of the enclosure
- Local mounting codes

1. Fasten the backbox securely to a clean, dry, shock-free, and vibration-free surface using the four mounting holes provided. Position the backbox clear of obstructions so that the door opens freely and the indicators and controls are easily accessible.
2. Set the Network Address for the RCC-3 using the three ten-position rotary switches (S1, S2 and S3) located on the back of the keyboard/display panel, as shown in Figure 3. For example, to set the switches to address 248: set S1 to 2, set S2 to 4, and set S3 to 8. The possible addresses for this module are 248, 259, 250, and 251.

NOTE:
There is no need to set supervision on the RCC-3/-3C/3F/-3FC because it is, by default, always supervised. No unsupervised annunciators (MKB-1/-2/-3/-4) are allowed at the same address as an RCC-3/-3C/3F/-3FC. Unsupervised applications require the use of the MKB-1/-2/-3/-4 and they must all be set to the same address.

3. Pull all field wiring into the backbox and dress the wiring to the approximate location to which it will go.
4. Remove the connector plugs from J8. Attach the wiring to the connector plugs in positions 1 and 2 for Style 4 (refer to Figure 4) and positions 1, 2, 3 and 4 for Style 7 (refer to Figures 5 and 6). Always connect position 5 to Chassis GND (Earth GND).
5. Remove the connector plugs from J12. Attach the field wiring to the connector plugs, making sure that position 1 on J12 is for +24VDC and position 2 on J12 is for -24VDC return.
6. To adjust the contrast and brightness of the display, use pots VR1 and VR2 respectively, located on the back of the keyboard /display panel. (Refer to Figure 3.)

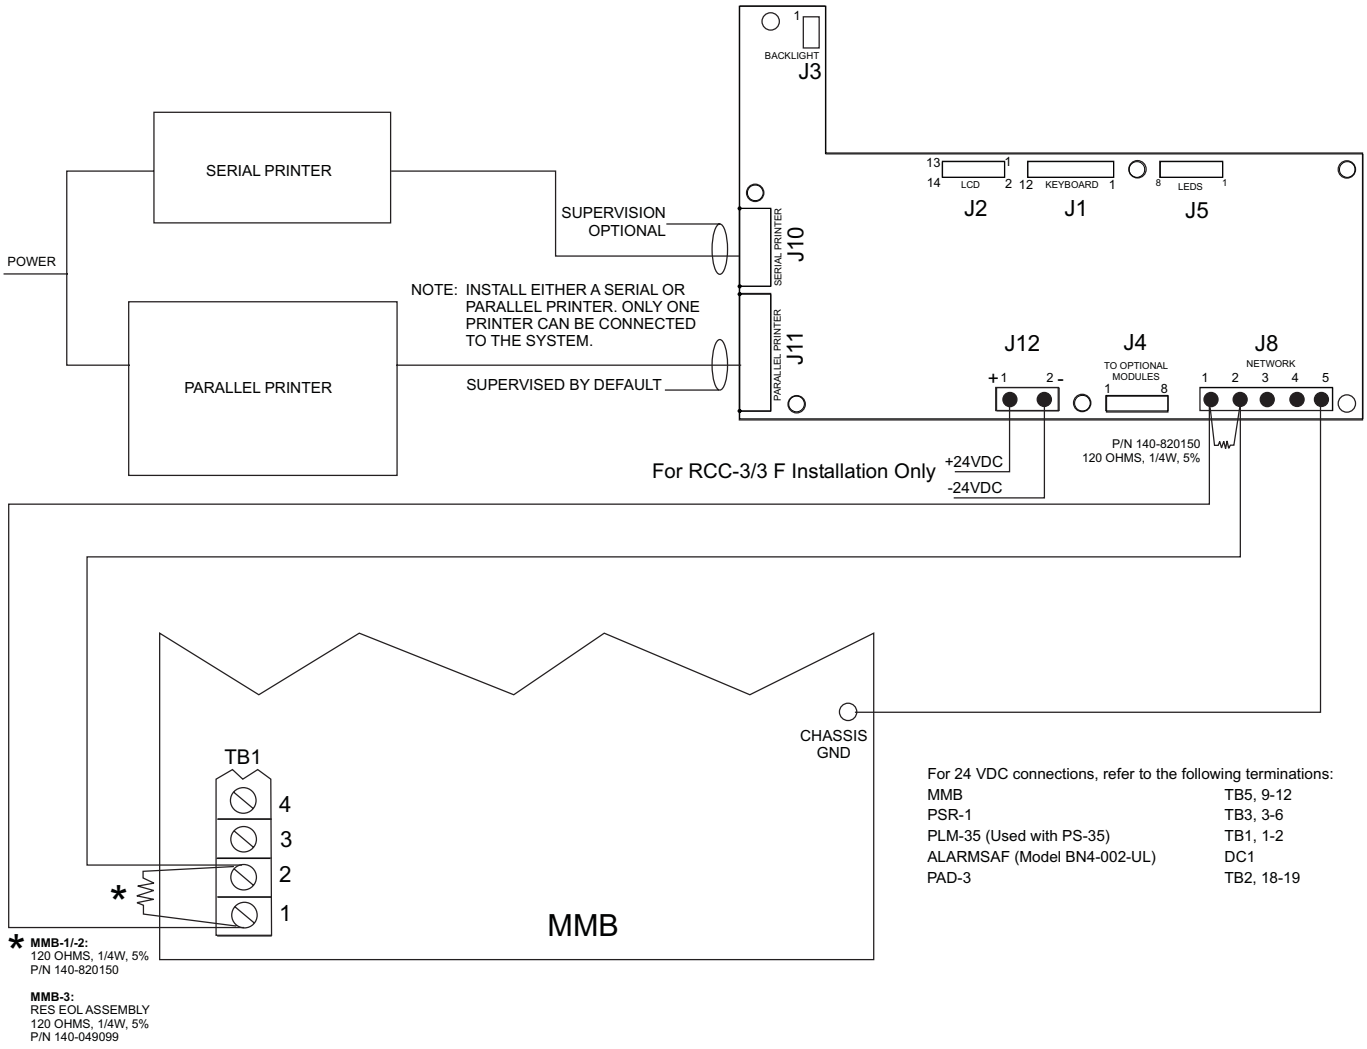


Notes:

1. Use a minimum wire gauge of 22 AWG.
2. Use a maximum of 80 ohms per pair of wires for the network connections.
3. Use shielded twisted pair for network connections.
4. Terminate the shield ONLY at the MMB enclosure.
5. For MMB-1/-2 Style 4, use a 120 Ohm, 1/4W, 5% EOLR, P/N 140-820150, in positions 1 and 2 on plug J8.

   For MMB-3 Style 4, use Res EOL Assembly, 120 Ohm, 1/4W, 5%, P/N 140-049099.
6. This configuration is power limited to NFPA 70 according to NEC 760.
7. The RCC-3/-3C/-3F/-3FC MUST have an earth ground connected to the chassis. Wire shield or conduit is not an acceptable ground. Use any available unused, unpainted stud on the MMB for chassis grounding.
8. Refer to Wiring Specification for MXL, MXL-IQ and MXLV Systems, P/N 315-092772 revision 6 or higher, for additional wiring information.
9. Maximum voltage: 8V peak to peak
   Maximum current: 150mA


Figure 4
RCC-3/3F Style 4 Wiring

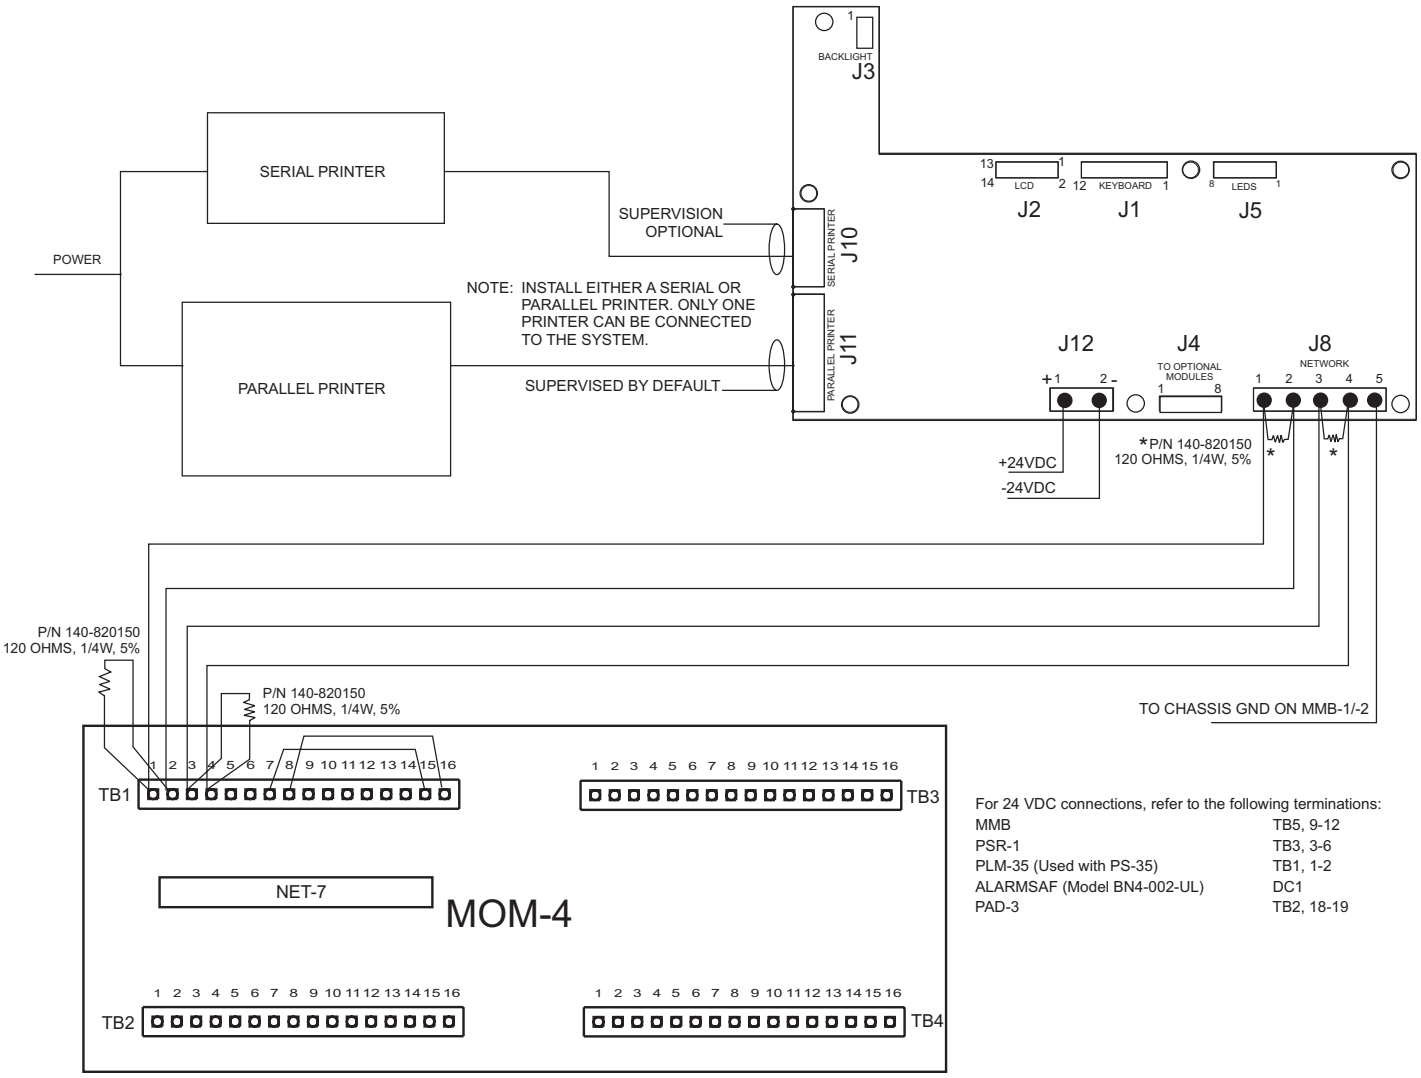

Notes:

1. Use a minimum wire gauge of 22 AWG.
2. Use a maximum of 80 ohms per pair of wires for the network connections.
3. Use shielded twisted pair for network connections.
4. Terminate the shield ONLY at the MMB enclosure.
5. For Style 7, use a 120 Ohm, 1/4W, 5% EOLR, P/N 140-820150, in positions 1 and 2 and positions 3 and 4 on plug J8.
6. For Style 7, use a NET-7 card and refer to the NET-7 Installation Instructions, P/N 315-090914.
7. The NET-7 is not compatible with the PS-5N.
8. This configuration is power limited to NFPA 70 according to NEC 760.
9. The RCC-3/-3C/-3F/-3FC MUST have an earth ground connected to the chassis. Wire shield or conduit is not an acceptable ground. Use any available unused, unpainted stud on the MMB for chassis grounding.
10. Refer to Wiring Specification for MXL, MXL-IQ and MXLV Systems, P/N 315-092772 revision 6 or higher, for additional wiring information.
11. Maximum voltage: 8V peak to peak
    Maximum current: 150mA

Figure 5
RCC-3/3F Style 7 Wiring (MMB-1 or MMB-2)

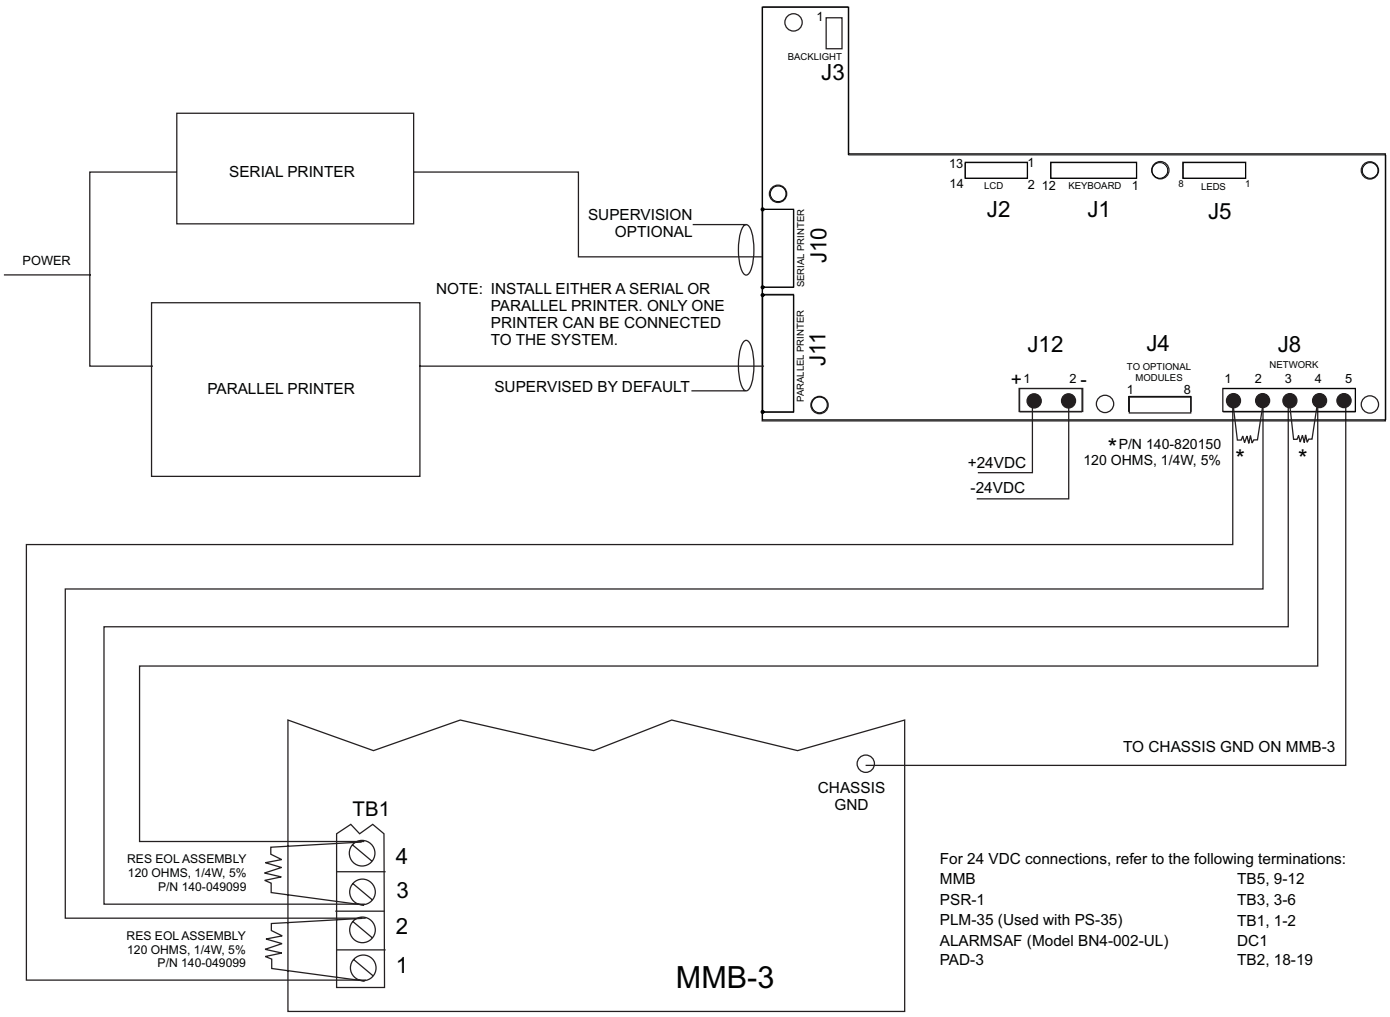

Notes:


1. Use a minimum wire gauge of 22 AWG.
2. Use a maximum of 80 ohms per pair of wires for the network connections.
3. Use shielded twisted pair for network connections.
4. Terminate the shield ONLY at the MMB enclosure.
5. For Style 7, use Res EOL Assembly 120 Ohm, 1/4W, 5%, P/N 140-049099, in positions 1 and 2 and positions 3 and 4 on plug J8.
6. This configuration is power limited to NFPA 70 according to NEC 760.
7. The RCC-3/-3C/-3F/-3FC MUST have an earth ground connected to the chassis. Wire shield or conduit is not an acceptable ground. Use any available unused, unpainted stud on the MMB for chassis grounding.
8. Refer to Wiring Specification for MXL, MXL-IQ and MXLV Systems, P/N 315-092772 revision 6 or higher, for additional wiring information.
9. MNET:
   Maximum Voltage: 8V Peak To Peak
   Maximum Current: 150mA

Figure 6
RCC-3/3F Style 7 Wiring (MMB-3)


7. If needed, J11 is the connector for a parallel printer and J10 is the connector for a serial printer. The serial connection can be supervised; the parallel connection is supervised by default. Note that only one printer, either parallel or serial, may be connected to the system.

   Supervision for the printer is set in CSG-M. In the Network Module Map, select the MKB and press Enter. Scroll down to Printer Option and press Enter to toggle to the correct printer. The fields *Supervised Operation* and *Serial Port* must both be set to YES.
8. Make certain the connector plugs are in place on J13 for normal operation and network programming.
9. Mount the keyboard panel in the enclosure by placing it on the standoffs and securing it in place with the four nuts provided.
10. Refer to the *MXL Multi-Line Display/Panel Operating Instructions,* P/N 315-048692, for additional information on the operation of the keyboard panel.
11. Refer to MMB-3 Installation Instructions, P/N 315-048860, *Configuration* and *MNET* sections to configure the MMB-3 and CSGM for Style 4/7 wiring.

CCU/M and RDM-1 Wiring to MKB-5/-6 or RCC-3

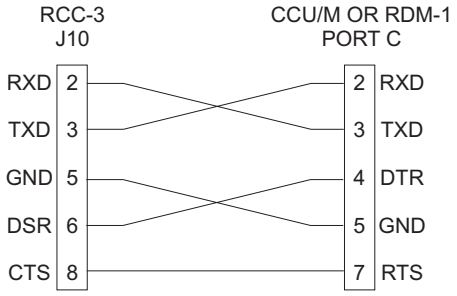

MXL-VDT Wiring to MKB-5/-6 or RCC-3

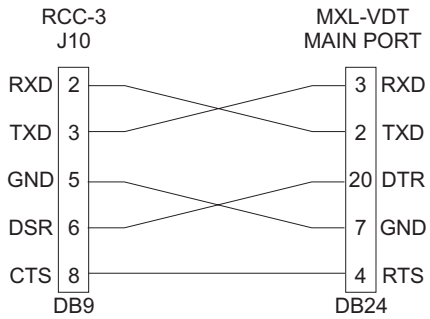

ELECTRICAL RATINGS

Active 5VDC Module Current	0mA
Active 24VDC Module Current	300mA
Standby 24VDC Module Current	300mA

Refer to the following Installation Instructions as needed:

MMB-2	**P/N 315-095097**
MMB-3	**P/N 315-048860**
NET-7	**P/N 315-090914**
MXL/MXLV Manual	**P/N 315-092036**

Siemens Industry, Inc.
Building Technologies Division
Florham Park, NJ

P/N 315-048665-7

Siemens Building Technologies, Ltd.
Fire Safety & Security Products
2 Kenview Boulevard
Brampton, Ontario
L6T 5E4 Canada