SIEMENS

Installation Instructions
Model XLS-MLE6(R)-ADPT

Adapter Kit

INTRODUCTION

Use the Model XLS-MLE6(R)-ADPT Adapter Kit from Siemens Industry, Inc., to upgrade existing MXL Systems installed in Model MLE-6(R) backboxes to FireFinder-XLS/Desigo Fire Safety Modular/Cerberus PRO Modular Systems. The XLS-MLE6(R)-ADPT Adapter Kit consists of an adapter plate, inner door and outer door. The XLS-MLE6-ADPT (S54430-C9-A1) inner and outer doors are black; the XLS-MLE6R-ADPT (S54430-C9-A2) inner door is black and outer door is red. The XLS-MLE6-ADPT and the XLS-MLE6R-ADPT are identical in all other ways and will be referred to in the remainder of this document as XLS-MLE6-ADPT.

The adapter plate installs over the existing studs in an MLE-6(R) backbox with the #1/4 x 20 hex flange nuts supplied and provides studs on which to mount three CAB-MP mounting plates (P/N 500-633012) and two PTB or PSFA power termination boards (P/N 500-033390).

The outer door consists of the door frame and three removable panels. Each removable panel is secured to the door with #10-32 nuts. The removable panels may be clear (OD-LP), blank (OD-BP/-R), or vented (OD-GP/-R) depending on the application. The OD-BP-R and OD-GP-R panels are red. The outer door is attached to the backbox by hinge pins and secured to the backbox by a keyed latch.

The inner door has three openings in it for the installation of an operator interface and other modules. There are eight threaded studs around each opening on the inner door. These threaded studs allow equipment installation on the door. The equipment is secured by #10-32 nuts. The inner door is permanently hinged right, is attached to the backbox by screws, and is secured to the backbox by a swell-action latch.



The XLS-MLE6(R)-ADPT is for indoor use only in dry environments.



With this conversion, the maximum battery set that can be used in the backbox is 33 AH (model BTX-1). If larger batteries are required, use either a BB-55 or CAB-BATT battery box.

When converting an MXL to an XLS/Desigo Fire Safety Modular/Cerberus PRO Modular system, it may be necessary to use the XLS-EXT-CABLE-PKG (S54430-K1-A1). This kit includes a 58 inch 60-pin Data Bus cable, a 58 inch 6-pin CAN Bus cable and a 20 inch 12AWG ground wire.

To convert an MLE-6(R) backbox from an MXL System to an XLS/Desigo Fire Safety Modular/Cerberus PRO Modular component system, you must first disassemble the MXL and then assemble the XLS/Desigo Fire Safety Modular/Cerberus PRO Modular. This two-part procedure is described in detail on page 2.

Siemens Industry, Inc.
Smart Infrastructure

DISASSEMBLY OF MXL SYSTEM

NOTE **Remove all system power, first battery and then AC.**

1. Remove and discard the outer door and the hardware used to secure it in place.
2. Disconnect and remove the modules from the inner door.
3. Remove all modules from the backbox, making sure to mark all wires.
4. Remove the MPS power supply and batteries from the backbox. Save the mounting hardware for later use.

ASSEMBLY OF XLS/DESIGO FIRE SAFETY MODULAR/CERBERUS PRO MODULAR SYSTEM

The three parts of the XLS-MLE6-ADPT are installed separately. The adapter plate is installed first, followed by the inner door and then the outer door.

Adapter Plate

The XLS-MLE6-ADPT adapter plate has 18 holes in it that fit over the studs in the MLE-6 backbox in only one way.

1. Place the XLS-MLE6-ADPT over the studs in the backbox and secure it in place with the six #1-4 x 20 hex flange locknuts supplied in the locations marked "A" shown in Figure 1.

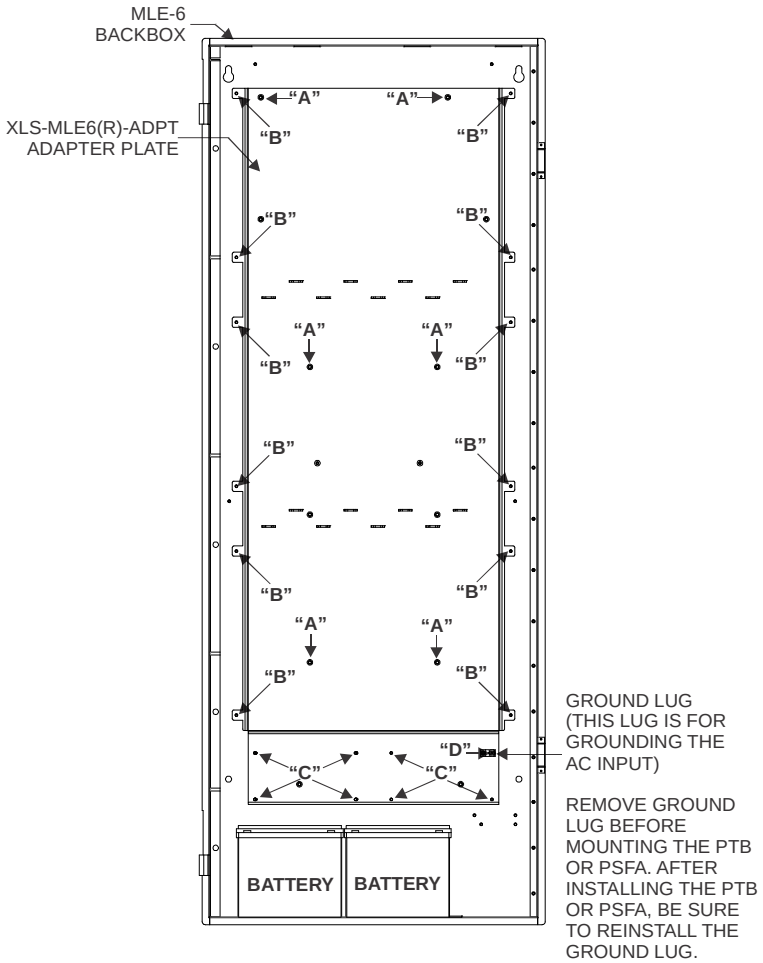


Figure 1
Installing the XLS-MLE6-ADPT Adapter Plate in the MLE-6 Backbox

2. Three CAB-MPs can be mounted on the XLS-MLE6-ADPT using the studs marked "B" in Figure 1.
3. Install the required CC-5/CC-2 system cardcage(s), PSC-12 or PSC-12M power supply, optional PSX-12 or PSX-12M power supply extender and PTB or PSFA power termination board after careful consideration of NEC Article 760 for separation of power limited and non-powered limited wiring. Use the hardware provided with those modules to mount them to the CAB-MP mounting plate. Refer to the CC-5/CC-2 Installation Instructions, P/N 315-033035, the PSC-12 Installation Instructions, P/N 315-033060, the PSC-12M Installation Instructions, Document ID A6V12021370, the PSX-12 Installation Instructions, P/N 315-034120, and the PSX-12M Installation Instructions, Document ID A6V12021371.
4. There is room on the bottom of the XLS-MLE6-ADPT to mount up to two PTBs or PSFAs on the studs marked "C" and "D" in Figure 1. Refer to the PTB Installation Instructions, P/N 315-034877, or the PSFA Installation Instructions, Document ID A6V12057961. The stud marked "D" is a lug for grounding the AC input. Remove the ground lug before mounting the PTB or PSFA. After installing the PTB or PSFA, be sure to reinstall the ground lug.
5. There is room in the bottom of the enclosure for a battery set of up to 33 AH.
6. System cards can be installed in the CC-5/CC-2 cardcage(s), as required.

Install the Inner Door

Install the inner door by following the steps listed below.

1. Place two of the eight #8-32x5/16 screws provided in the top and bottom holes on the right-hand side of the backbox.
2. Tighten the screws just a few turns leaving a 1/8-inch gap between the head of the screws and the backbox.
3. Slide the inner door into position under the screws.
4. Make certain the flange at the left-hand top of the inner door is seated in the slot in the backbox and the swell action latches located near the top and bottom of the inner door are seated in their respective holes in the backbox. (Refer to Figure 2.) Press the latches down to secure them in place, adjusting the door as needed so that it seats securely in the enclosure.

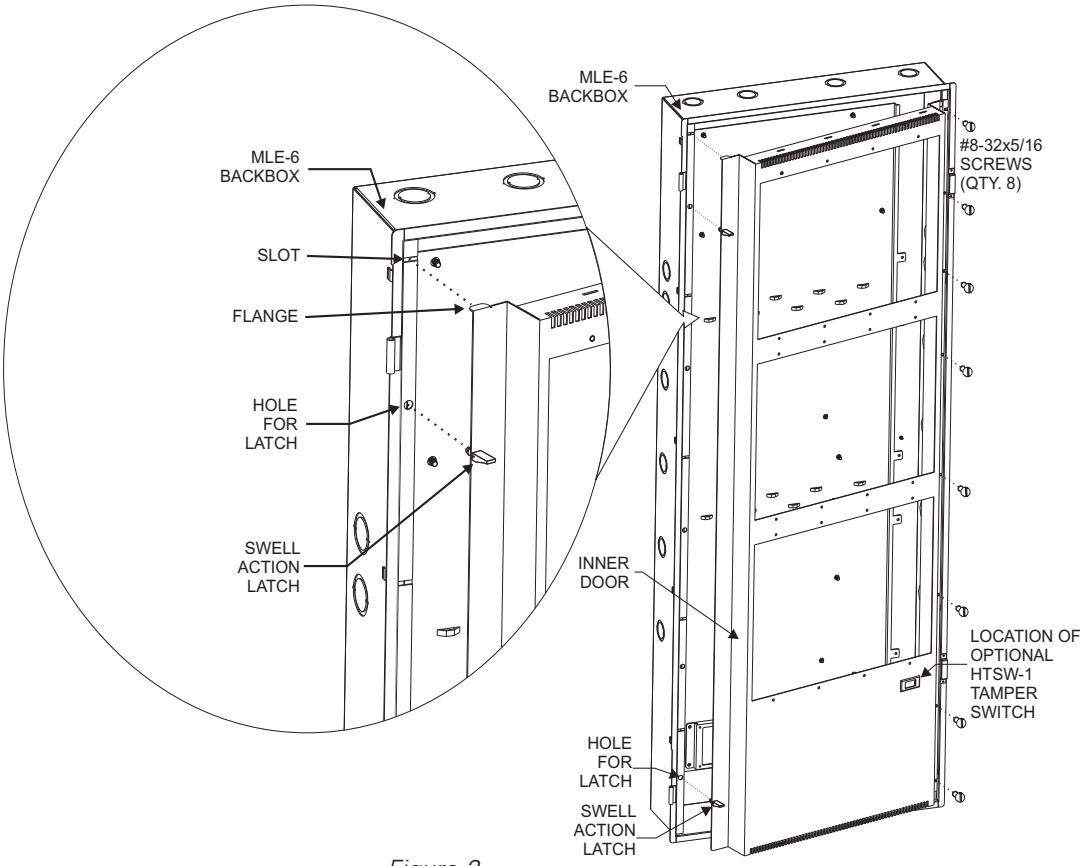


Figure 2
Installing the Inner Door

5. Insert the remaining six screws in the six holes on the right side of the backbox to secure the inner door. Tighten all eight of the screws.
6. Install a FCM2041-U2/-U3 on the inner door. Refer to the PMI Installation Instructions, P/N 315-033070, the FCM2041-U2 Installation Instructions, Document ID A6V11231623, or the FCM2041-U3 Installation Instructions, Document ID A6V11231630, for further information.
7. Install door-mounted modules (FCM-6, LCM-8, SCM-8), as needed, for system operation.
8. Insert blank plates, as needed, in unused spaces on door and secure with #10-32 nuts. (Refer to Table 1 and Figure 3.)

TABLE 1
INNER DOOR PLATES

MODEL	DESCRIPTION	MOUNTING
ID-MP	Mounting plate/bracket for FCM-6, LCM-8, SCM-8 and BCM.	Mounts on studs in door. Secured with two 10-32 nuts.
ID-SP	Blank insert the same size as the ID-MP mounting plate/bracket.	Mounts on studs in door. Secured with two 10-32 nuts. Up to four ID-MPs or ID-SPs can be installed on one row.
ID-FP	Full row blank plate.	Mounts on studs in door. Secured with eight 10-32 nuts.
BCM	Inner door blank plate.	Mounts on studs in door. Secured with eight 10-32 nuts.

NOTE

Models LVM and FMT, one module width each, mount to the inner door. No other modules (PSC-12 or PSC-12M/PSX-12 or PSX-12M/CC-5/CC-2) may be located behind these modules.

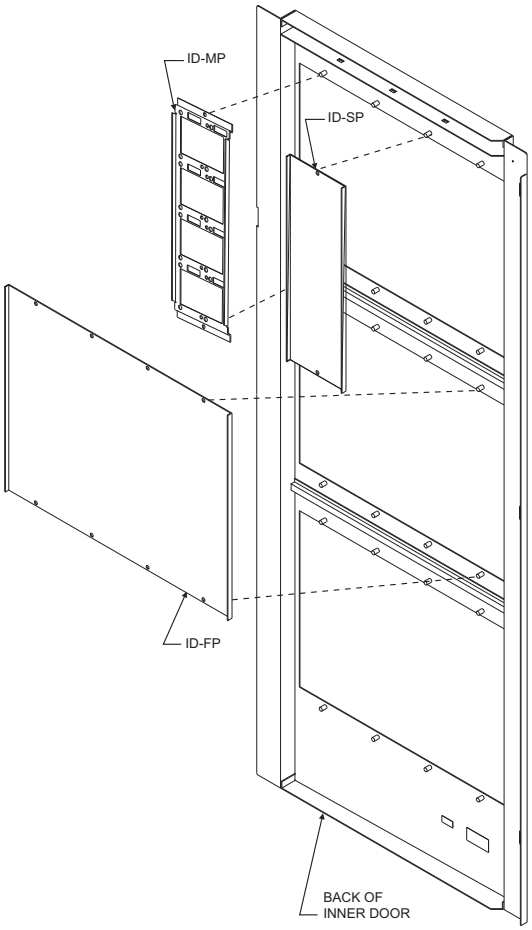


Figure 3
Inner Door and Plates

Install the Outer Door

1. Insert the hinge pins on the outer door in the hinges on the backbox.
2. Install clear, blank, or vented removable panel(s) as required and secure with #10-32 nuts. (Refer to Table 2 and Figure 4.)
3. Place the XLS system label, P/N 575-234411, Desigo Fire Safety Modular sytem label, P/N A5Q00075144, or Cerberus PRO Modular system label, P/N A5Q00075194, on the inside of the outer door.

TABLE 2
OUTER DOOR PLATES

MODEL	DESCRIPTION	MOUNTING
OD-LP	Clear Lens Plate - for use when visual indication of system operation is required.	Mounts on studs in door. Secured with eight 10-32 nuts.
OD-BP/-R	Blank Plate - for use when visual indication of the system is not required, or when dead front protection is required.	Mounts on studs in door. Secured with eight 10-32 nuts.
OD-GP/-R	Grill Plate - for use when vented panel is required.	Mounts on studs in door. Secured with eight 10-32 nuts.

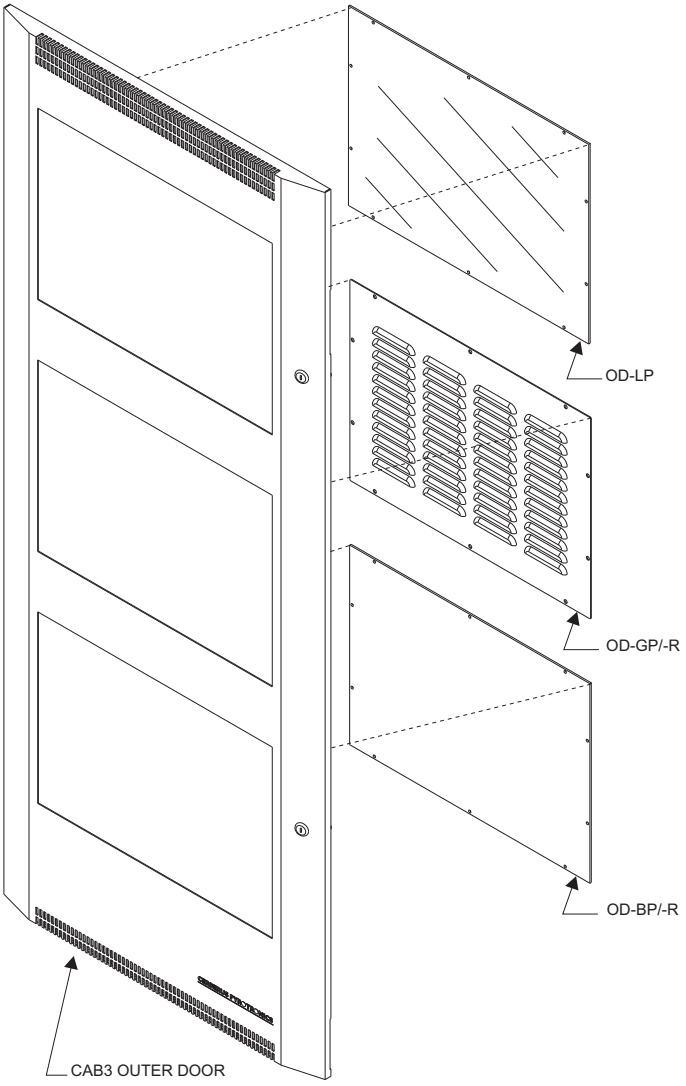


Figure 4
Outer Door and Plates

4. A ground wire comes installed on the inside of the outer door. (Refer to Figure 5.) Bring the free end of the ground wire through the opening at the top left-hand side of the inner door and secure it in place on an unused stud in the backbox with a #10-32 hex nut (user supplied).

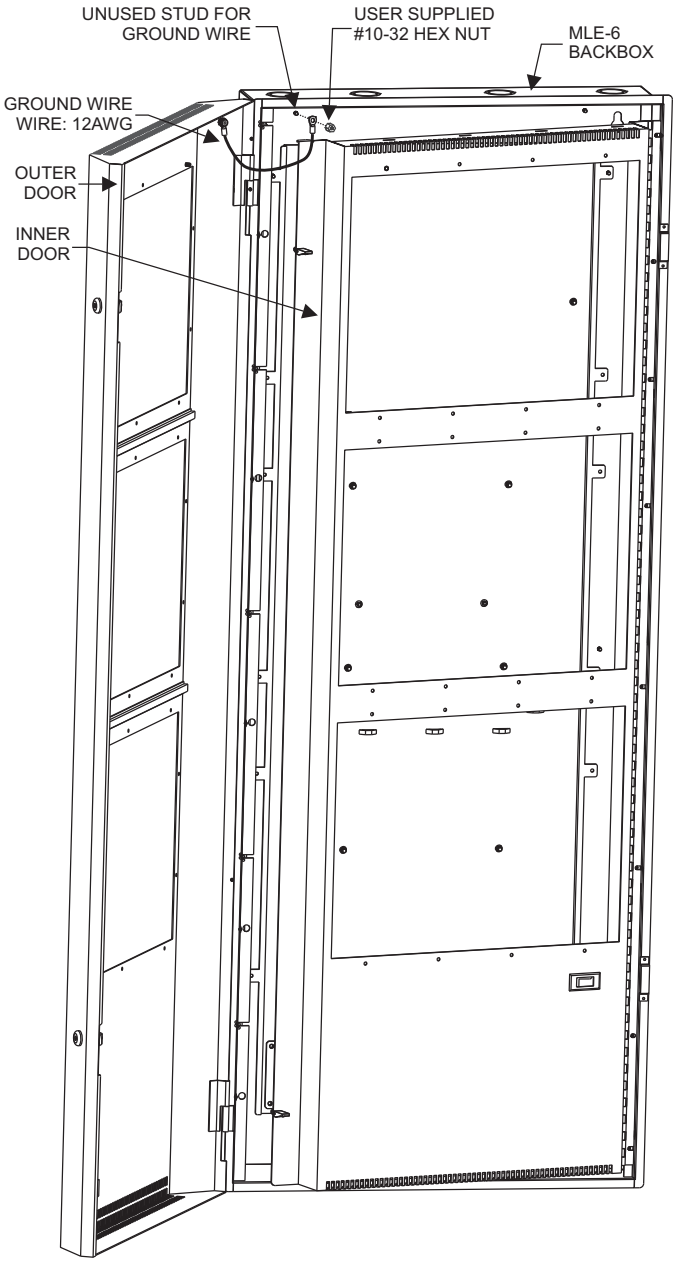


Figure 5
Ground Wire Installation

5. Close the outer door and secure with the key latch.

WIRING

In compliance with NEC Article 760, all power limited fire protective signaling conductors must be separated a minimum of ¼ inch from all of the following wiring located within a control panel:

- electric light
- power
- Class 1 or non-power limited fire protective signaling conductors

To meet these requirements, the following guidelines **must be observed** when installing modules and wiring to this control panel.

When installing power limited field wiring, the installer must comply with NEC article 760, which states:

The fire alarm power-limited circuits are installed using Types FPL, FPLR, FPLP or permitted substitute cable, provided these power-limited cable conductors extending beyond the jacket are separated by a minimum of 0.25 in. (6.35 mm) or by a nonconductive sleeve or nonconductive barrier from all other conductors.



If energy limited cable or equivalent is not used within the enclosure, then the following guidelines do not apply. In that case, be sure to follow standard wiring practices.

Wiring Entering Enclosure

Non-Power Limited Wiring
Wiring entering the enclosure from the bottom and right side of the backbox is considered non-power limited wiring. Wiring must be in the shortest route and must not overlap any other wiring.

Power Limited Wiring
Wiring entering the enclosure from the top and the left side of the backbox is considered power limited. Wiring must be in the shortest route and must not overlap any other wiring.

Use the existing lances in the backbox to dress the wires as needed to maintain separation of power limited and non-power limited wiring.

Use the existing lances on the adapter plate to dress the wires as needed to maintain separation of power limited and non-power limited wiring.

Install Wiring

The primary mains input must have a separate or dedicated circuit breaker. Wire in accordance with local codes and Article 760 of NEC.

1. Remove the knockouts in the backbox for the entry of field wiring.
2. Pull all field wiring into the backbox. Do not dress the wiring until the location of all the equipment is known.
3. Install the wiring from the external power source to the approximate location of the power supply.

CYBER SECURITY DISCLAIMER

Siemens provides a portfolio of products, solutions, systems and services that includes security functions that support the secure operation of plants, systems, machines and networks. In the field of Building Technologies, this includes building automation and control, fire safety, security management as well as physical security systems.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art security concept. Siemens' portfolio only forms one element of such a concept.

You are responsible for preventing unauthorized access to your plants, systems, machines and networks which should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place. Additionally, Siemens' guidance on appropriate security measures should be taken into account. For additional information, please contact your Siemens sales representative or visit https://www.siemens.com/global/en/home/company/topicareas/future-of-manufacturing/industrial-security.html.

Siemens' portfolio undergoes continuous development to make it more secure. Siemens strongly recommends that updates are applied as soon as they are available and that the latest versions are used. Use of versions that are no longer supported, and failure to apply the latest updates may increase your exposure to cyber threats. Siemens strongly recommends to comply with security advisories on the latest security threats, patches and other related measures, published, among others, under

https://www.siemens.com/cert/en/cert-security-advisories.htm.

THIS PAGE HAS BEEN LEFT INTENTIONALLY BLANK.

THIS PAGE HAS BEEN LEFT INTENTIONALLY BLANK.

Siemens Industry, Inc.
Smart Infrastructure
8 Fernwood Road
Florham Park, NJ

Siemens Canada, Ltd.
1577 North Service Road East
Oakville, Ontario
L6H 0H6 Canada

Document ID A6V10328630_en--_c