SIEMENS

Installation Instructions
Model CAB-BATT/R

Battery Box

INTRODUCTION

The Model CAB-BATT/R Battery Box from Siemens Industry, Inc., is used to house BTX-2 (55AH) batteries for MXL Systems; BTX-2 (55AH) batteries and BTX-3 (100AH) batteries for FireFinder-XLS/Desigo Fire Safety Modular/Cerberus PRO Modular Systems; and 100AH battery sets for the FS-250 and FS-250C Systems. The CAB-BATT is black and the CAB-BATT-R is red. The CAB-BATT-R will be referred to in the remainder of this document as the CAB-BATT.

The CAB-BATT consists of a door and a backbox, as shown in Figure 1. The door is permanently hinged left.

The battery box can be placed on the floor directly underneath the fire panel enclosure to which it supplies battery backup or it can be mounted on a flat surface with four user-supplied bolts that are a maximum of 3/8 inch in diameter. When used for Seismic applications, the battery box must be placed on the floor and mounted to the wall as described on page 2.

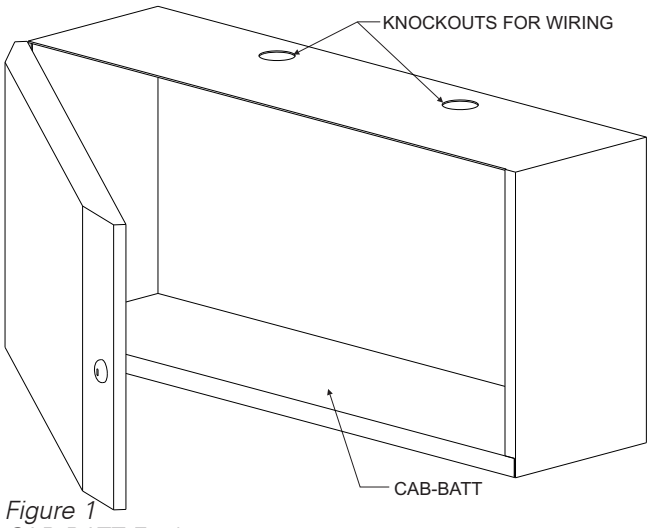


Figure 1
CAB-BATT Enclosure

NOTE

CABB-BATT battery box is for indoor use only in dry environments.

INSTALLATION

Prior to installation consider the following:

- Weight and size of the enclosure.
- Local codes.

Siemens Industry, Inc.
Smart Infrastructure

Install the battery box:

1. Select a clean, dry, shock and vibration free surface in a protected environment.
2. Position the battery box directly beneath the fire panel enclosure to which it will be wired. (Knockouts in the battery box may be needed to line up with the knockouts in the fire panel enclosure.)
3. Position the battery box so that it is clear of obstructions and the front door opens freely.
4. Mark the locations of the two upper mounting bolts of the battery box (marked "A") on the wall. (Refer to Figure 2.)

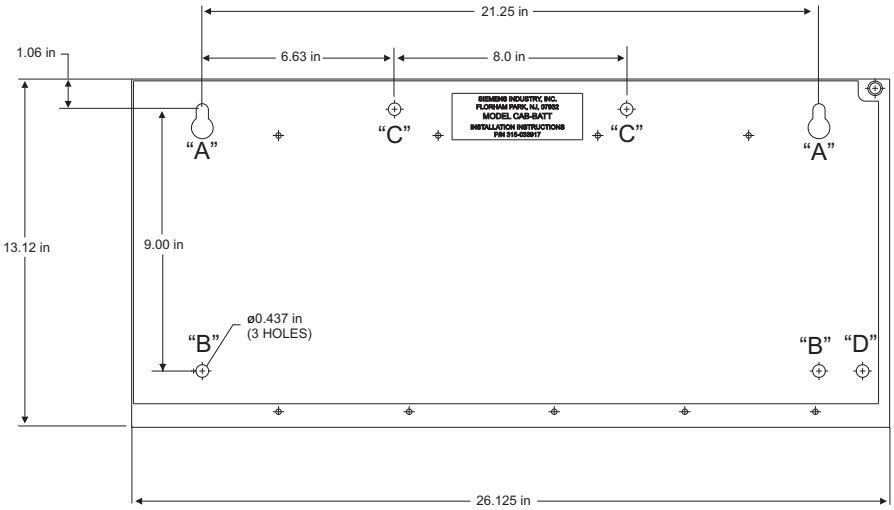


Figure 2
Mounting Holes for CAB-BATT

5. Drill the two holes located in the previous step and screw in the top bolts, leaving a small gap between the wall and each top bolt.
6. Place the battery box over the two top bolts and allow it to slide down over the bolts.
7. Mark, drill, and install the two bottom bolts in the battery box (marked "B").
8. Tighten all four bolts securely against the back wall of the battery box.
9. Place the batteries in the bottom of the CAB-BATT.

Seismic Applications

For Seismic applications the CAB-BATT **must** be placed on the floor and mounted to the wall using bolts that are 3/8 inch in diameter.

1. Select a clean, dry, shock and vibration free surface in a protected environment.
2. Position the battery box directly beneath the fire panel enclosure to which it will be wired. (Knockouts in the battery box may be needed to line up with the knockouts in the fire panel enclosure.)
3. Position the battery box so that it is clear of obstructions and the front door opens freely.
4. Mark the locations of the two upper mounting bolts of the battery box (marked "A") on the wall. (Refer to Figure 2.)
5. Drill the two holes located in the previous step and screw in the top bolts, leaving a small gap between the wall and each top bolt.
6. Place the battery box over the two top bolts and allow it to slide down over the bolts.
7. Mark, drill, and install the remaining two top bolts (marked "C").
8. For installations using 55 AH batteries, mark, drill, and install the two bottom bolts in the battery box marked "B," as shown in Figure 2.

For installations using 100 AH batteries, mark, drill, and install the bottom bolt in the backbox marked "D," as shown in Figure 2.

9. Tighten all bolts securely against the back wall of the battery box.
10. Place the batteries in the bottom of the CAB-BATT.
11. To complete the installation for Seismic applications, refer to the CAB-55 BRKT and CAB-100 BRKT Installation Instructions, P/N 315-050547.

WIRING



The main AC power line must be turned OFF prior to installation.

Install Wiring

Wire in accordance with local codes and NEC 760.

1. Remove the knockouts in the top of the battery box and bottom of the fire panel enclosure for entry of battery wiring.
2. Connect the Battery Wire Assembly to the batteries in the CAB-BATT. If a longer wire is required, use a minimum of 12 AWG. For FireFinder-XLS/Desigo Fire Safety Modular/Cerberus PRO Modular, use P/N 465-633943, supplied with the PSC-12 or PSC-12M (Refer to Figure 4 and the PSC-12 Installation Instructions, P/N 315-033060, or the PSC-12M Installation Instructions, Document ID A6V12021370) For FS-250 or FS-250C use the Battery Cable Assembly supplied with the FS-250 / FS-250C hardware kit (Refer to Figure 5). For MXL, use P/N 555-149033 supplied with the MMB-3 (Refer to Figure 6).

Battery Connections

When BTX-1, BTX-2 or BTX-3 batteries are required, connect them to the system with the Battery Cable Conversion Kit, P/N 545-634222, following the steps listed below.

1. Using the 12 in. long wire assembly, connect the two batteries together, as shown in Figure 3. Secure each end of the assembly to the battery with a 10-32 x 3/4" screw and lock nut.
2. Attach the quick disconnects to the positive and negative battery terminals with the 10-32 x 3/4" screws and lock nuts supplied.
3. Attach the red battery wire to the quick disconnect on the positive terminal and the black battery wire to the quick disconnect on the negative terminal.

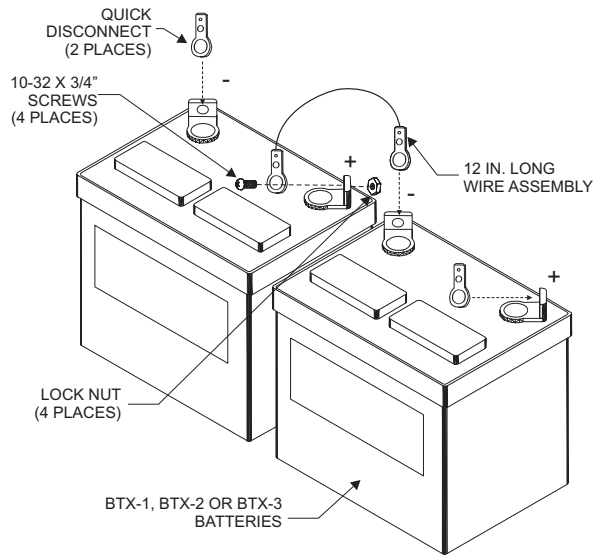


Figure 3
Wiring BTX-1/-2/-3 Batteries using Battery Cable Conversion Kit, P/N 545-634222

SPECIFICATIONS CAB-BATT: 26-1/8"W x 8-3/8"D x 13-3/25"H

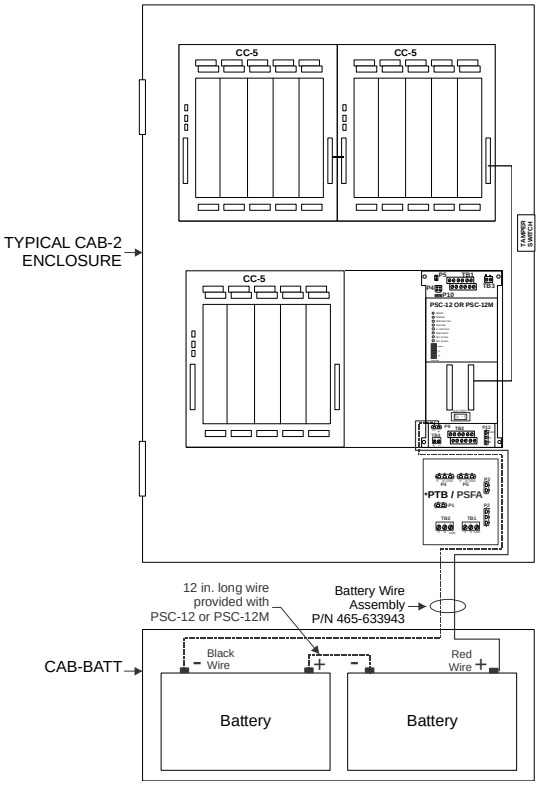


Figure 4
Typical Battery Connections from FireFinder-XLS/ Desigo Fire Safety Modular/Cerberus PRO Modular to CAB-BATT.
**PTB for use only with the PSC-12, PSFA only for use with the PSC-12M*

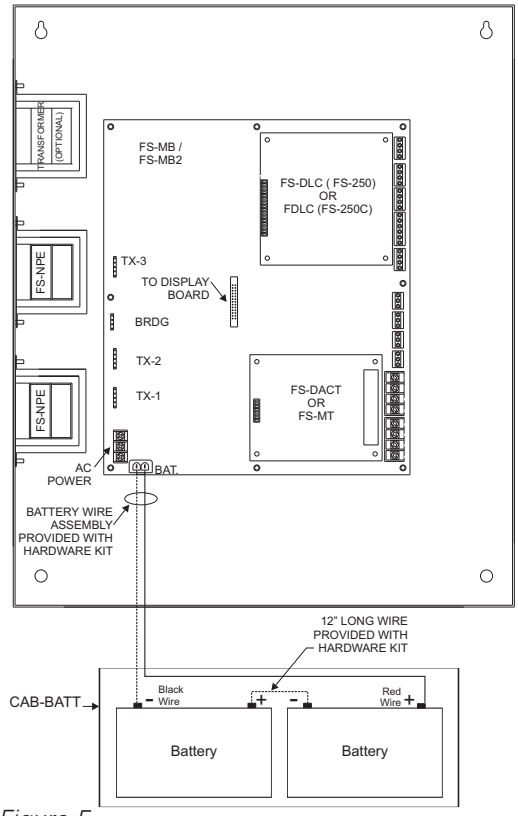


Figure 5
Typical Battery Connections from FS-250 / FS-250C to CAB-BATT

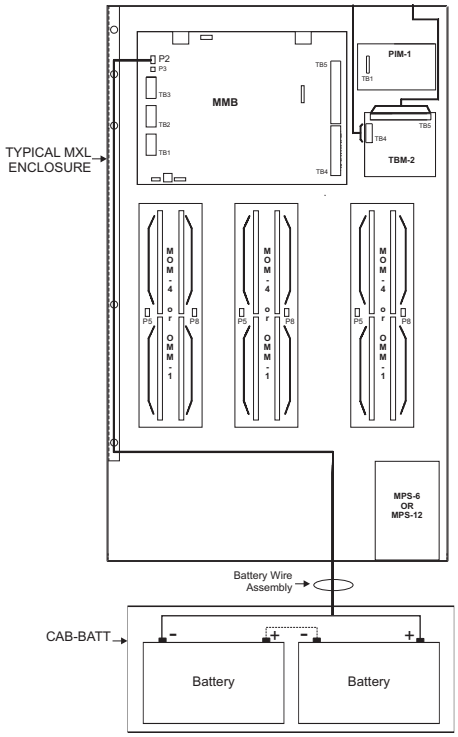


Figure 6
Typical Battery Connections from MXL to CAB-BATT

CYBER SECURITY DISCLAIMER

Siemens provides a portfolio of products, solutions, systems and services that includes security functions that support the secure operation of plants, systems, machines and networks. In the field of Building Technologies, this includes building automation and control, fire safety, security management as well as physical security systems.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art security concept. Siemens' portfolio only forms one element of such a concept.

You are responsible for preventing unauthorized access to your plants, systems, machines and networks which should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place. Additionally, Siemens' guidance on appropriate security measures should be taken into account. For additional information, please contact your Siemens sales representative or visit https://www.siemens.com/global/en/home/company/topicareas/future-of-manufacturing/industrial-security.html.

Siemens' portfolio undergoes continuous development to make it more secure. Siemens strongly recommends that updates are applied as soon as they are available and that the latest versions are used. Use of versions that are no longer supported, and failure to apply the latest updates may increase your exposure to cyber threats. Siemens strongly recommends to comply with security advisories on the latest security threats, patches and other related measures, published, among others, under

https://www.siemens.com/cert/en/cert-security-advisories.htm.

THIS PAGE HAS BEEN LEFT INTENTIONALLY BLANK.

THIS PAGE HAS BEEN LEFT INTENTIONALLY BLANK.

Siemens Industry, Inc.
Smart Infrastructure
8 Fernwood Road
Florham Park, NJ

Siemens Canada, Ltd.
1577 North Service Road East
Oakville, Ontario
L6H 0H6 Canada

Document ID A6V10315587

P/N 315-033917-AM