


Neptune 2.0 Badging

[CCTV](#) | [Security System](#) | [Elevator Control](#) | [Intercom](#) | [Multi Site](#) | [Mobile Credentials](#) | [Facility Automation](#) | [Mobile App](#) | [On-Premise](#) | [Cloud](#) | [Video Directory Intercom](#) | [QR Code Reader](#)

Sicunet badging provides the ability to create your badge templets, assign them to users and print. Native to the application, no additional software is required.


- Feature within the system
- One time add on license
- Mobile manager app captures image and automatically formats photo for system.

Icon for badge printing and badge layout is within the "person" page

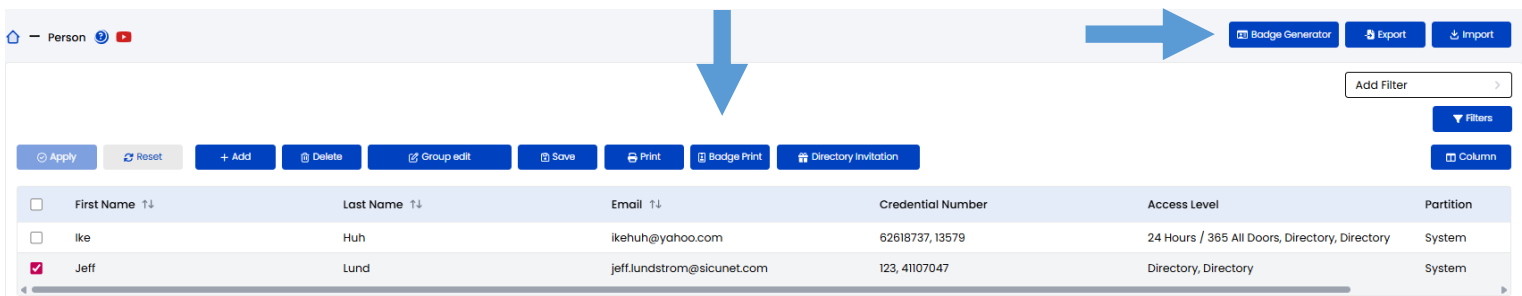

Laying out your templet is easy!

Size and format the badge layout.

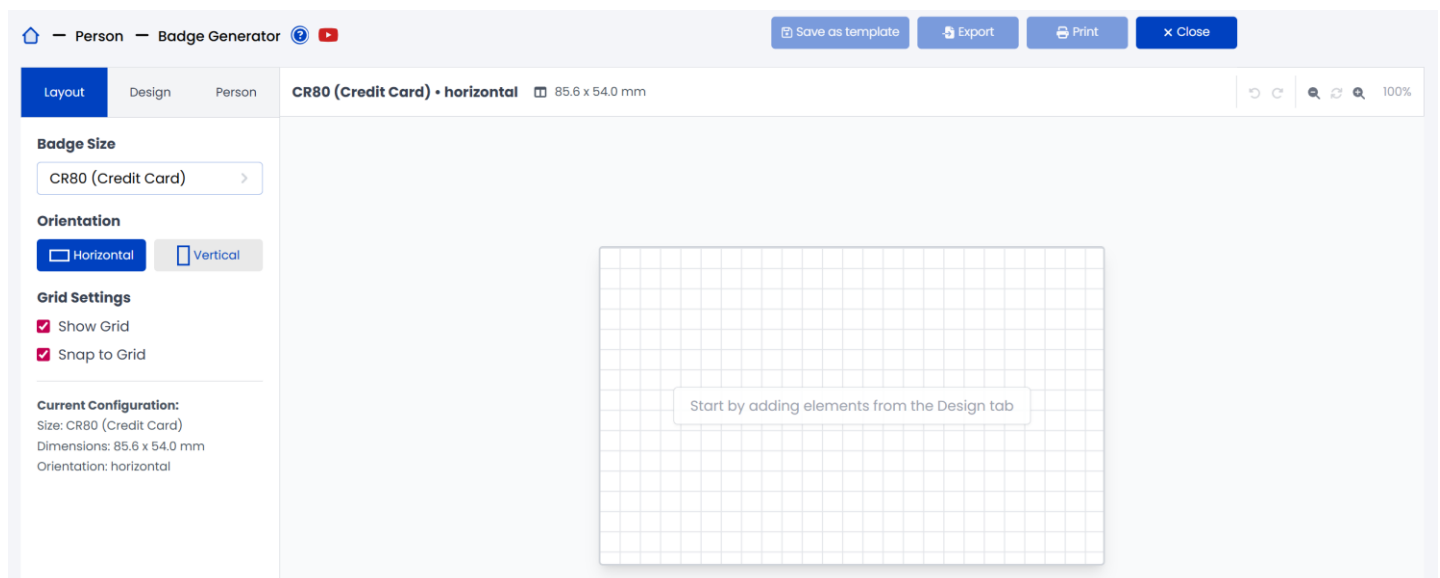

[CCTV](#) | [Security System](#) | [Elevator Control](#) | [Intercom](#) | [Multi Site](#) | [Mobile Credentials](#) | [Facility Automation](#) | [Mobile App](#) | [On-Premise](#) | [Cloud](#) | [Video Directory Intercom](#) | [QR Code Reader](#)

Neptune 2.0 Badging

CCTV | Security System | Elevator Control | Intercom | Multi Site | Mobile Credentials | Facility Automation | Mobile App | On-Premise | Cloud | Video Directory Intercom | QR Code Reader

Adding your layout is simple.

The screenshot shows the 'Design' tab of the Neptune 2.0 Badging interface. On the left, there is a sidebar with 'Add Elements' (including First Name, Last Name, Middle Name, Email, Person No, Static Text, Person Image, Upload Image, Background Color, Shapes, and Dynamic Fields like Mobile Phone) and a 'Load Template' button. The main area displays a grid for designing a badge. A text box on the grid says 'Start by adding elements from the Design tab'. Above the grid, it says 'CR80 (Credit Card) • horizontal' and '85.6 x 54.0 mm'. At the top right, there are buttons for 'Save as template', 'Export', 'Print', and 'Close'.

Click the category and edit in the badge.

- System Data Fields
- Custom – User defined fields
- Photo
- Image
- Shapes
- Colors

See the badge prior to printing

The screenshot shows the 'Person' tab of the Neptune 2.0 Badging interface. On the left, there is a 'Select Person' section with input fields for 'No', 'First Name', and 'Last Name', and buttons for 'Apply', 'Reset', and 'Select All (11)'. Below this is a list of three people: Ken Costello, Ike Huh, and Jeff Lundstrom, each with a photo, name, and email. The main area displays a grid for designing a badge. A text box on the grid says 'Start by adding elements from the Design tab'. Above the grid, it says 'CR80 (Credit Card) • vertical' and '54.0 x 85.6 mm'. At the top right, there are buttons for 'Save as template', 'Export', 'Print', and 'Close'.

Select the users and print



The screenshot shows the 'Badge Print' interface. At the top, there are buttons for 'Apply', 'Reset', '+ Add', 'Delete', 'Group edit', 'Save', 'Print', 'Badge Print', and 'Directory Invitation'. Below these buttons is a table with four columns: 'First Name', 'Last Name', 'Email', and 'Credential Number'. The table contains three rows of data. The first row is 'Ike Huh' with email 'ikehuh@yahoo.com' and credential number '62618737, 13579'. The second row is 'Jeff Lund' with email 'jeff.lundstrom@sicunet.com' and credential number '123, 41107047'. The third row is 'Ken Costello' with email 'ken@svcrep.com' and credential number 'No: 21'. A blue arrow points to the 'Jeff Lund' row.

First Name	Last Name	Email	Credential Number
Ike	Huh	ikehuh@yahoo.com	62618737, 13579
Jeff	Lund	jeff.lundstrom@sicunet.com	123, 41107047
Ken	Costello	ken@svcrep.com	No: 21

CCTV | Security System | Elevator Control | Intercom | Multi Site | Mobile Credentials | Facility Automation | Mobile App | On-Premise | Cloud | Video Directory Intercom | QR Code Reader