Smart White Noise Sleep Machine





USER MANUAL

MBZ-286


Thank you for using our products, please read carefully before starting.

Product illustration Description:

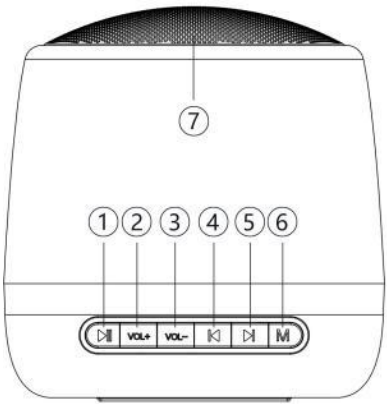

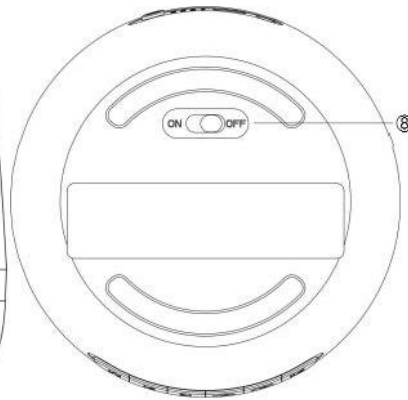

①PLAY/PAUSE ②Volume + ③Volume - ④Previous Song
⑤Next Song ⑥Lighting switch ⑦Touch control
⑧Power button

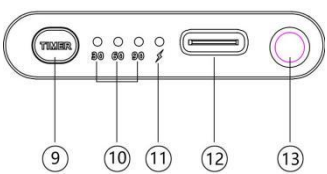

⑨Timer button ⑩Timing indicator ⑪Power indicator ⑫Type-c Port ⑬3.5mm earphone

Parameters:

Voltage	3.7V
Dynamic current	Light off < 200mA; Light On < 600mA
Quiescent current	20uA
Size	150*150*32.5mm
Speaker	8 Ω 3 W
Adapter	Input AC 100～240V＜50 / 60Hz Output 5V, 1A

Accessories:

Type-c cable*1 User manual*1 Sound machine*1

Features:



App control



34 soothing music



Support3.5mm earphones



Timer



night lamp



Power/Battery



Schedule setting




DIY Scen

Instructions:

1. Start:Turn power button 

to ON to start,Turn power button to OFF to shut down.

2. Play/Pause:lay and pause by pressing button  , and press button  to change music.

3. Volume:Press volume button VOL+ VOL- to increase and decrease the volume and long press to increase or decrease the volume quickly.

4. Light switch: switch on/off the light by simply touching the top ⑦of the sound machine, long press⑦to adjust the lighting brightness (PS: Light brightness can not be adjusted under breathing mode).

5. Light color mode adjustment:Switch the light color mode by pressing button M; and long press M to change scenes

6. Network pairing: Long press 

for 3s to enter into paring mode.

7. Timer:If the timer indicator 30/60/90 light is off, it means the device is in regular mode (Play current music loop without time control). Short press the timing 

button, the timing indicator will light up with white light 30/60/90, indicating the countdown of 30/60/ 90 minutes respectively. When the timing is over, the machine will turn off the music and light.

8. Battery: indicator light ⑪ in purple means the device start charging, indicator light ⑪in green means the device is fully charged

9. Indicator light ⑪status:

Blue:Full battery and not in charging

Red:Low battery and in charging-Red (Powered off)

Blue light blinking:Device is under network pairing mode

Red light blinking:Low battery and not charging

Blue/Red shown together:Working and in Charging(Powering on)

10. Memory function: Choose your favorite music and light to play for 5s and then pause the play. The machine will remember and save the current settings, and go back to previous settings when device turned on next time

11. Child lock: Long press the Play/Pause ▷‖ button for 3S , you will see the indicator light 30/60/90is on, that means child lock is activated. Long press Play/Pause ▷‖ button for 3s again, and you will see the indicator lights 30/60/90 is off, that means child lock function is disabled.

FAQ:

1, No sound after powering on?

Please check whether the battery is too low. Connect the power supply and try again.

2. The devices can't be charged?

Connect the power supply and check whether the indicator works. For details, see 9 Indicator Status:

3. Unable to play music

Please check if the power indicator light is on and blue. If there is no blue light on, please turn the to off, and start the device again. If the device still can’t work, Please remove the charger, remove the battery, and leave it for 10 minutes without power. Then re-plug and start the battery and repeat the above steps

4. The touch light is out of control

Please pay attention to whether the charger is qualified, and check whether the device is abnormal by using computer USB power supply.

Note:

Do not disassemble to avoid damage.
Please keep them away from the water. In case of flooding to avoid damage to the product
Please stay away from high temperature and fire resources.
Do not use corrosive detergents to wipe or clean the product
Please wipe the surface with a soft wet towel.
Do not disassemble to avoid damage
Please keep away from the water to avoid damage to the product
Please stay away from high temperature and fire resources
Do not use corrosive detergents to wipe or clean the product, please clean the product surface with a soft web towel

After service:

Please contact the seller if there is any problem with the product
One year warranty, the warranty period shall be subject to the date of invoice;
The warranty is not included in any of the following cases:
Damaged by improper operation, storage or maintenance
The invoice model is inconsistent with the product model or the invoice is changed;
Products damaged by force majeure are not covered by our warranty,
Our customer service center will be at your service.