

Holding Cabinets: Prince Castle Pie Merchandiser

Temperature Calibration

Frequency

Monthly

Models

Prince Castle Model 524

Estimated Time to Complete

10 Minutes

Health & Safety Hazards



Hot Surfaces

Food Safety



Wash and dry hands **after** performing this task




Ensure nuts, bolts & screws are tight




Inspect equipment. Do not use if damaged

Equipment

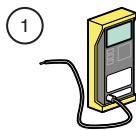


1 Pyrometer & Temperature Probe

1

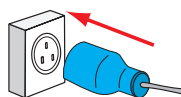


Connect Power Supply at the main socket.

2

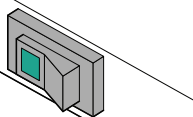

Turn Power Switch OO.

3

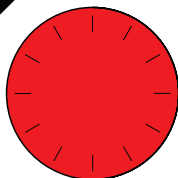


Allow 1 hour for the unit to achieve normal working temperature.

4




Press Temp Button to view temperature. This should read between 65.6°C-82.8°C.

5

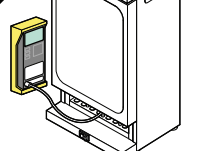


Place Temperature probe inside cabinet ensuring the end is not touching a surface and close the door. Allow the pyrometer temperature to stabilise.

6

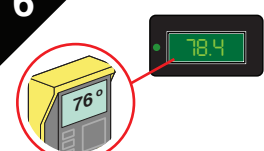

If the reading is not within $\pm 3^{\circ}\text{C}$ of the correct set temperature then adjust accordingly.

7

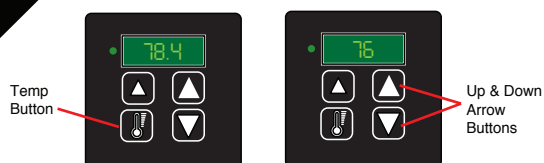

To adjust the temperature, Press and hold the Temp Button. Use Up and Down Arrow Buttons to adjust to the desired temperature.

8



If the temperature controller does not allow you to adjust the setting, or the temperature of the cabinet is out of calibration contact your [Service Company](#).



NB For standard Pie Merchandisers, there is no temperature controller. Repeat **step 5** after the cabinet has warmed up. If the temperature range is not achieved (65.6°C - 82.8°C) contact your [Service Company](#).