

Toasters: Bun Spatulas

Card No. **TS124**

Bun Spatula deburring and inspection

Frequency	Monthly
Models	Bun Spatula
Estimated Time to Complete	10 Minutes

Health and Safety Hazards



Metal Filings



Sharp Edges

Food Safety



Wash and dry hands **after** performing this task




Remove or cover all food and packaging




Inspect equipment. Do not use if damaged


Equipment

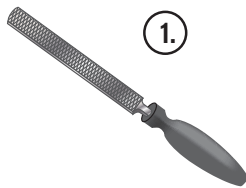

1. Metal File

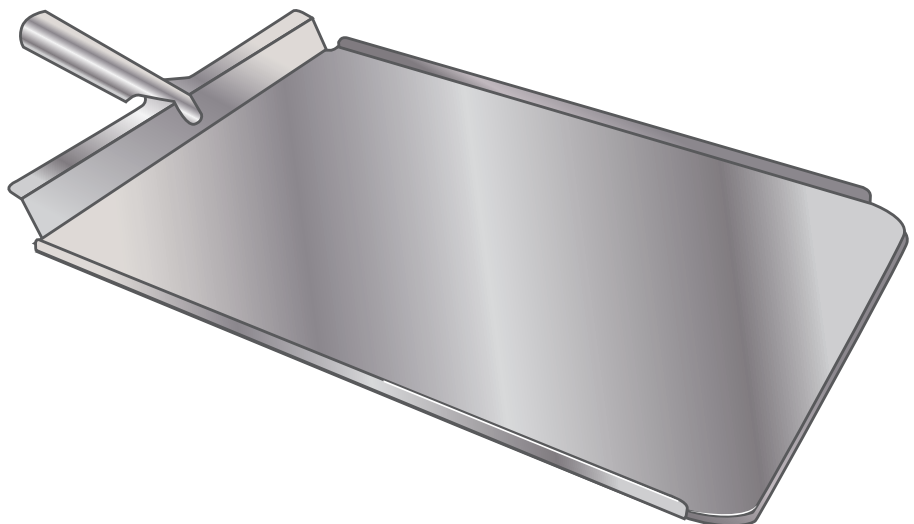

Choose an area away from food, packaging and food equipment, e.g. corral

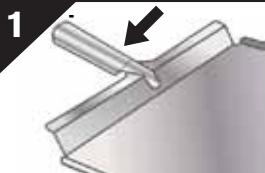


1 Check spatula handle for cracks. If the handle is cracked then dispose of the spatula in the waste.



2 Check both the upright sections of the spatula for signs of the metal turning inwards.



3 If the edge has turned in, use the file to remove the edge until the rib is straight again. All edges on both sides are to be blunt, DO NOT sharpen to a point.

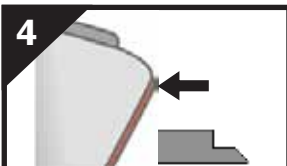

4 Check end of the spatula for an angled edge. The edge should have the same profile as a grill spatula, i.e. not blunt.



5 File the TOP edge of the spatula to an angle of approx 45 degrees DO NOT over file and produce a sharp edge.



6 File the BOTTOM edge of the spatula to remove any burrs that were formed during step 5. Hold the file flat to the bottom surface. DO NOT over file and produce a sharp edge.



7 Spray the spatula in the middle sink to remove all metal filings.

8 Wash, sanitise and dry the spatula and test the ability to cleanly remove buns from the toaster.