

DCFT Belt change

Replacement of belts on the DCFT toaster

Frequency

When Required

Models

Prince Castle DCFT

Estimated Time to Complete

15 minutes

Health and Safety Hazards



Chemicals



Hot Surface

Food Safety



Wash and dry hands **before and after** performing this task



Ensure nuts, bolts & screws are tight



Inspect equipment. Do not use if damaged

Equipment



Red Border Cloth



Long Gauntlets

1



Check the wear and tear of the club belts.
Depending on toaster, used belts will need changing a minimum every 6 months.


2



Turn off toaster and allow to cool for 15 Minutes. Switch is located at the rear right corner. For safety put on blue gauntlets as toaster will still be hot.


3

1

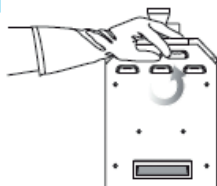


Loosen thumb screw on the left hand side of the toaster. Pull the cover down and remove side panel to expose the belts.

2

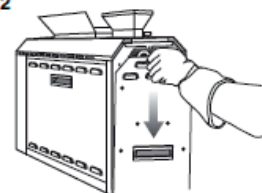

3

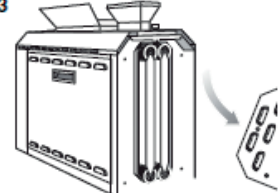

4



Locate the latch arm and pivot, securing in the metal clip.

5

Remove belt tension by pivoting the tension arms up.

**6**

Now pull out the old belt and discard.

7

Install the new belts over both rollers.

8

Ensure that the belt rides in the grooves in the belt rollers

9

Now pivot the tension arm down and engage the latch arm.

10

Now replace the side panel and tighten up the thumb screw. Turn toasters on and check operation.

**11**

Turn on the toaster and allow to warm up.

**12**

Wait until toaster reads "ready" the toaster is now ready for operation.

