


Cleaning

1 Empty ketchup from dispenser and discard.

2 Fill dispenser with warm water. Repeatedly press actuating lever to pump water and flush out dispenser.

3 Remove internal parts from container by pushing down on the lever and the piston push rod. Slide the lever out of the "T" shaped hole in the container.

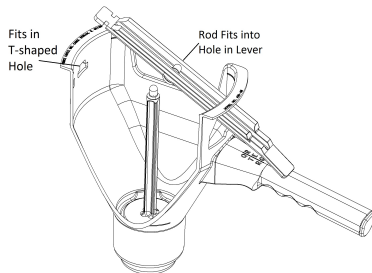

4 Lift the push rod and the spring assembly straight up and out of the container. Then remove cylinder from container

5 Wash the container and all loose internal parts in a solution of warm water and detergent. No need to separate piston ring and spring from push rod.

6 Rinse all loose parts and the container with running water.

7 Sanitize dispenser. Use 1 packet of **Sanitizer (HCS)** to 2-1/2 gallons (8.5 l) of warm water.

8 Let air dry.
Note: Do not reassemble dispenser until it is ready to be used the next day.

Troubleshooting

PROBLEM	PROBABLE CAUSE	SOLUTION
Will not dispense or does not dispense full portion.	Plastic parts broken.	Replace broken parts.
	Not assembled properly.	Assemble properly.
	Not primed.	See Setup procedure.
	Parts missing.	Check for proper assembly and placement.
	Diffuser holes plugged in bottom of container.	Disassemble and clean diffuser holes by flushing water through holes.
Ketchup pattern is irregular.	Diffuser holes plugged in bottom of container.	Disassemble and clean diffuser holes by flushing water through holes.

Ordering/Service Information

1 WHERE AND HOW TO ORDER REPLACEMENT PARTS
To order replacement parts, look on the back of your Prince Castle Price List for the name and phone number of your local Prince Castle Service Center. You may also call Prince Castle at 1-800-323-2930 (or fax us at 630-462-1460) for the name of your local service center.

2 PARTS RETURNS
To return parts to your service center for credit, you must obtain authorization from your center.
Note: All warranty situations should be handled by your center.

3 PRICES
A. All prices are F.O.B. Prince Castle Service Center or F.O.B. factory, Carol Stream, Illinois.
B. All prices are subject to change without notice. These prices are exclusive of all sales taxes or any special taxes which may be levied by federal, state, or city governments.

OUTSIDE THE U.S.

Contact your kitchen equipment supplier or designated repair facility for parts and service.

NON-SCHEDULED MAINTENANCE

Not applicable.

Exploded View and Parts List

Item	Part No.	Description	Qty	Function
1	406-151	Narrow Container	1	Holds all internal parts in proper position and provides a reservoir for ketchup
2	404-068	Lever	1	Pushes plunger rod down and forces piston to push ketchup through diffuser holes located on bottom of container
3	406-152	Narrow Lid	1	Keeps Foreign particles out of container and keeps ketchup from drying out
4	404-13	Tether	1	Attaches the lid to the container
5	404-067	Piston Push Rod	1	Pushes the piston down when the lever is pressed
6	404-069	Piston Ring	1	Works in Conjunction with Piston
7	407-007	Piston Spring	1	Returns the piston rod and lever to the UP position
8	404-066	Cylinder	1	Holds ketchup

