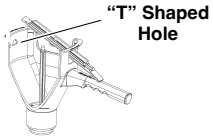


Cleaning

- 1 Empty mustard from dispenser and discard.
- 2 Fill dispenser with warm water. Repeatedly press actuating lever to pump water and flush out dispenser.
- 3 Remove internal parts from container by pushing down on the lever and the piston push rod. Slide the lever out of the "T" shaped hole in the container. Remove the adjusting cam.
 
- 4 Lift the push rod and the spring assembly straight up and out of the container.
- 5 Separate all internal parts to clean thoroughly. Wash the container and all loose internal parts in a solution of warm water and **All Purpose Concentrate (APC) (HCS)**.
- 6 Rinse all loose parts and the container with running water.
- 7 Sanitize dispenser. Use 1 packet of **Sanitizer (HCS)** to 2-1/2 gallons (8.5 l) of warm water.
- 8 Let air dry.
Note: Do not reassemble dispenser until it is ready to be used the next day.

Troubleshooting

PROBLEM	PROBABLE CAUSE	SOLUTION
Will not dispense or does not dispense full portion.	Plastic parts broken.	Replace broken parts.
	Not assembled properly.	Assemble properly.
	Not primed.	See Setup procedure.
	Parts missing.	Check for proper assembly and placement.
Mustard pattern is irregular.	Diffuser holes plugged in bottom of container.	Disassemble and clean diffuser holes by flushing water through holes.
Mustard collects on bottom of dispenser.	Bottom of dispenser has made contact with bun.	Wipe off bottom of dispenser with damp cloth.
Mustard Dispenses Accidentally	Lever accidentally pressed when placing dispenser in holder.	Never touch lever except to dispense mustard.

Ordering/Service Information

- 1 **WHERE AND HOW TO ORDER REPLACEMENT PARTS**
To order replacement parts, look on the back of your Prince Castle Price List for the name and phone number of your local Prince Castle Service Center. You may also call Prince Castle at 1-800-323-2930 (or fax us at 630-462-1460) for the name of your local service center.
- 2 **PARTS RETURNS**
To return parts to your service center for credit, you must obtain authorization from your center.
Note: All warranty situations should be handled by your center.
- 3 **PRICES**
 - A. All prices are F.O.B. Prince Castle Service Center or F.O.B. factory, Carol Stream, Illinois.
 - B. All prices are subject to change without notice. These prices are exclusive of all sales taxes or any special taxes which may be levied by federal, state, or city governments.

OUTSIDE THE U.S.
Contact your kitchen equipment supplier or designated repair facility for parts and service.

NON-SCHEDULED MAINTENANCE
Not applicable.

Exploded View and Parts List

Item	Part No.	Description	Qty	Function
1	398-112	Narrow Container	1	Holds all internal parts in proper position and provides a reservoir for mustard
2	404-070	Lever	1	Pushes plunger rod down and forces piston to push mustard through diffuser holes located on bottom of container
3	406-152	Narrow Lid	1	Keeps Foreign particles out of container and keeps mustard from drying out
4	404-13	Tether	1	Attaches the lid to the container
5	404-067	Piston Push Rod	1	Pushes the piston down when the lever is pressed
6	404-071	Piston Ring	1	Works in Conjunction with Piston
7	407-007	Piston Spring	1	Returns the piston rod and lever to the UP position
8	404-066	Cylinder	1	Holds mustard

Note: Parts are not sold individually. See Part Kits on page 6.

