

McD LED Kitchen Panel Cleaning Card

Card No.

Frequency

Weekly/Monthly

Models

McD LED Kitchen Panels

Estimated Time to Complete

10-15 Minutes

Health and Safety Hazards



Fall from height



Slippery Floors / Tripping



Chemicals



Electricity

Food Safety



Wash and dry hands **after** performing this task



Ensure nuts, bolts & screws are tight



Inspect equipment. Do not use if damaged



Remove or cover all food and packaging

Equipment



KAY Multi-Surface &
Glass Cleaner



KAY Heavy
Duty Degreaser



Blue Microfibre
Cloth



Step Ladder



Cone(s)

Prepare the area


1

Ensure step ladders are in good condition and treads are clean.
Ensure ladder is fully opened and locked into position.
Do not stand on top 2 steps.




2

Place 'caution' signs on all approaches to area.
Verbally caution anyone in the immediate area.
Always get assistance if required.

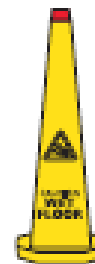


Cleaning the light

1

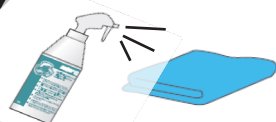

Spray Multi-Surface & Glass Cleaner onto a clean blue Microfibre cloth. Use Heavy Duty Degreaser for stubborn areas

2

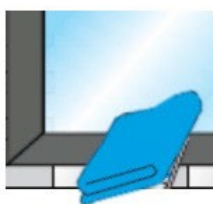


Gently wipe the LED Panel with cloth to remove any dirt/grease build

Caution - Take care not to push up onto the LED panel, this may cause the panel to become loose


Warning - Do not use sprays or damp cloths near electrical power supplies

1

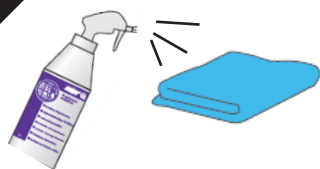

Spray Heavy Duty Degreaser onto a clean blue Microfibre cloth.

2

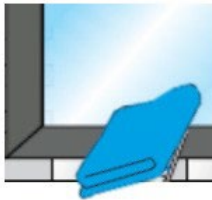

Gently wipe the LED Panel with cloth to remove any dirt/ grease build

Caution - Take care not to push up onto the LED panel, this may cause the panel to become loose

Note to user

Where needed use Heavy Duty Degreaser as often as required/needed to remove excess grease/ dirt buildup. Once recovered continue to follow using Multi-Surface Glass Cleaner as a weekly process and Heavy Duty Degreaser monthly.