

Franke F3Dn Frozen Fry Dispenser

Card No. **FD030b**

Brush Clean Condenser & Wash Filter

Frequency

Monthly

Models

Franke F3Dn Fry Dispenser

Estimated Time to Complete

15 Minutes

Tools

Gloves, Neoprene

Wash hands after completing task


1

Unplug power cord. Unlock the freezer's front casters. Roll the freezer out past the fries station. Avoid touching hot surfaces on the fries station. Unplug the power cord.



2

Remove condenser/filter access panel.
Put on neoprene gloves. Lift up then pull out - upper right side condenser access panel.

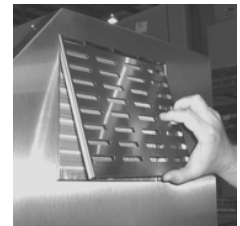


3

Separate filter from panel.
(On older models only): slide filter up and out of vented access panel or frame.



4

Wash condenser coil filter.
Take filter to the three compartment-sink. Wash the condenser coil filter and rinse thoroughly with clean water. Let the filter air dry before reinstalling

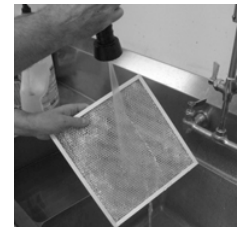

5

Slide filter back into access panel.
(On older models only): slide filter back into right and left brackets on back of vented access panel



6

Separate filter from panel.
(On older models only): slide filter up and out of vented access panel or frame.



7

Replace condenser/filter access panel.
Slide top of access panel up into top of opening, then lower panel into the bottom slot.



8

Plug power cord into outlet.
Plug power cord back into outlet. Roll freezer back into position, flush with the fries station. Lock the front casters.

