

Rabbit Laser – USA.com

To install LaserCut 5.3 on Windows 7 these are the following steps:

1.) Start by opening LaserCut V. 4.2.2.0 and running the setup. This version is known to work with loading into Windows 7.

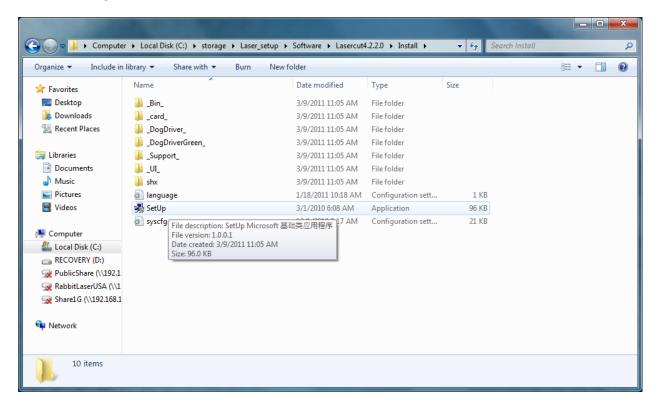


2.) Choose the correct install path. This will be C:\LaserCut53_Machinesize

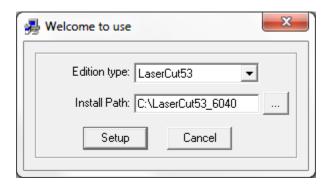





3.) There will be a window pop up to show that the program as installed correctly, click OK.

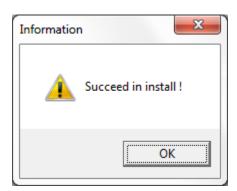


4.) Windows will ask if the program has installed correctly, Click "This program installed correctly."

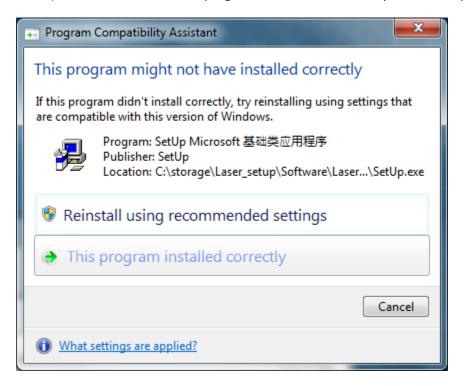


5.) The driver for windows 7 must be installed this is named LTSetupUSBDrv. Run the setup.

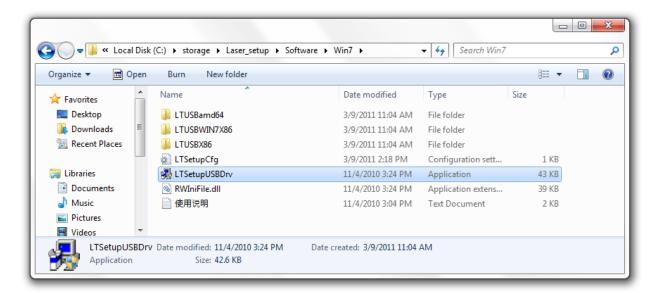


6.) This screen will open up. This is to install the Windows 7 driver. Click the setup button.

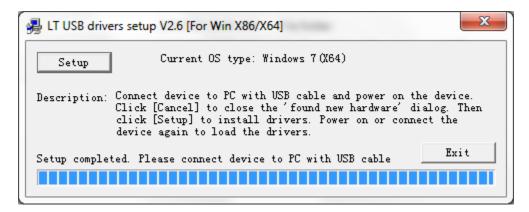


7.) This screen will pop up showing that the driver installed correctly, click OK.

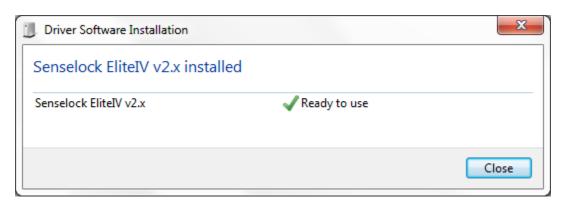


8.) Windows will as if the program as installed correctly, click "This program installed correctly."

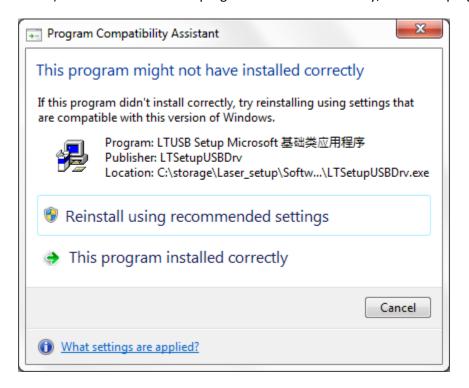


9.) Go back and reinstall the correct version of LaserCut 5.3 file for the machine of choice.

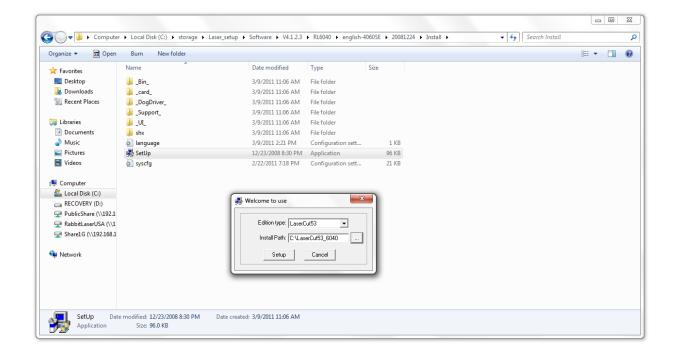


10.)LaserCut will ask if you want to override the configuration file. Click Yes.

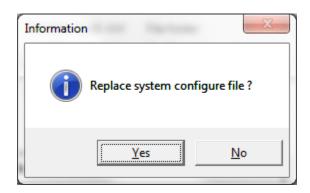


11.) Once LaserCut has finished the setup it will say that it succeeded again. Click OK.

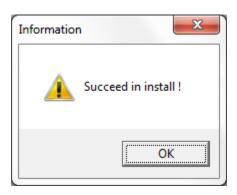


12.) After the setup and Windows will ask you again if the program is installed correctly, click "this program installed correctly."

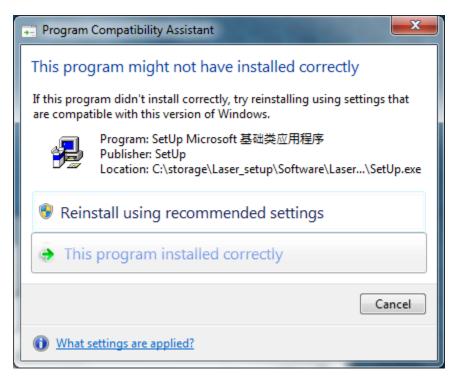


13.)Open the device manager to check everything is installed correctly. First check the USB dongle. Under the Smart card readers there will a Senselock EliteIV v2.x. This means that the computer is reading the dongle correctly.

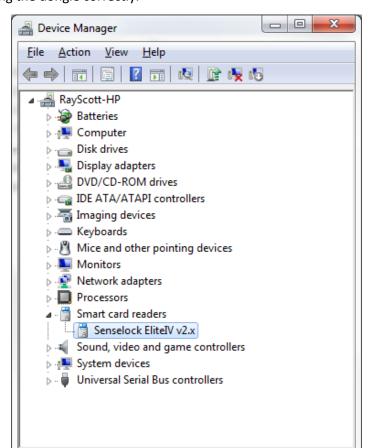

14.)Once that is there, plug in the machine and check that using the device manager. Under the Universal Serial Bus controllers there will be a LT Slave USB (68013A) Driver. This means the computer is communicating with the laser machine.

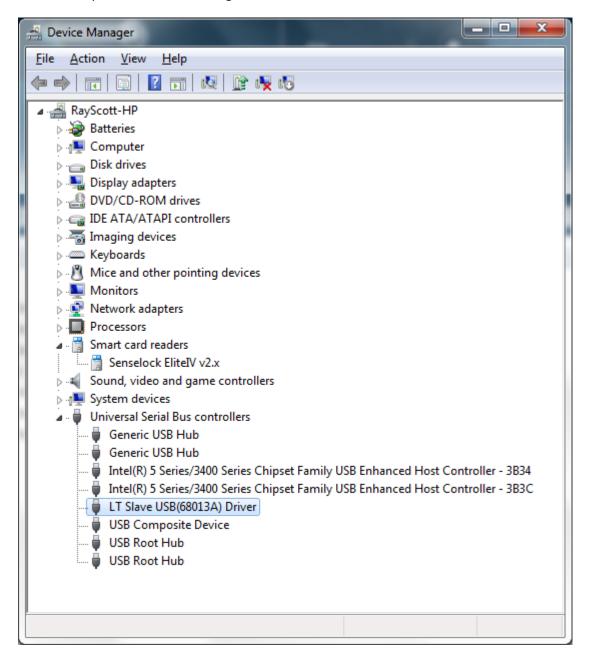

15.) Finally, open up LaserCut 5.3 and make sure that everything works properly.

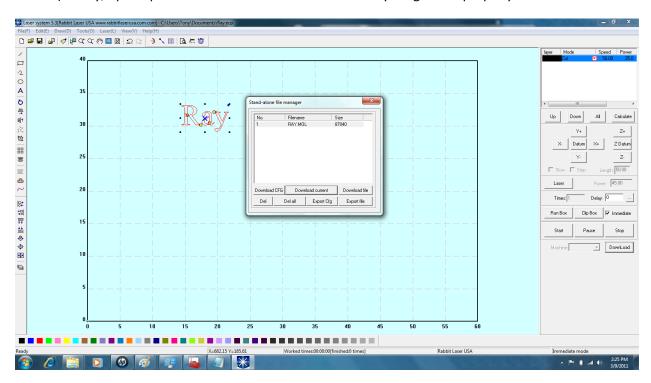

www.rabbitlaserusa.com Middletown, OH 45044 1-513-217-5707