


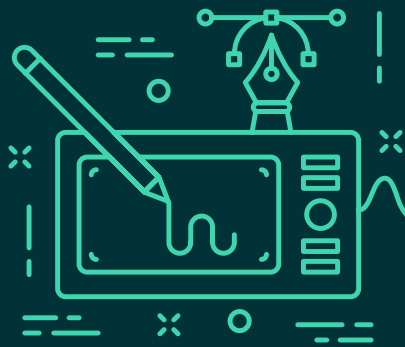


KG500_KG520_KG530 Door Ligature Monitor (DLM) Testing

Regular/periodic checks should be made to the DLM as follows:

Daily: Apply pressure along 3 points of door top, side and underside monitor and confirm indicator LED signals on.

Weekly: Apply pressure along door monitor and hold for 6 seconds and confirm alarm system activated.

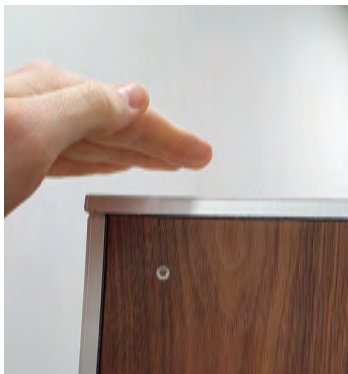

DLM in normal state - no pressure being applied



DLM in activation state with pressure applied - LED indicator on.

NB: DLM's fitted without the LED indicators will need testing in the same way but continued through to triggering of the staff attack/notification system.

Operation and Maintenance

Operation

Use door as normal with DLM installed.

Maintenance

Care should be taken to ensure that the DLM remains functional and free from signs of damage. Regular status checks are advised to ensure DLM remains connected with staff attack/notification system.

Cleaning

Use only a damp cloth to clean the DLM, where necessary a mild detergent can be used.