

System Parameters

_3DHDIR

Specifies the default 3d horizontal view direction

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Room
Values:	Numeric (Degrees)
Visibility:	Always

_3DHPAN

Specifies the default 3d horizontal pan distance

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Room
Values:	Numeric (Measurement)
Visibility:	Always

_3DIST

Specifies the default 3d viewing distance

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Room
Values:	Numeric (Measurement)
Visibility:	Always

_3DVDIR

Specifies the default 3d vertical view direction

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Room
Values:	Numeric (Degrees)
Visibility:	Always

_3DVPAN

Specifies the default 3D vertical pan distance

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Room
Values:	Numeric (Measurement)
Visibility:	Always

_AB

Specifies the face beginning angle on a curved wall

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Wall
Values:	Numeric (Degrees)
Visibility:	Always

_ACCPRICETOTAL

Accumulates Price from Child Accessories

Type:	Auto Populated
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Decimal)
Visibility:	User Activated
Example:	;Accumulate Accessory Prices For Each CAB Assembly Price := _AccPricetotal

_AE

Specifies the face ending angle on a curved wall

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Wall
Values:	Numeric (Degrees)
Visibility:	Always

_AI

Specifies a Walls Angle from the Previous Wall. Left to Right / Clockwise

Type:	System and/or User Definable
Valid Range:	0~360
Applies To:	Wall
Values:	Numeric (Degrees)
Visibility:	Always

_AL

Internal value used to give the left angle correction for a curved wall joint

Type:	System Defined
Valid Range:	0~360
Applies To:	Wall
Values:	Numeric (Degrees)
Visibility:	Visible with user override

_ANG1

Specifies the Arc begin angle

Type:	System and/or User Definable
Valid Range:	0~360
Applies To:	Operation
Values:	Numeric (Degrees)
Visibility:	Visible with user override

_ANG2

Specifies the Arc end angle

Type:	System and/or User Definable
Valid Range:	0~360
Applies To:	Operation
Values:	Numeric (Degrees)
Visibility:	Visible with user override

_APPRF

Specifies the Applied Molding Profile

Type:	System and/or User Definable
Valid Range:	Valid Applied Molding Profile ID #'s Only
Applies To:	Job/Room/Molding
Values:	Database Id Number (Integer)
Visibility:	Visible with user override

_AR

Internal value used to give the right angle correction for a curved wall joint

Type:	System Defined
Valid Range:	0~360
Applies To:	Wall
Values:	Numeric (Degrees)
Visibility:	Visible with user override

_BANDMATID

Returns the Door/Drawer Fronts Edgebanding ID Number

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Door or Drawer Front
Values:	Database ID Number
Visibility:	Never

_BBPRF

Specifies the Base Board Molding Profile

Type:	System and/or User Definable
Valid Range:	Valid Base Molding Profile ID #'s Only
Applies To:	Job/Room/Molding
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_BD

Specifies the depth of a base cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_BD_BIESSEDOOR

Indicates if the Door has Biesse Door Parameters on it. This parameter is only created if your integrator has set you up to use Biesse Doors and is automatic.

_BD_BOTHCUP

Distance from bottom of door to center of bottom hinge cup. This parameter is only created if your integrator has set you up to use Biesse Doors and is automatic.

_BD_DOORNOTES

Arch type as defined by Biesse, user needs to add to door note with Arch Type in Square Brackets [2|2|0]... [Door|TopRail|BotRail]. This parameter is only created if your integrator has set you up to use Biesse Doors and is automatic.

_BD_HINGETYPE

Hinge material name. This parameter is only created if your integrator has set you up to use Biesse Doors and is automatic.

_BD_PROFILES

Door profiles OE, IE, RPD. This parameter is only created if your integrator has set you up to use Biesse Doors and is automatic.

_BD_PULLDESC

Pull Type as defined by Biesse Pull, Description should hold an ID in square brackets [1]. This parameter is only created if your integrator has set you up to use Biesse Doors and is automatic.

_BD_PULLPOSX

X Center Position of Pull. This parameter is only created if your integrator has set you up to use Biesse Doors and is automatic.

_BD_PULLPOSY

Y Center Position of Pull. This parameter is only created if your integrator has set you up to use Biesse Doors and is automatic.

_BD_SHAPEIDX

Index-a unique number for each shaped part in a door. This parameter is only created if your integrator has set you up to use Biesse Doors and is automatic.

_BD_TOPHCUP

Distance from top of door to center of top hinge cup. This parameter is only created if your integrator has set you up to use Biesse Doors and is automatic.

_BEADDXADJ

Specifies the Stile/Rail width adjustment for beaded frame

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_BEADDYADJ

Specifies the Stile/Rail length adjustment for beaded frame

Type:	System and/or User Definable
Valid Range:	Unlimited

Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_BEADDZ

Returns the Bead Width for beaded frame

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Face Opening
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_BEADPRF or _BDPRF

Specifies the Face Frame Bead profile.

Type:	System and/or User Definable
Valid Range:	Valid Bead Profile ID #'s Only
Applies To:	Assembly
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_BEADXADJ

Specifies the Stile/Rail X position adjustment for beaded frame

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_BEADYADJ

Specifies the Stile/Rail Y Position adjustment for beaded frame

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_BH

Specifies the height of a base cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_BMA

Specifies a Lights Beam Angle.

Type:	System and/or User Definable
Valid Range:	0~180
Applies To:	Light
Values:	Numeric (Degrees)
Visibility:	Always

_BNDLEVEL

Specifies the level of boundary of sink for automatic cutout

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_BOTHPINS

This is a parameter on the primary work plane that indicates when both the A and B pin should be used (for Lockdowel). This is only for small parts or short edges. When you have a small edge, you only have one primary connection, but you have two support pins. We have fixed this value at 192mm. (Any operation on an edge less then 192mm will use both support pins). We set the value at 192mm since the total span of the operation is 64mm, if you were to put two on one edge you would want a

32mm gap between them and at least a 16mm gap from the start/end of the edges. (64+64+32+16+16=192). However, you might want to have control over this value so you can adjust the equation on this parameter.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Primary Work Plane
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_BRT

Specifies a Lights Beam Brightness.

Type:	System and/or User Definable
Valid Range:	0~100
Applies To:	Light
Values:	0~100 Specifies Intensity 0 being Off ~ 100 being Brightest
Visibility:	Always

_CADSHOW

Specifies whether to show Assembly Level CAD in the Room Level for the Assembly.

Type:	System and/or User Definable
Valid Range:	0~3
Applies To:	Assembly
Values:	0 = Do Not Show 1 = Show Plan CAD 2 = Show Elevation CAD 3 = Show Both Plan and Elevation CAD
Visibility:	Visible with user override

_CAPRF

Specifies the Casing Profile

Type:	System and/or User Definable
Valid Range:	Valid Casing Profile ID #'s Only
Applies To:	Job/Room/Molding
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_CATALOG

Returns the name of the Catalog where the Object derived.

Type:	User Definable
Valid Range:	Query Only
Applies To:	Assemblies
Values:	Catalog Name (Text)
Visibility:	Visible with user override

_CATT

Specifies a Light's constant attenuation factor.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Light
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_CAY

Specifies the tangent angle on a curved wall

Type:	System and/or User Definable
Valid Range:	0~360
Applies To:	Wall
Values:	Numeric (Degrees)
Visibility:	Visible with user override

_CB:nnn

Derives the button/choice selected for a standard in a Construction Method.

Type:	System Defined Query Only
Valid Range:	nnn = Valid Construction Method Standard Number
Applies To:	Job/Room/Assembly
Values:	Returns Button/Choice selected for Standard
Visibility:	Never


_CB:nnn:sss

Derives the button/choice entered for a standard in the Connection Manager.

Type:	System Defined Query Only
Valid Range:	nnn = Valid Construction Method Standard Number sss = Valid Connection Manager Standard Number
Applies To:	Job/Room/Assembly
Values:	Returns Button/Choice selected for Standard
Visibility:	Never


_CBM:nnn:id

Derives the banding Material ID from the Construction Method.

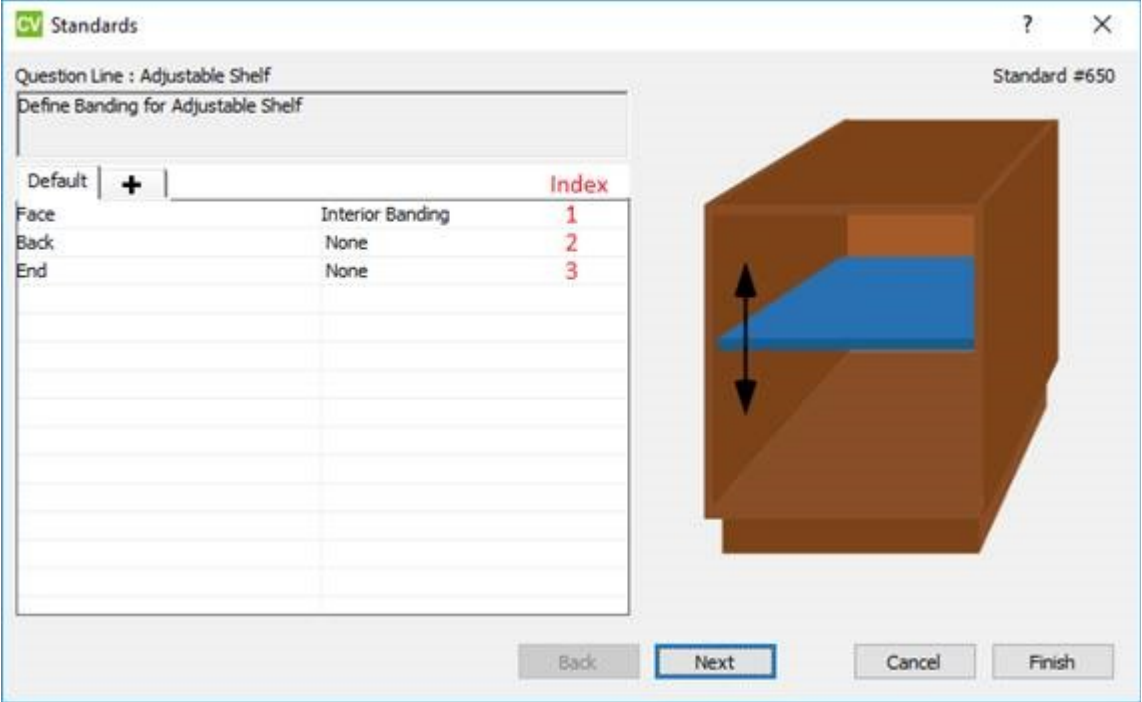Type:	System Defined Query Only
Valid Range:	nnn = Valid Construction Method Standard Number id = Banding Index as displayed on Banding Page: 
Applies To:	Job/Room/Assembly
Values:	Returns Material ID for the indicated Banding Index
Visibility:	Never

_CBN:nnn:id

Derives the banding number from the Construction Method.

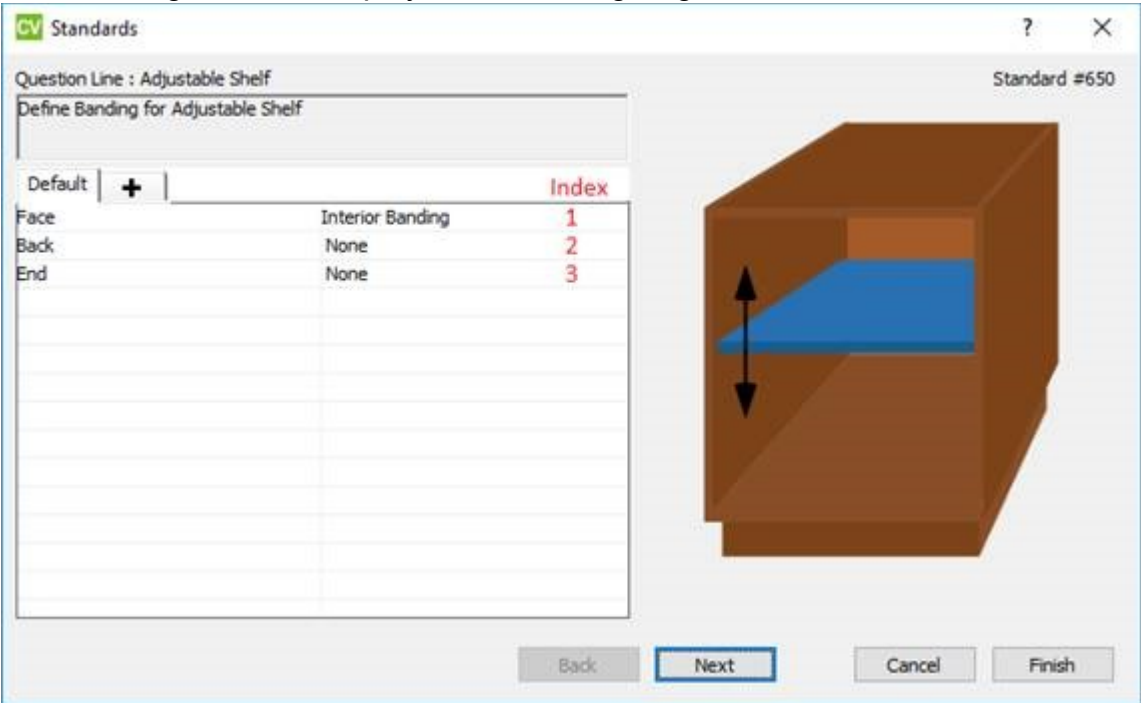Type:	System Defined Query Only
Valid Range:	nnn = Valid Construction Method Standard Number id = Banding Index as displayed on Banding Page: 
Applies To:	Job/Room/Assembly
Values:	Returns Banding ID number for the indicated Banding Index I = 1 (Interior) E = 2 (Exterior) D = 3 (Door) B = 4 C = 5 F = 6 G = 7 H = 8

	J = 9 K = 10 L = 11 M = 12 O = 13 P = 14 Q = 15 S = 16 T = 17 U = 18 V = 19 W = 20 X = 21 Y = 22 Z = 23
Visibility:	Never

_CD

Specifies the depth of a Standard Closet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_CEOH

Specifies the auto molding crown end overhang.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_CH

Specifies the height of a Standard Closet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_CI

Specifies a Lights Color

Type:	System and/or User Definable
Valid Range:	0~4
Applies To:	Light
Values:	0 = White Light 1 = Sky Light 2 = Sun Light 3 = Florescent 4 = Incandescent
Visibility:	Always

_CLPRF

Specifies the Ceiling Molding Profile

Type:	System and/or User Definable
Valid Range:	Valid Ceiling Molding Profile ID #'s Only
Applies To:	Job/Room/Molding
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_CLSTMOLDELE

Specifies the Minimum elevation for auto-molding around closets

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_COA

Specifies a Lights beam cut-off angle.

Type:	System and/or User Definable
Valid Range:	0~360
Applies To:	Light
Values:	Numeric (Degrees)
Visibility:	Visible with user override

_COCNR

Specifies the Cook-Top/Sink cut-out corner type.

Type:	System and/or User Definable
Valid Range:	0~2
Applies To:	Sink/Cooktop
Values:	0 = Straight 1 = Rounded 2 = Chamfer
Visibility:	Visible with user override

_COLOR

Specifies the RGB Color value of the Object.

Type:	User Definable
Valid Range:	4 Byte Numeric (R + (G * 256) + (B * 65536))
Applies To:	Part
Values:	Numeric ()
Visibility:	Visible with user override

_CONFIG

Returns the Job Properties Scheme name.

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Job/Room
Values:	Text
Visibility:	Never

_CONNID

Specifies the Connection ID.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Connection
Values:	Connection ID Number
Visibility:	Visible with user override

_CONNFLIP

Mirrors the Connection vertically.

Type:	User Definable
Valid Range:	0~1
Applies To:	Connection
Values:	0 = No Flip 1 = Flip
Visibility:	Visible with user override

_CONNREV

Mirrors the Connection horizontally.

Type:	User Definable
Valid Range:	0~1
Applies To:	Connection
Values:	0 = No Reverse 1 = Reverse
Visibility:	Visible with user override

_COR

Specifies a Light's beam cut-off rate.

Type:	System and/or User Definable

Valid Range:	Unlimited
Applies To:	Light
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_CORAD

Specifies the measurement for the Cook-Top/Sink cut-out corner radius/chamfer

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Sink/Cooktop
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_COTB

Specifies the measurement for the Cook-Top/Sink cut-out back margin

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Sink/Cooktop
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_COTF

Specifies the measurement for the Cook-Top/Sink cut-out front margin

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Sink/Cooktop
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_COTL

Specifies the measurement for the Cook-Top/Sink cut-out left margin

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Sink/Cooktop
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_COTR

Specifies the measurement for the Cook-Top/Sink cut-out right margin

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Sink/Cooktop
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_CP

Specifies the dimension to Chord reference on a radius wall from the left

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Wall
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_CRH

Specifies Chair Rail Height

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_CRPRF

Specifies the Chair Rail Molding Profile

Type:	System and/or User Definable

Valid Range:	Valid Chair Rail Molding Profile ID #'s Only
Applies To:	Job/Room/Molding
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_CTEOH

Specifies the Counter Top End Overhang

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_CTF

Counter Top Profile and Splash flags

Type:	System and/or User Definable
Applies To:	Counter Top
Values:	0x0001 = Add Profile 0x0002 = Add Splash

_CTFOH

Specifies the Counter Top Face Overhang

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_CTJL

Specifies the Left side Counter Top Joint

Type:	System and/or User Definable
Valid Range:	0~3
Applies To:	Counter Top
Values:	0 = Miter 1 = Butt 2 = Miter/Butt 3 = Extended/Butt
Visibility:	Visible with user override

_CTJR

Specifies the Right side Counter Top Joint

Type:	System and/or User Definable
Valid Range:	0~3
Applies To:	Counter Top
Values:	0 = Miter 1 = Butt 2 = Miter/Butt 3 = Extended/Butt
Visibility:	Visible with user override

_CTMIN

Specifies the Counter Top Auto-Top Minimum Depth

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_CTOW

Specifies the dimension between Chord and wall for radius wall

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Wall
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_CTPRF

Specifies the Counter Top Profile

Type:	System and/or User Definable
Valid Range:	Valid Counter Top Profile ID #'s Only
Applies To:	Job/Room/Counter Top
Values:	Database ID Number
Visibility:	Visible with user override

_CTT

Specifies the thickness (DZ) of a Counter Top (Without xCountertop Multiplier or CV Design Only)

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room/Counter Top
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	This Parameter is unavailable to xCountertop Users, in this case Counter Top Thickness is controlled by the Material Schedule and Construction Method.

_CTTYP

Specifies the Counter Top Type (Without xCountertop Multiplier or CV Design Only)

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room/Counter Top
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_CV:nnn

Derives the value/measurement entered for a standard in the Assembly Wizard

Type:	System Defined Query Only
Valid Range:	nnn = Valid Assembly Wizard Standard Number
Applies To:	Job/Room/Assembly
Values:	Displays Value for Standard
Visibility:	Never

_CV:nnn:sss

Derives the value/measurement entered for a standard in the Connection Manager.

Type:	System Defined Query Only
Valid Range:	nnn = Valid Construction Method Standard Number sss = Valid Connection Manager Standard Number
Applies To:	Job/Room/Assembly
Values:	Displays Value for Standard
Visibility:	Never

_CV:nnn:type

Derives the Connection Type for a standard in the Construction Method.

Type:	System Defined Query Only
Valid Range:	nnn = Valid Construction Method Standard Number
Applies To:	Job/Room/Assembly
Values:	Returns the Connection Type: 1 = Connection Set 2 = Dado 3 = Construction Boring 4 = Intelli-Joint 5 = Connector 6 = Dovetail 7 = Linebore 8 = Mortise & Tenon
Visibility:	Never

_CWARC

Specifies Clockwise arc

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Operation
Values:	0 = CCW 1 = CW

Visibility:	Visible with user override
-------------	----------------------------

_CZ

Specifies the curve offset on a curved Wall

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_DAX

Specifies the beam X direction

Type:	System and/or User Definable
Valid Range:	0~360
Applies To:	Light
Values:	Numeric (Degrees)
Visibility:	Visible with user override

_DAY

Specifies the beam Y direction

Type:	System and/or User Definable
Valid Range:	0~360
Applies To:	Light
Values:	Numeric (Degrees)
Visibility:	Visible with user override

_DAZ

Specifies the beam Z direction

Type:	System and/or User Definable
Valid Range:	0~360
Applies To:	Light
Values:	Numeric (Degrees)
Visibility:	Visible with user override

_DELBEAD

Specifies to deleted a Bead on a specific Opening

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Opening
Values:	0 = False 1 = True
Visibility:	Visible with user override

_DL

Returns the thickness of a wall attached to the left end of the current wall. This dimension determines the connection angle length on the X/Z (Horizontal/Vertical) plane in Plan View.

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Wall
Values:	Numeric (Measurement) 0 = No wall attached to left end. Adding the _DR & _DL values to a wall face length, would equal the length of the wall back.
Visibility:	Always

_ DOOR_NAME

Returns the Door Name.

Type:	System Defined Query Only
Valid Range:	Text
Applies To:	Door Part
Values:	Returns name of Door.
Visibility:	Visible with user override

_DOOR_TAG

Returns the [Search Tags](#) associated with the Door.

--	--

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Door Part
Values:	Returns name of Search Tags on Door.
Visibility:	Visible with user override

_DORTYPE

Specifies the Door Type.

Type:	System and/or User Definable
Valid Range:	0~2
Applies To:	Opening
Values:	0 = Automatic 1 = Base (Lower) 2 = Upper
Visibility:	Visible with user override

_DOVTF

Specifies the first Dovetail Position.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Dovetail Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_DOVTL

Specifies the last Dovetail Position.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Dovetail Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_DOVTLKSPC

Specifies if the Dovetail spacing is locked.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Dovetail Operation
Values:	0 = Not Locked 1 = Locked
Visibility:	Visible with user override

_DOVTREV


Specifies if the Dovetail is reversed.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Dovetail Operation
Values:	0 = Not Reversed 1 = Reversed
Visibility:	Visible with user override

DPTH

Used to modify the position of Connectors.

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Material
Values:	Numeric (Measurement)
Visibility:	Never

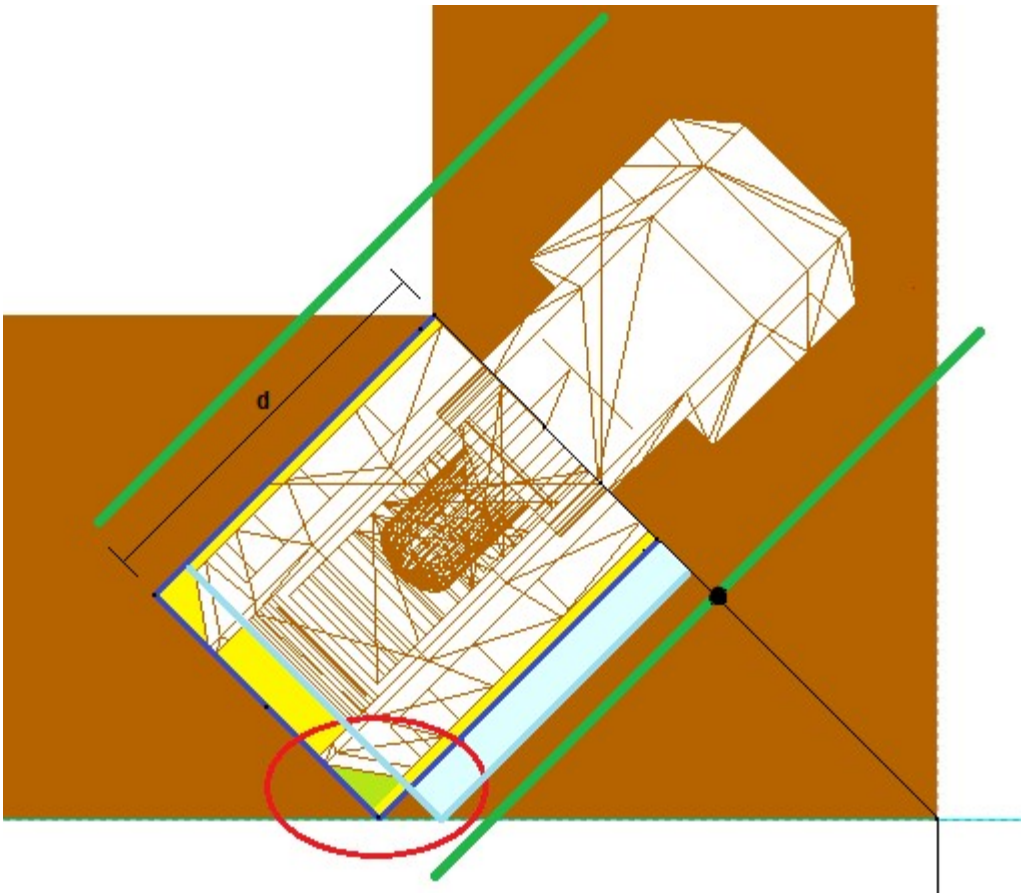

The hardware is centralized in a bounding box (blue) as defined by the depth “d” of the hardware. The “centralize” calculations do not currently take the shape of the hardware model into account. In this particular example it is possible that the hardware could be moved slightly more to the SE because of the clipped area (green) but as CABINET VISION does not know what the model shape and dimensions are in the general sense, it is not accounted for.

Typically the hardware origin is specified on one of the part edges. The actual model components are offset with their own equations. This means that CABINET VISION in effect needs to situate the hardware as if it were on a rotated piece of material (green). CABINET VISION actually calculates the position of the black dot to get the hardware to position itself correctly.

The `_DPTH` Parameter can be added to the Material to modify the depth “d”. This can be used to adjust the size of the bounding box (light blue line above). Making the value smaller would make the box wider, while making the value bigger would make the box narrower. The hardware would always be centralized within in the box, effectively moving it SE in the above example.

`_DR`

Returns the thickness of a wall attached to the right end of the current wall. This dimension determines the connection angle length on the X/Z (Horizontal/Vertical) plane in Plan View.

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Wall
Values:	Numeric (Measurement) 0 = No wall attached to right end. Adding the <code>_DR</code> & <code>_DL</code> values to a wall face length, would equal the length of the wall back.
Visibility:	Always

`_DRILLMASK`

Specifies the Drill Pattern for Repeat Boring Cycles.

Type:	User Defined
Valid Range:	Text
Applies To:	Boring Operations with Repeats
Values:	Text with each value representing a spindle (1=drill, 0=skip)
Visibility:	Always
Sample:	<code>_DRILLMASK = '11011011011'</code>

`_DRILLMASKB`

Specifies the Back Drill Pattern for Split Repeat Boring Cycles. Used by System when a Partition abutts a Front and Rear Top Stretcher rather than a full Top.

Type:	User Defined
Valid Range:	Text
Applies To:	Boring Operations with Repeats
Values:	Text with each value representing a spindle (1=drill, 0=skip)
Visibility:	Always
Sample:	<code>_DRILLMASKB = '11011011011'</code>

`_DRILLMASKF`

Specifies the Front Drill Pattern for Split Repeat Boring Cycles. Used by System when a Partition abutts a Front and Rear Top Stretcher rather than a full Top.

Type:	User Defined
-------	--------------

Valid Range:	Text
Applies To:	Boring Operations with Repeats
Values:	Text with each value representing a spindle (1=drill, 0=skip)
Visibility:	Always
Sample:	_DRILLMASKF = '11011011011'

_DROEPROF

Establishes which Door/Drawer Front edges receive an Outside Edge Profile. All four edges is assumed if the parameter is not present.

Type:	System and/or User Definable
Valid Range:	Bit
Applies To:	DOR_OPEN or DWR_OPEN
Values:	1 = Right Edge (Outside Edge) 2 = Left Edge (Outside Edge) 4 = Bottom Edge (Outside Edge) 8 = Top Edge (Outside Edge) 16 = Right Edge (Finger Pull) 32 = Left Edge (Finger Pull) 64 = Bottom Edge (Finger Pull) 128 = Top Edge (Finger Pull)
Visibility:	Visible with user override
Remarks:	Add the values above together and use the result for specific edge assignments.

_EDGnAX

Returns the X rotation of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnAXR

Returns the reversed X rotation of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnAY

Returns the Y rotation of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnAYR

Returns the reversed Y rotation of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnAZ

Returns the Z rotation of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Never

Remarks:	n = The Edge (work plane) number.
----------	-----------------------------------

_EDGnAZR

Returns the reversed Z rotation of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnBAND

Returns the edgeband character for the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Text
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnBANDID

Returns the edgeband ID for the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Integer)
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnDY

Returns the length of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnEXT

Extends the specified Parts Edge for Edge n by the specified value. Similar to EDX/EDY with two very important differences:
1) Grows the Part but only on the specified edge 2) **Does** translate to CNC Machines.

Type:	User Defined
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	n = The Edge (work plane) number.

_EDGnMITER

Returns the Miter angle of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnNMG

Extends the specified Parts Edge where a VBit Miter exists for Edge n by the specified value. Similar to EDX/EDY with two very important differences: 1) Grows the Part but only on the specified edge 2) **Does** translate to CNC Machines.

Type:	System or User Defined
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

Remarks:	n = The Edge (work plane) number.
----------	-----------------------------------

_EDGnNPC

Specifies a nested Part Clearance for the part edge (work plane) for edge n

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	n = The Edge (work plane) number.

_EDGnOFF

Defines the connection offset on edge n of a part (offset value that resizes the part due to the connection on that edge)

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Always, if active
Remarks:	n = The Edge (work plane) number.

_EDGnRADIUS

Returns the Radius of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement) 0 = a Straight Edge Non-0 = the Radius of the Edge
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnX

Returns the X origin of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnXR

Returns the reversed X origin of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnY

Returns the Y origin of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnYR

Returns the reversed Y origin of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Never

Remarks:	n = The Edge (work plane) number.
----------	-----------------------------------

_EDGnZ

Returns the Z origin of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGnZR

Returns the reversed Z origin of the part edge (work plane) for edge n

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Never
Remarks:	n = The Edge (work plane) number.

_EDGBEXT

Extends the Parts Bottom Edge by the specified value. Similar to EDX/EDY with two very important differences: 1) Grows the Part but only on the bottom edge 2) **Does** translate to CNC Machines.

Type:	User Defined
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_EDGDIR

This parameter will be set to either 1/-1 depending if the edge direction an Operations is on is going towards the assemblies point of origin. This is required for Lockdowel because on one edge of the part CV needs Hide Pin A and on the opposite end CV needs to Hide Pin B. See _BOTHPINS, _LDEDGE GAP, and _LDPINGAP for information on other Lockdowel specific Parameters. Obviously these could be used for other purposes as well.

Type:	System or User Defined
Valid Range:	1 or -1
Applies To:	Operation
Values:	1 or -1
Visibility:	Visible with user override

_EDGDY

Returns the parent edge length of an object using the _FACEWP or _EDGEWP parameter. Either the _FACEWP or _EDGWP parameter must be on the object for the _EDGDY to work. For example if a dado is on the top edge of a part, it should either have _FACEWP=5 or _EDGWP=3 parameter. You could then set the dado DY as an equation DY = _EDGDY and the dado will assume the length of its parent part’s edge “3”.

Type:	User Defined
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_EDGLEXT

Extends the Parts Left Edge by the specified value. Similar to EDX/EDY with two very important differences: 1) Grows the Part but only on the left edge 2) **Does** translate to CNC Machines.

Type:	User Defined
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_EDGREXT

Extends the Parts Right Edge by the specified value. Similar to EDX/EDY with two very important differences: 1) Grows the Part but only on the right edge 2) **Does** translate to CNC Machines.

Type:	User Defined
Valid Range:	Unlimited

Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_EDGTEXT

*Extends the Parts Top Edge by the specified value. Similar to EDX/EDY with two very important differences: 1) Grows the Part but only on the top edge 2) **Does** translate to CNC Machines.*

Type:	User Defined
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_EDGWP

Specifies the edge (work plane) to place an object (typically and Operation/Intelli-Joint) on

Type:	System and/or User Definable
Valid Range:	1~Total Number of the Parts Edges
Applies To:	Part
Values:	Numeric (Integer)
Visibility:	Never

_EID

Specifies the Left/Right Stile and Top/Bottom Rail Frame Part ID

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Integer)
Visibility:	Visible with user override
Remarks:	Used by the System

_ELBLX

Sets the Cabinet Label location Left/Right in Elevation View

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_ELBLY

Sets the Cabinet Label location Up/Down in Elevation View

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_ELEADJ

Applies an Elevation Adjustment to an Object whose Placement is Counter Top. Particularly useful for 3D Sinks where a placement at Top of Counter Top would place the Bowl at the Top of The Counter Top. Use this value to adjust it down during placement.

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Assembly (Placement Set to Counter Top)
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_EXTDADO

Specifies how to extend the Dado.

Type:	System and/or User Definable
Valid Range:	0~2
Applies To:	Dado or Blind Dado Operation
Values:	0 = S2M Default 1 = No Extension 2 = Extend (By Tool Diameter)
Visibility:	Visible with user override

_EXTEDX

An Edge override size adjustment extending the Parts DX Edge by the specified value. Similar to EDX/EDY this parameter does not apply to CNC router output only to cut lists/NC saws.

Type:	System and/or User Defined
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_EXTEDY

An Edge override size adjustment extending the Parts DY Edge by the specified value. Similar to EDX/EDY this parameter does not apply to CNC router output only to cut lists/NC saws.

Type:	System and/or User Defined
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_EXTF

Specifies the Exterior Finish

Type:	System and/or User Definable
Valid Range:	Valid Finish ID #'s Only
Applies To:	Job/Room/Assembly
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_EXTT

Specifies the Exterior Texture

Type:	System and/or User Definable
Valid Range:	Valid Texture ID #'s Only
Applies To:	Job/Room/Assembly
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_FACEWP

Specifies the Face Work Plane to place the Object (Typically an Operation or Intelli-Joint) on

Type:	System and/or User Definable
Valid Range:	1~6
Applies To:	Part
Values:	1 = Face 2 = Back 3 = Bottom 4 = Right 5 = Top 6 = Left
Visibility:	Visible with user override

_FINB

Specifies the Back finish override ID.

Type:	System and/or User Definable
Valid Range:	Valid Finish ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_FINEDG

Specifies the Edge finish override ID.

Type:	System and/or User Definable
Valid Range:	Valid Finish ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_FINEND

Specifies the End finish override ID.

--	--

Type:	System and/or User Definable
Valid Range:	Valid Finish ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_FIN

Specifies the finish override ID for all faces.

Type:	System and/or User Definable
Valid Range:	Valid Finish ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_FINF

Specifies the Face finish override ID.

Type:	System and/or User Definable
Valid Range:	Valid Finish ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_FINTYP

Specifies the finish type override ID for all faces.

Type:	System and/or User Definable
Valid Range:	Valid Finish Type ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_FINTYPB

Specifies the Back finish type override ID.

Type:	System and/or User Definable
Valid Range:	Valid Finish Type ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_FINTYPEDG

Specifies the Edge finish type override ID.

Type:	System and/or User Definable
Valid Range:	Valid Finish Type ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_FINTYPEND

Specifies the End finish type override ID.

Type:	System and/or User Definable
Valid Range:	Valid Finish Type ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_FINTYPF

Specifies the Face finish type override ID.

Type:	System and/or User Definable
Valid Range:	Valid Finish Type ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_FLAG

Indicates the primary Splash Part (Multi-Part Splashes) (Flag)

Type:	System and/or User Definable
Applies To:	Splash
Values:	0x0001 = Primary Splash Part

_FLAPPLY

Specifies which Stile (Left or Right) to Apply Flutes to

Type:	System and/or User Definable
Valid Range:	0~3
Applies To:	Assembly
Values:	0 = None 1 = Left Stile 2 = Right Stile 3 = Both
Visibility:	Visible with user override

_FLDX

Specifies the Flute Width

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_FLDZ

Specifies the Flute Depth

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_FLMARBA

Specifies the Flute "A" Distance From Bottom

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_FLMARBB

Specifies the Flute "B" Distance From Bottom

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_FLMARTA

Specifies the Flute "A" Distance From Top

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_FLMARTB

Specifies the Flute "B" Distance From Top

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_FLNO

Specifies the Number Of Flutes

--

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Integer)
Visibility:	Visible with user override

_FLSPACE

Specifies the Space Between Flutes

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_FLSTYLE

Specifies the Flute Pattern Style

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Rectangular 1 = Diamond
Visibility:	Visible with user override

_FLTMAR

Specifies the Flute Minimum Side Margin

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_FLTOOL

Specifies the Tool For Flutes

Type:	System and/or User Definable
Valid Range:	Valid Tool ID #'s Only
Applies To:	Assembly
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_FRAMEMATID

Returns the Door/Drawer Front Stiles and Rails Material ID Number

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Door or Drawer Front
Values:	Database ID Number
Visibility:	Never

_FUDI

Specifies Face Up Down Influence for CNC Operations.

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Operations
Values:	Numeric (Integer)
Visibility:	Visible with user override
Remarks:	When placed on an Operation adds weight to that operation. An example would be applying a _FUDI = 10 to a dado would make the S2M Center see the Dado as 11 Dadoes influencing which side is Up in the Nest.

_GMASMDOR

Indicates the Grain Match type on Cabinet Doors.

Type:	System Defined
Valid Range:	0~2
Applies To:	Job/Room
Values:	0 = None 1 = By Assembly

	2 = Auto Group
Visibility:	Visible with user override

_GMASMENDP

Indicates the Grain Match type on End Panels.

Type:	System Defined
Valid Range:	0~1
Applies To:	Job/Room
Values:	0 = No 1 = Yes
Visibility:	Visible with user override

_GMCLSTDOR

Indicates the Grain Match type on Closet Doors.

Type:	System Defined
Valid Range:	0~2
Applies To:	Job/Room
Values:	0 = None 1 = By Assembly 2 = Auto Group
Visibility:	Visible with user override

_GMCLSTENDP

Indicates the Grain Match type on Closet End Panels.

Type:	System Defined
Valid Range:	0~1
Applies To:	Job/Room
Values:	0 = No 1 = Yes
Visibility:	Visible with user override

_GMGROUP

Indicates the Grain Match Group this part will be blocked into.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Integer)
Visibility:	Visible with user override

_GMORIGX

The Grain Match Group X origin.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_GMORIGY

The Grain Match Group Y origin.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_GMXPOS

The X Position of this part in the Grain Matched Group.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_GMYPOS

The Y Position of this part in the Grain Matched Group.

--	--

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_HDN

Specifies whether the Partition is hidden or not.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Part
Values:	0 = Not Hidden 1 = Hidden
Visibility:	Visible with user override

_HIDE

Specifies the Parts visibility in Plan, Elevation, and/or 3D.

Type:	System and/or User Definable
Valid Range:	1 - Hide in Plan 2- Hide in Elevation 4 - Hide in Perspective (3D)
Applies To:	Assembly and Part
Values:	Numeric (Integer)
Visibility:	Visible with user override
Notes:	To hide an object in Plan and Perspective (3D) = 1 + 4 = 5

_HNGCHR

Specifies which letter index location within the Assembly name is the hinge character

Type:	System and/or User Definable
Valid Range:	1~26
Applies To:	Assembly
Values:	Numeric (Integer)
Visibility:	Visible with user override

_INTF

Specifies the Interior Finish

Type:	System and/or User Definable
Valid Range:	Valid Finish ID #'s Only
Applies To:	Job/Room/Assembly
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_INTT

Specifies the Interior Texture

Type:	System and/or User Definable
Valid Range:	Valid Texture ID #'s Only
Applies To:	Job/Room/Assembly
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_LABEL

Specifies the Door/Drawer Fronts position within the Assembly.

Type:	System
Valid Range:	Query Only
Applies To:	DOR and DWR
Values:	Numeric (Measurement)
Visibility:	Always

_LADJCOMPDEPTH

Returns a value describing the depth of the assembly to the left

Type:	System
Valid Range:	Query Only
Applies To:	Assembly
Values:	0 = Error

	1 = Equal Depth 2 = Left Cabinet is Deeper 3 = Left Cabinet is Shallower 4 = Ignore/Not applicable
Visibility:	Visible with user override

_LADJCOMPHEIGHT

Returns a value describing the height of the assembly to the left

Type:	System
Valid Range:	Query Only
Applies To:	Assembly
Values:	0 = Error 1 = Equal Height 2 = Left Cabinet is Taller 3 = Left Cabinet is Shorter 4 = Ignore/Not applicable
Visibility:	Visible with user override

_LATT

Specifies a Light's attenuation factor

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Light
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_LBORE

Line Boring activation for a Closet vertical panel (Par(Partition)).

Type:	System and/or User Definable
Valid Range:	0~4
Applies To:	Part
Values:	0 = Automatic 1 = Left 2 = Right 3 = Both 4 = None
Visibility:	Visible with user override

_LDEDEGAP

Lockdowel Edge Gap - Distance from edge of part to center of operations (default = 10.5mm)

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_LDPINGAP

Lockdowel Pin Gap - Distance between primary operation and support pin (default = 32mm)

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_LEADEDGE

Specifies the location of the Lead-In/Lead-Out for the Part

Type:	User Defined
Valid Range:	Part's Valid Edge Numbers
Applies To:	Part
Values:	Numeric (Integer)
Visibility:	Visible with user override

_LKDX

Specifies that the assembly's DX is locked.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)

Visibility:	Visible with user override
-------------	----------------------------

_LKDY

Specifies that the assembly's DY is locked.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_LKDZ

Specifies that the assembly's DZ is locked.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_LRI

Specifies the light rail molding auto-build insert value

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_LRPRF

Specifies the Light Rail Profile

Type:	System and/or User Definable
Valid Range:	Valid Light Rail Profile ID #'s Only
Applies To:	Job/Room/Molding
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_M:_CBJCOST

Specifies a Counter Top butt joint cost.

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Counter Top
Values:	Numeric (Decimal)
Visibility:	Never

_M:_CCOCOST

Specifies a Counter Top cut-out cost.

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Counter Top
Values:	Numeric (Decimal)
Visibility:	Never

_M:_CECCOST

Specifies a Counter Top end cap cost.

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Counter Top
Values:	Numeric (Decimal)
Visibility:	Never

_M:_CESCOST

Specifies the Counter Top Splash cost.

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Counter Top
Values:	Numeric (Decimal)
Visibility:	Never

_M:_CMJCOST

Specifies a Counter Top Miter Joint cost.

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Counter Top
Values:	Numeric (Decimal)
Visibility:	Never

_M:_MJCOST

Specifies the Moulding Joint Cost

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Molding
Values:	Numeric (Decimal)
Visibility:	Never

_M:DBE

Specifies the distance between edge of Door and center of the Hinge Cup

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Hinge
Values:	Numeric (Measurement)
Visibility:	Never

_M:DEPTH

Returns the Length of the Drawer Guide and/or Depth of the Wire Basket

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Drawer Guide/Wire Basket
Values:	Numeric (Measurement)
Visibility:	Never

_M:DZ

Returns the thickness or depth of a Parts Material

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Never

_M:EXT

Returns the Drawer Guide and/or Wire Basket Extension dimension

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Drawer Guide/Wire Basket
Values:	Numeric (Measurement)
Visibility:	Never

_M:GT

Returns the Drawer Guide/Wire Basket Type

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Drawer Guide/Wire Basket
Values:	Material ID Number
Visibility:	Never

_M:HEIGHT

Returns the Drawer Guides Visible with user override Heights

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Drawer Guides
Values:	Numeric (Measurement)
Visibility:	Never

_M:HT

Specifies the Hinge Type.

Type:	System Defined Query Only
Valid Range:	0~2
Applies To:	Hinge
Values:	0 =N/A 1 = Concealed 2 = Exposed 3 = Double Door
Visibility:	Never

_M:IH

Returns the Pull's inset Height

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Pull
Values:	Numeric (Measurement)
Visibility:	Never

_M:INSET

Specifies the Inset dimension of a Hinge

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Hinge
Values:	Numeric (Measurement)
Visibility:	Never

_M:IW

Returns the Pull's inset Width

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Pull
Values:	Numeric (Measurement)
Visibility:	Never

_M:MAB

Returns the Drawer Guides minimum above box dimension

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Drawer Guide
Values:	Numeric (Measurement)
Visibility:	Never

_M:MATID

Returns the Parts Material ID Number

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Never

_M:MBB

Returns the Drawer Guides minimum below box dimension

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Drawer Guide
Values:	Numeric (Measurement)
Visibility:	Never

_M:MDETH

Returns the Hinges minimum distance to door end

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Hinge
Values:	Numeric (Measurement)

Visibility:	Never
-------------	-------

_M:MHS

Returns the Hinges maximum spacing

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Hinge
Values:	Numeric (Measurement)
Visibility:	Never

_M:OA

Returns the Hinge's opening angle

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Hinge
Values:	Numeric (Measurement)
Visibility:	Never

_M:PHDIAM

Returns the Hinge's plate hole diameter

- Type:** System Defined Query Only
- Valid Range:** Query Only
- Applies To:** Hinge Plate
- Values:** Numeric (Measurement)
- Visibility:** Never

_M:PHDP

Returns the Hinge's plate hole depth

- Type:** System Defined Query Only
- Valid Range:** Query Only
- Applies To:** Hinge Plate
- Values:** Numeric (Measurement)
- Visibility:** Never

_M:PHOFF

Returns the Hinge's plate hole offset

- Type:** System Defined Query Only
- Valid Range:** Query Only
- Applies To:** Hinge Plate
- Values:** Numeric (Measurement)
- Visibility:** Never

_M:PHSP

Returns the Hinge's plate hole spacing

- Type:** System Defined Query Only
- Valid Range:** Query Only
- Applies To:** Hinge Plate
- Values:** Numeric (Measurement)
- Visibility:** Never

_M:PT

Returns the Pull's Type

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Pull
Values:	Numeric (Measurement)
Visibility:	Never

_M:SC

Returns the Drawer Guide/ Wire Basket's side clearance

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Drawer Guide/Wire Basket
Values:	Numeric (Measurement)

Visibility:	Never
-------------	-------

_M:SCHEDID

Returns the Material Schedule ID for the Part

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Integer)
Visibility:	Never

_M:SOLAY

Returns the Hinge's side overlay

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Hinge
Values:	Numeric (Measurement)
Visibility:	Never

_M:TBOLAY

Returns the Hinge's Top/Bottom Overlay

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Hinge
Values:	Numeric (Measurement)
Visibility:	Never

_M:TRIM

Returns the Edge Banding's Edge Trim Measurement

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Edge Banding
Values:	Numeric (Measurement)
Visibility:	Never

_M:WIDTH

Returns the Wire Basket's width

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Wire Basket
Values:	Numeric (Measurement)
Visibility:	Never

_M:xxx

Queries Parameters assigned to Materials. Where xxx equals the Parameter name.

Type:	System and/or User Definable
Valid Range:	Query Only
Applies To:	Assemblies/Parts
Values:	Varies
Visibility:	Visible with user override

_MATCH

Specifies a Local vs. Global Primary Operation

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Primary Operations
Values:	0 = Local 1 = Global
Visibility:	Visible with user override

_MATCHY

Returns the match point Y position for the front part. Typically a Secondary Operation is only created if the center of the Primary Operation touches the Secondary Part. In certain instances this is not possible such as a Partition touching a **Front Top Stretcher**. This Parameter is used to specify the position in that scenario and similar.

Type:	System and/or User Definable
Valid Range:	Unlimited

Applies To:	Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_MATCHYB

Returns the match point Y position for the back part. Typically a Secondary Operation is only created if the center of the Primary Operation touches the Secondary Part. In certain instances this is not possible such as a Partition touching a **Rear Top Stretcher**. This Parameter is used to specify the position in that scenario and similar.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_MAXTRAD

Specifies the Maximum Tool Radius for a Dado/Route Operation.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Dado or Route Operations
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_MCATF

Specifies the Moldings Finish ID.

Type:	System and/or User Definable
Valid Range:	Valid Finish ID #'s Only
Applies To:	Molding
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_MDFROUTE

Specifies Door Route type for MDF DoorMaker Doors.

Type:	System and/or User Definable
Valid Range:	1~2
Applies To:	Operation
Values:	1 = Path 2 = Cut For Glass
Visibility:	Visible with user override

_MIRROR

Specifies the Hardware is the mirrored version (right) of a left defined pair. **_MIRROR** is automatic for Drawer Guides (the Right hand Guide gets mirrored). Other Hardware Materials will require a UCS if they need to be mirrored.

Type:	System and/or User Definable
Valid Range:	1~3
Applies To:	Hardware
Values:	1 – Mirror along the x axis (across the ZY plane) 2 – Mirror along the y axis (across the XZ plane) 3 – Mirror along the z axis (across the XY plane)
Visibility:	Visible with user override
Example:	In addition to Mirroring a Hardware Material it might be necessary to rotate the Material as well. See sample UCS below. Make sure to set the UCS to Apply Prior to Build (). When using the _MIRROR parameter it will also be necessary to set the Material ID (MatID). For Each HNG Part If Y > 500mm Then _MIRROR = 2 MatID = 1254 AZ = 90 End If

_MOLDF

Indicates a Moldings Face Orientation

Type:	System and/or User Definable
Applies To:	Molding

Values:	0x0001 = Mirror 0x0002 = Rotate
---------	------------------------------------

_MPRF

Specifies the Crown Molding profile

Type:	System and/or User Definable
Valid Range:	Valid Crown Molding Profile ID #'s Only
Applies To:	Job/Room/Molding
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_MS:xxx

Queries Parameters assigned to Material Schedules. Where xxx equals the Parameter name.

Type:	System and/or User Definable
Valid Range:	Query Only
Applies To:	Assemblies/Parts
Values:	Varies
Visibility:	Visible with user override

_MSTYL

Specifies the Molding Style (Type)

Type:	System and/or User Definable
Valid Range:	1~10
Applies To:	Molding
Values:	1 = Crown 2 = Top Edging 3 = Light Rail 4 = Scribe 5 = Base Board 6 = Chair Rail 7 = Casing 8 = Applied 9 = Ceiling 10 = Bead
Visibility:	Visible with user override

_MTEX

Specifies Molding Texture to use in Rendering

Type:	System and/or User Definable
Valid Range:	Valid Texture ID #'s Only
Applies To:	Job/Room/Molding
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_NESTOP

Specifies that the Operation should only be performed on a nest. The Operation would be ignored on individual Part Output.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Operations
Values:	0 = Not Set 1 = Nest Only
Visibility:	Visible with user override

_NESTSIZE

Specifies the Part Sizing Rule for Leads that the Part will follow in the S2M Center.

Type:	User Definable
Valid Range:	0~3
Applies To:	Parts
Values:	0 = Automatic 1 = Normal 2 = Small 3 = Very Small
Visibility:	Visible with user override

_NOCNC

Specifies whether the Library Part will be Output to CNC or not

--	--

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Parts/Operations
Values:	0 = Send to CNC 1 = Do Not Send to CNC
Visibility:	Visible with user override

_NOGEN

Disables rebuilding of Counter Top Objects


Type:	System and/or User Definable
Valid Range:	1 ~ 2
Applies To:	Counter Top
Values:	1 = No Rebuild 2 = No Rebuild & Preserve Operations
Visibility:	Visible with user override

_NORM


Specifies the projection search limit on an Operation. By default CABINET VISION will not evaluate (place) an operation unless physical Part contact occurs. This Parameter establishes a Dimensional limit to search if contact does not occur. See below for more information.

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Measurement)
Example:	;Modifies Guide and Hinge Boring For Each _DGVBORE1 _DGVBORE2 _DGVBORE3 _HPVBORE Linebore _NORM = .5 ;This sets a search projection of 1/2" ;So if the Drawer Guide or Hinge Operation ;Does not touch the Part needing the boring ;CV will search 1/2" before giving up


In computer graphics a “NORMAL” is a vector that is perpendicular to a surface. It is a directional ray with infinite length. To control which objects are found when we use a NORMAL vector to intersect with surfaces we have the ”_NORM” parameter which basically specifies a length for the vector. Any intersection point beyond the length specified by _NORM is ignored.

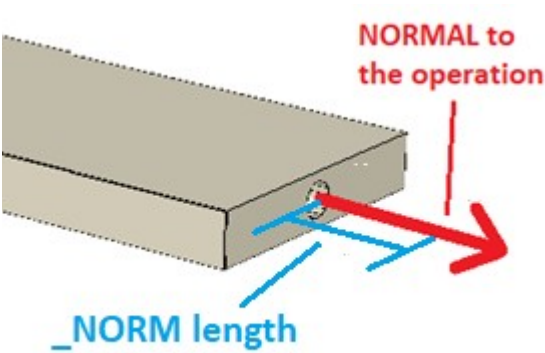


When a primary operation determines if it needs to create a secondary operation, it typically takes the mid-point of the operation and determines if that point is coincident with a neighboring face using an “is point on plane” test.

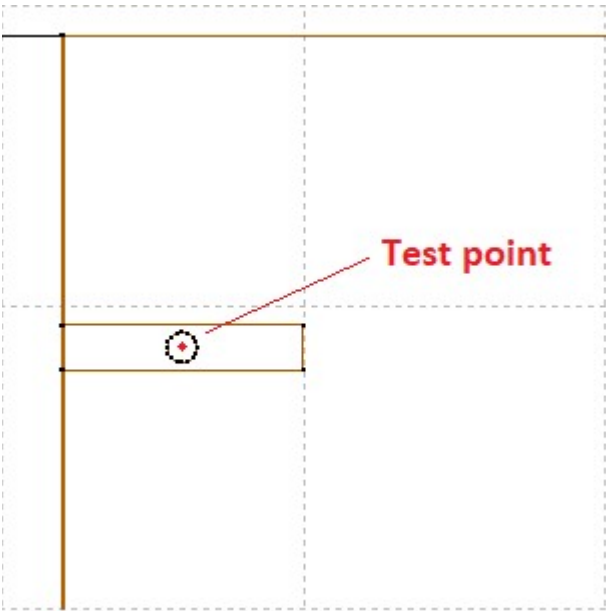

The operation test point is coincident with right end back face.

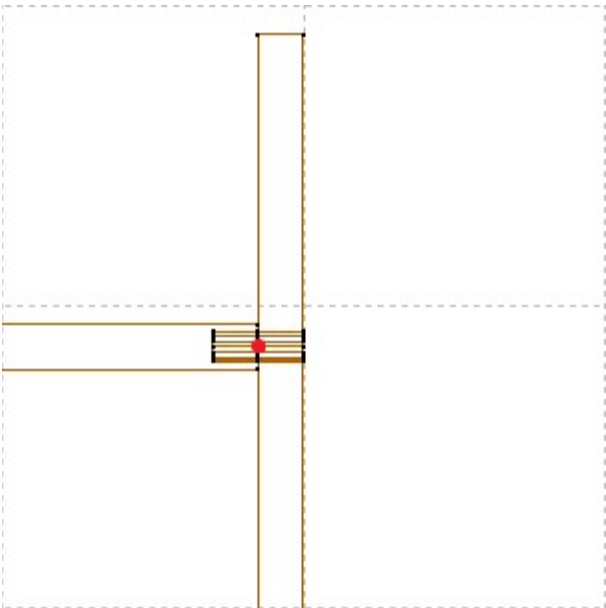

In some cases, the parts do not touch so the match becomes a little more complicated. In this case CV projects a normal to the operation and intersect the ray with a neighboring face using a “ray to plane intersection”. Any intersection beyond the _NORM value is ignored. Currently, the system accepts the first face found, keeping this value low is recommended in order to keep unintended faces from being found that are potentially farther away.

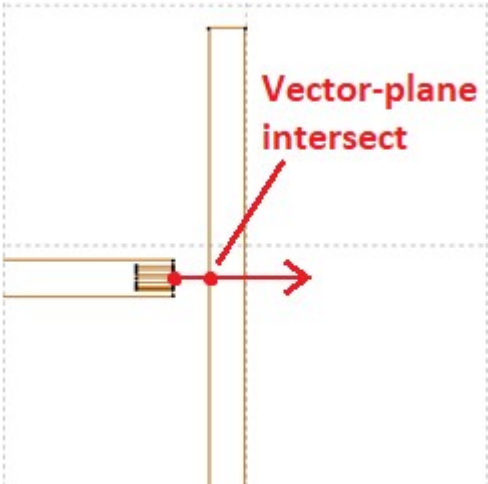

_NOSPLASH

Disables rebuilding of Splash Objects

Type:	System and/or User Definable
Valid Range:	1 ~ 2
Applies To:	Splash
Values:	1 = No Rebuild 2 = No Rebuild & Preserve Operations
Visibility:	Visible with user override

_NOTCO

Disables Counter Top Cut Outs

Type:	User Definable
Valid Range:	0~1
Applies To:	Cook Top/Sink
Values:	0 = Follow System 1 = Disable Cut Out
Visibility:	Visible with user override

_ORDER

Specifies the Face priorities for a shaped assembly

Type:	System and/or User Definable
Valid Range:	1~Number of Faces on Assembly
Applies To:	Assembly
Values:	Numeric (Integer)
Visibility:	Visible with user override

_PANELMATID

Returns the Door/Drawer Front Panel Material ID Number

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Door or Drawer Front
Values:	Database ID Number
Visibility:	Never

_PARTWP

Specifies the Part face where the work plane is added.

Type:	System and/or User Definable
Valid Range:	1~6
Applies To:	Part
Values:	The Part face where the work plane is added: 1 = Front 2 = Back 3 = Bottom 4 = Right 5 = Top 6 = Left
Visibility:	Never

_PD

Specifies the depth of a Vertical Closet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_PGAP

Specifies the Pair Gap

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room/Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_PH

Specifies the height of a Vertical Closet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_PLBLX

Sets the Cabinet Label location Left/Right in Plan View

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_PLBLZ

Sets the Cabinet Label location Forward/Back in Plan View

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_POCKET

Specifies whether or not the Route Operation is pocket cut

Type:	System and/or User Definable
Valid Range:	0~2
Applies To:	Route Operation
Values:	0 = Automatic (Controlled By S2M Center Preferences) 1 = Pocket 2 = Outline Only
Visibility:	Visible with user override

_POCWDTH

Sets the Pocket Width (Tool Allowance).

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_PRICETOTAL

Accumulates Price from Child Objects

Type:	User Definable
Valid Range:	Auto-Populated
Applies To:	Assembly
Values:	Numeric (Decimal)
Example:	;Accumulate Subassembly Prices For Each CAB Assembly Price := _Pricetotal

_PRODBLD

Returns the Build of CABINET VISION.

Type:	System
Valid Range:	Query Only
Applies To:	N/A
Values:	Integer
Visibility:	Visible with user override

_PRODVER

Returns the Version of CABINET VISION.

Type:	System
Valid Range:	Query Only
Applies To:	N/A
Values:	Floating Point Number
Visibility:	Visible with user override

_PSCL

Sets the Left Scribe for a Partition whose relative position is left.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part (Partition)
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_PSCR

Sets the Right Scribe for a Partition whose relative position is right.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part (Partition)
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_PTBOX

Defines a Double Partition as a Boxed Partition

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Part (Partition)
Values:	0 = Not Boxed 1 = Boxed
Visibility:	Visible with user override

_QATT

Specifies a Light's quadratic attenuation factor

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Light
Values:	Numeric (Measurement)

Visibility:	Visible with user override
-------------	----------------------------

_RAD

Specifies the radius of a curved wall

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Wall
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_RADJCOMPDEPTH

Returns a value describing the depth of the assembly to the right

Type:	System
Valid Range:	Query Only
Applies To:	Assembly
Values:	0 = Error 1 = Equal Depth 2 = Left Cabinet is Deeper 3 = Left Cabinet is Shallower 4 = Ignore/Not applicable
Visibility:	Visible with user override

_RADJCOMPHEIGHT

Returns a value describing the height of the assembly to the right

Type:	System
Valid Range:	Query Only
Applies To:	Assembly
Values:	0 = Error 1 = Equal Height 2 = Left Cabinet is Taller 3 = Left Cabinet is Shorter 4 = Ignore/Not applicable
Visibility:	Visible with user override


_RCUT

Specifies the type of path to use on a Route Operation

Type:	System and/or User Definable
Valid Range:	0~3
Applies To:	Route Operation
Values:	0 = Center-line 1 = Inside Cut 2 = Outside Cut 3 = Outside Door Route
Visibility:	Visible with user override

_RECELE

Specifies the recommended Elevation to place an Object.

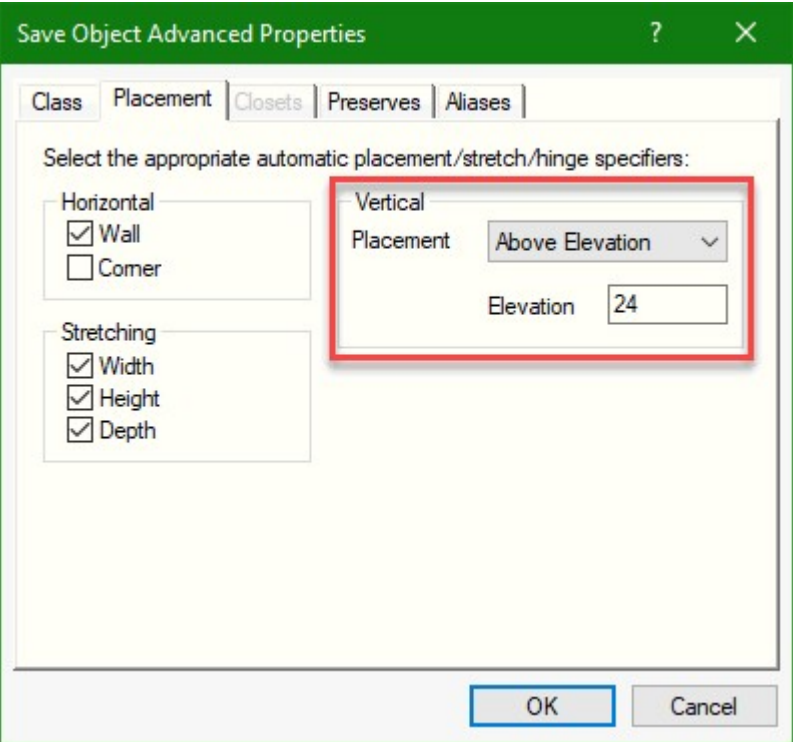

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly

Values:	Numeric (Measurement)
Visibility:	Visible with user override

_RL

Specifies the length of the face radius on a curved wall

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Wall
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_SCL

Specifies the snap to corner, left adjustment

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_SCNTEX

Specifies a Windows background image.

Type:	System and/or User Definable
Valid Range:	Valid Texture ID #'s Only
Applies To:	Assembly (Window)
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_SCR

Specifies the snap to corner, right adjustment

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_SCRPRF

Specifies the Scribe Molding Profile

Type:	System and/or User Definable
Valid Range:	Valid Scribe Molding Profile ID #'s Only
Applies To:	Job/Room/Molding
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_SD

Specifies the depth of a Horizontal Closet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_SESHAPL

Specifies the cabinet sub end left side toe type

Type:	System and/or User Definable
Valid Range:	0~2
Applies To:	Assembly
Values:	0 = N/A 1 = Notched End Toe 2 = Full End to Floor
Visibility:	Visible with user override

_SESHAPR

Specifies the cabinet sub end right side toe type

Type:	System and/or User Definable

Valid Range:	0~2
Applies To:	Assembly
Values:	0 = N/A 1 = Notched End Toe 2 = Full End to Floor
Visibility:	Visible with user override

_SFT

Specifies a Lights Softness

Type:	System and/or User Definable
Valid Range:	0.0~100.0
Applies To:	Light
Values:	0.0~100.0 specifies the intensity. 0.0 being off ~ 100.0 being most intense
Visibility:	Always

_SH

Specifies the current soffit height

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_SHANG

Specifies the Shoe Shelf adjustment angle

Type:	System and/or User Definable
Valid Range:	0~360
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Visible with user override

_SHCUBCNT

Returns the Shoe cubby count (per cabinet)

Type:	System
Valid Range:	Query Only
Applies To:	Assembly
Values:	Numeric (Integer)
Visibility:	Visible with user override

_SHFLT

Specifies whether Shelves should Float when using bore only required holes

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Part
Values:	0 = Locked to System Holes 1 = Float
Visibility:	Visible with user override

_SHNDX

Specifies the width of the Shelf Nose.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part (Adjustable Shelf, Fixed Shelf, Shelf)
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_SHNOS

Specifies whether a shelf gets a Shelf Nose and its type.

Type:	System and/or User Definable
Valid Range:	-1~2
Applies To:	Part (Adjustable Shelf, Fixed Shelf, Shelf)
Values:	-1 = None 0 = Flush Top and Bottom 1 = Flush Top 2 = Flush Bottom

Visibility:	Visible with user override
-------------	----------------------------

_SHPDY

Returns the overall dimension of an object shape, when shaped in XZ it returns DZ else it returns DY. It will return the DX, DY or DZ depending on which face the object was shaped from. It let's you use the shape size without worrying if it was the part DX or DZ for example.

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Dimension)
Visibility:	Conditional

_SHPDX

Returns the overall dimension of an object shape, when shaped in ZY returns DZ else it returns DX. It will return the DX, DY or DZ depending on which face the object was shaped from. It let's you use the shape size without worrying if it was the part DX or DZ for example.

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Dimension)
Visibility:	Conditional

_SHPEDGCNT

Returns the number of edges a shaped part has. It will return 0 if the part is not shaped. A bend line or radius node count as 1 edge.

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Integer)
Visibility:	Non-Visible

_SLAB

Returns whether or not the Door/Drawer Front is a Slab

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Door or Drawer Front
Values:	0 = Not A Slab 1 = Slab
Visibility:	Never

_SMTHDELTA

Specifies the facet deflection for surface smoothing

Type:	System and/or User Definable
Valid Range:	0~360
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Visible with user override

_SMTHSRF

Activates surface smoothing on an object

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Part
Values:	0 = Off 1 = On
Visibility:	Visible with user override

_SOFTCORNERRADIUS

Specifies the soft corner Radius on a Part with _SOFTCORNERS activated

Type:	System and/or User Definable
Valid Range:	Maximum Radius is 1/4" (6.35mm).
Applies To:	Part
Values:	Numeric(Measurement)
Visibility:	Visible with user override
Remarks:	

	Designed for S_DSLAB but will work on other Parts. Maximum Radius is 1/4" (6.35mm).
--	---

_SOFTCORNERS

Activates soft corners on a Part Perimeter.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Part
Values:	0 = Off 1 = On
Visibility:	Visible with user override
Remarks:	Designed for S_DSLAB but will work on other Parts.

_SPH

Specifies the height of a splash (DX)

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room/Counter Top
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_SPLITX

Specifies the location of a single Part Split in X. If you need to define more than one Split per Part use SPLITX#n instead.

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_SPLITXn

*Specifies the location of a Part Split in X. The **n** represents an automatic counter if you are using the Edit Splits option. If you are defining multiple Splits via the Object Tree or a User Created Standard you will need to set the **n** value.*

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_SPLITY

Specifies the location of a single Part Split in Y. If you need to define more than one Split per Part use SPLITY#n instead.

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_SPLITYn

*Specifies the location of a Part Split in Y. The **n** represents an automatic counter if you are using the Edit Splits option. If you are defining multiple Splits via the Object Tree or a User Created Standard you will need to set the **n** value.*

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_SPT

Specifies the thickness of a splash (DZ) (xCountertop multiplier and CABINET VISION Design Only)

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room/Counter Top
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	This Parameter is unavailable to xCountertop multiplier Users, in this case Splash Thickness is controlled by the Material Schedule.

_STUDS

Specifies the selected Stud Spacing for the Stud Wall Hatch

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Wall
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_STYLEID

Returns the Door/Drawer Front Door Style ID Number

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Door or Drawer Front
Values:	Database ID Number
Visibility:	Never

_TD

Specifies the depth of a tall cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_TDOOR

Specifies if the route path is on a template (DoorMaker) door

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Route Operation
Values:	0 = No 1 = Yes
Visibility:	Visible with user override

_TEXCENX

Specifies the center point X position for cylindrical and sphere texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_TEXCENY

Specifies the center point Y position for cylindrical and sphere texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_TEXCENZ

Specifies the center point Z position for cylindrical and sphere texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_TEXDIRX

Specifies the normalized X direction for arbitrary, cylindrical, and sphere texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_TEXTDIRY

Specifies the normalized Y direction for arbitrary, cylindrical, and sphere texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_TEXTDIRZ

Specifies the normalized Z direction for arbitrary, cylindrical, and sphere texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_TEXTMAP

Specifies how to apply Textures to the Part

Type:	System and/or User Definable
Valid Range:	0~7
Applies To:	Part
Values:	0 = Local Auto Axis 1 = Auto Axis 2 = Arbitrary 3 = X-Plane 4 = Y-Plane 5 = Z Plane 6 = Cylindrical 7 = Spherical
Visibility:	Visible with user override
Remarks:	See the Texture Map topic for more information.

_TEXORGX

Specifies the origin X position for arbitrary, cylindrical, and sphere texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_TEXORGY

Specifies the origin Y position for arbitrary, cylindrical, and sphere texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_TEXORGZ

Specifies the origin Z position for arbitrary, cylindrical, and sphere texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_TEXRATIO

Specifies the scale ratio of horizontal to vertical. Used in conjunction with _TEXSCALE in Arbitrary texture mapping only.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_TEXSCALE

Re-sizes the real size of the texture bitmap horizontally and vertically and disregards the width and height set in render texture..

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_TEXSCALELAT

Specifies the latitude scale for Spherical texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_TEXSCALEALONG

Specifies the scale along the cylinder axis for Cylindrical texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_TEXSCALEAROUND

Specifies the scale around the cylinder axis for Cylindrical texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_TEXSCALELONGI

Specifies the longitude scale for Spherical texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_TEXUPDIRX

Specifies the normalized X up vector for Arbitrary texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_TEXUPDIRY

Specifies the normalized Y up vector for Arbitrary texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_TEXUPDIRZ

Specifies the normalized Z up vector for Arbitrary texture mapping

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_TH

Specifies the height of a tall cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_TILT

Specifies the tilt angle for a Dado

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Dado Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_TRNSP

Specifies the Transparency of an object.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

_TXT

Specifies the texture override ID for all faces.

Type:	System and/or User Definable
Valid Range:	Valid Texture ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_TXTB

Specifies the Back texture override ID.

Type:	System and/or User Definable
Valid Range:	Valid Texture ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_TXTEDG

Specifies the Edge texture override ID.

Type:	System and/or User Definable
Valid Range:	Valid Texture ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_TXTEND

Specifies the End texture override ID.

Type:	System and/or User Definable
Valid Range:	Valid Texture ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_TXTF

Specifies the Face texture override ID.

Type:	System and/or User Definable
Valid Range:	Valid Texture ID #'s Only
Applies To:	Part
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

_UD

Specifies the depth of an upper cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_UH

Specifies the height of an upper cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_VD

Specifies the depth of a vanity cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_VERDTM

Specifies the alternate vertical placement datum

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_VH

Specifies the height of a vanity cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_VLTH

Specifies the height, above the selected wall height, of the vault, on a vaulted wall

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room/Wall
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_VLTX

Specifies the relative X position of the vault apex, if present, on a wall from the left end

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room/Wall
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_WH

Specifies the wall height

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_WT

Specifies the wall thickness

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job/Room
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_XC

Specifies the face radius center X (Horizontal) position from the Rooms 0,0 in Plan View.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Wall
Values:	Numeric (Measurement)
Visibility:	Visible with user override

_XYCMB

Specifies if the Cabinet is an XY combined Cabinet.

Type:	System Defined Query Only
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = No 1 = Yes
Visibility:	Visible with user override

_ZC

Specifies the face radius center Z (Vertical) position from the Rooms 0,0 in Plan View.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Wall
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ACAMID

Specifies the ALPHACAM Object ID

Type:	System and/or User Definable
Valid Range:	Valid ALPHACAM Object ID #'s Only (From PsNcLib.accb Database)
Applies To:	Operation
Values:	Database ID Number (Integer)
Visibility:	Visible with user override

ADJ_B

Specifies the Adjustment made to the bottom of a Mid Stile.

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJ_L

Specifies the Adjustment made to the left side of a Mid Rail.

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJ_R

Specifies the Adjustment made to the right side of a Mid Rail.

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJ_T

Specifies the Adjustment made to the top of a Mid Stile.

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJBKE

Specifies the value of an adjustment made to the elevation of a back

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJBKH

Specifies the value of an adjustment made to the height of a back

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJBOT

Specifies the value of an adjustment made to a bottom

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJFTL

Specifies the value of an adjustment made to the length of a front toe

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJFTP

Specifies the value of an adjustment made to the position of a front toe

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJFTW

Specifies the value of an adjustment made to the width of a front toe

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJLED

Specifies the value of an adjustment made to the depth of a left end

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJLEE

Specifies the value of an adjustment made to the elevation of a left end

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJLEH

Specifies the value of an adjustment made to the height of a left end

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJLSE

Specifies the value of an adjustment made to the elevation of a left stile

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Face
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJLSH

Specifies the value of an adjustment made to the height of a left stile

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Face
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJLSW

Specifies the value of an adjustment made to the width of a left stile

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Face
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJRED

Specifies the value of an adjustment made to the depth of a right end

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJREE

Specifies the value of an adjustment made to the elevation of a right end

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJREH

Specifies the value of an adjustment made to the height of a right end

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJRSE

Specifies the value of an adjustment made to the elevation of a right stile

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Face
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJRSH

Specifies the value of an adjustment made to the height of a right stile

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Face
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJRSW

Specifies the value of an adjustment made to the width of a right stile

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Face
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ADJTOP

Specifies the value of an adjustment made to a top

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ARCEDX

Returns the value added to the width of a part to compensate for the parts curvature, typically at a radius cabinet. This Parameter does affect Part Sizes at CNC Machines.

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ARCEDY

Returns the added a value to the length of a part to compensate for the parts curvature, typically at a radius cabinet. This Parameter does affect Part Sizes at CNC Machines.

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

AX

Specifies the angle of rotation of an object along it's X-axis

Type:	System and/or User Definable
Valid Range:	-180~180
Applies To:	All
Values:	Numeric (Degrees)
Visibility:	Always

AY

Specifies the angle of rotation of an object along it's Y-axis

Type:	System and/or User Definable
Valid Range:	-180~180
Applies To:	All
Values:	Numeric (Degrees)
Visibility:	Always

AZ

Specifies the angle of rotation of an object along it's Z-axis

Type:	System and/or User Definable
Valid Range:	-180~180
Applies To:	All
Values:	Numeric (Degrees)
Visibility:	Always

BAND

Specifies the type of banding on a parts edge

Type:	System and/or User Definable
Valid Range:	See Values
Applies To:	Part
Values:	N = None I = Interior E = Exterior D = Door Also User Definable designations via New Band in Part Catalog
Visibility:	Visible with user override

BANDTR

Specifies the Banding Applied would need to Trim the Part.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Job/Room/Part
Values:	0 = Do Not Trim Part 1 = Trim Part
Visibility:	Visible with user override

BBC

Specifies the drawer box bottom clearance

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BDC

Specifies the drawer box back clearance

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BKTYPE

Specifies the type of back in an Assembly

Type:	System and/or User Definable
Valid Range:	0~5
Applies To:	Assembly
Values:	0 = Unfinished 1 = Finished 2 = None (Legacy: No Longer Used) 3 = Clip Back Support 4 = Face 5 = No Back
Visibility:	Visible with user override
Note:	If BKTYPE is not present then Automatic is the Back Type.

BLNDFADJ

Specifies the Blind Corner face adjustment for Face Frame and Frame Overlay Style Construction.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BLNDL

Specifies the Blind Corner left adjustment

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BLNDR

Specifies the Blind Corner right adjustment

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BOR_ALN

Specifies the alignment of horizontal splits between doors & drawers

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Disable 1 = Enable
Visibility:	Visible with user override

BOR_ALNSH

Specifies the alignment of Adjustable Shelf to Line Boring

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Disable 1 = Enable
Visibility:	Visible with user override

BOR_BAL

Specifies balanced panel line boring

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Disable 1 = Enable
Visibility:	Visible with user override

BOR_BAL_OPN

Specifies balanced panel line boring for a Case Opening

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly/Case Opening (CO)
Values:	0 = Disable 1 = Enable
Visibility:	Visible with user override

BOR_BSET

Specifies the rear line bore setback from back of panel

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BOR_DBH

Specifies the construction boring for bottom of an Assembly

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly

Values:	0 = Enable 1 = Disable
Visibility:	Visible with user override

BOR_DIAM

Specifies the Line Bore Diameter

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BOR_DPTH

Specifies the Line Bore Depth

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BOR_DTH

Specifies the construction boring for top of cabinet

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Enable 1 = Disable
Visibility:	Visible with user override

BOR_FHOL

Specifies the first Line Bore distance from top or bottom of Assembly

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly/Case Opening (CO)
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BOR_FHOL_OPN

Specifies the first Line Bore distance from top or bottom of an Opening

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly/Case Opening (CO)
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	Will only work with an Opening defined with BOR_OPN = 1 or where the option to Bore Openings has been enabled in the active Construction Method.

BOR_FSET

Specifies the front line bore setback from front of panel

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BOR_OPN

Specifies whether a Case Opening gets Line Boring.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case Opening (CO)
Values:	0 = Do Not Bore 1 = Bore
Visibility:	Visible with user override

BOR_STY

Specifies the boring style for cabinet

Type:	System and/or User Definable
Valid Range:	0~3
Applies To:	Assembly
Values:	0 = Disable 1 = Enable 2 = Bore Only Required 3 = Bore By Opening
Visibility:	Visible with user override

BOTANG

Specifies the dado bottom angle.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Dado Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BOXADJ

Specifies the end adjustment for boxed ends.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BOXD

Specifies the drawer box depth

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BOXH

Specifies the drawer box height

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BOXW

Specifies the drawer box width

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BR

Specifies a user entered width for a Bottom Rail.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly or Bottom Rail Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BSC

Specifies the drawer box side clearance

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)

Visibility:	Visible with user override
-------------	----------------------------

BSCL

Specifies the drawer box left side clearance

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BSCR

Specifies the drawer box right side clearance

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BTC

Specifies the drawer box top clearance

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

BUYOUT

Specifies whether the Door is a buyout Door.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Door
Values:	0 = No 1 = Yes
Visibility:	Visible with user override

CABNO

Specifies the unique Assembly number of an Assembly

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Integer)
Visibility:	Visible with user override

CLASS

Returns the Object's Class

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Assembly
Values:	1 = Base 2 = Upper 3 = Tall 4 = Vanity 5 = Appliance 6 = Accessory 7 = Decorative 8 = Top 9 = Molding 10 = Wall (Not Assembly Level accessible) 11 = Wall Face (Not Assembly Level accessible) 12 = Floor (Not Assembly Level accessible) 13 = Ceiling (Not Assembly Level accessible) 14 = Door 15 = Non-Graphic Accessory 16 = Splash 17 = User Light 18 = Fixture 19 = Bath 20 = Planit (Not Used)

	21 = Closet 22 = Closet Base 23 = Closet Upper
Visibility:	Non-Visible

CNCCC

Specifies the Part gets a climb cut

Type:	User Defined
Valid Range:	Boolean
Applies To:	Part
Values:	0 = Do not climb cut 1 = Climb Cut
Visibility:	User Added

CNCMACH

Sets the Preferred Secondary Machine for a Part.

Type:	User Defined
Valid Range:	Valid Secondary Machine ID #'s Only
Applies To:	Part
Values:	Database ID Number (PSNC.accdb)
Visibility:	User Added

CNCMIR

Sets the field on a P2P machine that the EXTERIOR (face) side of a part will run in. The interior (back) side operations will be sent to the opposite zone.

Type:	User Defined
Valid Range:	0~1
Applies To:	Part
Values:	0 = Primary 1 = Mirrored
Visibility:	User Added

CNCRUN

Specifies the last CNC run number. This value is auto populated by the S2M CENTER when returning to CABINET VISION after Outputting CNC; this Parameter stores the Run Number in order to sync up with [Output Data File](#) (Output Data (CUT, PNL)) and Report.accdb.

Type:	Query Only
Valid Range:	Unlimited
Applies To:	Report.accdb
Values:	Numeric (Integer)
Visibility:	Visible with user override

COMMENT

Specifies the Comment for the Object

Type:	User Defined (Via UCS)
Valid Range:	Text
Applies To:	All
Values:	Text
Visibility:	User Added

CON

Specifies the object is a subassembly of another Assembly object

Type:	System and/or User Definable
Valid Range:	1~3
Applies To:	Assembly
Values:	1 = Always (Visible in Order Entry and Report.accdb 2 = Never (Not Visible in Order Entry or Report.accdb) 3 = Bidding Only (Not Visible in Order Entry but is in Report.accdb)
Visibility:	Visible with user override

CONSTID

Returns the Assembly, Drawer, or Roll Out Construction Method ID Number

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part or Assembly

Values:	Construction ID Number
Visibility:	Visible with user override

COOKTOPCTR

Specifies the Cook Top Center

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Wall Face
Values:	Numeric (Measurement)
Visibility:	Visible with user override

COOKTOPMOVED

Flag to Force Resection of Cook Top Cabinet

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Wall Face
Values:	0 = Do Not Resection 1 = Resection
Visibility:	Visible with user override

COOKTOPSIZE

Specifies the Cook Top Width

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Wall Face
Values:	Numeric (Measurement)
Visibility:	Visible with user override

CS_STYL

Returns the Construction Style of an Assembly.

Type:	System Defined Query Only
Valid Range:	0~4
Applies To:	Assembly
Values:	0 = Face Frame 1 = 32mm 2 = Frameless 3 = Frame Overlay 4 = Closet 32mm
Visibility:	Never

CTACNTR

Specifies the Cook Top Center

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

CUBES

Specifies a Cubic dimension

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

CUSTOMPULL

Specifies the Pull Schedule to apply to Stock Assemblies

Type:	System and/or User Definable
Valid Range:	Valid Pull Schedule ID Number
Applies To:	Job/Room
Values:	Database ID Number
Visibility:	Visible with user override

CVER

Indicates CABINET VISION Assembly Generator Version of Assembly

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Assembly
Values:	Numeric (Decimal)
Visibility:	Always

DELALL

Specifies the deletion of all parts

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELBK

Specifies the deletion of Back

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELBN

Specifies the deletion of Bottom Nailer

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELBO

Specifies the deletion of bottom

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELBR

Specifies the deletion of Bottom Rail

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Face
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELBT

Specifies the deletion of Back Toe

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELCA

Specifies the deletion of Case Parts

Type:	System and/or User Definable
Valid Range:	0~1

Applies To:	Assembly
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELDD

Specifies the deletion of Doors & Drawers

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Face
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELFA

Specifies the deletion of Face Parts

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELGT

Specifies the deletion of Internal Parts

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELLE

Specifies the deletion of Left End

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELLS

Specifies the deletion of Left Stile

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Frame
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELLT

Specifies the deletion of Left Toe

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELMN

Specifies the deletion of Mid Nailer

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete

Visibility:	Visible with user override
-------------	----------------------------

DELMR

Specifies the deletion of Mid Rail

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Frame
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELMS

Specifies the deletion of Mid Stile

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Frame
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELNA

Specifies the deletion of Top Nailer

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELPAR

Specifies the deletion of Partition

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Interior
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELRE

Specifies the deletion of Right End

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELROS

Specifies the deletion of roll out shelf

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Interior
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELROT

Specifies the deletion of roll out tray

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Interior
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELRS

Specifies the deletion of Right Stile

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Face
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELRT

Specifies the deletion of Right Toe

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELSH

Specifies the deletion of Shelf

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Interior
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELSL

Specifies the deletion of Sleeper

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELTK

Specifies the deletion of Front Toe

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELTOE

Specifies the deletion of all Toe Parts

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELTP

Specifies the deletion of Top

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Case
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DELTR

Specifies the deletion of Top Rail

--	--

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Face
Values:	0 = Do Not Delete 1 = Delete
Visibility:	Visible with user override

DESC

Specifies the Objects Description

Type:	System and/or User Definable
Valid Range:	Text
Applies To:	All
Values:	Text
Visibility:	Visible with user override

DNDFLIP

Flips a Part for Drill and Dowel Machines

Type:	User Definable
Valid Range:	0~1
Applies To:	Part
Values:	0 = Don't Flip 1 = Flip
Visibility:	User Added

DOETL

Forces a Left End Extend/Return type change

Type:	System and/or User Definable
Valid Range:	0~2
Applies To:	Assembly
Values:	0 = Remove 1 = Extend 2 = Return
Visibility:	Visible with user override

DOETR

Forces a Right End Extend/Return type change

Type:	System and/or User Definable
Valid Range:	0~2
Applies To:	Assembly
Values:	0 = Remove 1 = Extend 2 = Return
Visibility:	Visible with user override

DOMIL

Forces a Frame Miter Left

Type:	System and/or User Definable
Valid Range:	-1, 1, 2
Applies To:	Assembly
Values:	-1 = Short Join 1 = Miter 2 = Long Joint
Visibility:	Visible with user override

DOMIR

Forces a Frame Miter Right

Type:	System and/or User Definable
Valid Range:	-1, 1, 2
Applies To:	Assembly
Values:	-1 = Short Join 1 = Miter 2 = Long Join
Visibility:	Visible with user override

DOORSTYLEID

Returns the Door Styles ID Number

--	--

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Door/Drawer Front
Values:	Database ID Number
Visibility:	Never

DOPEN

Specifies the "Open Amount" of a door/drawer

Type:	System and/or User Definable
Valid Range:	0~(Value of "Open Angle" property of HNG/HNG45/HNG90 Material in Degrees or Value of "Extension" Property of DG Material)
Applies To:	Open
Values:	Numeric (Measurement or Degrees) see Valid Range
Visibility:	Visible with user override

DOROPS

Overrides the Global "[Include Door Assembly Operations on Slab Door Part for CNC](#)" Setting

Type:	User Definable
Valid Range:	0~1
Applies To:	Job/Room
Values:	0 = Do Not Include 1 = Include
Visibility:	Visible with user override

DORPOS

Specifies the original Door X Position on an opened Door

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

DX

Specifies the width of an object

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	All
Values:	Numeric (Measurement)
Visibility:	Visible with user override

DY

Specifies the length of an object

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	All
Values:	Numeric (Measurement)
Visibility:	Visible with user override

D Z

Specifies the thickness or depth of an object

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	All
Values:	Numeric (Measurement)
Visibility:	Visible with user override

EDGE

Specifies the edge that will go against the back pins on a P2P machine. (Primary Edge)

Type:	System and/or User Definable
Valid Range:	1~4
Applies To:	Part
Values:	1 = Left 2 = Top 3 = Right

	4 = Bottom
Visibility:	Visible with user override
Remarks:	When viewing the face of the Part from the Part level. The System automatically applies the EDGE Parameter to certain Parts. Here are the defaults: EDGE = 1 Applied to: RF, RU, DE, FT, NA, S_RSE EDGE = 3 Applied to: PT,SH,AS,FS,TO,BO,LF,LU,TS,S_ASG,S_LSE,S_DIV

EDX

Specifies the adjustment to DX value, does not apply to CNC router output only to cut lists/NC saws.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	This adjustment is non-graphical and will appear only on a cut list

EDY

Specifies the adjustment to DY value, does not apply to CNC router output only to cut lists/NC saws.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	This adjustment is non-graphical and will appear only on a cut list

EDZ

Specifies the adjustment to a DZ value, does not apply to CNC output only to cut lists.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	This adjustment is non-graphical and will appear only on a cut list

EQ

Specifies if an Opening is set to Equalize

Type:	System and/or User Definable
Valid Range:	0~3
Applies To:	Open
Values:	0 = Not Equalized 1 = Equalize Widths 2 = Equalize Heights 3 = Equalize Width & Height
Visibility:	Visible with user override

EQDOR

Specifies automatic equalization of door widths & drawer heights

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Not Equalized 1 = Equalized
Visibility:	Visible with user override

ESHAPL

Specifies the cabinet left side toe type

Type:	System and/or User Definable
Valid Range:	0~2
Applies To:	Assembly
Values:	0 = Finished/Unfinished (Separate Toe) 1 = Notched End Toe 2 = Full End to Floor

Visibility:	Visible with user override
-------------	----------------------------

ESHAPR

Specifies the cabinet right side toe type

Type:	System and/or User Definable
Valid Range:	0~2
Applies To:	Assembly
Values:	0 = Finished/Unfinished (Separate Toe) 1 = Notched End Toe 2 = Full End to Floor
Visibility:	Visible with user override

ETL

Specifies the left end type of cabinet

Type:	System and/or User Definable
Valid Range:	0~12
Applies To:	Assembly
Values:	0 = Automatic 1 = Finished 2 = Unfinished 3 = Extended 4 = Return 5 = Applied Finished End 6 = Applied Door 7 = Panelized End 8 = Clipped 9 = Radius 10 = Angled 11 = No End 12 = Filler 13 = Skinned
Visibility:	Visible with user override

ETR

Specifies the right end type of cabinet

Type:	System and/or User Definable
Valid Range:	0~12
Applies To:	Assembly
Values:	0 = Automatic 1 = Finished 2 = Unfinished 3 = Extended 4 = Return 5 = Applied Finished End 6 = Applied Door 7 = Panelized End 8 = Clipped 9 = Radius 10 = Angled 11 = No End 12 = Filler 13 = Skinned
Visibility:	Visible with user override

EURO

Returns the construction style of cabinet

Type:	System Defined Query Only
Valid Range:	0~4
Applies To:	Assembly
Values:	0 = Face Frame 1 = 32mm 2 = Frameless 3 = Frame Overlay 4 = Closet 32mm
Visibility:	Always

EXTLIM

Specifies the limit on a Dado operations extension length (see S_EXTND)

Type:	System and/or User Definable
Valid Range:	Unlimited

Applies To:	Dado Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

EXTSEC

Specifies the Opening and/or Part type on an Extended End Assembly.

Type:	System and/or User Definable
Valid Range:	1~2
Applies To:	Open/Part
Values:	1 = Sibling is Extended Opening 2 = Extended Stile/Opening
Visibility:	Visible with user override

FILTERED

Specifies the whether the Object is Filtered for the Report/Bid Center. Functions in conjunction with REPDBID.

Type:	System and/or User Definable
Valid Range:	See Values
Applies To:	Assembly, RoomMolding, Room Accessories, JobSplash
Values:	0x01 = Filtered Assembly 0x02 = Filtered Room Molding 0x04 = Filtered Room Accessory 0x08 = Filtered Job Splash
Visibility:	Visible with user override

FINBK

Specifies the whether the Cabinet Back is finished or not

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Not Finished 1 = Finished
Visibility:	Visible with user override

FININT

Specifies whether interior of cabinet is finished or not

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Interior Not Finished 1 = Finished Interior
Visibility:	Visible with user override

FIRSTCABNO

Specifies the first Cabinet number for the current Room

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Room
Values:	Numeric (Integer)
Visibility:	Visible with user override

FIRSTTOPNO

Specifies the starting number for Counter Top numbering

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Room
Values:	Numeric (Integer)
Visibility:	Visible with user override

FPAR

Identifies the Interior Parts relationship to the Face Section ID (See ID)

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Integer)
Visibility:	Visible with user override

GLASS

Specifies the that a door's/drawer face's panel(s) will be made of glass

Type:	System and/or User Definable
Valid Range:	0,1,2,4,6,8
Applies To:	Open
Values:	0 = No Glass 1 = 1 Glass Panel 2 = 2 Glass Panels 4 = 4 Glass Panels 6 = 6 Glass Panels 8 = 8 Glass Panels
Visibility:	Visible with user override

GROUP

Specifies the group the Operation is associated with. When the S2M CENTER processes operations they are sorted by Group, Operation Type, Priority. Group and Priority allow you to override the operation sorting for an individual operation. Let’s assume you want to add a pocket on the edge of the part, then drill a hole in the pocket.

Standard S2M CENTER operations are by default assigned to group 0.

You would have to assign the pocket a group of 1 or higher...This will make sure it happens after all the standard operations including outline.

If you then have your operation order set to Routing, then Drilling, you could also assign the drill to group 1 since drilling would naturally follow routing.

However, if you have the normal setup (Drill then Route) you would have to give the Drill operation a group of 2 (anything higher than the 1st group) this will ensure the drill occurs after the routing.

Operation Types, of course, are the four listed on the Ordering Tab in the S2M CENTER. See the S2M CENTER Help file for more information on the Ordering Tab.

ALPHACAM

Drilling

Routing

Outline

Type:	User Defined
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Integer)
Visibility:	Visible with user override

HBOT

Specifies the Assembly Bottom condition

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = No Bottom 1 = Automatic Bottom
Visibility:	Visible with user override

HNG

Specifies the hinging on a door/drawer

Type:	System and/or User Definable
Valid Range:	0~4
Applies To:	Face Open
Values:	0 = None 1 = Left 2 = Right 3 = Top 4 = Bottom
Visibility:	Always
Remarks:	Any DWR_OPEN that has a HNG of 4 will have no drawer guide (DG) parts and will tilt out with a DOPEN > 0. Any DWR_OPEN that has any other value for HNG will still have drawer guide (DG) parts and will not tilt/slide out with a DOPEN > 0

HNGB

Specifies the minimum hinge distance from door bottom

Type:	System and/or User Definable
Valid Range:	Unlimited

Applies To:	Face Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

HNGQ

Specifies the hinge quantity for door

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Face Open
Values:	Numeric (Integer)
Visibility:	Visible with user override

HNGT

Specifies the minimum hinge distance from the Door top

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Face Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

HTOP

Specifies the type of top in cabinet (case top)

Type:	System and/or User Definable
Valid Range:	0~4
Applies To:	Assembly
Values:	0 = No Top 1 = Full Top 2 = Stretchers 3 = Web Frame 4 = Gussett
Visibility:	Visible with user override

ID

Returns the ID number of the sections created within an assembly, including shelves, case openings, etc...

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Open/Part
Values:	Numeric (Integer)
Visibility:	Always

IGNOREGRAIN

Specifies whether Grain rules apply to the Part regardless of Material Grain.

Type:	User Definable
Valid Range:	0~1
Applies To:	Part
Values:	0 = Do not Ignore Grain 1 = Ignore Grain
Visibility:	Visible with user override

IJLOCAL

Specifies a Local vs. Global Intelli-Joint

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Intelli-Joint
Values:	0 = Global 1 = Local
Visibility:	Visible with user override

IJNT

Specifies the Intelli-Joint ID

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Intelli-Joint
Values:	Intelli-Joint ID Number
Visibility:	Visible with user override

ISCL

Specifies the left end interior scribe for cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ISCR

Specifies the right end interior scribe for cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

JBL

Specifies the frame joint for left side of bottom rail

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Short 1 = Long
Visibility:	Visible with user override

JBR

Specifies the frame joint for right side of bottom rail

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Short 1 = Long
Visibility:	Visible with user override

JTL

Specifies the frame joint for left side of top rail

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Short 1 = Long
Visibility:	Visible with user override

JTR

Specifies the frame joint for right side of top rail

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Short 1 = Long
Visibility:	Visible with user override

LABEL

Specifies the Dimension label activation for an Openings Width and/or Height

Type:	System and/or User Definable
Valid Range:	1~3
Applies To:	Open
Values:	1 = Width 2 = Height 3 = Both
Visibility:	Visible with user override

LABOR

Specifies a Labor time in minutes

Type:	System and/or User Definable

Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Decimal)
Visibility:	Visible with user override

LADJ

Returns the object or condition to the left of the cabinet

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Assembly
Values:	0 = Nothing 1 = Wall 2 = Assembly 3 = Appliance 4 = Tall Cabinet 5 = Filler 6 = Extended or Return Condition 7 = Refrigerator 8 = Peninsula Wall 9 = Shared Panel (Closet Vertical) 10 = Next to deeper cabinet 11 = Next to deeper tall cabinet 12 = A tall class cabinet next to another tall class cabinet
Visibility:	Visible with user override

LANG

Specifies the value for angled left end of cabinet

Type:	System and/or User Definable
Valid Range:	0~45
Applies To:	Assembly
Values:	Numeric (Degrees)
Visibility:	Visible with user override

LCLIP

Specifies the value for clipped left end of cabinet

Type:	System and/or User Definable
Valid Range:	0~ Value < Cab.DX and/or Cab.DZ
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Note:	The value can be user defined. Adding LCLIP manually however does not actually Clip and End.

LEDLEE

Specifies the value of an adjustment made to the elevation of a Left End

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

LEGBAR

Specifies the back Leg recess

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

LEGFAR

Specifies the front Leg recess

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

LEGFER

Specifies the Finished End Leg recess

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

LEGUER

Specifies the Unfinished End Leg recess

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

LEND

Returns the left end type of cabinet

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Assembly
Values:	1 or ASM_END_FINISHED = Finished 2 or ASM_END_UNFINISHED = Unfinished 3 or ASM_END_EXTENDED = Extended 4 or ASM_END_RETURN = Return 5 or ASM_END_APPL_FE = Applied Finished End 6 or ASM_END_APPL_DOOR = Applied Door 7 or ASM_END_PANELIZED = Panelized End 8 = Clipped 9 = Radius 10 = Angled 11 = No End 12 = Filler 13 = Skinned
Visibility:	Visible with user override

LKH

Specifies if an Opening Height is locked.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Open/Part
Values:	0 = Not Locked 1 = Locked
Visibility:	Visible with user override

LKSL

Specifies the edge number the Frame Part is locked to on the left

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part (Frame Part)
Values:	Numeric (Integer)
Visibility:	Visible with user override

LKSR

Specifies the edge number the Frame Part is locked to on the right

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part (Frame Part)
Values:	Numeric (Integer)
Visibility:	Visible with user override

LKW

Specifies if an Opening or Frame Parts Width is locked.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Open
Values:	0 = Not Locked

	1 = Locked
Visibility:	Visible with user override

LRAD

Specifies the value for radius left end of cabinet

Type:	System and/or User Definable
Valid Range:	0~Value < Cab.DZ
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

LS

Specifies a user entered width for a Left Stile.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

MACHFA

Specifies if an Operation is machined on the Face.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Operation
Values:	0 = No 1 = Yes
Visibility:	Visible with user override

MACHID_EDGE_nn

Allows setting the primary edge per machine. See [EDGE](#) parameter for more information. nn would represent the Machine and the Parameter's Value would be the parts Edge.

Type:	User Definable
Valid Range:	1~4
Applies To:	Part
Values:	1 = Left 2 = Top 3 = Right 4 = Bottom
Visibility:	Never

MACHID_TOOLID_nn

Allows the assignment of multiple Tools to a single Operation where multiple machines (Using Machine Sets) could be used to machine operations. nn would represent the Machine and the Parameter's Value would be the Tool's ID.

Type:	User Definable
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Integer)
Visibility:	Never

MATID

Specifies the Parts Material ID Number

Type:	System and/or User Definable
Valid Range:	Valid Material ID Numbers Only
Applies To:	Part
Values:	Numeric (Integer)
Visibility:	Visible with user override

MITB

Specifies the Miter Bottom of Part

Type:	User Defined
Valid Range:	-180~180
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Visible with user override

MITL

Specifies the Miter Left of Part

Type:	User Defined
Valid Range:	-180~180
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Visible with user override

MITR

Specifies the Miter Right of Part

Type:	User Defined
Valid Range:	-180~180
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Visible with user override

MITT

Specifies the Miter Top of Part

Type:	User Defined
Valid Range:	-180~180
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Visible with user override

MR

Specifies a user entered width for a Mid Rail.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

MS

Specifies a user entered width for a Mid Stile.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

MT_BOTLIP

Specifies the distance from the drawer face bottom to the drawer box bottom (32mm Only)

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	Only available when "Bore All" line boring is enabled

MT_LBREF

Returns the Line Bore Reference position origin (32mm Only)

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Assembly
Values:	0 = Top 1 = Bottom
Visibility:	Visible with user override

MT_LBREFPOS

Returns the Line Bore Reference position value(32mm Only)

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

Remarks:	Only available when "Bore All" line boring is enabled
----------	---

MT_LEVEL

Returns the "level" of drawer (32mm Only)

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Open
Values:	1 = Top Drawer 2 = Middle Drawer 3 = Bottom Drawer
Visibility:	Visible with user override
Remarks:	Only available when "Bore All" line boring is enabled

MTRLS

Specifies the Left Stile miter angle

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Degrees)
Visibility:	Visible with user override

MTRRS

Specifies the Right Stile miter angle

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Degrees)
Visibility:	Visible with user override

MULLION

Specifies the Mullion width for Section Editor defined glass doors.

Type:	User Definable
Valid Range:	Unlimited
Applies To:	DOR
Values:	Numeric (Measurement) - Minimum value is 0.5", values less than 0.5" default to 0.75".
Visibility:	Visible with user override

NAME

Specifies the Name of the Object. In the case of an Assembly this parameter will control the Assemblies Name, in the case of a Part it will control the Parts Description.

Type:	System and/or User Definable
Valid Range:	Text
Applies To:	All
Values:	Text
Visibility:	Visible with user override

NCID

Specifies the Parts ID number in the NC database

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Part
Values:	Numeric (Integer)
Visibility:	Visible with user override

NOMAST

Specifies whether or not to display Unmatched Primary Operations.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Job/Operation
Values:	0 = Visible 1 = Hidden
Visibility:	Visible with user override

NOTRIM

Specifies whether or not tool path(s) generated for a dado operation will be trimmed if they extend beyond the Part's Outline

Type:	User Defined
Valid Range:	0~1
Applies To:	Dado Operation
Values:	0 = Trim (Default Dado Setting) 1 = Do Not Trim
Visibility:	Visible with user override

NSLEEP

Specifies the number of Sleepers in a Cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Integer)
Visibility:	Visible with user override

OBJECT

Specifies the Object Type

Type:	System and/or User Definable
Valid Range:	1~50
Applies To:	Assembly
Values:	1 = Job 2 = Level 3 = Room 4 = Wall 5 = Wall Face 6 = Floor 7 = Ceiling 8 = Counter 9 = Molding 10 = Cabinet 11 = Splash 12 = Door 13 = Drawer 14 = Assembly 15 = Subassembly 16 = Opening 17 = Part 18 = Operation 19 = Schedule 20 = MatPart 21 = Material 22 = Finish 23 = Texture 24 = Parameter 25 = Equation 26 = Dimension 27 = Shape Data 28 = Door Parameter 29 = Construction 30 = Door Opening 31 = Drawer Opening 32 = Roll Out 33 = Pull 34 = Guide 35 = Hinge 36 = Accessory 37 = Order 38 = Bull Nose 39 = Design Catalog 40 = Light Object 41 = Scene 42 = Band Part 43 = Layer 44 = Leg 45 = Door Swing 46 = Drawer Box 47 = Shader 48 = Wire Basket 49 = Closet Rod 50 = Finish Type 51 = Slide 52 = Widget (Placement Object that represents Hardware being placed) 53 = Material Layer

	54 = Work Plane 55 = Material Operation 56 = Hinge Plate 57 = Hardware 58 = Slide Rail 59 = Slide Roller 60 = Roll Out Box 61 = Connector 62 = Leg Leveler
Visibility:	Visible with user override

OBJID

Returns a unique permanent internal Object ID

Type:	Read Only
Valid Range:	Unlimited
Applies To:	ALL
Values:	Numeric (Integer)
Visibility:	Never

OLB

Specifies the bottom overlay adjustment of a door/drawer face

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

OLL

Specifies the left overlay adjustment of a door/drawer face

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

OLR

Specifies the right overlay adjustment of a door/drawer face

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

OLT

Specifies the top overlay adjustment of a door/drawer face

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

OPTMACH

Sets the Preferred Primary Machine for a Part.

Type:	User Defined
Valid Range:	Valid Primary Machine ID #'s Only
Applies To:	Part
Values:	Database ID Number (PSNC.accdb)
Visibility:	User Activated

OWNER

PABSAX

Returns the Parts absolute X rotation

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part

Values:	Numeric (Degrees)
Visibility:	Visible with user override

PABSAY

Returns the Parts absolute Y rotation

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Visible with user override

PABSAZ

Returns the Parts absolute Z rotation

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Degrees)
Visibility:	Visible with user override

PABSX

Returns the Part Absolute X position

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

PABSY

Returns the Parts absolute Y position

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

PABSZ

Returns the Parts absolute Z position

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

PARID

Specifies the Parents Section ID (See ID)

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Open/Part
Values:	Numeric (Integer)
Visibility:	Visible with user override

PCTR

Specifies the position status of an interior part. It notes/sets the relative position of the Partition/Shelf to the opening it is in or the reveal/mid stile or mid rail it is associated with.

Type:	System and/or User Definable
Valid Range:	0~3
Applies To:	Part
Values:	0 = Not Present 1 = Top/Left 2 = Center 3 = Bottom/Right
Visibility:	Visible with user override

PHO

Specifies the horizontal offset (from edge) of a door/drawer pull

--

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

PID

Returns the Part Identification Number

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Open/Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

PQ

Specifies the pull quantity for a door/drawer

Type:	System and/or User Definable
Valid Range:	1~3
Applies To:	Open
Values:	Numeric (Integer)
Visibility:	Visible with user override

PREF

Specifies the Door/Drawer Pull reference.

Type:	System and/or User Definable
Valid Range:	0~3
Applies To:	Open
Values:	0 = Default 1 = Top 2 = Center 3 = Bottom
Visibility:	Visible with user override

PRG

Specifies the pair gap for a pair door section

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

PRICE

Specifies the price for the cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly/Part
Values:	Numeric (Decimal)
Visibility:	Visible with user override

PRIORITY

Specifies the Operations Priority

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Integer)
Visibility:	Visible with user override

PRO

Specifies if a pull or pulls is/are rotated on a door/drawer

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Open
Values:	0 = Do Not Rotate 1 = Rotate
Visibility:	Visible with user override

PVO

Specifies the vertical offset (from edge) of a door/drawer pull

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

QTY

Specifies the Quantity of an Object, Part, or Operation

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	All
Values:	Numeric (Integer)
Visibility:	Visible with user override

RADIUS

Specifies the radius of a part, typically, a radius cabinet part

Type:	System and/or User Definable
Valid Range:	Limited By Parts Overall DX and/or DY
Applies To:	Part
Values:	Numeric (Measurement)
Visibility:	Visible with user override

RADJ

Returns the object or condition to the right of the cabinet

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Assembly
Values:	0 = Nothing 1 = Wall 2 = Assembly 3 = Appliance 4 = Tall Cabinet 5 = Filler 6 = Extended or Return Condition 7 = Refrigerator 8 = Peninsula Wall 9 = Shared Panel (Closet Vertical) 10 = Next to deeper cabinet 11 = Next to deeper tall cabinet 12 = A tall class cabinet next to another tall class cabinet
Visibility:	Visible with user override

RANG

Specifies the value for angled right end of cabinet

Type:	System and/or User Definable
Valid Range:	0~45
Applies To:	Assembly
Values:	Numeric (Degrees)
Visibility:	Visible with user override

RAXIS

Specifies the Part's Radius axis

Type:	System and/or User Definable
Valid Range:	1~3
Applies To:	Part
Values:	1 = Z Axis 2 = Y Axis 3 = X Axis
Visibility:	Visible with user override

RCLIP

Specifies the value for clipped right end of cabinet

Type:	System and/or User Definable
Valid Range:	0~Value < Cab.DX and/or Cab.DZ
Applies To:	Assembly

Values:	Numeric (Measurement)
Visibility:	Visible with user override
Note:	The value can be user defined. Adding RCLIP manually however does not actually Clip and End.

REEND

Forces and End Type change

Type:	User Activated (via UCS)
Valid Range:	1~3
Applies To:	Assembly
Values:	1 = Finished Left 2 = Finished Right 3 = Finish Both
Visibility:	Never

REFBOX

Specifies whether a Cabinet has Boxed Ends or not

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = No Boxed Ends 1 = Boxed Ends
Visibility:	Visible with user override

REHINGE

Forces a Hinging side swap

Type:	User Activated (via UCS)
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Do Not Re-hinge 1 = Swap Hinging
Visibility:	Never

REND

Returns the Right End Type for Cabinet

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Assembly
Values:	1 or ASM_END_FINISHED = Finished 2 or ASM_END_UNFINISHED = Unfinished 3 or ASM_END_EXTENDED = Extended 4 or ASM_END_RETURN = Return 5 or ASM_END_APPL_FE = Applied Finished End 6 or ASM_END_APPL_DOOR = Applied Door 7 or ASM_END_PANELIZED = Panelized End 8 = Clipped 9 = Radius 10 = Angled 11 = No End 12 = Filler 13 = Skinned
Visibility:	Visible with user override

REPDBID

Specifies the ID of the Object in Report.accdb. Works in conjunction with [FILTERED](#).

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly, RoomMolding, Room Accessories, JobSplash
Values:	Numeric (Integer)
Visibility:	Visible with user override

REPT

Specifies the number of times a Boring operation is repeated. If preceded by M_ indicates Primary or S_ indicates Secondary.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Boring Operation
Values:	Numeric (Integer)
Visibility:	Visible with user override

REVB

Specifies the Door and/or Drawer Front Reveal for bottom of Cabinet face

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	Only available in 32mm,Frameless,Frame Overlay, & Closet 32mm Construction Styles.

REVH

Specifies the door and/or drawer face reveal for horizontal splits of cabinet face

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	Only available in 32mm,Frameless,Frame Overlay, & Closet 32mm Construction Styles.

REVL

Specifies the door and/or drawer face reveal for left side of cabinet face

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	Only available in 32mm,Frameless,Frame Overlay, & Closet 32mm Construction Styles.

REVR

Specifies the door and/or drawer face reveal for right side of cabinet face

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	Only available in 32mm,Frameless,Frame Overlay, & Closet 32mm Construction Styles.

REVT

Specifies the door and/or drawer face reveal for top of cabinet face

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	Only available in 32mm,Frameless,Frame Overlay, & Closet 32mm Construction Styles.

REVV

Specifies the door and/or drawer face reveal for vertical splits of cabinet face

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override
Remarks:	Only available in 32mm,Frameless,Frame Overlay, & Closet 32mm Construction Styles.

RFADJ

Specifies the setback for a Roll Out.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open (Roll Out)
Values:	Numeric (Measurement)

Visibility:	Visible with user override
-------------	----------------------------

RODBOR

Specifies the Closet Rod Bore type

Type:	System and/or User Definable
Valid Range:	0~3
Applies To:	Open (Hanging Section)
Values:	0 = Bore Holes 1 = Additional Line Bore 2 = Use Existing Line Bore 3 = No Holes
Visibility:	Visible with user override

RODHORIZ

Specifies the Closet Rods horizontal position

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open (Hanging Section)
Values:	Numeric (Measurement)
Visibility:	Visible with user override

RODREF

Specifies the Closet Rods reference

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Open (Hanging Section)
Values:	0 = Front 1 = Rear
Visibility:	Visible with user override

RODVERT

Specifies the Closet Rod's vertical position

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open (Hanging Section)
Values:	Numeric (Measurement)
Visibility:	Visible with user override

ROOM

Returns the room number of a room

Type:	System Defined Query Only
Valid Range:	Query Only
Applies To:	Room
Values:	Numeric (Integer)
Visibility:	Always

RRAD

Specifies the value for radius right end of cabinet

Type:	System and/or User Definable
Valid Range:	0~Value < Cab.DZ
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

RS

Specifies a user entered width for a Right Stile.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

RTNL

Specifies the Left Return End adjustment

Type:	System and/or User Definable
-------	------------------------------

Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

RTNR

Specifies the Right Return End adjustment

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_AX

Defines the Secondary Operations X Angle of Rotation

Type:	System and/or User Definable
Valid Range:	-180~180
Applies To:	Operation
Values:	Numeric (Degrees)
Visibility:	Visible with user override

S_AY

Defines the Secondary Operations Y Angle of Rotation

Type:	System and/or User Definable
Valid Range:	-180~180
Applies To:	Operation
Values:	Numeric (Degrees)
Visibility:	Visible with user override

S_AZ

Defines the Secondary Operations Z Angle of Rotation

Type:	System and/or User Definable
Valid Range:	-180~180
Applies To:	Operation
Values:	Numeric (Degrees)
Visibility:	Visible with user override

S_CL

Specifies the clearance for the Secondary Operation's surface match

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_DOROP

Identifies a Secondary Operation is on a Door.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Operation
Values:	0 = Not On A Door 1 = On A Door
Visibility:	Visible with user override

S_DX

Defines the Secondary Operations DX Dimension

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_DY

Defines the Secondary Operations DY Dimension

--	--

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_DZ

Defines the Secondary Operations DZ Dimension

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_EXTND

Specifies whether to extend the Dado Operation to the Part's edge

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Operation (Dado)
Values:	0 = Do Not Extend 1 = Extend
Visibility:	Visible with user override

S_MORTB

Defines the Mortise Bottom position

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Primary Blind Dado Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_MORTDEP

Defines the Mortise Depth

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Primary Blind Dado Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_MORTL

Defines the Mortise Left position

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Primary Blind Dado Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_MORTR

Defines the Mortise Right position

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Primary Blind Dado Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_MORTT

Defines the Mortise Top position

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Primary Blind Dado Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_NOCNC

Specifies whether or not to output the Secondary operation to CNC

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Operation
Values:	0 = Output 1 = Do Not Output
Visibility:	Visible with user override

S_OP

Indicates the Operation is a primary operation.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Operation
Values:	0 = Not A Primary Operation 1 = Primary Operation
Visibility:	Visible with user override

S_SUP

Indicates the Primary Operation is suppressed when the secondary operation is not created.

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Operation
Values:	0 = Not Suppressed 1 = Suppressed
Visibility:	Visible with user override

S_TENONB

Defines the Tenon Bottom position

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Primary Blind Dado Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_TENONL

Defines the Tenon Left position

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Primary Blind Dado Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_TENONR

Defines the Tenon Right position

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Primary Blind Dado Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_TENONT

Defines the Tenon Top position

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Primary Blind Dado Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_X

Defines the Secondary Operations X Position

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Measurement)

Visibility:	Visible with user override
-------------	----------------------------

S_Y

Defines the Secondary Operations Y Position

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

S_Z

Defines the Secondary Operations Z Position

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

SCB

Specifies the bottom scribe for cabinet

Type:	System and/or User Definable
Valid Range:	0~Value < Cab.DY
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

SCBK

Specifies the back scribe for cabinet

Type:	System and/or User Definable
Valid Range:	0~Value < Cab.DZ
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

SCL

Specifies the left end scribe for cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

SCR

Specifies the right end scribe for cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

SCT

Specifies the top scribe for cabinet

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

SDJ

Specifies the inset adjustment of a door/drawer section

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)

Visibility:	Visible with user override
-------------	----------------------------

SEGS

Specifies the facet count for cylindrical objects

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	All
Values:	Numeric (Integer)
Visibility:	Visible with user override

SINKCTR

Specifies the Sink Center

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Wall Face
Values:	Numeric (Measurement)
Visibility:	Visible with user override

SINKMOVED

Flag to Force Resection of Sink Cabinet

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Wall Face
Values:	0 = Do Not Resection 1 = Resection
Visibility:	Visible with user override

SINKSIZE

Specifies the Sink Width

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Wall Face
Values:	Numeric (Measurement)
Visibility:	Visible with user override

SLDORLDFR

Specifies the Sliding doors very left door position

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	DOR_OPEN
Values:	0 = Left Door at Rear 1 = Left Door at Front
Visibility:	Visible with user override

SLDOROVLP

Specifies the Sliding doors overlap

Type:	System and/or User Definable
Valid Range:	0 - DOR_OPEN Width
Applies To:	DOR_OPEN
Values:	Numeric (Dimension)
Visibility:	Visible with user override

SLDORQTY

Specifies the Sliding doors quantity

Type:	System and/or User Definable
Valid Range:	2 - 7
Applies To:	DOR_OPEN
Values:	Numeric (Integer)
Visibility:	Visible with user override

SLDRINSET

Specifies the Sliding doors inset value

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	DOR_OPEN

Values:	Numeric (Dimension)
Visibility:	Visible with user override

SLDRSPACINIG

Specifies the Sliding doors gap value

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	DOR_OPEN
Values:	Numeric (Dimension)
Visibility:	Visible with user override

SNAPDOY32

Specifies the snap elevation of doors to 32mm centers relative to specified bottom reference

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Decimal)
Visibility:	Visible with user override
Remarks:	Typically used for Closet Objects see the Advanced Save Closet Tab topic for more information.

SNAPH32

Specifies that an Object needs to be Sized in height on 32mm increments. Value equals given offset in millimeters.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Decimal) must be in millimeters
Visibility:	Visible with user override
Remarks:	Typically used for Closet Objects see the Advanced Save Closet Tab topic for more information.

SNAPOP32

Specifies to snap door and drawer heights to 32mm centers

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Do Not Snap Heights 1 = Snap Heights
Visibility:	Visible with user override
Remarks:	Typically used for Closet Objects see the Advanced Save Closet Tab topic for more information.

SNAPSHY32

Specifies the Elevation of shelves to 32mm centers relative to specified bottom reference

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Decimal)
Visibility:	Visible with user override
Remarks:	Typically used for Closet Objects see the Advanced Save Closet Tab topic for more information.

SNAPTOINC

Specifies the elevation of an object on a specified increment relative to elevation specified by SNAPTOOSET

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Decimal)
Visibility:	Visible with user override
Remarks:	Typically used for Closet Objects see the Advanced Save Closet Tab topic for more information.

SNAPTOOSET

Specifies the elevation of an Object to specified elevation

Type:	System and/or User Definable
-------	------------------------------

Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Decimal)
Visibility:	Visible with user override
Remarks:	Typically used for Closet Objects see the Advanced Save Closet Tab topic for more information.

SPCNG

Specifies the spacing of one repeated CNC operation to the next. If preceded by M_ indicates Primary or S_ indicates Secondary.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Bore Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

SPLITBO

Specifies if the Partition splits the Bottom

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Part
Values:	0 = Do Not Split Bottom 1 = Split Bottom
Visibility:	Visible with user override

SPLITBR

Specifies the Mid Stile to Split the Bottom Rail

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Part
Values:	0 = Do Not Split 1 = Split
Visibility:	Visible with user override

SPLITTO

Specifies if the Partition splits the Top

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Part
Values:	0 = Do Not Split Top 1 = Split Top
Visibility:	Visible with user override

SPLITTR

Specifies the Mid Stile to Split the Top Rail

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Part
Values:	0 = Do Not Split 1 = Split
Visibility:	Visible with user override

SPOPEN

Specifies whether the space between the face frame and the sub frame is open or framed

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Open
Values:	0 = No Frame 1 = Frame
Visibility:	Visible with user override

STRETCHFIT

Specifies the door and drawer size to stretch to fit an opening

Type:	System and/or User Definable
Valid Range:	1~3
Applies To:	Closet Class Assembly

Values:	1 = Width Only 2 = Height Only 3 = Both Width and Height
Visibility:	Visible with user override

STYPE

Specifies the Internal section type when applied to shelves

Type:	System and/or User Definable	
Valid Range:	0~21	
Applies To:	Open/Part	
Values:	Applied to	Value
	Face Section	
	Unknown	0
	Opening	1
	Rail	2
	Stile	3
	Face Opening	
	Void	0
	Door	1
	Drawer	2
	Open	3
	Pair	4
	False Front	5
	Panel	8
	Blank Panel	9
	Recessed Opening (Sub-Frame)	10
	Tambour (Not Used)	11
	Bottom Rail	20
	Top Rail	21
	Sliding Doors	22
	Interior Section	
	Shelf	0
	Partition	0
	Adjustable Shelf	1
	Fixed Shelf	2
	Drawer Stretcher	3
	Roll Out Shelf	4
	Roll Out Tray	5
	Bottom	6
	Top	7
	Right Finished Partition	8
	Left Finished Partition	9
	Double Partition	10
	Shoe Shelf	11
	Wire Basket	12
	Glass Adjustable Shelf	13
	Hanging (Closet) Rod	14
	Divider	15
	Interior Opening	
	Void (Default on non-Closet Class Objects)	0
	Hanging Section	1
	Shoe Cubby	2
	Drawer	3
Visibility:	Always	

SUBDP

Specifies the Sub-Frame's inset

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Open
Values:	Numeric (Measurement)
Visibility:	Visible with user override

TOEH

Specifies the Cabinet toe height

Type:	System and/or User Definable
-------	------------------------------

Valid Range:	0~Value < Cab.DY
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

TOER

Specifies the recess of cabinet front toe

Type:	System and/or User Definable
Valid Range:	0~ Value < Cab.DZ
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

TOOLID

Specifies the Tool Selected for Operation

Type:	System and/or User Definable
Valid Range:	Valid Tool ID #'s Only
Applies To:	Part/Operation
Values:	Database ID Number (PSNC.accdb)
Visibility:	Visible with user override

TOPANG

Specifies the dado top angle.

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Dado Operation
Values:	Numeric (Measurement)
Visibility:	Visible with user override

TOPNO

Specifies the unique Top number of a Counter Top

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Counter Top
Values:	Numeric (Integer)
Visibility:	Visible with user override

TR

Specifies a user entered width for a Top Rail

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

TSCB

Specifies the recess for back toe

Type:	System and/or User Definable
Valid Range:	0~Value < Cab.DZ
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

TSCL

Specifies the recess for left side toe

Type:	System and/or User Definable
Valid Range:	0~Value < Cab.DX
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

TSCR

Specifies the recess for right side toe

Type:	System and/or User Definable

Valid Range:	0~Value < Cab.DX
Applies To:	Assembly
Values:	Numeric (Measurement)
Visibility:	Visible with user override

TTYB

Specifies the cabinet back toe type

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Unfinished 1 = Finished
Visibility:	Visible with user override

TTYL

Specifies the cabinet left side toe type

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Unfinished 1 = Finished
Visibility:	Visible with user override

TTYR

Specifies the cabinet right side toe type

Type:	System and/or User Definable
Valid Range:	0~1
Applies To:	Assembly
Values:	0 = Unfinished 1 = Finished
Visibility:	Visible with user override

TYPE

Specifies the Assembly Type and the general Part Type:

Type:	System and/or User Definable
Valid Range:	1~41 for Assembly (see Chart below for Part values)
Applies To:	Assembly/Part
Values:	Assembly 1 = Standard 2 = Blind Right 3 = Blind Left 4 = Corner 45 5 = Corner 90 6 = Filler 7 = Desk 8 = Hood 9 = Refrigerator 10 = Valence 11 = UCValence 12 = Appliance Garage 13 = Dish Washer 14 = Trash Compactor 15 = Range 16 = Cook Top 17 = Sink 18 = Microwave 19 = Window 20 = Entry Door 21 = Picture 22 = ToeAssembly 23 = Misc 24 = Closet 25 = Part 26 = Opening 27 = TWall 28 = Container 29 = Electrical 30 = Plumbing 31 = Oven 32 = WashDry 33 = Tub 34 = Shower

	35 = Toilet 36 = BathSink 37 = Splash 38 = Top 39 = ClstVertical 40 = ClstHorizontal 41 = ClstDoorDwr Door Panel 0 = None 1 = Raised 2 = Flat 3 = Glass 4 = HSlats 5 = VSlats 6 = Slab Door Parts 0 = Unknown 1 = Top Rail 2 = Bottom Rail 3 = Mid Rail 4 = Left Stile 5 = Right Stile 6 = Mid Stile Part Interior: 0 = Unknown 1 = Opening 2 = All types of Shelves 3 = All types of Partition Face Section: 0 = Unknown 1 = Opening 2 = Rail 3 = Stile Drawer Box: 0 = Opening 0 = Divider 1 = Partition
Visibility:	Visible with user override
Note:	Valid at Interior, Face, and Drawer Box. Not valid at Case level.

UCSMOD

Specifies the User added Part Can be modified via UCS

Type:	User Definable
Valid Range:	0~1
Applies To:	User Added Part
Values:	0 = UCS Can Not Modify 1 = UCS Can Modify
Visibility:	User Defined

UPCHG

Specifies an Up-charge percentage on an Accessory

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly
Values:	Numeric (Decimal)
Visibility:	Visible with user override

VISIBLE

Specifies if a part will be displayed graphically

Type:	User Definable
Valid Range:	0~1
Applies To:	UCS Part
Values:	0 = Non-Visible 1 = Visible
Visibility:	Visible with user override

WEIGHT

Specifies a Weight

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Assembly

Values:	Numeric (Decimal)
Visibility:	Visible with user override

X

Specifies the X position of an object

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	All
Values:	Numeric (Measurement)
Visibility:	Always

XSECTS

Specifies the value for the cross section counter

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	Job
Values:	Numeric (Integer)
Visibility:	Always

Y

Specifies the Y position of an object

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	All
Values:	Numeric (Measurement)
Visibility:	Always

Z

Specifies the Z position of an object

Type:	System and/or User Definable
Valid Range:	Unlimited
Applies To:	All
Values:	Numeric (Measurement)
Visibility:	Always