



**Kings[®]
Dominion**



RIDE OPERATIONS MANUAL

Table of Contents

DATA SHEET	4
RIDE INFORMATION	5
RIDE DIAGRAM	6
SAFETY GUIDE SIGN	7
RIDE ADMISSION POLICY SHEET	8
RIDE RESTRICTIONS	9
GUESTS WITH DISABILITIES	10
RESTRAINT TIE-OFF'S.....	11
RIDE AREAS.....	11
DEFINITIONS	12
OPENING PROCEDURES	15
DAILY OPERATIONAL AUTHORIZATION FORM (GREEN CARD)	15
OPENING PROCEDURES CHECKLIST (OPC)	15
TEST RIDES.....	18
SAMPLE OPC.....	19
STATION OPERATORS	20
QUEUER	20
UNLOADER.....	21
UNLOADING WITHOUT A QUEUER	22
PROPER RIDING POSITION	22
SAFETY EQUIPMENT LOCATIONS.....	23
TOWER OPERATORS.....	24
TOWER RULES	24
TOWER 3 OPERATION.....	25
TOWER 3 PANEL DESCRIPTION & DIAGRAMS.....	25
TOWER 2 OPERATION	26
TOWER 2 PANEL DESCRIPTIONS & DIAGRAMS	27
TOWER 1 OPERATION	29
TOWER 1 PANEL DESCRIPTIONS & DIAGRAMS	31
BOARD PANELS.....	32
4-7 BOARD OPERATION	32
4-7 PANEL DESCRIPTIONS & DIAGRAMS.....	34
1-3 BOARD OPERATION	36
1-3 PANEL DESCRIPTIONS & DIAGRAMS.....	38
GENERAL RIDE INFORMATION	40
PUMP BOX PANEL DESCRIPTIONS	40
PUMP BOX PANEL DIAGRAM	40
LOCKOUT PROCEDURES.....	41
ADDITION OF BOATS.....	41
SUBTRACTION OF BOATS.....	42
WATER RESCUE/ASSIST SKILLS.....	42
SIGNS OF LOW WATER	45
ROPE USAGE.....	46
CHANNEL WATER.....	46
USING THE LIFT CATWALK DURING OPERATION	46
DOWNTIME PROCEDURES.....	47
GENERAL DOWNTIME INFORMATION.....	47
WEATHER SHUTDOWNS	48
DOWNTIME PROCEDURES OVERVIEW.....	48

TOWER 3 DOWNTIME PROCEDURES	55
STATION ATTENDANT DOWNTIME PROCEDURES	56
TOWER 1 DOWNTIME PROCEDURES	60
TOWER 2 DOWNTIME PROCEDURES	65
4-7 BOARD OPERATOR DOWNTIME PROCEDURES	69
1-3 BOARD OPERATOR DOWNTIME PROCEDURES	74
RIDE EVACUATION PROCEDURES	79
CLOSING PROCEDURES.....	82
SERVICE FACILITIES.....	82
CERTIFICATION CHECKLISTS	82



Data Sheet

Opening Date	1983
Ride Name	White Water Canyon
Generic Name	Raft Ride
Ride Description	A river raft ride where riders experience sudden drops and rapid movements from side to side as they encounter river rapids and hidden geysers.
Type of Ride	Water
Ride Time	6 min
Loading/Unloading Time	1 min
Cycle Time	7 min
Number of Units	18 Boats, 6 seats per boat
Ride Capacity	6 per boat, 1 per seat
Hourly Capacity	1074
Water Capacity	1.2 million gallons
Number of Pumps	4
Pump Volume	36,000 gallons per minute each
Trough Length/Width	1800 feet x 14 feet
Trough Depth	3 to 8 feet
Ride Phone Number	5323
Height Restriction	Minimum of 46 inches to ride
Manufacturer	Constructed by Peerless Pumps Control System Design by Intamin, Inc., Infinity, Inc.
Health Restrictions	Recent surgery, heart trouble/high blood pressure neck trouble, back trouble, or Pregnancy
Ride Rating	4
Annual Capacity	

Year	Ridership
2000	579,571
2001	584,321
2002	601,000
2003	476,663
2004	464,952
2005	385,475
2006	397,506
2007	267,861

Year	Ridership
2008	363,648
2009	394,677
2010	406,857
2011	378,463
2012	334,053
2013	291,262
2014	375,987
2015	306,273

Last Revision to Manual 03/05/16


Ride Information

White Water Canyon is a river rapids ride built by Intamin in 1983. The ride consists of an 1,800-foot tough where 6-person rafts float downstream encountering sudden drops, waterfalls, and geysers before meandering through a sawmill. There are two holding lakes along the route where operators control the spacing of the rafts. Lake 1 is located right after the boats leave the station and Lake 2 is located prior to the sawmill. There are two waterfalls; one of which is midway between the lakes and the other just before entering Lake 2. Geysers drench guests as they sit in lake 2 waiting to be released to the sawmill. Once guests exit the sawmill, they are raised back up to the station via 3 lift belts and inside the station, boats are moved into and via 4 horizontal belts.

White Water Canyon is located in the woods of Old Virginia between the Shenandoah Lumber Company and Kings Dominion Theatre.



Ride Diagram

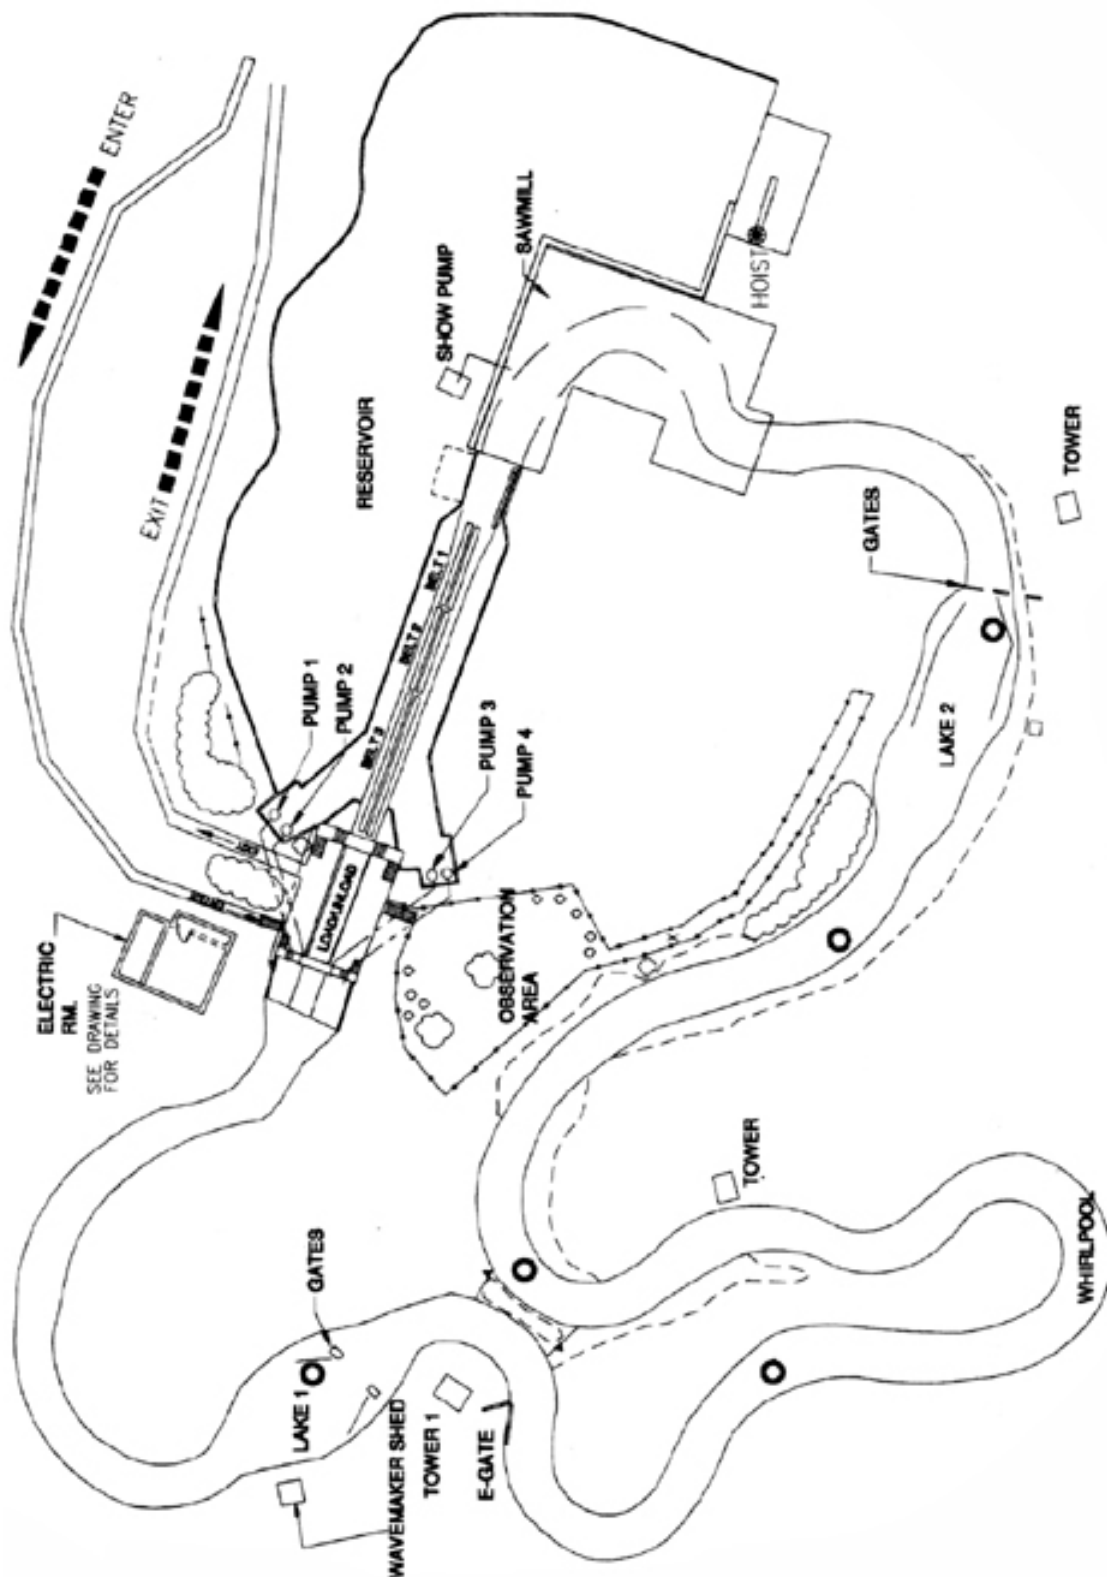

Safety Guide Sign

White Water Canyon Safety Guide



MUST BE 46" TALL TO RIDE
Maximum 6 Guests Per Boat



HIGH THRILL RIDE

Guests with the following conditions are Prohibited from riding:



Recent Surgery



Heart Trouble/
High Blood Pressure



Neck Trouble



Back Trouble

or



Pregnant

or any physical conditions that may be aggravated by this ride.

- All restraint systems must be positioned and fastened properly.
- Remain seated facing forward in an upright position and hold on until the ride comes to a complete stop.
- Keep all parts of your body inside raft at all times.
- You and your belongings will get soaked on this ride.
- Boats may bump into the side channel and other boats.
- Secure all items or leave items in a locker or with a non-rider.
- Shirts and shoes required.

COUNTY INSPC STICKER

Alternate Access via the exit to the left - AMBULATORY.



WARNING

Many rides at Kings Dominion are dynamic and thrilling. There are inherent risks in riding any amusement ride. For your protection, each ride is rated for its special features, such as high speed, steep drops, sharp turns or other dynamic forces. If you choose to ride, you accept all of these risks. Restrictions for guests of extreme size (height or weight) are posted at certain rides. Guests with disabilities should refer to our Guest Assistance Guide available at Guest Services. Participate responsibly. You should be in good health to ride safely. You know your physical conditions and limitations, Kings Dominion does not. If you suspect your health could be at risk for any reason, or you could aggravate a pre-existing condition of any kind, DO NOT RIDE!

Ride Admission Policy Sheet

		Ride Admission Policy	
WHITE WATER CANYON			
Description of Attraction: Water rapid ride with a 6 passenger boat.			
Manufactured by: Intamin	Manufacturer's Name: River Rapids Ride		
Year Installed: 1983	Ride Rating: 4 - High Thrill Ride		
Height Requirement: 46" minimum	Weight Restriction: n/a		
IN ORDER TO RIDE INDEPENDENTLY, THE GUEST MUST HAVE:			
Y	Ability to exhibit independent seated postural control under the dynamic conditions of the ride		
Y	Appropriate center of gravity.		
Y	Ability to hold on with one functioning arm.		
G	Ability to hold on with two functioning arms.		
Y	Ability to brace self with one functioning leg.		
	Ability to brace self with two functioning legs.		
	Minimum of two functioning extremities.		
Y	Minimum of three functioning extremities.		
Y	Ability to enter/exit ride within specified parameters without endangering self or others.		
Y	Appropriate observed behavior.		
CONDITIONS THAT CANNOT BE PERMITTED ON THE ATTRACTION:			
N	Cervical collar or neck brace	N	Braced arm cast
N	Broken collar bone	F	Full leg cast
	Forearm cast		Foot or lower leg cast
N	Full arm cast	N	Hand-held infants (Infants who cannot walk by themselves)
SAFETY GUIDE SIGN:			
☒ No Recent Surgery ☒ No Heart Trouble / High Blood Pressure ☒ No Neck Trouble ☒ No Back Trouble ☒ No Expectant Mothers			
■ All restraint systems must be positioned and fastened properly. ■ Remain seated facing forward in an upright position and hold on until the ride comes to a complete stop. ■ Keep all parts of your body inside raft at all times. ■ You and your belongings will get soaked on this ride. ■ Boats may bump into the side channel and other boats. ■ Secure all items or leave items in a locker or with a non rider. ■ Shirts and shoes required.			
Alternate Access via the exit to the left - AMBULATORY 4			
Many rides at Kings Dominion are dynamic and thrilling. There are inherent risks in riding any amusement ride. For your protection, each ride is rated for its special features such as high speed, steep drops, sharp turns or other dynamic forces. If you choose to ride, you except all of these risks. Restrictions for guests of extreme size (height or weight) are posted at certain rides. Guests with disabilities should refer to our Rider Safety Guide available at Guest Services. Participate responsibly. You should be in good health to ride safely. You know your physical conditions and limitations. Kings Dominion does not. If you suspect your health could be at risk for any reason, or you could aggravate a pre-existing condition of any kind, DO NOT RIDE!			
COMMENTS:			
Y - Must have this criteria in order to ride. F - Cast/brace must fit comfortably inside the ride unit. N - May not ride with this condition.			
G - Two functioning arms are sufficient instead of three functioning extremities if the guest has a normal center of gravity and lower extremities are sufficiently strong to maintain proper riding posture under the dynamic conditions of the ride. Amputations must be at the knee or below.			

updated 03/05/16

Ride Restrictions

Health Restrictions – Persons with a history of the following conditions are prohibited from riding:

- Recent Surgery
- Heart Trouble/High Blood Pressure
- Neck Trouble
- Back Trouble
- Pregnant

Physical Restrictions

- Height restriction: All guests must be 46 inches tall to ride. NO EXCEPTIONS!
- Conditions that are NOT allowed on the ride:
 - Cervical Collar or Neck Brace
 - Broken Collar Bone
 - Full Arm Cast
 - Braced Arm Cast
 - Foot or Lower Leg Cast
- Conditions allowed on the ride as long as the cast/brace fits comfortably in the ride unit.
 - Full leg Cast
- In order to experience the attraction, guests must have:
 - Ability to exhibit independent seated postural control under the dynamic conditions of the ride.
 - Ability to maintain a center of gravity.
 - Ability to hold on with (at least) one functioning arm.
 - Ability to brace oneself with (at least) one functioning leg.
 - Minimum of 3 functioning extremities (2 arms & 1 leg or 1 arm & 2 legs) OR two functioning arms are sufficient instead of 3 functioning extremities if the guest has a normal center of gravity and lower extremities are strong enough to maintain proper riding posture under the dynamic conditions of the ride. Amputations must be at the knee or below.
 - Ability to enter/exit ride within specified parameters without endangering self or others.
 - Appropriate observed behavior indicating a willingness and ability to participate and follow rider requirements.
- Guests of large physical proportions: seat belt must be able to be locked with the guest sitting in the seat properly.
- Guests with any physical conditions that may be aggravated by this ride should refrain from riding.

Behavior Restrictions

- Guests under the influence of drugs or alcohol are not permitted to ride.
- Guests that are not displaying appropriate observed behavior cannot be permitted to ride.
- Guests that do not want to ride should not ride.

Restricted Items:

- HATS are not allowed on this ride.
- CAMERAS: Any camera larger than a standard 35mm camera is prohibited (no exceptions). Extension lenses are not allowed.
- LOOSE CLOTHING: These articles must be worn, tied around the waist or set off to the side. Towels and wash clothes are not allowed.

- MISCELLANEOUS: Canes, crutches, umbrellas, large stuffed animals, food, containers with ice or liquid in them, headphone radios, large packages, anything with sharp corners or points, anything made of glass.
- If you see an item that you feel could cause injury to the guest holding it or others around him/her, do not hesitate to prevent him/her from taking it on the ride.
- Do not take articles from guests. Tell them to place their articles in the boxes.
- It is highly recommended that guests do not wear glasses without safety straps, or unprotected electronic medical devices, such as hearing aids.
- MAKE SURE THAT YOU ALWAYS EXPLAIN TO THE GUEST THAT KINGS DOMINION CANNOT BE HELD RESPONSIBLE FOR ITEMS THAT ARE LEFT IN THE STATION.

Wardrobe Restrictions

- Guests must be wearing shirt, shoes, and pants/shorts.

Consuming Restrictions

- Guests may not eat, drink or smoke while riding.

Guests With Disabilities

- Most guests will access the ride through the entrance. Only those guests with mobility restrictions or Autism will be able to access the ride via the exit. Any guest with the ability to access the ride via the exit will have a Green Rider Access Sheet and Attraction Boarding Pass indicating this permission.
- If a guest comes up the exit requesting access to the ride, politely ask the guest for their Rider Access Sheet. If he/she does not have one, inform the guest you will not be able to provide them access at this time. Direct the guest to First Aid or Guest Services to get a Rider Access Sheet. Call your Area Supervisor if assistance is required.
- If the guest has a Red Rider Access Sheet, politely inform the guest that they are required to wait through the normal line. However, if there is an 'X' on the Red Rider Access Sheet, or Green Rider Access Sheet, the guest is not allowed to ride the ride even through the normal line.
- If the guest does have a Green Rider Access Sheet, first review the sheet to ensure the guest is able to ride your ride. If they can, find out how many people are in the group. The number on the sheet lets you know how many people are allowed to ride (the disabled guest MUST be included in the number of riders).
- If there are more guests in the party than indicated by the number on the Rider Access Sheet, the remaining guests will have to wait in line. The guest with a disability can ride when the rest of the party reaches the load station, but this is not mandatory.
- After figuring out the number of guests in the party, you will have two options:
 1. If there is no line (or less than 2 cycles worth waiting in line) allow the disabled guest and his/her group to ride on the next cycle.
 2. If there is a line (longer than 2 cycles worth waiting in line):
 - Issue the guest a time to return based on the length of the line.
 - If the guest already has an unused boarding time for another ride:
 - Explain to the guest that they have to ride that ride prior to getting any other boarding times.
 - If the guest does not wish to wait for the other ride, you may cross out that ride name and time and issue a time for your ride.
 - If they do not have any outstanding times:

- Record the time to return on the Boarding Pass along with the ride name and your initials. Do not make up or over-exaggerate a wait time.
 - If you are unsure as to how long the regular line is, ask your Supervisor.
- When the guest returns, 4-7 will inform the station operator of which boat to load the guests in. the Unloader should cross through a boat and ask any guests waiting for the boat if they mind waiting until the next boat comes into the station. Also ensure to cross out the time issued when they return to your ride to ride.
- To unload, the unloader may be sent down to turn the Code 6 boat if the guest may have difficulty unloading. The Unloader goes down to the bottom of the lift. 1-3 will stop 1 boat low on belt 1. Once the Code 6 boat hits the boat low on belt 1 turn the Code 6 clockwise so it will be easier for the disabled party to get out. Once the boat is turned signal 1-3 so they can start the belt. Once the code 6 boat is on the belt return to the station. Always make sure the board operators know what you are doing.
- Whenever these guests are loading or unloading, ensure to assist them by offering a hand and/or positioning the wheelchair appropriately.
- Remember, if a guest does not have a Rider Access Sheet, he/she needs to wait in line.
- All riders must meet the physical requirements as indicated in the rider safety guide. If the disabled guest does not meet the requirement, he/she and the rest of their party may not ride through the exit.
- Wheel chairs should be parked outside the wooden exit gate with the wheels of the chair parallel to the gate. All wheel brakes must be engaged before leaving the wheel chair unattended.

Restraint Tie-Off's

Used to indicate that a lap bar, restraint, or seatbelt is not working. Whenever a restraint is not operational, a restraint tie off should be placed on the restraints so guests know that those particular seats are not in operation. The straps for the tie off should be wrapped around the restraint and then zip tied together.

Ride Areas

Danger Zones

Danger Zones are areas that are not located in the normal loading and unloading area where moving portions of a ride come within 10 feet of the ground. All Danger Zones are fenced in to prevent guests and associates from entering and in order for ANYONE to enter a Danger Zone, the ride must be locked out.

Restricted Ride Areas

Restricted Ride Areas are within the ride area, but at times may need to be accessed for a specific reason. Only trained personnel are allowed in these areas and only under controlled circumstances. Restricted Ride areas include:

- Trough

In most situations, in order to get into the trough or up the lift, the ride needs to be locked out, but during downtime situations (Code 2's), operators may enter a Restricted Ride Area in order to guest relate with those stuck on the ride until Maintenance arrives. Before anyone can be removed from the ride, though, the ride MUST be locked out.

Authorized Personnel Only Areas

All perimeter fencing, gates, and doors leading into areas that are not intended for guests or unauthorized associates and are not Danger Zones or Restricted Ride Areas. A ride may continue to operate when someone is in one of the following areas, but only trained and authorized associates should be in one of these areas.

- Anywhere along the paths around the ride.
- Sawmill
- Lift
- Old Observation Area
- Between the Exit Walkway & Reservoir
- Computer Room or outside the Computer Room

Definitions

- **1-3 BOARD** – The level 1 position that is responsible for the whole ride's operation, this board directly controls belts 1-3 (the lift) as well as belts 4-7 if necessary.
- **4-7 BOARD** – The level 2 position that is responsible for the operation of the belts 4-7 (the station belts).
- **AIR HOSE** – Located on a reel on the unload side of the station and on the side of the sawmill. Used for filling the boats with air when they become slightly deflated.
- **AUXILIARIES** – The wave maker and the drive drums, which can be activated by the buttons labeled as such inside the box located outside the computer room; should be activated for the day after the pumps have been started and water equalized.
- **BACKUP GATE** – A gate located after lake 1; used to stop boats from continuing on the course of the ride should more than one boat leave lake 1 at one time.
- **BACKUP GATE RELEASE VALVE** – Located on the backup gate device system to release the air pressure for the backup gate after it has been engaged; must be used in conjunction with the switch in tower 1.
- **BELT** – Work as conveyor belts to move the boats into and out of the station for loading and unloading the guests; belts 1-3 comprise the lift that is controlled by the 1-3 board and belts 4-7 comprise the station and are controlled by the 4-7 board, or in some cases the 1-3 board.
- **BOAT JAM** – When boats get stuck so that they prevent each other from further travel through the trough; this may occur in the station as well.
- **BOBBY** – Used to indicate a man overboard.
- **B-T** – term used for sending a boat straight through the station without stopping to unload or load (short for Blow Through).
- **CATWALK** – Located along the edge of the sawmill over the reservoir, allows access to the mouth of the sawmill where boats are added and subtracted.
- **CENTER RING** – Circular padded piece in center of boat for guests to hold onto.
- **CEREAL** – Term used to describe the situation where two boats leave lake 1 together and the back-up gate is engaged.
- **CLOSE BOATS** – Term used on headset to alert the other operators to pay close attention to boats that may touch.
- **DIP** – A place in the trough directly beyond the backup gate that is named & used as a landmark for spacing.
- **DISPATCH POINT** – Designated by landmarks and used to space the boats properly.
- **DISTRIBUTION BOX** – Located outside the station next to 4-7; permits the water to build up out of the pumps and then distribute properly into an even flow.

- **DRIVE DRUM** – Used in pairs, they are located directly before the gates at lake 1 and lake 2; they turn in opposite directions to encourage one boat through the gates while pushing the other boats back.
- **EQUILIZER VALVE** – Red valve located at the side of the exit of the sawmill used for the draining of lake 2, remains in the up position during normal operation.
- **EVACUATION ROPE** – Used to pull the lead boat once the boats have been tied together during a lake 2 evacuation; this is kept on a hook on a tree located across the trough from tower 2.
- **FLOOD GATE** – Gate at bottom of lift outside the sawmill used when draining lake 2, remains in the down position during normal operation.
- **GAP** – Term used by the headset operators to request for more space between dispatching of boats for various reasons.
- **GEYSERS** – Located in lake 2 these spray the guests with water to enhance their ride; they may be turned on by the 1-3 operator based on temperature and used by the tower 2 operator to spray the guests.
- **JELLY** – A boat jam in lake 2, this may become large and requires Maintenance to physically separate the boats.
- **JUICE** – Term said to 1-3 when 4-7 hits the station stop.
- **LACING** – The ropes that help hold the tube of a boat to the fiberglass seating area.
- **LAKE 1 & LAKE 2** – stopping points in the ride that allow the operators to space the boats for maximum safety.
- **LAKE GATES** – Located at the exiting points of lakes 1 and 2 and controlled by the towers 1 and 2 operators respectively; responsible for proper spacing of the boats throughout the ride; these are also controlled by photo eyes that prevent operator error of close boats.
- **LATE THIRD** – Term used between 1-3 and 4-7 operators to signify that the third boat coming off the lift will be later than the first two.
- **LEAD BOAT or FOLLOW BOAT** – Terms used for the boat preceding or following a boat to be removed or a code 6 boat.
- **LIFT** – Comprised of the belts 1-3, this brings the guests up and into the station through control by the 1-3 board operator; may hold nine boats in emergency and at night.
- **OBSERVATION AREA** – Area that overlooks parts of the ride; guests are no longer able to use this area. Consists of the inner island surrounded by the trough.
- **PANCAKE** – Used to indicate a capsized boat.
- **PHOTO EYE** – Electrical sensors used in pairs, placed directly across from each other, that can determine when a boat passes between them; these are used in several places on the ride as part of the safety system including three sets in the station for boat parking, the top of belts 1, 2, and 3 to prevent boat bumping in automatic, and two sets at each lakes' gates to prevent boats from being spaced too close together.
- **POTENTIAL** – Situation in which the pumps may be hit.
- **PUMP** – Used at water rides for the function of filling the ride area with water that is pulled from the reservoir and maintaining the flow of that water; this ride has four large pumps; the pumps may be started by use of a DO18 key to turn on the power (in the box outside the computer room). After power is turned on, wait for the start-up alarm and then hold in the main pumps button until you see three of the pump lights come on through the window next to the box, thus indicating that three pumps are running, which is the set number that are on at any given time.
- **PUSH POLE** – PVC pipe used to manually space boats in the case of Lake #1's gates being stuck open; this is kept on the ground near the backup gate.
- **QUEUE LINE** – Line of guests waiting to ride the ride; once it passes the ride entrance it should be continued with temporary queue poles.

- **RAIN CURTAIN** – Curtains of water located in the sawmill.
- **RESERVOIR** – Large lake-like area at side of sawmill that holds the ride's water when pumps are off.
- **ROLLER** – Located between the belts in the station, these encourage the process of the boats moving through the station and also out of the station.
- **SEAT BELT** – Used to reinforce to the guests that they should remain seated, there are three in each boat each covering two people.
- **SCREENS** – Located around the pumps, these prevent medium to large debris from entering the pump area.
- **SHEPHERD'S CROOK** – A long staff with one end being hook shaped that is used as a rescue device. Located at each tower and outside the computer room.
- **SPACE TWO** – Term used between the 1-3 and 4-7 operators to signify that there will only be two boats coming into the station and they will be separated.
- **STATION GATES** – Located on the loading side of the station, these three gates allow guests to enter the boats; they are controlled by either the 1-3 or the 4-7 operators.
- **SWING GATE** – Located at the bottom of the lift in the water, this gate is controlled by the 1-3 operator and is used to push boats out into the reservoir either for the purpose of subtracting or in emergency situations.
- **THROW BAG** – Rope in a bag used to toss as a life saving device. Located at each tower, the bottom of the lift, the sawmill, at Queue and 4-7.
- **TRAPPED BOAT** – When a boat reaches a space (typically in lake 2) where it is held in by other boats that continue to pass by, preventing its further travel through the ride.
- **TUBE** – The rubber bottom of the boat that allows flotation.
- **VALVE STEM** – Opening in the boat tube that allows the air hose to fill the tube with air.
- **WAVE MAKER** – Machine located under small building at side of lake 1 before tower 1 used to create a wave like effect to enhance the ride and contribute to boat movement.
- **WEIR BOARDS** – Wooden boards of various shapes and sizes secured to the bottom of the trough, placed strategically throughout the ride to enhance the rapid-like experience.
- **WHIRLPOOL** – Area in the ride that is at the end of tower 3's zone 1; used as a landmark for spacing.
- **ZONE 1** – Beginning at Lake #1 & ending at the whirlpool. This area is to be watched through a monitor in tower 3.
- **ZONE 2** – Beginning at the whirlpool and ending at waterfall #1. This area is to be watched primarily by the tower 3 operator but also by the tower 1 operator.
- **ZONE 3** – Beginning at waterfall #1 and ending at Lake #2. This area is to be watched through a monitor in tower 3.

Opening Procedures

Call in to the Time and Attendance System (extension 5500) from the phone at your location. Do not all clock in more than 5 minutes prior to your start time unless given permission by your Supervisor. Sign in on the roster at your location.

Daily Operational Authorization Form (Green Card)

Verify the Green Card is complete with appropriate location name, date, and Maintenance Signature. The supervisor must also sign the Green Card.

If the Daily Operational Authorization Form is absent, DO NOT OPERATE YOUR RIDE! Call extension 5100 (Communications) and ask them to page the appropriate Maintenance Crew. When Maintenance calls, try to obtain a verbal OK from Maintenance. If Maintenance says it is alright to run your ride, you may begin your test runs.

YOU MAY NOT OPEN YOUR RIDE TO GUESTS UNLESS THE DAILY OPERATIONAL AUTHORIZATION FORM AND OPENING PROCEDURES SHEET IS COMPLETELY FILLED OUT BY MAINTENANCE AND RIDES.

Opening Procedures Checklist (OPC)

The Supervisor does not initial each line of the opening checklist. Instead, the associate who completes each task should sign his/her initials on the appropriate line of the checklist. If any item on the checklist fails while being tested, stop the ride and call Maintenance and your Area Supervisor.

After all safety checks are completed, the test ride can be performed. Once all opening procedure items have been completed, the Level 1, Supervisor, or person in charge should sign the OPC, signifying that the ride passed inspection and is ready to open.

- Station:
 - Check telephones for a dial tone.
 - Check to be sure that the gates open and close properly.
 - Check the safety equipment at the following locations:
 - Tower 1 – Shepherd's Crook, Throw Bag, Throw Ring, and Life Vest
 - Tower 2 – Evacuation Rope, Shepherd's Crook, Throw Bag, Throw Ring, and Life Vest
 - Tower 3 – Shepherd's Crook, Throw Bag, Throw Ring, and Life Vest
 - 4-7 – Throw Bag, Throw Ring, and Life Vest
 - Outside of Computer Room – Shepherd's Crook
 - Base of Lift – Rope, Throw Bag, and Throw Ring
 - Observation/Sawmill – Throw Bag, Throw Ring, and Life Vest
 - Queue – Shepherd's Crook, Throw Bag, Throw Ring, and Life Vest
 - Test the 1-3 and 4-7 PA and headsets.
- Make sure that the gate in the observation area is closed and locked and also the manhole cover is in place.
- Make sure that the gate on the entrance ramp is closed and locked.
- Make sure the entrance, exit, observation area and station are clean and clear of debris. Be sure to set up temporary queue poles if necessary.

- Check the trashcans along the entrance, exit and in the station to see if they are positioned and lined properly.
- Walking the trough.
 - As you walk the trough, check for obstructions (tree limbs, boulders) loose weir boards, any trough damage, any overhanging bushes that may interfere with a passing boat, missing drain plugs, and any unauthorized personnel.
 - Begin behind the reservoir and check the manhole covers. Then walk to the steps leading to the sawmill catwalk. Once off the steps, check to ensure the access hatch is in the down position. Check inside the sawmill by opening the door on the back side of the sawmill. Check for any obstructions, or anything hanging down from the rafters. Do NOT forget to shut and lock the door. Walk to the end of the catwalk and check to make sure that the silver flood gate is in the down position and that the red valve is in the up position. Also check for the two hook used to remove boats and make sure that the air hose is wrapped around its brackets. There should be a lifevest hanging on the wall. Ensure the a-phone works and the headset is on the phone box.
 - Walk the path around to the Sawmill entrance and check the trough. Ensure the yellow dispatch mark is clear of any debris and visible from Tower 2. Now walk to Tower #2. Once in Tower #2, check the section of the trough from Lake #2 gates to the entrance of the sawmill. Also check Lake #2 and as far up the trough as you can see. Check the throw bag, throw ring, fire extinguisher, flashlight, a-phone in the Tower. Also, check the Lake PA, sawmill PA, and emergency PA. Check the headset. Set up the monitor and make sure it is working. Check the air pressure (which should be between 110 & 120 psi). Uncover the board and ensure the e-stop is pulled up. Check across from the tower for the lake #2 evacuation rope. Ensure there is a shepherd's crook next to the Tower. Once done walk to the gate mechanism and check to see if the pins are there.
 - Walk past waterfall #2 and step out onto the rocks. Look down into the trough for the lake #2 rope.
 - Walk towards waterfall #1, walking as close to the trough as possible, checking the trough while you walk. Also take note that all the boulders are in place.
 - Walk to Tower #3. Once in Tower #3, check fire extinguisher, flashlight, a-phone, throw ring, and throw bag. Also, check headset, emergency PA, and all 3 zone PA's. Set up both monitors and make sure they are working. Ensure the e-stop is up and that there is a shepherd's crook in front of the Tower. Check the section of trough leading into the whirlpool. Continue to walk the trough. Stop in the whirlpool and check the camera and PA speaker to make sure they are still there. Also make sure all manhole covers are intact.
 - Walk the rest of the trough to Tower #1. Stop at the Evacuation Ramp and make sure the safety wire is up. Once in Tower #1, check the throw bag, throw ring, flashlight, and fire extinguisher. Check the a-phone, lake PA, emergency PA, and the lake #1 digital spiel. Set up the monitor and make sure it is working properly. Check the headset and uncover the board to ensure the e-stop is up. Check outside the tower for a push pole/shepherd's crook, and evacuation ladder. Check Lake #1 and also ensure that the back-up gate is flush up

against the wall of the trough. Walk to the station, checking the trough as you go. Make sure white plumbing pipe is not hooked up to the green piping. If you notice anything unusual contact the Location Supervisor as soon as possible.

NOTE: DO NOT ENTER THE TROUGH AT ANY TIME WHILE WALKING THE TROUGH!!

- Starting the Pumps:
 - Take down the rope across the mouth of lake #2.
 - Make sure that 1-3 and both tower 1 and 2 operators verbally clear the trough and are in their correct positions.
 - Key in the system, by putting the key into the keyhole and turning to the right. A horn will sound. After the sound and 15 seconds, push the "Main Pump" start button and look into the window for three lights to come on.
 - Without turning, pull out the key and return the keys to the 4-7 operator.
- Starting the Auxiliaries: When the water has reached equilibrium; start the auxiliaries by pressing the "Drive Drum" and "Wave Maker" buttons.
- Perform complete block check procedure in both Towers. Make sure that the water level stabilizes before dispatching any boats from the towers. To do this the Area Supervisor or maintenance personnel needs to be present. The Tower #2 operator will hold down the dispatch button until 4 boats have dispatched automatically. The Tower #1 operator will also hold down the dispatch button until 4 boats have been dispatched automatically. On the fourth boat, the Tower #1 operator will engage the back-up gate.
- Work with Maintenance to add or subtract boats as necessary.
- Perform complete test runs. Have 4-7 start and stop the station belts in hand and automatic mode. Then put the belts in auto and test the horizontal belts. Then test the lift belts by moving the groups on the lift up a belt as well as starting and stopping them in hand and automatic mode. Have Tower #2 start dispatch until the boats in Lake #2 are sure not to jam.
- Visually check all the boats in the trough as they come through the station:
 - Check the ropes securing the fiberglass hull of the boat to the tube.
 - Check the seats, seat padding, center ring padding and the seat belts.
 - Check the air level.
 - Check the hull of each boat for any damage.
 - Check for any trash or debris.
 - Check the drains.
- A test ride must be completed by a Level 1 before opening the ride.
- Fill cooler with ice and water.
- Ensure the rain curtain is on.
- Meet guests at the entrance and walk them up the line.
- Remember that all items on the OPC must be initialed and the OPC must be signed by the Level 1, Location Supervisor, or person in charge before allowing guests to ride.

Test Rides

- The ride must have a test ride completed on one boat before allowing guests onto the ride.
- Only qualified associates may complete a test ride. Anyone with a Level 1 Certification for the ride is qualified and generally any Rides or Aquatics Lead, Supervisor, or Area Supervisor is also qualified to test ride any ride.
- The purpose of the test ride is to ensure all components of the ride are operating as they should including mechanical, electrical, plumbing, landscaping, and custodial elements.
- While riding, the test rider should pay attention to how the ride feels as well as any unusual sounds or any visual concerns while on the ride. Example of potential issues include:
 - A rougher ride than normal which may indicate an issue with a wheel.
 - Tree branches that are getting too close to the track and may need to be trimmed.
 - Slower or faster than normal speeds.
 - Cleanliness concerns that a guest could see while on the ride.
 - Abnormal stops. For example, an abrupt stop in a brake zone may indicate too much air pressure is being applied).
 - Potential safety concerns either at the ride where the test ride is being completed or at a neighboring ride. For example, a gate that is not secure to a ride that is cycling.
 - Maintenance Items – signage that needs to be replaced, lights that are out, etc.
- If ever in doubt about how the ride or a boat is operating, do not hesitate to not open and contact Maintenance and your Supervisor.
- Associates must always follow all riding instructions. For example, associates must hold onto grab bars, lap bars, etc at all times. Operators should never ride with their hand in the air. We must set the appropriate example for other associates and guests.
- Once the test ride is complete the associate who completes each test ride must sign the OPC and document the time the test ride was performed.

Sample OPC

 White Water Canyon 		
Date: / / Day:		
Associate Initials	Procedure	
	1 Ensure Maintenance Green Card is complete, dated, and signed.	
	2 Check for blank inspection checklists to be used the next day. Notify the supervisor if this is the last one.	
	3 Make sure trashcans are in their proper places and lined.	
	4 Make sure the entrance, exit, and station are clean and free of debris and puddles.	
	5 Ensure height pole/sign is available/undamaged and height bands are stocked.	
	6 Check to make sure the "Buddy Box" is sealed and intact.	
	7 Walk the trough from the sawmill to the station inspecting the sawmill & catwalk (floodgate, red valve, air hose, hook, lifevests, door closed), dispatch points, manhole covers, lake 2 pushpin, and trough (obstructions, weir boards, wire in place at old evacuation ramp, fill pipe not hooked up, boulders in place, damage, missing drain plugs).	
	8 Check Tower 1 - shepherd's crook, push pole, throw bag, throw ring, lifevest, P.A., headset, extinguisher, monitor, air pressure, & ladder.	
	9 Check Tower 2 - shepherd's crook, throw bag, throw ring, lifevest, P.A., headset, extinguisher, air pressure, lake 2 evacuation rope, & monitor.	
	10 Check Tower 3 - shepherd's crook, throw bag, throw ring, lifevest, P.A., headset, extinguisher, & monitors.	
	11 Check Queue - throw bag, throw ring, and lifevest (top of stairs) & shepherd's crook (bottom of stairs)	
	12 Check Lift - throw bag, throw ring, & rope at bottom of lift	
	13 Check Outside the Computer Room - extinguisher, gate & shepherd's crook at distribution box.	
	14 Check Observation Area/Sawmill - extinguisher, throw bag, throw ring, & lifevest in sawmill and cleanliness & closed man hole cover in observation area.	
	15 Check 4-7 - phone, P.A., headset, lifevest, pump box lockout, throw ring, spare boat ropes, and throw bag.	
	16 Check 1-3 - P.A., headset, swing gate, lock out cover and extinguisher.	
	17 Take down lake #2 rope.	
	18 Ensure all gates are locked (entrance line, Haunt, ADA, load).	
	19 Turn pumps and auxiliaries on.	
	20 Verify operation of drive drums, wavemaker, and lake 1 digital spiel.	
	21 Check a-phone system.	
	22 Perform test run procedures as specified in the manual.	
	23 Test station belts by starting/stopping in hand and auto. Test station stop in hand and auto.	
	24 Test lift belts by starting/stopping in hand and auto.	
	25 Check each unit - cleanliness, damage, signage, fiberglass, seatbelts.	
	26 Remove any boats specified by maintenance.	
	27 Verify each boat cycles at least once.	
	28 Verify block check has been completed for both towers and test back up gate. <i>(Area Supervisor or Maintenance Only)</i>	
Pre-Opening Test Ride Performed:		
Boat # _____	Authorized Signature _____	Time _____
Before this attraction can open, this sheet must be initialed and signed.		
Authorized Signature _____		Time _____
Closing Data - E-Stop Test		
Location _____	Authorized Signature _____	Printed Name _____

Station Operators

- Always be aware of the overall operation of the ride. Know what is going on around you - ESPECIALLY if you are on a board.
- Be alert to the ride's usual sounds. If anything sounds unusual, notify a board operator and the supervisor.
- Never let a guest relations problem hamper the safe operation of the ride.
- DO NOT WALK IN FRONT OF 1-3 OR 4-7. Never get in the way of their sight lines.
- Always watch for excessive amounts of water in the boats. If the boat has a lot of water in it, the drains may be clogged. Always keep trash out of the boats.
- When not performing a specific task, operators should stand back from the belt area at ALL times.
- Check boats for air. Make sure you follow the proper procedures for airing a boat. Air adjustments that are needed should be approved by the 1-3 operator. If the boat is in desperate need of air and there is no time to do so, send it out empty and try when it returns.
- Strict adherence to hand signal procedures must be followed at ALL times. HAND SIGNALS MUST BE CLEAR AT ALL TIMES!
- Being a water ride, all areas of the ride are potentially slick. Caution should be used on the dock, station, rocks, catwalks, and boats. Always be aware of this danger particularly when in a hurry during shutdowns.
- Watch for line jumpers. If you see a line jumper, remember the clothes they are wearing. When they reach the station, address the situation to determine if they should be allowed to ride. Call Security if needed.
- **Crossing** - If you need to cross, direct the proper hand signal to the 4-7 operator. When he acknowledges by removing his hands from the panel and saying "cross," you may cross through a boat. Do not attempt to jump across or walk along the tubing of the boats. Do not cross behind the seats.

Queuer

- Make sure guests have finished eating and drinking.
- Make sure each guest has shirt, shoes, and pants/shorts on.
- Check for wristbands on small children. Measure guests as needed. Any guest that is below 46 inches must exit over the bridge and not cross through the boats.
- Find out how many guests are in each group. If there are 4 or more, send them to wait at either belt 6 or 4. If there are 3 or less, have them wait at belt 5 until you find another small group to pair them up with.
- Keep the lines "stacked". This will prevent the lines from going empty during a guest relations problem, or other situation that may hinder steady line movement.
- Do not let anyone pass you if they have any problems with the above rules and regulations. If you have a guest relations problem try to handle it yourself. If this does not work ask the guests to step aside and inform your supervisor.

Responsible for watching during operation:

- Guests in queue
- Guests in lines
- Board operators (1-3 and 4-7)
- Observation Area/Bridge
- Restricted areas to ensure they are clear

Unloader

- Always use clear hand signals. Hand signals are important to let the operator on 4-7 know whether or not that boat is ready to be moved. Hand signals are:
 - WAIT: Hold your left hand up in the air with palm open, thumb pulled in.
 - GO: thumbs up signal with your right hand.
- Make sure everyone remains seated until his or her boat comes to a complete stop in the station.
- Tell guests to exit towards the article bins (your side of the station). Help them if necessary, or speed them up if necessary.
- Load the groups waiting to enter the boats. The guests should place any articles that they cannot or do not want to take on the ride in the article boxes. Do not take articles from a guest. Ensure they know that Kings Dominion is not responsible for articles and cannot watch them.
- Make sure guests are seated properly. *NO ONE* is allowed to sit on the steps and only one person per seat. No children are allowed to sit in the laps of other guests.
- Do not hang on to seats or enter boats. If you have to enter a boat, signal the 4-7 operator and make sure he acknowledges you before stepping into the boat.
- Tell guests to fasten their seat belts and visually confirm that they are secured. Remember to remind the guests to remain seated and to keep arms and hands inside the boat at all times. All guests need to be told to "Hold on to the center ring."
- Ensure the exit gate is closed.
- Before clearing each boat, the unloader performs a visual confirmation scan.
- The confirmation scan for this position is a systematic review of specific locations at the ride to ensure it is safe for dispatch (i.e. gates are closed, operators are in the correct position for dispatch, guests are seated and ready, there are no guests left on the ride platform). These locations are:
 - Entrance Gates/Queuer Side of Station
 - 4-7 Operator
 - Entrance Gate behind 4-7
 - Exit Gate
 - Unload Side of Station
- At belt 6, the unloader gives a hold sign with both hands. Once the boat on belt 6 is ready to be dispatched, the unloader gives a thumb with the right hand and a hold signal with the left hand. Step back to belt 5 check the boat while keeping the thumb up on the right hand (to signify boats ahead of you are ready to be dispatched) and the hold sign with the left hand (to signify that the boat beside you and behind you are still not ready). When that boat is ready to be dispatched, move back to the last boat and give two thumbs up when the last boat is ready to be dispatched. If belt 4 is ready to be dispatched, and belt 5 (or 6 and 5) have not yet been dispatched, the unloader will then give double thumbs up and a verbal "clear" to the 4-7 operator.
- Once the boats have left and you double check the unloading side to make sure the exit is clear, walk back down and meet the next group of boats.
- Walk toward the reservoir side of the station and as the boats enter, ensure all guests are seated/holding onto the center ring. When the boats stop, ask them to exit.
- Walk back down to the boat on belt 6 and load it as stated before.
- Always watch for guests walking into the unloading area. Always keep exit area clear. Do not let any strollers on to the gray part of the exit ramp.
- Watch for guests with disabilities. Inform the 4-7 board operator and he will tell you which boat is good to load them in. The unloader must cross and ask the group waiting for that boat to wait while we load the Code 6. Thank them for their patience. Help them load. To unload, the unloader may be sent down to turn the Code 6 boat if the Code 6 will be difficult to unload. Go

down to the bottom of the lift. 1-3 will stop 1 boat low on belt 1. Once the Code 6 boat hits the boat low on belt 1 turn the Code 6 clockwise so it will be easier for the disabled party to get out. Once the boat is turned signal 1-3 so they can start the belt. Once the code 6 boat is on the belt return to the station. Always make sure the board operators know what you are doing. Ensure to follow all guest with disability policies (located later in the manual).

- The unloader also has height station duties.
- Ensure to constantly watch all guests in the station, boats moving into or out of the station, the other operators, exit area, lift, bridge to observation area, and restricted areas.

Unloading Without a Queuer

- The unloader is responsible for loading responsibilities for the boats from the gate behind 4-7.
- All queuing responsibilities must be carried out (height check, grouping, etc).

Proper Riding Position



- Seat belts must be secure at all times.
- Feet should be flat on the floor of the boat.
- Sit up straight and hold onto the center ring at all times.

Safety Equipment Locations

Fire Extinguishers

1. In Tower 1 (ABC extinguishers used on all types of fires)
2. In Tower 2 (ABC)
3. In Tower 3 (ABC)
4. In the Sawmill (ABC extinguisher)
5. At the 1-3 Board (ABC extinguisher)
6. In the Computer room (CO2 extinguisher used on electrical fires)

Throw Rings

1. One near 4-7
2. Tower 1
3. Tower 2
4. Tower 3
5. Base of Lift
6. Next to Queue
7. Inside Sawmill

Throw Bags

1. Next to Queue
2. Next to 4-7
3. In the sawmill
4. At the bottom of the lift
5. In Tower 1
6. In Tower 2
7. In Tower 3

Life Vests

1. Next to queue
2. At 4-7
3. On the Sawmill Catwalk (at the flood gate)
4. Tower 1
5. Tower 2
6. Tower 3
7. Inside Sawmill
8. Bottom of the Lift

Shepherd's Crook

1. One next to the distribution box.
2. At Tower 1 (push pole is also at Tower 1)
3. At Tower 2
4. At Tower 3
5. At Queue

Rope

- Rope at the base of the lift used in potential E-stop situations.
- Lake 2 Evacuation Rope located on the observation island side across from Tower 2

Flashlights – one in each Tower

Evacuation Ladder – Tower 1

Buddy Box – 4-7 board

Push Pole – Tower 1

Tower Operators

Tower operators are responsible for all of the following:

- Watch for guests standing in boats or sticking hands out of boats. If a guest is doing something wrong such as standing, the tower operator should use the PA system to warn them to be seated. Remember to be polite but firm. If the guest doesn't obey, tell the next position of the potential problem. If the problem persists, ask the station operators to speak to them about the problem to determine if they will be allowed to come back on the ride. All guests need to be told to "Hold on to the center ring."
- Watch for water level increases, decreases or areas where the ride might be losing water.
- Watch the normal flow of boats to make sure there are no signs of a possible boat jam, or close boats in the trough.
- Watch all boats for low air in their tubes, cracks in fiberglass, any boats unusually flowing, or "tails" on the rubber tubing. Watch for tilted boats.
- Watch for any trough obstructions such as tree limbs, stuffed animals, boulders from the canyon wall, or other hazardous objects. For these situations contact the station and make them aware of what is going on.
- Watch the observation area for guests.
- Dispatch at night is at reduced or restricted due to lower visibility.

Tower Rules

- No singing, whistling, or unnecessary noise on the headset.
- No horseplay in the towers when rotating or other times. No distracting activities are allowed.
- No eating, smoking, or reading in the towers.
- Sit up straight and be attentive. DO NOT *LEAN*; it does not present a good appearance to the guests.
- Conversations on headset are allowed but always remember in any emergency situation, all conversations must come to a complete stop until the situation is corrected.
- ALWAYS speak politely over the PA
- Take the tower positions seriously. If you do not, you will not be allowed to operate the towers.
- Always respond to someone when they ask you to do something (i.e. to slow dispatch - you should say "okay" or something to let them know you heard and are doing it).
- Always clean up the tower when leaving. There should be no trash in or around the tower or the trails especially when closing.
- DO NOT cut off your headset. The only time you are allowed to cut off your headset is when you are training another associate or when you are guest relating. Cutting off your headset for any other reason is strictly prohibited.
- When rotating be sure to tell the person taking your place the number of boats on and any other ride information (i.e. Code 6's). Identify yourself when you first get on the headset.

Tower 3 Operation

- Tower #3 should watch the normal flow of boats as they leave Lake #1, as they go down the dip, through the whirlpool, in front of the tower, and past waterfall #1. You should also watch the monitors.
- The tower #3 operator must always watch the boats to make sure that the guests are in proper riding position, which is with both feet flat on the bottom of the boat, seatbelts fastened, and at least one hand on the center ring.
- If a guest is not in this position, use the PA to politely spiel to the guest. There are three PA zones: the first is at the whirlpool camera, the second is at the tower, and the third is at the waterfall #2 camera. To use the PA, just hold the switch to the corresponding zone in which you need to speak.

Responsible for watching during operation:

- Zone 1 (in Monitor)
- Zone 2 (in front of Tower)
- Zone 3 (in Monitor)
- Headset call light
- Tower 1 Operator
- Restricted areas to ensure they are clear

Tower 3 Panel Description & Diagrams

Control Panel

1. **Emergency Stop** – Cuts off all auxiliaries, belts, and the pumps.
2. **Call Button** – Used to get the other headset operators' attention whenever the headset is not working.
3. **Zone Switches** – When pushed up specific speakers to a zone will work (the three zones are – prior to the whirlpool, whirlpool to waterfall 1, and from waterfall 1 to lake 2)

Sound Panel

4. **On/Off Switch** – Used to turn off or on the headset.



Tower 2 Operation

Operating Procedures

- Tower #2 should watch the normal flow of boats as they come into Lake #2, through the lake, into the sawmill, and in the sawmill (with the video camera).
- Tower #2 should also watch the extended observation area.
- The Tower #2 operator is responsible for spacing the boats for their trip through the sawmill. The operator should make sure that the drive drums, geysers, TV monitor, and waterfall #2 are working at all times.
- Some geysers in Lake #2 work on a photo cell system. As a boat passes by the photo cell it sets off the geysers sequence. Tower #2 also has a manual geyser. The operator should watch the air gauge to make sure he doesn't "red line" the geysers. Red line means to lower the air pressure to a point that the geysers automatically shut off until the pressure builds back up again. The geysers are not there for enjoyment and should never be played with to the extent that it distracts attention from the ride. Any misuse of the manual geyser will result in disciplinary actions.
- The dispatch points for Tower #2 are normal, reduced, restricted, and visual. Normal (20-23 boats) is as the boat first passes the photo eye. Reduced (16-19 boats) is at the yellow line. Restricted (15 or less) is as the boat enters the sawmill. Visual is when the 1-3 operator can first see the boat coming out of the sawmill.
- Prior to dispatching each boat, perform a visual confirmation scan.
- The confirmation scan for this position is a systematic review of specific locations at the ride to ensure it is safe for dispatch (i.e. gates are closed, operators are in the correct position for dispatch, guests are seated and ready, there are no guests left on the ride platform). These locations are:
 - Lake #2 – making sure all boats have settled before opening the gates
 - Guests on the boats – ensuring all are seated properly
 - Drive Drums – on and functioning properly
 - Trough towards the sawmill

Opening Tower #2

- Ensure the Lake 2 rope is taken away and then recheck your equipment (P.A.'s, headset, safety equipment).
- After you are done with this, and the auxiliaries have been started, you have 1-3 permission and the Area Supervisor is present, start your block check by holding down the dispatch button to allow the system to dispatch four boats.

Closing Tower 2

- Be aware what the last boat number is after it leaves Lake #1. Tell 1-3 when you dispatch the last loaded boat.
- Tell 1-3 to turn off the geysers.
- After the last loaded boat is sent, you should send a group of four boats and then send a sawmill gap, send three boats and then a second gap and send two boats and stop.
- Tell 1-3 what the last boat number is.
- You can now turn the drive drums off for the night.
- You need to wait in your tower until the last boat that Tower #1 sends gets safely into your lake. When it does, tell 1-3 the final boat count and the pumps may be hit.
- Clean up, store the headset in a trashbag under the shelf.
- Turn the lights in the tower off and go back to the station.

- Do not forget to put the rope across Lake #2.

Adding a boat

- When you see the boat come in from Lake #1 that has the whirlpool gap behind it, dispatch until there are only two boats left (the lead boat for the gap being one of them).
- Stop dispatch and tell 1-3 what the last boat number dispatched is so he can tell Maintenances at the bottom of the lift when to add the boat.
- Resume dispatch when the boat has been successfully added and 1-3 tells you to go ahead. If we do this right, we should never get a boat jam from adding (or subtracting) boats.

Subtracting a boat

- Watch for the lead boat to come into your lake.
- Keep in close communication with 1-3.
- Dispatch your lead boat and tell 1-3 its number.
- Next, dispatch the broken boat at a sawmill dispatch and then stop dispatch.
- Be sure to keep 1-3 informed of the broken boat's location.
- Wait until 1-3 tells you that the broken boat is out in the reservoir and that everything is clear before you begin to dispatch again.

Tower 2 Panel Descriptions & Diagrams



Control Panel

1. **Drive Drum Maintenance Key Switch** – Maintenance use only
2. **Drive Drums** – Pull up to turn on the drive drums at the lake gates, push in to stop. (Always on during normal operation)
3. **Emergency Stop** – Cuts off all auxiliaries, belts, and the pumps.
4. **Geyser** – Press to activate the manual geyser.
5. **Empty Boat Button** – Press to subtract an entire boat from capacity.
6. **Empty Seat Button** – Press to subtract an empty seat from capacity.
7. **Dispatch** – Press to open gates to your lake. Release to close the gates.

Sound Panel

8. **Call Button** – Used to get the other headset operators' attention whenever the headset is not working.
9. **Zone Switches** – When pushed up specific speakers to a zone will work (the two zones are – Lake 2 & Sawmill)
10. **On/Off Switch** – Used to turn the headset on and off

Responsible for watching during operation:

- Boats entering Lake 2
- Boats in Lake 2
- Boats passing through gates
- Boats going to sawmill
- Inside sawmill (on Monitor)
- Headset call light/Air Pressure Gauge
- Observation Area
- Tower 1 Operator
- Board panel (pressing correct buttons)
- Restricted areas to ensure they are clear

Tower 1 Operation

Operating Procedures

- Tower #1 should watch for the normal flow of boats as they come into Lake #1, through the lake, around the dip, coming out of the whirlpool, under waterfall #1, and into Lake #2.
- The tower operator should also check the wave maker, drive drums and the TV monitor to make sure they are working properly.
- Tower #1 is also responsible for watching the observation area. Use the PA to keep guests in authorized areas.
- Tower #1's primary duty, however, is to space the boats for their journey through the whirlpool and on into Lake #2. The gates are operated by the green dispatch button located on the tower board. The gates will open when the button is pressed down and close when the button is released or when the boat passes the first photo eye sensor. The gates cannot be reopened until the boat passes by the second sensor. Be sure that only one boat at a time leaves through the gates.
- There are 4 different dispatch sequences for the Tower #1 operator to be aware of. Normal dispatch (20-23 boats) is when the boat is completely passed the second cell. Reduced (16-19 boats) is at the last pole. Restricted (15 or less boats) is at the dip. Visual is when you can first see the boat coming past Tower 3. When rotating position, be sure the new operator is aware of the dispatch you are using at that time. The night time dispatch, starting at dusk, is reduced or restricted.
- Prior to dispatching each boat, perform a visual confirmation scan.
- The confirmation scan for this position is a systematic review of specific locations at the ride to ensure it is safe for dispatch (i.e. gates are closed, operators are in the correct position for dispatch, guests are seated and ready, there are no guests left on the ride platform). These locations are:
 - Lake #1 – making sure all boats have settled before opening the gates
 - Guests on the boats – ensuring all are seated properly
 - Drive Drums & Wave Maker – on and functioning properly
 - Trough in front of Waterfall #1
 - Trough towards the back-up gate

Opening Tower #1

- Enter the Tower and re-check all of your equipment (P.A.'s, headset, monitor, safety equipment).
- After the auxiliaries have been started, you have permission from the 1-3 operator and there is an Area Supervisor present, you can start your block check.
- To do this, place your hand on the dispatch button and hold it down for four boats to be automatically dispatched by the system. On the fourth boat, engage the back-up gate and allow the boat to stop on the gate.
- Once this is done, disengage the back-up gate and the Area Supervisor will pull up the lever that is near the back-up gate.
- Once the gate is fully closed, the Area Supervisor will move the lever back down.

Closing Tower 1

- 4-7 will tell you what the last loaded boat number is.
- When it comes into your lake and there are only two boats left, tell 4-7 he can start sending empties.
- Tell Tower #2 what the last loaded boat number is.

- You should stop dispatch after the last loaded boat until at least a whirlpool gap is established.
- Then send empty boats at 1-3 discretion until they are all dispatched.
- Tell Tower #2 what the last boat number is.
- DO NOT leave the tower until the last boat is in Lake #2, you have 1-3's permission, and the pumps have been hit.
- Turn your monitor and recorded spiel off, and put your headset under the shelf (after telling 1-3 that you are leaving).
- Clean all trash out of the tower (cups, etc.).
- Finally, turn off both the tower light and the lake light.

Addition of a boat

- Send a whirlpool gap, tell tower #2 the lead boat's number, and then continue to dispatch.
- Tell Tower #2 the boat number before the gap.
- When Tower #2 stops to let the boat be added, you will also stop.
- Then restart after Tower #2 does, making sure there is no threat of a jam. (lead, gap, 2 boats, stop)

Subtracting a boat

- Send a lead boat (tell Tower #2 what the number is).
- Send the boat to be subtracted next at a reduced dispatch, and then a follow boat at reduced.
- Next, give whirlpool gap, then send more boats at a slowed dispatch.
- Again, you should stop when Tower #2 stops. (Lead, broken, follow, gap, 2 boats, stop).

Responsible for watching during operation:

- Boats entering Lake 1 (in Monitor)
- Boats in Lake 1 going through gates
- Boats passing around Tower 1 towards dip
- Tower 3 Operator
- Boats passing waterfall 1
- Headset call light/Air Pressure Gauge
- Tower 2 Operator
- Observation Area
- 4-7 Operator
- Board panel (pressing correct buttons)
- Restricted areas to ensure they are clear

Tower 1 Panel Descriptions & Diagrams

Control Panel

1. **Drive Drum Maintenance Key Switch** – Maintenance use only
2. **Drive Drums** – Pull up to turn on the drive drums at the lake gates, push in to stop. (Always on during normal operation)
3. **Emergency Stop** – Cuts off all auxiliaries, belts, and the pumps.
4. **Wave Maker Maintenance Key Switch** – Maintenance use only
5. **Wave Maker** – Pull up to start the wave maker, push in to stop. (Always on during normal operation)
6. **Back up Gate** – Turn to engage gate (when releasing the gate, the switch must be returned to its original position, then the valve on the gate must be released then returned to its original position, perpendicular to the pipe it is attached to).
7. **Dispatch** – Press to open gates to your lake. Release to close the gates.

Sound Panel

8. **Call Button** – Used to get the other headset operators' attention whenever the headset is not working.
9. **Spiel** – Turns the Lake 1 spiel on and off. Should be on whenever the ride is operating.
10. **Microphone** – When pushed up the speakers to Lake 1 are active
11. **On/Off Switch** – Used to turn the headset on or off



Board Panels

- There are two boards to operate seven belts. One board (1-3) is located on the load (extended queue) side of the station, and the other board (4-7) is on the unload side of the station.
- All the belts can be operated from 1-3 if necessary. When operating a board, it is necessary to be very alert at all times.
- Always pay attention to the tower operators in case there is a problem. Limit conversation with the guests to a minimum. Don't let a guest distract your attention from the ride.
- There are two different modes that the ride may operate in. One is called hand and the other is auto. In the hand mode all the belts must be started & stopped by pushing the respective buttons. In the auto mode all belts will stop automatically if there is a boat stopped in front of them or if belt #7 is stopped. Therefore, if belt #7 is stopped, the next boat will stop when it comes all the way onto belt #6. The following will stop on belt #5 and since that belt is stopped, the last boat will stop on belt #4.

4-7 Board Operation

Operating Procedures

- This position is responsible for parking the boats in the station, and sending them out once all the guests are seated. Once the boats are in the station, the 4-7 operator should open the station gates. Once everyone has gotten into the boats, close the station gates. If someone is standing across the yellow lines, spiel to them that the gates are closing. Once he receives thumbs up and "clear" from the unloader, he should perform a visual confirmation scan.
- The confirmation scan for this position is a systematic review of specific locations at the ride to ensure it is safe for dispatch (i.e. gates are closed, operators are in the correct position for dispatch, guests are seated and ready, there are no guests left on the ride platform). These locations are:
 - Entrance gate behind 4-7
 - Exit Platform & Gate
 - Unloader
 - Guests & Boats in the station
 - 1-3 Operator
 - Guests waiting on the load side
 - Entrance Gates
 - The trough right outside the station
 - Restricted Ride Areas
- If all is safe for dispatch, announce "ALL CLEAR, Ride On", send out the boats and bring in the next set. All guests need to be told to "Hold on to the center ring." 4-7 has to be very careful that he doesn't move a boat while someone is getting in or out. The board operator should keep eye contact with the belt area anytime any belts (4-7) are on. **WATCH YOUR BELTS!**
- 4-7 has to watch the station in case a guest walks up towards the belts. Also, watch the boats as they leave the station in case the guests do anything wrong (spiel to them if necessary). You can tell Tower #1 to watch for guests who may misbehave.
- 4-7 should make sure that guests have on their seatbelts before they leave the station. Remind Tower #1 to ensure that seat belts are fastened if they weren't when they left the station.
- Always watch the belts in the station in case they cut off. If an empty belt cuts off try to restart it and let 1-3 know. If it stops with a boat on it, hit your station stop and say "JUICE" so 1-3 can stop belt #3 and prevent bouncing or bumping of boats. **DO NOT** try to fix the situation by starting the already stopped boats because the guests will probably stand up and

start getting out of the boats. This applies also to the situation where 1-3 sends 4 boats and 4-7 accepts only 3. The only time that you would move the boats after they have stopped would be when the unloader knows what is going on and they have told the guests to remain seated and then give you the thumbs up signal.

- If the belts are cutting off continuously, have 1-3 switch to hand mode and run in hand until maintenance can come to the ride and fix the problem. Advise the Area Supervisor that you are running in hand.
- The hand mode should be used only if the auto is inoperable. Use extreme caution since the safety system is engaged only in auto. The auxiliary emergency stop on 1-3 will not turn belts 4-7 off in hand, but the station stop on 4-7 will do so. 4-7 should put the Station Stop down after the boats are stopped so 1-3 cannot start a belt accidentally while guests are still loading or unloading. (this also applies if in automatic mode)
- The 4-7 board operator should not answer the phone unless 1-3 has control over all belts.

Unloading a Guests with Disabilities

- Once the Guests with Disabilities' boat has left the station, inform the Tower #1 operator of the boat number and of an appropriate gap to be sent after them.
- When the boat is in the rain curtain, send the unloader to the boat so that the step beside the Guests with Disabilities is facing the unload side of the station.
- If the unloader is not trained in this procedure, the 4-7 operator will turn the boat – ask 1-3 if they want your stops up or not.

Opening 4-7

- After 1-3 gives permission, you need to test your belts in hand and auto. To do this, start each belt in hand and then stop each belt.
- Start the belts again and test the station stop in hand.
- Have the 1-3 operator switch to auto and start each belt in auto. Stop each belt in auto, start the belts again and test the station stop.
- 1-3 will then send in a set of boats. Push the seven stop and ensure all boats park correctly.
- If any two belts cut off at the same time, have 1-3 ask the electricians and the Area Supervisor if we can run in hand.

Closing 4-7

- After the last loaded boat is dispatched from the station, tell the Tower #1 operator the boat number.
- Wait until the Tower #1 operator is down to two boats before you send anymore.
- After the last loaded boat has returned to the station and is empty, send the boats out of the station, and again tell the last boat number.
- Once all boats are parked, pack up your equipment (headset, board) and start cleaning the ride.

Responsible for watching during operation:


- **When the belts are running, remain focused on the belts.**
- Boats entering station
- Boats leaving station (until out of sight)
- Unloader & Queuer
- Exit ramp
- Lift

- Headset call light
- Board panel (pressing correct buttons)
- 1-3 Operator
- Tower 1 Operator
- Gate behind 4-7
- Guests in line into station
- Restricted areas to ensure they are clear

4-7 Panel Descriptions & Diagrams

Control Panel

1. **Mode Indicator Light** – Indicates which mode the ride is in – hand, auto, or maintenance.
2. **Belts 4-7 Start/Stop** – Push to start or stop a belt. Top row are the start buttons and the bottom row are the stop buttons.
3. **Station Stop** – This cuts off belts 4-7 immediately upon being hit. To restart belts, pull up on the station stop button (and belt 7 stop), and then push start buttons.
4. **Load Gates** – Opens and closes the gates on the load side of the station.
5. **4-7 Board Power** – Key switch which allows the station belts to operate from the 4-7 panel.

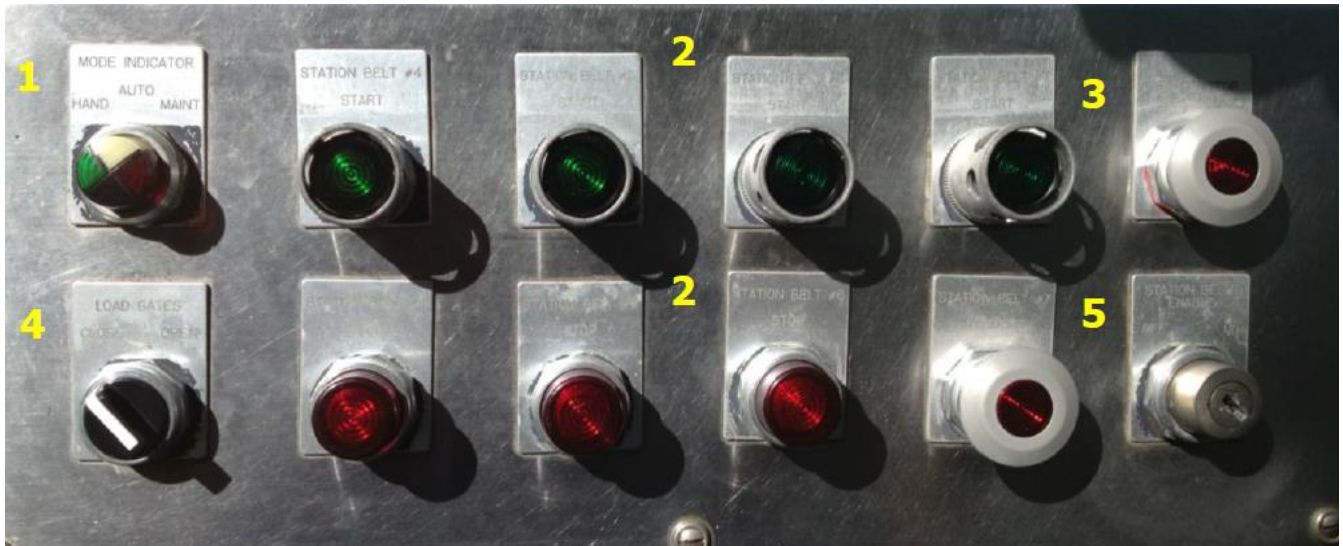

6. **PanelView** – Diagnostic display used to track ridership and ride faults.



Sound Panel (not pictured)

7. **Call Button** – Used to get the other headset operators' attention whenever the headset is not working.
8. **Zone Switches** – When pushed up specific speakers to a zone will work (the two zones are – the Station & right outside the Station after dispatch)
9. **On/Off Switch** – Used to turn the headset on or off

1-3 Board Operation

Operating Procedures

- The 1-3 board operator is responsible for bringing the boats out of the water and into the station in groups, usually of three.
- The 1-3 operator also has the very important responsibility of ensuring proper procedures are followed in the event of an emergency. This is why the 1-3 operator needs to be fully aware of the operation of the ride.
- Try to keep as few boats as possible on the lift. The average number should be 4. If there are more than six boats on the lift, it will be called a back-up. At this point the 4-7 operator can try to speed up dispatch or Tower #2 can slow dispatch out of Lake #2. If 6 or more boats are on the lift Tower #2 should stop dispatch until you are down to 5 boats. You don't necessarily have to keep Tower #2 stopped until there are only a few boats left since by the time the boats get through the sawmill, 4-7 will have had enough time to dispatch another group of boats.
- Always look at the buttons that you are going to push. DO NOT assume that it is the one that you think it is.
- Always make sure that 4-7 knows when you are sending any group besides a group of three. It is a good practice to tell 4-7 once and again as you start to send the boats into the station. If the 4-7 operator forgets and the boats stop, stop belt #3 before the boats bounce or bump then re-group the boats on the lift. On the same note, make sure you don't bounce or bump the boats on the lift or into a stopped boat on belt #4. It might be necessary to tell Tower #2 to stop dispatch for a brief time. Always tell Tower #2 as soon as it is clear for them to start dispatching again so they don't get too many boats in the lake to cause a boat jam (jelly).
- Watch belt #4 when you are sending your next group into the station. If a boat stops there and you haven't finished sending your group, stop your belts. If the boats get too far up the belt and belt 4 is stopped, belt 3 will stop.
- To speed up the operation of the ride, 1-3 should send the next group into the station as soon as the boat on belt 4 moves. This is especially important to do when there are many boats are running.
- During an emergency situation, it is the responsibility of 1-3 to call the phone numbers with the proper code and take care of the situation in the station. 1-3 should get a count of all the boats and know where they are. It should be written down if possible. Make sure that Tower #1 tells you how many boats are in the lake before he leaves the tower to assist the guests. Also, count the boats as they go into the reservoir. If the pumps are hit and there are boats at the bottom of the lift, send the unloader or 4-7 down there to pull the boats up towards the belts or tie off it in the water.
- The 1-3 operator should not use the phone except in emergency situations.
- In an emergency situation, 1-3 must never leave their position. They can control all belts if the 4-7 operator should need to leave as long as the 4-7 operator leaves the stops up.
- If there is an emergency situation where boats are sitting in the water at the bottom of the lift or associates are down there, 1-3 must watch them at all times and be ready to hit the pumps if necessary.

Use of the Swing Gate

- This swing gate is located at the bottom of the lift and can be operated at two points: by 1-3 and on the side of the sawmill (island side) by the evacuation door.
- It is used in the following situations:

- 1) Boat jam at bottom of the lift.
- 2) Belt #1 will not start.
- 3) Taking off boats.
- 4) Either belt 2 or belt 3 will not start and there is no more room on the lift.
- 5) Boat stuck at the bottom of the lift.
- 6) Capsized boat at the bottom of the lift past the swing gate.
- 7) Bobby at the bottom of the lift.
- 8) Pumps hit code 2
- 9) Morning test
- 10) 3 Boats in the water at the bottom of the lift

Opening Procedures for 1-3

- First check headset, call light, station and lift PA's, and fire extinguisher at 1-3.
- Before starting the ride, it is the 1-3 operator's responsibility to ensure that all parts of the Opening Procedures Checklist have been completed, that the trough has been walked, that there are operators in position in Tower 1 and Tower 2, and that the lake 2 rope has been removed.
- Once these conditions have been met, the 1-3 operator instructs the 4-7 operator to start the pumps.
- Once the Tower 1 operator confirms that they have water at waterfall 1 and the auxiliaries have been turned on, the 1-3 operator can turn on belts 4-7 and allow the 4-7 operator to send out the boats and test their belts in hand and auto.
- The 1-3 operator will also test belts 1-3 in both hand and auto, as well as belts 4-7 in hand.
- Then test the swing gate to ensure that it opens and retracts fully.
- Once the water levels between the reservoir and the bottom of the lift have equalized, the 1-3 operator may give the Towers permission to start the block check when the Area Supervisor is ready.
- Once the block check has been completed and Area Supervisor approval has been given, the ride may then be cycled.
- All boats must be visually and physically checked and cycled once before opening the ride.

Closing Procedures for 1-3

- Once the ride is clear of guests, the 1-3 operator may call normal dispatch to speed up the closing of the ride.
- If you are cycling with more than 15 boats, those extra boats must be removed before parking boats.
- When the 1-3 operator gives the Tower 2 operator permission, Tower 2 will start sending sets of boats (4 boats, gap, 3 boats, gap, 2 boats).
- Belt 4 needs to be running in order to park boats on belt 3. This aids the 1-3 operator in parking four boats on belt 3, three boats on belt 2, and 2 boats on belt 1.
- Once the last boat has reached lake 2, the 1-3 operator may give the Tower 3 operator permission to leave position and close their tower.
- When there are 9 boats parked on the lift and there are 6 boats in lake 2, the pumps may be hit, and the tower operators may close their towers.
- The 1-3 operator should send someone to meet the Tower 2 operator at lake 2 to attach the lake 2 rope.
- The 1-3 operator then turns off the board, covers it, and wraps up the headset and places it under the board.

Adding Boats

- Once Tower #2 tells you the lead boat number, tell the Maintenance associate adding the boat what the lead boat number is.
- Make sure the Towers have stopped while the boat is being added.
- Once the boat is on, tell the Towers to resume dispatch.
- Ensure the boat is checked in the station and is cycled empty before loading.
- Call Communications and tell them we have added a boat.
- Record the addition on the Capacity Sheet.

Subtracting boats

- After Tower #2 sends the lead boat, tell the Maintenance associate taking off the boat what the boat number is.
- After the lead boat has passed the swing gate, open the gate.
- Make sure that the Towers have stopped.
- Once the boat is taken off, close the swing gate and tell the Towers to resume dispatch.
- Call Communications to tell them we have subtracted a boat.
- Record the subtraction on the Capacity Sheet.

Responsible for watching during operation:


- Lift
- Belt #4
- Boats exiting sawmill
- Reservoir
- Exit (along reservoir wall)
- Boats in station
- Headset call light
- Board panel (pressing correct buttons)
- Unloader
- 4-7 Operator
- Exit ramp
- Guests in station
- Queuer
- Restricted areas

1-3 Panel Descriptions & Diagrams

Control Panel


1. **Control Power** – Three position key switch. This key turns on the power to the boards and switches the system into either hand, off, or auto. Should stay in auto for normal operation.
2. **Maintenance Mode** – Maintenance use only.
3. **Emergency Stop Auxiliaries** – Cuts off the belts, drive drums, and wave maker. The belts can be restarted in hand by lifting the E-stop Auxiliary and pushing the respective start button. The rest of the auxiliaries have to be restarted at the control box.
4. **Load Gates** – Switch that opens and closes the gates on the load side of the station.
5. **Fault Light** – Indicates a fault has occurred.
6. **Emergency Stop** – Cuts off all auxiliaries, belts, and the pumps.
7. **Mode Indicator Light** – Indicates which mode the ride is in – hand, auto, or maintenance.
8. **Exit Gates** – Switch that opens and closes the exit gates.

9. **Geysers On/Off** – Switch used to turn the geysers in lake 2 on and off.
10. **Belts 4-7 Start/Stop** – Push to start or stop a belt. Top row are the start buttons and the bottom row are the stop buttons.
11. **Belts 1-3 Start/Stop** – Push to start or stop a belt. Top row are the start buttons and the bottom row are the stop buttons.
12. **4-7 Enable Key** – Key switch used to enable the operation of belts 4-7 from the 1-3 panel.

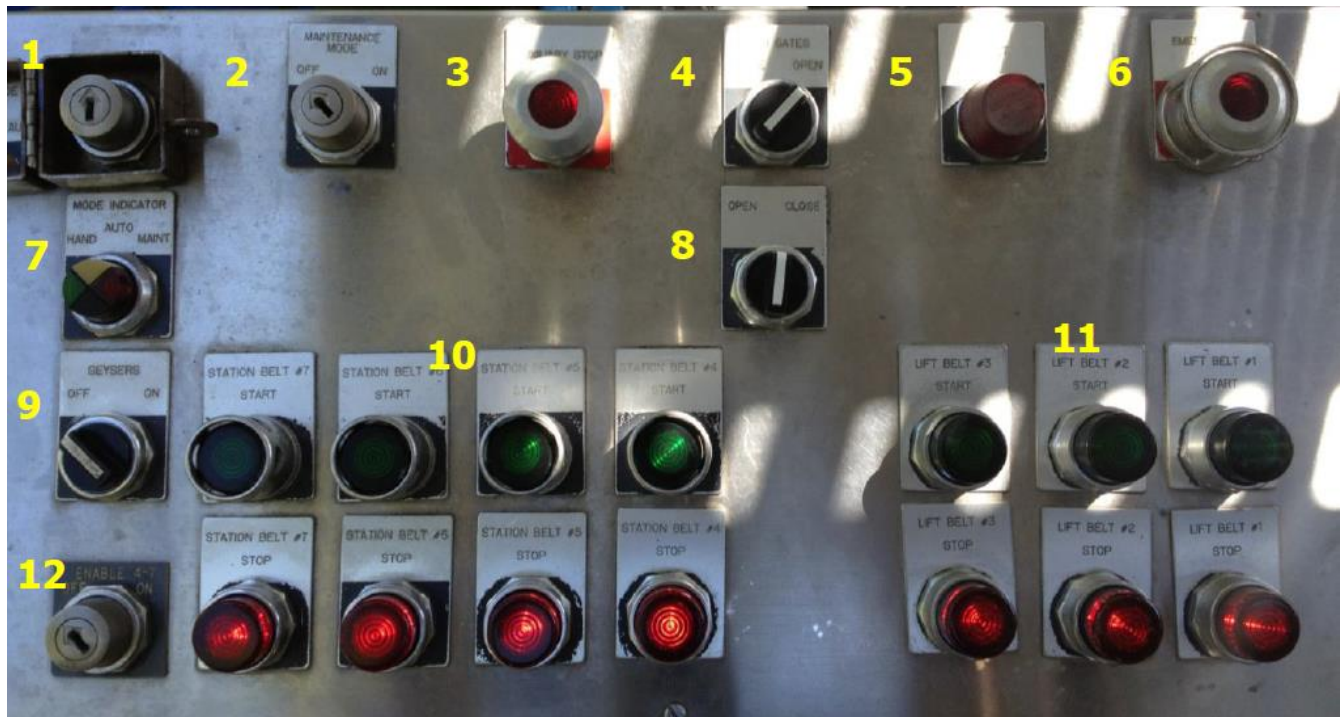

Sound Panel

12. **Call Button** – Used to get the other headset operators' attention whenever the headset is not working.
13. **Zone Switches** – Push up to use specific speakers (the two zones are – Lift & Station)
14. **On/Off Switch** – Used to turn the headset on and off.

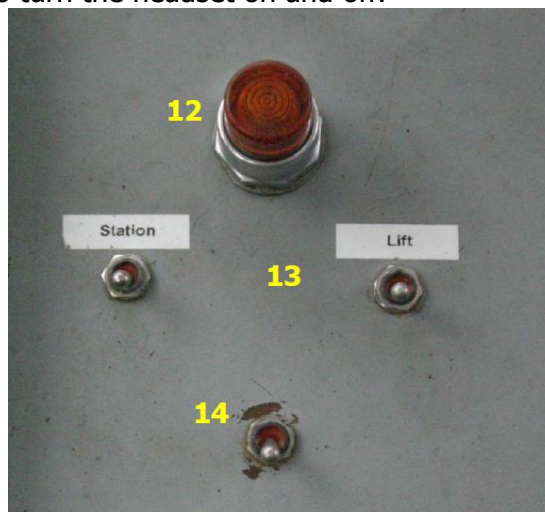

General Ride Information

Pump Box Panel Descriptions


1. **OK Start Auxiliary Light** – When the water reaches the sensor in the distribution box the light will come on signifying that it is okay to start the auxiliaries. The light will not come on if the E-stop Auxiliary button is down. PanelView will also inform you when the water reaches the sensors and auxiliaries can be started.
2. **Main Pump Start** – Push to start the pumps. This button must be held in until all 3 pumps have started otherwise the pumps will cut off, and it will be impossible to restart them until the 15 second time delay runs out. This time delay prevents us from starting the pumps when water is still running backwards through them.
3. **Drive Drum Start** – Push to start drive drums.
4. **Auxiliary Pump Start** – No longer used.
5. **Wave Maker Start** – Push to start wave maker.
6. **Emergency Stop All** – Push to cut off pumps and all power to boards.
7. **System On/Off Key** – Turn key to the right to turn on and left to turn off. When keying the system in, a warning buzzer for anyone in the trough will sound. The system **MUST** be keyed out every night to ensure that the fans on the belt motors are off.

Pump Box Panel Diagram



Lockout Procedures

- Never enter the trough (unless it is an emergency) unless the ride is locked out.
- The ride must be locked out to evacuate guests from Tower 1, Tower 2, the lift, trough, or the reservoir.
- To actually lock out the entire ride, the control power on the 1-3 board panel must be in the off position with the cover covering the key switch (see 1st picture below). The lock is then placed through the holes on the cover. If the lift (belts) is the only thing that needs to be locked out then the belts key switch must be in the off position with the cover covering the key switch. The lock is then placed through the holes on the cover.
- Whenever the pumps are hit, 4-7 will lock the ride by locking the door to the pump controls outside the computer room. This will prevent anyone from starting the pumps and allow operators to enter Lake 1 and/or the Reservoir to tend to boats as needed (see 2nd picture below)
- Ensure the Lock-Out Accountability Log is filled out for all personnel entering the lock out area.

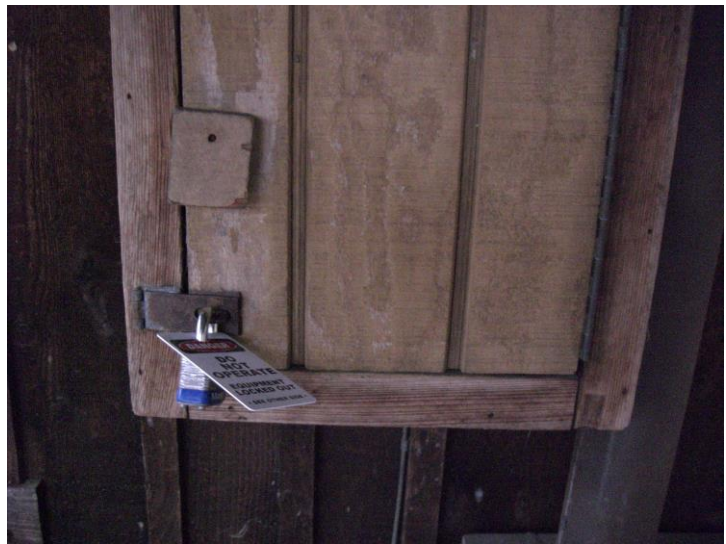

Addition of Boats

- Boats are added from the reservoir into the trough through the opening located at the bottom of the lift. Boats will be added only after being checked thoroughly (seat belt, air, etc.).
- Maintenance, on the sawmill side, will walk the boat up to about 15 feet away from the gate and wait there for the okay from the 1-3 operator before adding the boat.
- Maintenance will push the boat into the trough not letting go of the rope before being certain that the boat is going to go into the trough. They will then throw the rope into the boat.
- Once the boat is in the trough, 1-3 should tell Tower #2 to resume dispatch.
- Once maintenance has added the boat, check the boat for any issues in the station and then cycle it empty once before loading.
- Do not add boats in the morning until water current has leveled after the first wave.
- The 1-3 operator should make sure that he speaks loudly enough over the PA so the associate down on the catwalk can hear him clearly.
- Call Communications and record the addition on the capacity sheet.

Subtraction of Boats

- Boats must be taken out of the trough through the gate at the bottom of the lift.
- Send the boat that is to be taken off out of the station empty. Tower #1 spaces the boats and sends the gap needed.
- When it gets to Lake #2 the tower #2 operator tells 1-3 the boat number in front of the boat to be taken off. He dispatches it, dispatches the boat to be taken off at a restricted dispatch, and then the follow boat at a late camera dispatch. Tower #2 will inform 1-3 of the location of the boat to be taken off at all times. When Tower #2 stops dispatch, Tower #1 will also need to stop.
- Maintenance will be at the bottom of the lift to actually subtract the boat. 1-3 will tell Maintenance the lead boat number. Once the lead boat has passed, 1-3 opens the swing gate.
- Tower #2 sends one more boat (the follow boat) and stops.
- Maintenance will use the hook to hook the boat in the handrail and pull it out into the reservoir. If it does not go all the way out, the next boat that Tower #2 sent will force it out.
- 1-3 will either release the gate as soon as the boat goes out into the reservoir or when the follow boat forces the broken boat out.
- Tower #2 resumes dispatch. When Lake #2 is safe from getting a boat jam, Tower #1 will resume dispatch and the ride resumes normal operation.
- Call Communications and record the subtraction on the capacity sheet.

Water Rescue/Assist Skills

There is a rare but very real risk that a situation may occur at the ride, either through mechanical failure or guest/associate behavior, where you may have to rescue and aid guests or associates in the water. Although these situations are unpredictable, there are a few basic skills that you should use to respond effectively.

Rescue Equipment

Safety equipment found at any water ride includes a shepherd's crook, throw bag, throw ring, and PFD (personal flotation device). All equipment should be stationed wherever an operator is positioned and could be able to use the equipment if needed (i.e. stations, observation towers, etc). Every day these items should be checked to ensure they are in good condition before opening the ride. The rescue equipment is at the following locations:

Shenandoah Lumber Co.

- Shepherd's Crook – dock
- Throw Bag – dock
- Throw Ring – dock
- PFD – dock

White Water Canyon

- Shepherd's Crook – Distribution Box, Queue, and Towers 1, 2, & 3 (note – at Tower 1 there is also a push pole used when multiple boats leave the lake at the same time and not to be used for a rescue)
- Throw Bag – Sawmill, Base of the Lift, in Towers 1, 2, & 3, Queue, and 4-7
- Throw Ring – at 4-7, Queue, Towers 1, 2, & 3, and Sawmill
- PFD – Sawmill, Base of the lift, Towers 1, 2, & 3, Queue, and 4-7

NOTE: These skills require practice and should be reviewed as frequently as possible.

Guest Removal

The first thing you should do if the need for a water rescue arises is:


- E-stop the ride
- Notify the operator and attendants that you are performing a rescue and ask that the operator lock out the ride.
- Ensure that a staff member calls Emergency (5333) to dispatch emergency services.
- Put on the PFD and take the Shepherd's Crook, throw bag and throw ring to a point along the edge of the trough as close as possible to the guest, but a safe enough distance that your risk of falling or being pulled in will be minimized. Maintain a low center of gravity at all times.

Remove the guest from the water as follows:

- Inform the guest that you are there to help them and tell them to follow your instructions.
- **REACHING ASSIST** – If you can reach the guest with your arm, grab a hold of them and draw them to the edge of the water. **DO NOT LET THE GUEST GRAB YOU!**
- **SHEPHERD'S CROOK** - If the guest is out of arm's reach, use the Shepherd's Crook by offering them the looped end and directing them to hang on. The picture below shows the proper positioning of the looped end of the shepherd's crook (around the guest's back). Pull the pole or swing it gently with the current towards the edge of the water.

Considerations:

- Make sure the shepherd's crook is ready before you need it (verify daily)
- Use caution as to not injure the guest further
- Position your body low to or on the ground as to lower your center of gravity

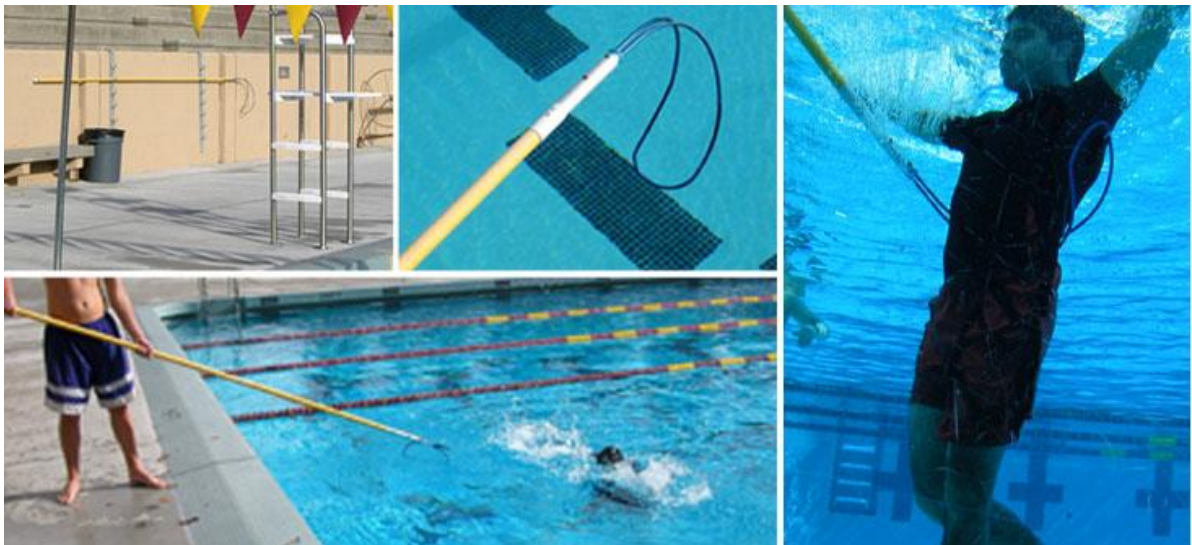

- **THROW BAG** – If the guest is out of reach of the reaching pole, use the throw bag. Hold the looped end (do not wrap it around your wrist), shout "ROPE!" and throw the bag over the guest's head. Direct the guest to hold the rope, not the bag. Draw the guest gently towards the edge of the water (see picture below). Pulling too hard may cause the guest to let go of the rope.

Considerations:

- Ensure throw bags are always ready to be used (verify daily).
- Use of the throw bag will require practice.
- Factor in variable such as wind, water current, and tree branches prior to throwing the bag.
- If you fail to reach the guest with the throw bag, it can always be drawn in and filled with water to add weight for another throwing attempt.



- **THROW RING** – If you lose the throw bag in the water, the ring buoy is available as a backup. It is used in the same way as the rope bag, except that the ring is thrown in front of the guest and the guest is asked to hold onto the ring.



- When the guest is at the water's edge, they can be directed to try to climb out of the water or wait in the water, holding onto the edge, until emergency assistance arrives. Continue talking to the guest and try to determine if there are any First Aid concerns that you are trained to respond to.
- NOTE: Always maintain communication with the guest. Instruct them to avoid swallowing water and advise them when they are approaching any hard surface, such as a wall. **If at**

any point you feel that you are in danger, let go of the guest or equipment and prepare for another attempt when you feel you can safely do so.

- **ENTERING THE WATER** – If the guest is unconscious or all attempts at removing them fail, you may **only** enter the water if you feel it is absolutely necessary and you feel comfortable doing so.
 - Again, ensure that your PFD is secured properly.
 - Ensure that the other staff members are aware that you are entering the water, that EMERGENCY have been dispatched, and that the ride is locked out.
 - Enter the water carefully and approach the guest.
 - Gain control of the guest's body in whatever way is most comfortable and draw them to the edge of the water.
 - If you can comfortably and safely remove the guest from the water, do so. Otherwise, try to remove yourself from the water and keep control of the guest's body at the edge of the water.
 - Deliver any emergency care that is required, that you are trained to provide.

Considerations:

- Ensure to enter the water at a safe location
 - Flume – ladder next to dock
 - WWC – from a trough wall; reservoir wall
- Know the locations you cannot go in the water
 - Flume – under the dock
 - WWC – under the belts 1-3, distribution box
- Understand what is under the water
 - WWC – weir boards are placed through the entire ride on the trough floor

NOTE: NEVER enter the trough while the pumps are running. The current in the trough is extremely powerful and hazardous regardless of your ability to swim.

Signs of Low Water

- Water level is lower than normal on the wall of the trough.
- White water will become more noticeable.
- Boats will drop off more into trough after dispatch.
- The wave maker will become more effective (waves more visible).
- The boats will move faster.
- The weir boards will become more visible.
- Belt #1 is more visible and boats hit it harder.
- Water will not lap over or cover the cement pillars at the pumps.
- Less water flowing over waterfall #1.
- If water level gets low enough in the distribution box, the auxiliaries and the safety system will cut the belts off if the system is in automatic. If the level gets severely low down by the pumps, the pumps will cut off.

Rope Usage

- Extreme caution should be used whenever using ropes. NEVER wrap a rope around any part of your body, especially when holding a boat. Use a tree or boulder. If the pull is too much and you think that it might pull you into the water, you should let go of the rope.
- When attempting a rescue, you should make sure that you are in a good position before throwing the rope. The same thing applies to the rescue attempt; if you are being pulled in, let go of the rope.
- When using ropes to catch boats out in the reservoir, do not try to hold a boat that is caught in the initial current after the pumps have been hit. Do not tie it to the catwalk as it may tear it down. Do not tie ropes around the seats in the boats when tying them off at night; tie the ropes around the outside eye rings only.
- When using throw bags, do not put your wrist through the rope. Hold the knot.

Channel Water

- If you ever have to enter the water always enter up-stream of the boats.
- Try to wait until there is no more white water before you enter the water. If you think that it is necessary to enter the water before this time, do so with EXTREME caution.
- Never enter water without the permission from your Area Supervisor unless it is an emergency.
- If you fall into Lake #2, just climb back onto a boat or the wall. Although there is not much current and danger is minimal, ALWAYS proceed with extreme caution.

Using the Lift Catwalk During Operation

- Whenever walking up or down the lift while the belts are running, operators must ensure to pay close attention to where they are stepping as well as where boats are on the lift.
- In most cases, going down the lift requires operators to do so at a quick pace, but take time to ensure your footing. DO NOT RUN.
- Hold onto the handrail while using the lift and walk as close to the handrail as you can.

Downtime Procedures

General Downtime Information

Communicating Downtime

- Call Communications (5100) whenever your ride or attraction closes.
- Inform Communications of the appropriate code (Code 2, 3, 8, etc) and a quick reason for the downtime, if known.
- For downtimes due to thunderstorms, each area has identified one ride that all other area rides call once down. That ride will then call Communications to inform them which rides are closed. All rides in I-Street/OVA rides call Action Theater (5824) once down for weather.
- Typically attractions shutdown for one of the following reasons:
 - Electrical – lighting, power issues, limit/prox switches, ride control systems
 - Facilities – Plumbing, Landscape, Fiberglass, Carpentry issues
 - Mechanical – issues with restraints, wheels, ride units
 - Operational – guest issues, medical concerns, staffing, adding units, lost articles
 - Weather – rain, wind, storms, cold temperatures
- All Downtime must be communicated to your Area Supervisor.
- Whenever shutting down for a Maintenance reason, ensure that your Area Supervisor and Maintenance are notified.
- When given permission to reopen, call Communications (5100). Ensure to give the Communications operator the appropriate downtime code, if applicable. You can find a list of all downtime codes on the back side of a capacity sheet.

Guest Relating

- Always cut the line whenever an attraction shuts down. One associate must stand at the entrance to the ride whenever it is down to communicate with guests.
- Using the ride PA system, spiel to all guests who are waiting to ride, both in the station and queue line, informing them that the ride is temporarily shut down. Example:

"Ladies and Gentlemen, there will be a temporary delay in the operation of the (ride name). We will resume operation as soon as possible. We apologize for the inconvenience, and thank you for your patience."

- Keep guests informed of the situation, but do not be specific as to the mechanical problems when guest relating.
- Do not give guests an approximate time that the ride will reopen unless specifically given a time by your Supervisor.
- Try to have fun with the guests waiting in line; discuss how their day is going; where they are from, etc.
- If the downtime is going to be long, ensure the guests are updated.
- Use any lengthy downtime to clean the ride and/or ride area, i.e. sweep and clean cars.
- Never clear the queue line without Area Supervisor permission.

Working with Maintenance

- It is the board operator's responsibility to oversee the safety of all guests and operators during a downtime situation. If the ride has guests on it, do not step away from the board area at any time, even if Maintenance needs to take control of the ride.

- Prior to any movement of a ride unit by Maintenance or Rides, the board operator must ensure all operators are clear of the ride area/unit or are in safe zones. You must also have approval from an Area Supervisor before loaded units can be moved.
- Spiel to all guests on a loaded unit that the ride may begin to move. Example:

"Guests on the ride, please face forward with your seat belt fastened and hold on tight as the ride may begin to move."

- DO NOT allow Maintenance to move units prior to necessary spieling and/or clearing of the ride area!

Documenting Downtime

- All Downtime must also be documented on the Daily Capacity Sheet.
- Before reopening, clearance must be obtained from your Area Supervisor and Maintenance (if the downtime is maintenance related).
- When Maintenance is involved, the Capacity Sheet must be signed by the Maintenance personnel involved.
- Be sure to record the downtime, proper code, and reason for any type of shutdown.

Reopening Procedures

- Do not reopen until given permission to do so by your Area Supervisor.
- Always reopen quickly.
- Prior to loading units with guests, run the necessary test cycles as specified by Maintenance or Area Supervisor.
- Dry off seats if reopening from weather.
- Call 5100 when you reopen and fill out the Capacity Sheet.

Weather Shutdowns

Typically the Area Supervisor forewarns you of pending weather shutdowns. If you see lightning, shutdown and contact your Area Supervisor. The ride will also shut down for high winds.

You should wait for Area Supervisor permission to do so unless the storm is very sudden and VERY severe. If the pumps had to be hit, be sure that the trough is checked for fallen debris before re-opening. You MUST receive Area Supervisor permission to re-open.

Downtime Procedures Overview

PROBLEM: Belt #1 failure (potential)

SOLUTION:

- Belt #1 failure often is the result of the constant stopping and starting of the belt. For this reason, belt #1 should only be stopped when absolutely necessary. When the 1-3 operator notices that Belt #1 is out, immediately switch the belt modes to hand, while notifying the rest of the headset positions that there is belt #1 failure.
- If it works in Hand, stabilize the lift situation and then attempt to start it in Auto.
- If it does not work in Hand, open the swing gate to direct anymore boats that are on the way into the reservoir to prevent a buildup of boats at the bottom of the lift.
 - Tower #2 should stop and tell 1-3 the last boat dispatched, as soon as you hear that belt #1 is out.
 - Tower #1 should continue dispatch, as it is a potential hit the pump situation.

- If there are boats in the water, the 4-7 operator should go to the bottom of the lift. However, if the unloader is qualified to go to the bottom of the lift, they should go. Once at the bottom, the associate should secure the rope to the last boat by hooking it to the eye ring. Then drape the rope over the wood plank. Have the guests in these boats take off their seat belts and make sure they remain seated.
- If the unloader is the one at the bottom, the queuer should keep all of the guests behind the yellow lines at unload and be prepared to respond anywhere the 4-7 operator should ask them to respond.
- If the belt will not restart in Hand or Auto mode, then call the ride down for a Code 2. The associate at the bottom of the lift should stay with the boats, watching for buckling or taking on water. If either happens, then the associate at the bottom of the lift should signal the 1-3 operator to hit the pumps. Then secure the rope to the wood plank.
- If the belt does restart before the pumps are hit, then hold operation and advise Maintenance and the Area Supervisor.
- Record any downtime on the capacity sheet.

PROBLEM: Boat stuck at the bottom of lift. (Potential)

SOLUTION: Tower #2 stops dispatch. If the second boat does not knock the stuck boat loose, 1-3 will open the swing gate to direct the rest of the boats out into the reservoir. The boat should then be pushed and pulled on to try to break it loose. Follow the same procedures as for belt #1 failure.

NOTE: Do not put boats back into the trough without Area Supervisor permission.

PROBLEM: Belts 1-3 brake failure

SOLUTION: This happens when the belt stop button is pushed and the belt drifts backwards and will not stop. The 1-3 operator should alert headset, try to keep the belt running continuously, and go for a controlled shutdown. The Towers should slow down to allow 1-3 time to keep his belts clear. 4-7 may have to speed up to help the lift from getting too backed up. If necessary send empties out or re-ride guests. The unloader, 4-7, and queuer should keep the guests from loading. If necessary, 1-3 may stop his affected belt, but he should make sure that the belt below the affected belt has a boat at the top of it so the boats on the affected belt do not move back and bounce against the belt below it. Call Maintenance and the Area Supervisor. Record any downtime on the Capacity sheet.

PROBLEM: Belt #2 or #3 failure

SOLUTION: The 1-3 operator should tell everyone he has Belt #2 or #3 failure. The Towers should stop. Tower #2 should inform 1-3 of the last boat number dispatched. 1-3 should try to park on the lift, all of the boats Tower #2 has sent. If this is not possible, 1-3 should open the swing gate to direct boats into the reservoir. If there are boats at the bottom of the lift, it is a potential hit the pump situation and you should follow the same procedure for belt #1 failure. If 1-3 can fit more boats on the lift than Tower #2 has sent him, he should ask Tower #2 to send however many more boats he can fit.

PROBLEM: Belt 4-7 failure

SOLUTION: 4-7 should ask 1-3 to switch the belts to Hand mode. Slow or stop all dispatch. After attempting to run in Hand, switch back to Auto to see if it works. If the belts still do not work, call Maintenance and the Area Supervisor. If Hand works, cycle down Code 3 with Area Supervisor's permission. If Hand does not function either, unload boats and start pushing boats across the belt by holding down the belt start button and go for a controlled shutdown – only after attaining Area Supervisor permission. Note – if belt 4 fails, you will not be able to push boats across.

PROBLEM: Motor falling off

SOLUTION: If it is located in the station, the queuer should go underneath the station to see if it is damaging any of the tubes. Try to keep the belt running to keep the motor from jerking. Go for a controlled shutdown. If it is on the lift, 1-3 should see if it is damaging any of the tubes. Again, try to keep the belt running to keep the motor from jerking. If the motor falls off or the belt won't run, push the stop button for that belt and call down Code 2. Guest Relate.

PROBLEM: Automatic station systems failure

SOLUTION: Switch the belt mode to Hand. Check the water level in the distribution box. Water level sensors located in the Distribution Box and in the pumps will cut off the Auxiliaries, including the Auto System if the water level drops low enough. If there is low water, refer to procedures for Low Water. Try auto again and if it doesn't work, switch back to hand. Call maintenance and Area Supervisor.

PROBLEM: Wave maker failure

SOLUTION: Call your Area Supervisor and Maintenance. 4-7 should slow down dispatch to alleviate a backup in Lake #1. If necessary, Tower #2 should slow down to prevent a backup on the lift. A maximum of 17 to 18 boats should be run when the wave maker is out. Try to keep only 3 boats in the lake at a time.

PROBLEM: Drive drum failure

SOLUTION: If it is Lake #1, 4-7 should slow down dispatch. If it is in Lake #2, Tower #1 should slow down, to prevent a jelly. The loader and queuer should be prepared to go to either lake if necessary. Call Maintenance and the Area Supervisor. A maximum of 17 to 18 boats should be cycled in this situation. Try to keep only 3 boats in the lake at a time.

PROBLEM: Low water

SOLUTION: There are three water level sensors on the ride. One is located in the Distribution Box and two are located near the Pumps. If the water level drops below the sensor in the distribution box, the auxiliaries will cut off. This includes the drive drums, wave maker, and the belts in Automatic mode. If the water level drops lower than the sensors near the pumps, the pumps will turn off. Several causes of low water are: screens needing to be cleaned, drains left open, or a crack in the trough or reservoir. Several signs of low water are: Water level is lower than normal on the trough wall, white water is more noticeable, the wave maker is more effective, the boats move faster, the weir boards are visible, Belt #1 is more visible and boats hit it harder, water will not lap over or cover cement pillars at the pumps, less water flowing over Waterfall #1, boats drop off more into trough after dispatch, and if the water level drops below the sensor in the distribution box the auxiliaries will cut off (including the belts in automatic mode). If the water level starts to drop and it is not low enough to affect the operation of the ride, then call Maintenance and the Area Supervisor. If the water level is to the point where it is affecting the operation of the ride, begin a controlled shutdown.

PROBLEM: Man overboard

SOLUTION:

- If the Man overboard is in the distribution box, the 4-7 operator should say "DO NOT hit the pumps, there is a bobby in the distribution box." At this time 1-3 should hit the auxiliary E-stop. The unloader and 4-7 should attempt to rescue the man overboard. Once the guest floats around the first curve, the 4-7 operator should have 1-3 hit the pumps. 1-3 should call 5333 Code 1. (Once the guest gets out and is okay, 1-3 should call 5100 and down grade it to a Code 2.) If the

person does float around the first curve towards Lake #1, the Tower #1 operator should go to the wave maker porch and attempt a rescue. The unloader should go to the inside of Lake #1 to assist, taking rescue equipment with him. 4-7 and Tower #3 should go to Lake #1 to assist as well. The queuer should check with 1-3 so they can be directed where most needed. 1-3 should also call the Associate Cafeteria and have whoever is on break come back to the ride.

- If the man overboard is in Lake #1, there are two different procedures to follow. If the man overboard is not holding onto something in the lake, then the Tower #1 operator should say "DO NOT hit the pumps, there is a bobby in Lake #1". 1-3 should hit the auxiliary E-stop. Tower #1 should then leave the tower after turning off the auxiliaries and attempt a rescue. 1-3 should call the ride down Code 1. If the man overboard is holding onto something or gets out, Tower 1 should hit the pumps and say "Pumps hit, bobby in Lake 1". As soon as the guest is out, 1-3 should downgrade the situation to a Code 2. As soon as the 4-7 operator hears that there is a man overboard, tell the unloader "Bobby Lake #1". The unloader should go to Lake #1 via the trail in the observation area taking rescue equipment. The 4-7 and Tower #3 operator should also respond to Lake #1. The queuer should again check with the 1-3 operator to see where they are most needed. 1-3 should also call the associate cafeteria for associates who are on break.
- If the man overboard is past the dispatch gates of lake #1 but before the back-up gate and there are NO boats behind the "bobby", the Tower #1 operator will hit the pumps and alert the headset, there is a bobby past the gates and is engaging the back-up gate, and then attempt a rescue. The 4-7 operator will put their stops down and run to Lake #1. The Tower #3 operator should also go to Lake #1. The unloader and queuer should be ready to respond to where they are most needed. 1-3 should also call the ride down Code 1 (Code 2 once the person is out).
- If the man overboard is past the back-up gate or if the gate fails to operate or if there is a boat between the 2 sets of gates, the Tower #1 operator will hit the pumps and alert headset there is a bobby past the back-up gate. The 4-7 operator will send the unloader and queuer to waterfall #1 by saying "Bobby waterfall #1". Once there, they should attempt to rescue. The Tower #3 operator will go down the steps and wait for the person with their life saving equipment. The Tower #2 operator will go to Waterfall #2 to attempt a rescue. 1-3 should call the ride down Code 1 (Code 2 once the person is out). 4-7 should go where most needed.
- If the man overboard is in Lake #2, Tower #2 should hit the pumps and alert the headset, there is a bobby in Lake #2. Tell the guest in the water to stand up and hold onto something. Tower #2 should then go down and attempt a rescue. 4-7 should send the unloader and queuer to Lake #2, with rescue equipment. Tower #3 will also go to Lake #2. 1-3 should call 5333, Code 1. If the man overboard is out, Code 2. 4-7 should go where most needed.
- If the man overboard is past the gates of Lake #2, Tower #2 should hit the pumps and alert headset, there is a bobby past Lake #2's gates. The Tower #2 operator should then go to the sawmill exit, with rescue equipment and attempt a rescue. The queuer should go to the island side of the saw mill exit with rescue equipment. Unloader goes to the reservoir wall. The 4-7 operator will go to the bottom of the lift. All personnel will attempt a rescue. If the man overboard does not pass the tower #2 operator, he/she will go to the back door of the sawmill. 1-3 will call the ride down Code 1 (Code 2 once the person is out). If there is no queuer, the unloader will go to the island side of the sawmill exit and Tower 2 will go to the reservoir wall.

- If the man overboard is at the bottom of the lift, 1-3 should hit the pumps and say over the headset "Bobby at the bottom of the lift". 4-7 should go to the bottom of the lift, the unloader to the reservoir and the queuer to the island side of the lift. Tower 2 should go to the catwalk. If anyone at the bottom of the lift notices that they are not needed, they should return to the station to find out where they are needed to go. Then 1-3 should call the ride down Code 1 (Code 2 once the person is out)
- If the man overboard is in the reservoir, 1-3 should send the unloader down to the reservoir to get the person out. If the person is near the flood gate, the 1-3 operator should warn them, by using the PA, to stay back. Call Security and Area Supervisor. DO NOT hit the pumps unless the person gets past the flood gate.
- *NOTE:* Anytime there is a man overboard, do not discuss the situation with anyone outside of those involved.

PROBLEM: Boat jam

SOLUTION:

- If the boats touch anywhere after Lake #1's gates or before Lake 2, the pumps should be hit immediately. 4-7 should send the unloader and queuer to the area with rescue equipment. Tower #1 should stay in their tower and communicate with 1-3. After 1-3 has all information needed, the tower #1 operator should prepare for a lake #1 evacuation. If necessary, the 4-7 operator should go to the area also. Tower #2 and #3 should only leave their towers if needed to attempt a rescue.
- If the Jam is in Lake #2, the Tower #2 operator should inform the station that there is a jelly. 4-7 should call the ride down Code 2 Jelly. Tower #1 should stop dispatch. 4-7 should stop dispatch as well. If needed, the queuer or unloader should assist by going to Lake #2 to guest relate. Once Maintenance arrives at Lake #2, they should signal the Tower #2 operator that they are getting on the boats. The Tower #2 operator should acknowledge. Maintenance should get onto the nearest boat and work their way to the front. Tower #2 should not let them on the boats until the drive drums have stopped and the last boat from Lake 1 is received. 1-3 should key out the geysers. Once the jam has been broken up, Maintenance will request to get off of the boats. Tower #2 should stop dispatch until Maintenance is clear. Once there are only four boats left in the lake, Tower #1 can resume dispatch. Call the ride back up and record the down time on the capacity sheet.
- If boats touch while in the sawmill keep a close eye on them. If boats jam or movement is abnormal, the pumps should be hit immediately. 4-7 should send the unloader or queuer with rescue equipment into the sawmill to watch the boats. If the boats begin to buckle or take on water ask all riders to quickly exit the boats on the sawmill wall. Call the ride down Code 2.
- If the jam is at the swing gate, 1-3 should try to break it up by opening and shutting the swing gate. 4-7 or a certified unloader should go to the bottom to assist. This is a potential hit the pumps situation.

PROBLEM: Two close boats from Lake #1

SOLUTION: Stop all dispatch immediately. Call Maintenance and your Area Supervisor. Tower #1 will use the backup gate to stop the boats. Tower #2 may dispatch only if 1-3 has room on the lift. If the back-up gate does not work in separating the boats, the queuer goes to the waterfall to watch the boats. As soon as the boats clear waterfall #2 and make it into Lake 2, resume normal operation. If the boats touch, the pumps need to be hit.

PROBLEM: Headset failure

SOLUTION:

- If failure occurs in Tower #1, Tower #2, or Tower #3
 - Dispatch should be stopped immediately from that location and the rest of the positions as soon as they realize the situation. The affected tower(s) should push in the call button(s) to notify the other operators. Additionally, the tower operator should use the A-phone to contact 1-3. Go into normal holding procedures until all necessary positions are on the A-phone. At that time, cycle down Code 3.
 - If Tower #1 should get more than 12 boats in lake #1 before the rest of the ride stops dispatch, send out one boat. If more boats enter the lake, use a whirlpool dispatch to get back down to 12 boats.
 - Remain in Code 3 status until a spare headset(s) is taken to the affected tower(s) or Maintenance restores normal communication.
- If failure occurs in the station:
 - If it is only 4-7, get the headset from the computer room. If that doesn't work or that headset is not available, you can continue to run without a headset at 4-7, but use increased eye contact and hand signals between board operators. The queuer and/or unloader can also relay messages. Call Maintenance and your Area Supervisor to advise.
 - If it is only 1-3 headset, and it is not the box, then the unloader will bring the 1-3 operator the 4-7 headset because 4-7 may run without headset. Contact Maintenance and Area Supervisor to advise.
 - If the 1-3 doesn't work with any headset, the ride will be cycled down Code 3 using the A-phone system.
- If total headset system failure, stop all dispatch at once. It will be evident immediately that the total headset system is out. Every position should use the A-phone system to cycle down Code 3.
- If the A-phone system also fails, shut down Code 2.

PROBLEM: Power blink

SOLUTION: The pumps will probably cut off; headsets will also go off for a few seconds. All dispatch is stopped. Call down Code 2. Evacuate Lake #1 and reservoir **with Area Supervisor permission**. Pumps can be started with loaded boats in Lake #2. Once guests are off the ride, do not resume normal operation until Area Supervisor gives permission.

PROBLEM: Pump failure

SOLUTION: Treat this the same as a power blink. Restart the pumps only after Lake #1 and the reservoir have been evacuated and you have Maintenance and Area Supervisor approval. If pumps don't restart, proceed with Lake #2 and lift evacuation with Area Supervisor approval. Once guests are off the ride, do not resume normal operation until Area Supervisor gives permission.

PROBLEM: Power failure

SOLUTION: Pumps, headsets, lighting, and all power is gone. Keep everyone calm and evacuate only with Area Supervisor permission. Call numbers for a Code 2. Power will probably be restored momentarily. Once guests are off the ride, do not resume normal operation until Area Supervisor gives permission.

PROBLEM: Loss of lighting from Eiffel Tower

SOLUTION: All dispatch should stop until the Area Supervisor gives permission for a controlled shutdown. Lighting from the Eiffel Tower is vital to proper visibility. You are down Code 2 until granted permission to shut down. Once the Area Supervisor gives permission to shut down, do so at a visual dispatch. Once guests are off the ride, do not resume normal operation until Area Supervisor gives permission.

PROBLEM: Pinched boat in Lake 2 gates

SOLUTION: The Tower 2 operator should alert everyone that they have a pinched boat. 4-7 and Tower 1 will stop dispatch. Once Tower 2 gets the last boat from Lake #1, they will attempt to release the boat manually, using the pin at the gate mechanism, making sure that they do NOT release more than one boat. Station attendants should guest relate and be ready for a jelly. Once there is no threat of a jelly, Tower 1 and 4-7 will resume dispatch. 1-3 should inform the Area Supervisor that there was a pinched boat.

PROBLEM: Unloading guests with disabilities

SOLUTION: Tower #1 should send a dip or a camera/whirlpool gap after their boat and inform the headset positions of the location of the boat. Once Tower #2 dispatches the boat, they should hold until 2 or 3 boats are in the lake and then wait for 1-3 to tell Tower 2 to go back up. The unloader will go to the bottom of the lift to turn the boat clockwise. The 1-3 operator will stop the boat in front of the guests with disabilities' boat low on belt #1, so it is easier for the person at the bottom to turn the boat. Once the person at the bottom has turned the boat so that the guests with disabilities can get out on the unload side of the station, they give a thumbs up telling the 1-3 that they can start the belt. Safely guide the boat onto the belt.

Tower 3 Downtime Procedures

PROBLEM: Close boats after Lake #1

SOLUTION: Stand up and carefully watch the boats. If the boats touch, immediately hit the pumps and inform headset. Watch for hand signals from the queuer or unloader in the cereal area.

PROBLEM: Gates stuck open in Lake #1

SOLUTION: If there is a Cereal and the back-up gate holds them, stand up and stay in your tower. If it does not, the pumps will be hit and you must carefully watch the boats as they go to Lake #2. If the boats jam up, get permission from 1-3 to leave your tower to go to the boats in case it is necessary to evacuate.

PROBLEM: Trough obstruction

SOLUTION: Hit the pumps. Then tell 1-3 about the obstruction and its location. Follow normal Code 2 procedures. Assist guests however possible. *NOTE: THIS IS FOR BOULDERS AND TREES FALLING IN OR ACROSS THE TROUGH.*

PROBLEM: Man overboard (Bobby)

SOLUTION:

- If the man overboard is in Lake #1, run to Lake #1 with your life saving equipment to help attempt a rescue.
- If the person is between Lake #1 gates and your tower, hit the pumps and inform headset, then proceed down the steps to the trough wall to attempt a rescue using your lifesaving equipment. **NOTE:** Never go down those steps unless it is to make a rescue.
- If the man overboard is past your tower, run to waterfall #2 to attempt a rescue.
- If the person is in Lake #2, run to Lake #2 to help with the rescue.

PROBLEM: Headset failure

SOLUTION: Try to signal the other operators by pushing the call light on the headset box. Once the other headset positions realize the situation, they will all switch to the A-phones to cycle down Code 3. If the headsets and A-phones do not work, stop dispatch and call in a Code 2 - headset failure.

PROBLEM: Pumps hit - Code 2

SOLUTION: Stand up and watch to see if Tower #1's last boat makes it to Lake #2. If it does, hurry to Lake #1 to help with the evacuation. If the boat does not make it there, inform 1-3 of its location and then go to the boat and guest relate until others come to help evacuate. **NOTE:** Never evacuate until there is permission given by the Area Supervisor, the ride is locked out and there must be at least another associate there to help you.

PROBLEM: Capsized boat (pancake)

SOLUTION: Hit the pumps, alert headset, and hurry to its location with your lifesaving equipment (throw bag/shepherd's crook) to attempt a rescue. Ask the first person you get out the number of people riding in his/her boat. Continue rescue efforts.

PROBLEM: Monitor failure

SOLUTION: Inform 1-3 and Tower #1 that your monitor(s) is (are) out. The ride will be down Code 2 until an associate is positioned to take the place of the camera. Keep an eye on that person for important hand signals.

Station Attendant Downtime Procedures

PROBLEM: Cereal

SOLUTION:

- Queuer goes to the cereal area with rescue equipment. If running without a queuer, the unloader responds.
- If the back-up gate holds the boats, then guest relate with the boats.
- If the boats are passed the back-up gate or the back-up gate does not hold the boats, give double thumbs down so the pumps can be hit. Watch the boats as they come out of the whirlpool and as they go past the observation area. Follow the boats all the way to Lake #2. If the boats jam up at any time between Lake #1 and waterfall 2, tell the guests to remain seated but to take off their seat belts. If the boats begin to buckle or take on water, tell the guests to exit as quickly as possible in the other direction of the boats.

PROBLEM: Belt #1 failure (Potential)

SOLUTION: Go to the bottom of the lift, tell the guests to remove their seatbelts but to remain seated. Hook the boat off by taking the rope at the bottom of the lift and clipping it to one of the outside eye rings. Lay the other end of the rope over the catwalk railing to the left. Watch the boats for buckling or taking on water. If this happens, tell 1-3 to hit the pumps by giving the double thumbs down signal. When the pumps are hit, you need to tie the last boat off by wrapping it around the railing and hooking it off. For safety reasons, the operator tying off the boat should stand on the station side of the rope. Stay with the boats until they are completely on the lift. NOTE: The reason that we tie off boats at the bottom of the lift is because when the pumps are hit, the boats go directly into the reservoir. Tying off the boats, even just one, means that there will be fewer boats to put back in.

PROBLEM: Boat stuck at the bottom of the lift (Potential)

SOLUTION: Go to the bottom of the lift. Tell the guests to remain seated and to remove their seatbelts. Try getting the boat up onto the lift by pushing / pulling the boats onto / away from the lift. 1-3 will allow one boat to come and bump the boat which is stuck. Right before this boat bumps, let go of the boat and see if it works. If not, hook the rope of the last boat to an outside eye ring and lie the other end over the catwalk rail, then continue trying to get the boat unstuck. You also need to watch the boats for buckling or taking on water. If this happens, tell 1-3 to hit the pumps by giving the double thumbs down signal. Secure the boats by wrapping the rope around the catwalk railing. Stay with the boats until they are completely on the lift.

PROBLEM: Boat jam at the bottom of the lift (Potential)

SOLUTION: Put on a life vest and go to the bottom of the lift. Tell the guests to remain seated but to remove their seatbelts. Signal to the 1-3 operator to get onto the boats and try to break the boats up like a jelly. Watch the boats for buckling or taking on water. If this happens, tell 1-3 to hit the pumps and you either need to get off the boats if possible or have a seat.

PROBLEM: Boat jam in the sawmill

SOLUTION: Go to the sawmill and watch the boats. Ask the guests to take off their seatbelts. Watch for buckling or taking on water. If this happens, tie off the boats and ask all riders to quickly exit onto the sawmill wall.

PROBLEM: Boats in the water at the bottom of the lift (Potential)

SOLUTION: Go to the bottom of the lift and tell the guests to remain seated and to remove their seatbelts. Hook a rope to the eye ring of the last boat and lie the other end over the catwalk rail. Also guest relate during the delay. Watch for buckling or taking on water. If this happens, tell 1-3 to hit the pumps and secure the boats to the railing. Stay with the boats until they are completely on the lift.

PROBLEM: Man overboard

SOLUTION:

- If the man overboard is in the distribution box, attempt a rescue. Once the "bobby" floats around the first curve, go through the observation area to Lake #1 and attempt a rescue again.
- If there is a "bobby" in Lake #1, take the rescue equipment from the station through the observation area and attempt a rescue in Lake #1.
- If there is a "bobby" after the back-up gate of Lake #1, go to waterfall #1 and attempt a rescue.
- Once told of a "bobby" in Lake #2, go there and tell the person to stand up. Assist the person getting out. (Be especially careful entering Lake #2 because of the geyser nozzles underwater.)
- If there is a "bobby" after Lake #2's gates or at the bottom of the lift, the queuer will go to the observation area side of the lift, down to the sawmill taking a throw bag with him and wait for the "bobby" to float past. If the "bobby" does not come through, the queuer will go into the sawmill and look for him. If he doesn't see the "bobby", he will go back outside of the sawmill. The unloader will take the rescue equipment from the unload side of the station and go down the exit ramp to the reservoir, climb over the fence and stand directly across from the flood gate. He will attempt a rescue (without getting in the water) when the "bobby" is coming towards you. If there is no queuer, the unloader will go to the island side of the sawmill exit and Tower 2 will go to the reservoir wall.
- If there is a "bobby" in the reservoir, go down the exit ramp, climb over the fence and after getting permission from the 1-3 operator, attempt a rescue by entering the water and tell the guest to stand up and to stay away from the flood gate area. If the guest is standing in the reservoir, ask the guest to walk out of the reservoir. 1-3 will call security and wait until security comes.

PROBLEM: Capsized boat (Pancake)

SOLUTION: Go to the area of the capsized boat, taking whatever lifesaving equipment is closest with you. Tend to the guests. Ask the first person you get out the number of people riding in his/her boat. Ensure that the guest knows to hold on to the wall of the trough or something stable, and then proceed rescuing the next guest.

PROBLEM: Boat jam in the trough (between the back-up gate of Lake #1 and the mouth of Lake #2)

SOLUTION: Go to the area of the boat jam, ask the guests to take off their seatbelts, and watch the boats for buckling or taking on water. If this happens, tell the guests to exit the boats in the opposite direction of the other boats.

PROBLEM: Gates stuck open in Lake #1

SOLUTION: Go to waterfall #1 and watch for the boats as they come out of the whirlpool. Follow them down to Lake #2. If the boats jam up at any time, follow the procedures for a boat jam in the trough.

PROBLEM: Gates stuck open Lake #2

SOLUTION: Go to the sawmill and watch the boats as they come into the sawmill. If the boats jam up, give double thumbs down to the Tower 2 operator, and follow the procedures for a boat jam in the sawmill.

PROBLEM: Close boats after Lake #1

SOLUTION: Go to waterfall #1 and listen for the boat numbers to watch. Watch the boats coming out of the whirlpool. Follow the boats all the way down to Lake #2. If the boats touch or jam at any time, signal to the closest tower to hit the pumps by giving double thumbs down signal. Follow the procedures for boat jam in the trough.

PROBLEM: Close boats after Lake #2

SOLUTION: Run to the sawmill and watch the boats. If they touch, do nothing. If they jam up, give double thumbs down to the Tower 2 operator, and follow procedures for a boat jam in the sawmill.

PROBLEM: Boats stop unexpectedly

SOLUTION: Normally the boats will stop on belts #6, #5, and #4. If this does not happen, tell the guests to remain seated and once everyone is seated and ready to move, signal to the 4-7 operator to restart the belts.

PROBLEM: Boat(s) in the reservoir

SOLUTION:

- With the pumps still running:
 - If the boat is between the flood gate and the rain curtain pump, go around the sawmill on the catwalk and hook a rope to the boat. Once you've gotten permission from the 1-3 operator, add the boat back to the trough.
 - If the boat is past the rain curtain pump, go down the exit ramp with a lifevest, climb over the fence and get permission from the 1-3 operator and enter the reservoir. Walk over to the boat and push it, never pull a boat, over to the rain curtain pump. Again, wait for permission from the 1-3 operator to add the boat back into the trough. To do this, push the boat into the current of the ride, making sure that you do not get too close to the flood gate since it starts to slope off there.
- With the pumps off:
 - Go down the exit ramp with a lifevest and after the current dies down and you have permission from the 1-3 operator, get in the reservoir and push the boat over reservoir evacuation area. Once there, another associate will hand you a rope, hook it to an outside ring.
 - At least two other associates will be needed to perform this evacuation. Two people will need to hold the boat and steady it for the guests, the other one will assist the guest getting out of the boat onto the catwalk one at a time. The guests will then be led down the service road, behind tower #2, out through the gate by the Kings Dominion Theatre.

PROBLEM: Pumps hit, Code 2

SOLUTION: Go to the bottom of the lift and tie off the last boat, then wait for instructions from 4-7 or 1-3. You will either go to Lake #1 to help evacuate, Lake #2 to guest relate, the reservoir, to cut the line, or to guest relate in the station or lift.

PROBLEM: Station evacuation

SOLUTION: In order to do a station evacuation, there should be at least two associates, one on the load side of the station and one on the unload side of the station. The guests who are on the bridge leading up away from the 4-7 operator and the guests in the queue lines will exit out through the gate where the queuer usually stands over the observation area bridge and down the exit ramp. The guests who are still in line behind 4-7, will leave through the gate by 4-7 and down the exit ramp. Area Supervisor permission is needed before the station is evacuated.

PROBLEM: Small child in a boat

SOLUTION: Make sure the child is tall enough. Check the child's height if you are unsure of whether the child is tall enough. Do not send the boat out unless you are absolutely sure the child is tall enough. Ask the group to wait to the side until the height is verified.

PROBLEM: Boats in station need air

SOLUTION: The 4-7 operator will turn the power to the station belts off from the 4-7 board. The unloader then takes the key with him while airing the boats. Once done, the unloader will return the key to 4-7.

Tower 1 Downtime Procedures

PROBLEM: Boat jam in Lake #2

SOLUTION: Stop dispatch and tell the Tower #2 operator what the last boat number is that you dispatched. Go into normal holding procedures. Turn off the drive drums and wave maker. Stand up and guest relate with the guests in the boats. You should say, "May I have your attention please? There is a temporary delay in the operation of the ride. While we are waiting, I would like to ask you to keep your arms and legs inside the boat and remain seated. The ride will continue shortly. Thank you." Wait until Tower #2 is down to 2 boats before you start dispatch (also get Tower #2's permission). Start dispatch (send the first few boats at a slow dispatch), turn the drive drums on and the wave maker back on and also tell the guests "the ride will resume now, thanks for waiting patiently," etc.

PROBLEM: Tower #2 stops or slows dispatch

SOLUTION: If Tower #2 stops, you should stop. (Tell Tower #2 what the last boat number is that you dispatched.) If Tower #2 slows, you should also slow. When Tower #2 goes back to normal, you should go back to normal. If Tower #2 has more than 4 boats you should remain stopped until Tower #2 is down to 2 boats. NOTE: When you are going at a slowed dispatch (or anytime), you must make sure that you do not get more than six boats in Lake #1. If you do, you should ask 4-7 to slow down for a minute if possible (it depends on the situation at the lift). Maintain a consistent, accurate dispatch and you should be able to prevent this problem.

PROBLEM: Potential hit the pump situations (boats stuck at the bottom of the lift, boat jam at the bottom of the lift, belt #1 failure, or boats in the water at the bottom of the lift)

SOLUTION: Tower #1 should continue to dispatch boats at normal (even if you were previously dispatching at a slower rate - except at night), until the lake is clear of all loaded boats or the pumps are hit. Tell Tower #2 what the last boat number is. The reason that we will dispatch boats down to Lake #2 is to minimize the downtime. We can do this because the boats do not have to be evacuated in Lake #2 before we restart the pumps, but they do in Lake #1. So even if we can get a few boats down to Lake #2 before the pumps are hit, it will help. If the pumps are hit, you must stop dispatch AT ONCE. Then make sure the last boat gets into Lake #2. Helpful Hint: A good way to see if the pumps are hit in a situation like this (before 1-3 tells you) is to watch for the drive drums and wave maker to turn off or the e-stop button to start flashing. If they both go off at the same time, react as if the pumps have been hit unless told otherwise.

PROBLEM: Capsized boat (Pancake)

SOLUTION: If the boat is in your lake or before your lake, hit the pumps and tell 1-3 why. Go off and make your rescue. Ask the first person you get out, the number of people riding in his/her boat. If the boat is past Lake #1's gates but before the back-up gate, engage the back-up gate, hit the pumps, and inform headset. Then go attempt a rescue. If the capsized boat is after the back-up gate, stay in your tower, hit the pumps and tell 1-3 why. The reason you stay in your tower is to stay in constant communication with the 1-3 operator about what's going on.

ROBLEM: Maximum number of boats in Lake #1

SOLUTION: In normal operation you should have no more than six boats in your lake. At seven boats, ask 4-7 to slow or stop dispatch and turn off the wave maker. In an emergency situation, you can have up to twelve boats in your lake. More than 12, continue to dispatch at visual gaps until you are back down.

PROBLEM: Drive drum failure

SOLUTION: If it is Lake #1, 4-7 should slow down dispatch. If it is in Lake #2, Tower #1 should slow down, to prevent a jelly. The loader and queuer should be prepared to go to either lake if necessary. Call Maintenance and the Area Supervisor. A maximum of 17 to 18 boats should be cycled in this situation. Try to keep only 3 boats in the lake at a time.

PROBLEM: Lake #1 evacuation

SOLUTION: If the pumps have been hit with loaded boats in the lake, we will have to evacuate the boats.

- Tell the guests that there will be a delay in the ride, etc.
- BEFORE leaving the tower tell the 1-3 operator:
 - How many boats are in your lake
 - Number of the last dispatched boat
 - That you are leaving your tower (make sure he acknowledges you). If 1-3 is busy, tell Tower #2 operator and make sure he acknowledges you. This is very important because 1-3 must account for all of the boats on the ride. If you leave without telling him, he will not be able to do this. Also before entering the lake, 4-7 should have the pump start box locked out.
- The next step is to go down to the lake and tell the guests that we have a mechanical problem (not telling them exactly what is wrong) and that it will be necessary to evacuate but that you will explain how in a little while.
- You should then get the ladder and put it into the trough at the point where the wooden guide boards meet the trough wall. NOTE: Make sure the ladder is closed, leaning against the wall of the trough.
- When most of the water is gone, get into the trough.
- Make sure that the boats are not resting on the weir boards.
- Try to arrange the boats in a "U" formation so that the guests farthest away will be able to walk from boat to boat to reach the ladder.
- Find out if anyone is disabled or will need special assistance getting out. If so, tell 1-3. Place this boat towards the back at the end of the "U" formation.
- You must wait until enough water has left the lake so the boats are stable on the floor. During this time, you should explain to the guests how we are going to get them out. Get their attention and say: "We are going to begin getting out soon. The way we will do it is the boat closest to the ladder will go first, and we will work our way back one boat at a time, one person at a time, very slowly until everyone is out. When you get out, please wait in a group over by the rock. I will tell you more when we are out."
- Try to stay relaxed and talk with the guests. It helps them feel more at ease in a strange situation.
- Never evacuate your lake unless there is at least one other associate there to help (ride operator or security, etc.) and you have your Area Supervisor's approval.
- Once everyone is out, immediately remove the ladder and tell 1-3 on the headset that the evacuation is complete; Lake #1 is clear.
- Next, get on the rock and tell the group, "We will now walk back to the station along a path. Please stay in a single file line and stay on the path. Thank you".
- Have one associate in front and one in the back of the line when walking back to the station.
- If the ride will open quickly, we will bring the group through the gate by the computer room and up the entrance ramp (have all of the people standing in line move to the right) into the

station. Have the group wait along the computer room side of the exit ramp in a single file line. They will be the first people loaded.

- If the ride is going to be down for a while, the line will already be cleared so have the group walk down the entrance ramp.
- If there is a boat in the trough between lake #1 gates and Lake #2, it will be your responsibility to evacuate it. The guests should be brought to the back-up gate area and you should use the ladder to assist them out of the trough. Then join the rest of the group at Lake #1 and go back to the station. The boat can be evacuated while the water is draining in Lake #1. Remember that you must have the Area Supervisor's approval before evacuating the boat. You should not go to that boat until another ride associate has come to Lake #1 to stay with those guests.
- If there is a serious problem at the bottom of waterfall #1, do not evacuate the guests in lake 1 at the normal spot. Instead walk the guests from Lake #1 up the trough and get them out of the trough by the computer room. Be sure to have someone bring the ladder.

PROBLEM: Whirlpool evacuation

SOLUTION: If the last boat from Lake #1 did not make it into Lake #2, it will be necessary to evacuate the boat in the whirlpool. To do this, go to the boat and tell the guests that you will be evacuating them. Help the guests out of their boat down onto the trough floor. Lead them back up to Lake #1 to join the rest of the guests being evacuated. You must have Area Supervisor permission first.

PROBLEM: Two boats leave the lake one gates at the same time (Cereal)

SOLUTION:

- The Tower #1 operator should engage the back-up gate and inform the other headset positions of the situation. Turn off the wave maker and go into normal holding procedures. The Tower #1 operator should also be watching the boats for buckling or taking on water. If this happens, hit pumps and inform headset. The 1-3 operator should call the numbers for a Code 2. Wait for Maintenance and Area Supervisor to arrive. Maintenance and Rides Management will determine whether to tie the second boat off. Once you receive permission from Rides Management, the back-up gate switch can be released.
- If the back-up gate does not work when it is engaged, the Tower #1 operator should hit the pumps and alert headset. Tower #1 should go out and push pole the second boat as long as he can and then return to the tower. When this occurs, the 4-7 operator should tell the queuer to go to the bottom of waterfall 1 to watch the boats. The Tower #1 operator will inform the queuer of the boats that are being watched by saying only the two boat numbers. The Tower #1 operator will then follow Lake #1 evacuation procedures.

PROBLEM: Pumps hit with loaded boats in Lake #1

SOLUTION: STOP DISPATCH at once. Tell Tower #2 and Tower #3 your last boat number. Make sure it gets to Lake #2. Follow the procedures for Lake #1 evacuation.

PROBLEM: Trough obstruction (Tree or boulder)

SOLUTION: Hit the pumps. Then tell 1-3 why and also where the obstruction is. Follow normal Code 2 procedures. Assist guests however possible. **NOTE:** This is for boulders and trees falling in or across the trough.

PROBLEM: Gates stuck open in Lake #1

SOLUTION: The Tower #1 operator should engage the back-up gate, try hitting the button a few times, turn off the drive drums and wave maker. Advise 1-3 so they can call in a Code 2. Wait for Maintenance, your Area Supervisor and the Department Manager to arrive. If the back-up gate does not work, hit the pumps. Try to push pole the boats back as best you can. Tower #3 will watch the boats as they go through the whirlpool. The queuer and/or unloader will also come and watch the boats as they go into Lake #2.

PROBLEM: Gate stuck shut in Lake #1

SOLUTION: First try pushing the button again, if this does not work, inform 1-3 of the situation. Once you get the last boat from the station, with permission from 1-3, go to the second photo cell and run your hand in front of it. Return to the tower and try dispatching. If this does not work you will need to swipe the first photo eye and then the second. If the problem persists, alert all headset positions that we have a Code 2 and why. Follow normal holding procedures. Wait for Maintenance to check the gates, and tell us if they can get them going again or if we need to hit the pumps and evacuate.

PROBLEM: Belt #2 and #3 failure

SOLUTION: Stop dispatch and go to normal holding procedures (turn off drive drums and wave maker and guest relate) unless told otherwise. You may be told to dispatch if the Code 2 turns into a potential hit the pumps situation. Listen carefully.

PROBLEM: Headset failure

SOLUTION: If you can still hear others talking, but you cannot talk, then only Tower #1's headset is out. Immediately stop dispatch and go into normal holding procedures. Use the A-phone system and/or the call lights to notify the other operators. Cycle down Code 3 with 1-3's permission using the A-phones. If the lake gets more than 12 boats, dispatch at whirlpool to get back down to 12. You should use the emergency P.A. to communicate with the guests if necessary (otherwise this P.A. should remain under the console). If the A-phone system and headsets both fail, shutdown Code 2.

PROBLEM: Gates stuck shut/open in Lake #2

SOLUTION: If the gates are stuck shut, stop dispatch, tell Tower #2 the last boat number dispatched. If the gates are stuck shut, ask 4-7 to stop dispatch and press the reset button and to go into normal holding procedures. If the gates are stuck open, initially stop dispatch. You will go at a slowed dispatch to have a controlled shutdown if necessary. The Location Supervisor and Area Supervisor will decide this.

PROBLEM: Man overboard

SOLUTION:

- If there is a man overboard in the distribution box, stay in your tower until the pumps are hit, at this point go to the wave maker porch, taking with you rescue equipment, and attempt a rescue.
- If there is a "bobby" in your lake and they are just floating around, do not hit the pumps, tell 1-3 the situation, and attempt a rescue. If the "bobby" has grabbed hold of something, hit the pumps, tell 1-3 why, and attempt a rescue. In any situation of a man overboard in Lake #1, make sure you turn off your wave maker and drive drums before you leave your tower.
- If the man overboard is between the lake's gates and the back-up gate, and there is no boat in this area, hit the pumps and tell 1-3 why, while engaging the back-up gate and attempt a rescue.

- If the man overboard is past the back-up gate or there is a boat in between the two sets of gates hit the pumps, inform all headset positions, and stay in your tower to relay information to 1-3. Tower #2, Tower #3, and the station attendants will tend to the bobby.

PROBLEM: Any monitor outage

SOLUTION: If there is any monitor failure, stop dispatch, and wait for Area Supervisor instructions, which may include having an associate stand where the camera is and watch for potential situations. Should problems arise this person will give appropriate signals to nearby associates.

PROBLEM: Close boats (3 or less boat lengths apart) after the back-up gate

SOLUTION: The tower one operator should inform the headset positions and engage the back-up gate to stop any boats that are behind it. The 4-7 operator should send the unloader or queuer to the bottom of waterfall #1 to watch the boats. The Tower #1 operator should inform that person of the boats he is watching for by only saying the two boat numbers. Watch that person's signal in case the pumps need to be hit. (If the boats touch, the pumps need to be hit immediately.) Do not resume dispatch until the boats have safely reached Lake #2 or until they have safely separated.

PROBLEM: Pinched boat in Lake 2

SOLUTION: Stop dispatch, tell Tower #2 last boat number, go into normal holding procedures until the boat is released and Lake 2 is down to 2 boats.

PROBLEM: Drive drums and wave maker go out at the same time

SOLUTION: Stop dispatch because either the E-Stop all or E-Stop auxiliaries or automatic system failure has been hit. Find out what has happened and take necessary action.

Tower 2 Downtime Procedures

PROBLEM: Potential hit the pump situation (boat stuck at the bottom of the lift, boat jam at the bottom of the lift, belt #1 failure, or boat in the water)

SOLUTION: Stop dispatch and tell 1-3 the last boat number sent. Go into normal holding procedures. Turn off the drive drums, do not shoot the manual geyser off anymore, guest relate with the guests in the lake, and stand up in tower. (As soon as possible, you should ask the 1-3 operator to turn off the geysers so the guests won't get too wet.) Be aware Tower #1 will attempt to send you loaded boats.

PROBLEM: Two close boats after Lake #1

SOLUTION: When you initially hear about the situation, you should stop dispatch and tell 1-3 what the last boat number is. Go into normal holding procedures, but keep in contact with 1-3 about the number of boats he has on the lift. We do this because if there is room for two or three more boats (even just one) Tower #2 will send those boats to fill the lift. The reason we do this is to reduce the chance of getting a boat jam in Lake #2. After the close boat situation has been cleared, wait until 1-3 gives you approval to resume dispatch.

PROBLEM: Close boats after dispatch from Lake #2

SOLUTION: Alert all headset positions and stop dispatch. Tell 1-3 what the two boat numbers are and then keep a VERY CLOSE watch on them as they go through the sawmill. Do not resume dispatch until the boats make it to the bottom of the lift okay or they become sufficiently separated in the sawmill. (1-3 will tell you this when they come out near the gate.) This may mean the block system was malfunctioning so the ride may need to close code 2. If the safety system is not causing close boats, keep an eye on the boats. (air levels, water flow, etc.) Do not hit the pumps unless the boats jam up (touching is allowed).

PROBLEM: Pumps hit - Code 2

SOLUTION: If you are alerted that the pumps are hit and we have a Code 2, you should stop dispatch immediately, tell 1-3 the last boat number dispatched, and wait for the last boat from Lake 1 to make it to your lake. STAND UP. (Always stand up in the towers when there is a Code 2 or other situation going on, such as a boat jam, etc.) Make sure that the geysers are turned off. Guest relate with the guests in the lake frequently until associates arrive.

There could be times when the Area Supervisor has associates get onto the boats to guest relate. When/if that happens, always keep the associates that are on the boats aware of what is going on especially if the pumps are being started. Also make sure to keep close eye contact with the associates on the boats. Associates should give proper crossing hand signal and wear a life vest before getting on the boats. (Associates on boats should not try to jump back to the trough wall.)

PROBLEM: Any monitor outage

SOLUTION: If there is any monitor failure, stop dispatch, and wait for Area Supervisor instructions, which may include having an associate stand where the camera is and watch for potential situations. Should problems arise this person will give appropriate signals to nearby associates.

PROBLEM: Capsized boat (Pancake)

SOLUTION: If the capsized boat is before your lake, go wherever is most needed. If it is in your lake, hit the pumps and tell 1-3 why. Attempt a rescue. Ask the first person you get out, the number of people riding in his/her boat. If it's past your gate, go to the end of the sawmill catwalk and attempt a rescue.

PROBLEM: Trough obstruction

SOLUTION: Hit the pumps. Then tell 1-3 about the obstruction and its location. Follow normal Pumps Hit Code 2 procedures. Assist guests however possible. NOTE: This is for boulders and trees falling in or across the trough.

PROBLEM: Gates stuck open in Lake #1 or Cereal

SOLUTION: If the back-up gate works, stop dispatch and tell 1-3 the last boat sent. See if you can send anymore to fill up the lift. If the back-up gate does not work, stop dispatch and tell 1-3 the last boat sent. The pumps will be hit in this situation. Watch the boats as they come into your lake.

PROBLEM: Gates stuck shut in Lake #1

SOLUTION: Stop dispatch and tell 1-3 the last boat number dispatched. Communicate with 1-3 to see if you can send more boats to fill the lift. Stand up. Watch for the last boat that was sent from Lake #1, and then give 1-3 the total boat count for Lake #2. Go into normal holding procedures.

PROBLEM: Belt #2 or #3 failure

SOLUTION: Stop dispatch and tell 1-3 the last boat number dispatched. Communicate with 1-3 to see if he can hold anymore. Go into normal holding procedures. When you get the last boat from Lake #1, give 1-3 the Lake #2 boat count.

PROBLEM: Headset failure

SOLUTION: Stop dispatch at once. Try to signal Tower #1 by pushing the call light on the headset box. Use the A-phone system to shut down Code 3. If the A-phones and headsets all fail, shut down Code 2.

PROBLEM: Gate Stuck open in Lake #2

SOLUTION: First try pushing the dispatch button again. If this does not work, alert all headset positions that your gates are stuck open. Turn off your drive drums and watch your boats carefully.

PROBLEM: Gate stuck shut in Lake #2

SOLUTION: First, try to push the dispatch button several times. If gates are still stuck shut, ask permission, after the last boats from Lake #1 arrive in Lake #2, try to press the red reset button located in the front of the tower. If this does not work, alert all headset positions and make sure Tower #1 stops dispatch, go into normal holding procedures and wait for Maintenance.

PROBLEM: Two boats at waterfall #2

SOLUTION: If boats touch before waterfall #2 the pumps must be hit immediately.

PROBLEM: Maximum number of boats in Lake #2

SOLUTION: During normal operation, 3 boats, at 4 boats ask for a dip, and at 5 boats ask Tower #1 to stop. During an emergency, Lake #2 can hold all 23 boats.

PROBLEM: Boat jam in Lake 2

SOLUTION: When there is a boat jam in Lake #2, it is called a "Jelly". Alert everyone and make sure Tower #1 stops. Try to break it up by turning the drive drums on and off. The ride will be called down Code 2 Jelly. If you need assistance guest relating, ask 1-3 to send the unloader or queuer. Remind 1-3 to turn off the geysers. When Maintenance arrives, make sure the drive drums are off and the last boat has been received from Lake 1 BEFORE they get onto the boats. Never turn on the drive drums without first telling Maintenance that you are doing so and making sure they all give you the thumbs up signal and they are all ready. Do not take your eyes off of the Maintenance staff in the lake. Keep communication with them and watch for hand signals. Always let them get back from the first boat to be dispatched so they won't be sent out when there are still boats to be unjammed. Once the jam has been broken up, Maintenance will request to get off of the boats. Stop dispatch until Maintenance is clear. When you are down to 2 boats in the lake, tell Tower #1 to start dispatch. Once you are operational again, ask 1-3 to turn the geysers back on.

PROBLEM: Boat jam in the sawmill

SOLUTION: Hit the pumps and alert 1-3, that there is a boat jam in the sawmill. Watch the associate(s) sent to the sawmill very closely.

PROBLEM: Man overboard

SOLUTION:

- If it is a guest that has fallen into the lake, hit the pumps and inform headset of Code 1 situation. Attempt a rescue. If the man overboard is an associate in Lake #2, alert everyone and wait for the associate to climb back into a boat or onto the side of the trough. If they cannot, hit the pumps and have 1-3 call in a Code 1. Go help the associate out.
- If the "Bobby" is after Lake #1's gates, take your life saving equipment to waterfall #2. Attempt a rescue when the time comes. Turn off the drive drums before leaving the tower.
- If either an associate or guest is overboard after the gates of Lake #2, it is a Code 1 and the pumps are to be hit. You should get your lifesaving equipment and run to the catwalk around the sawmill. The first place that you should run to is the gate by the bottom of the lift. The reason that we go all the way around to the gate first is to be able to help the person out if they come out into the reservoir with the current. Give some time and if the person still has not come through, go to the back door to see if they are there, if not return to the exit of the sawmill. If operating without a queuer, the Tower #2 operator should go to the reservoir wall.

PROBLEM: Drive drum failure

SOLUTION: If it is Lake #1, 4-7 should slow down dispatch. If it is in Lake #2, Tower #1 should slow down, to prevent a jelly. The loader and queuer should be prepared to go to either lake if necessary. Call Maintenance and the Area Supervisor. A maximum of 17 to 18 boats should be cycled in this situation. Try to keep only 1 boat minimum in Lake #2 at a time.

PROBLEM: Low air

SOLUTION: Normal air pressure is around 110-120 psi. When it drops to 105 psi stop using manual geysers. At 100 psi, have 1-3 turn off the geysers, and advise maintenance and your Area Supervisor. At 90 psi use a slowed dispatch. At 80 psi go for a controlled shutdown. And at 60 psi, stop and have a Code 2.

PROBLEM: Sawmill monitor failure

SOLUTION: Call down Code 2 until an operator is positioned in the sawmill to watch the boats. If the operator sees something, he/she should run out of the sawmill and give 1-3 the appropriate hand signal.

PROBLEM: Pinched boat in gates of Lake #2

SOLUTION: Alert all headset positions that you have a pinched boat. Once you get the last boat number from Lake #1 get permission from 1-3 to leave your tower. Go down to the gate mechanism and using the pins, manually release the pinched boat. Be sure not to dispatch two boats at the same time. Return to your tower and continue to dispatch. Advise Tower #1 when you are down to 2 boats.

PROBLEM: Unloading a guests with disabilities

SOLUTION: Once the boat comes into your lake, tell 1-3 the lead boat number and dispatch the disabled person's boat at a sawmill gap. Go at a slowed dispatch if needed.

PROBLEM: Trapped boat

SOLUTION: Alert all headset positions. Have Tower #1 send a dip and ask 1-3 to turn off the geysers.

4-7 Board Operator Downtime Procedures

PROBLEM: Boat stuck at the bottom of the lift (Potential)

SOLUTION: Send the unloader if they are certified. If not, leave your Station Stop and your belt #7 stop up, so the 1-3 operator can run 1-7 if necessary, and go to the bottom of the lift. (If you are unloading a boat on belt #7, either wait until it is completely unloaded or send the unloader to the bottom of the lift.) Once at the bottom, try getting the boat unstuck by grabbing the seats and pulling/pushing it towards the lift. 1-3 will allow one boat to follow and knock the stuck boat onto the lift. Tell the guests to take off their seat belts and remain seated. Take the station rope that is already down there, clip it to one of the eye rings on the follow boat and drape the end over the catwalk. Keep trying to get the boats onto the lift. If the boats begin to buckle or take on water, immediately give the double thumbs signal to the 1-3 operator and secure the rope to the board at the end of the catwalk. Stay with the boats until they are safely on the lift.

PROBLEM: Boat jam at the bottom of the lift (Potential)

SOLUTION: If there is a certified unloader, send them to the bottom. If not, leave your stops up and go to the bottom of the lift. Tell the guests to take off their seat belts. Try to break up the jam by pulling on the seats. If this does not work, signal the 1-3 operator and get on the boats. Keep trying to break up the jam and watch the boats either for buckling or taking on water. If this happens, immediately give the double thumbs down signal and sit down. If the jam breaks up and you are on the boats, sit down.

PROBLEM: Belt #1 failure (Potential)

SOLUTION: Leave your stops up and go to the bottom of the lift if you do not have a certified unloader. Tell the guests to take off their seat belts and to remain seated. Clip the rope to the last boat and drape the other end over the board at the end of the catwalk. Watch the boats for buckling or taking on water. If this happens, immediately give double thumbs down to the 1-3 operator and secure the rope to the board. Stay with the boats until the belt comes back on and the boats make it onto the lift.

PROBLEM: Boat jam in the sawmill

SOLUTION: You are down Pumps Hit Code 2. Hit the station stop if dispatching. Send a station operator to the sawmill to assist.

PROBLEM: Pumps hit - Code 2

SOLUTION: Pull up stops and then lock out the pumps start box and keep the key with you. If there is a boat stuck on the rollers leaving the station, you must secure that boat firmly to the metal beams in the station with available station ropes or have the unloader do this.

- If there are boats at the bottom of the lift and the unloader is not trained to handle this, go to the bottom of the lift and try to tie off any boats that have not floated into the reservoir by clipping the last boat and hooking it to the rail. Stay with the boats or have the unloader guests relate. Once this has been done, see if you are needed in Lake #1 for an evacuation.
- If there are no boats at the bottom of the lift, immediately proceed to Lake #1 to help set up for an evacuation.

PROBLEM: Loaded boat in the reservoir

SOLUTION:

- If the pumps are on and the boat is still close to the catwalk, use the throw bag to catch the boat. Once caught, pull the boat up next to the cement wall, remembering to keep it far enough from the entrance to the trough so that it won't be pulled in. Wait for the 1-3 operator to tell you what boat to add it after and then do so.
- If the boat is too far away to catch or you do not feel comfortable using the throw bag to catch the boat, then grab a lifevest and walk around to the side of the reservoir. Signal the 1-3 operator, get into the water with 1-3's permission, and catch the boat. Hold the boat even with the rain curtain pump until 1-3 tells you the lead boat. Add it by pushing it through the opening by the flood gate.
- If the pumps are hit, do not use the throw bag or get into the water until the current has died down and 1-3 gives you the okay to get in. Once the water has calmed, get in the water and catch the boat(s). The boat(s) will be evacuated from the reservoir.

PROBLEM: Belt 4-7 auto failure

SOLUTION: First stop the belts using the belt 7 stop; (if in Hand, use station stop). Then have the 1-3 operator switch to Hand. If Hand works, send out the boats and try Auto again. If the belt still does not work in Auto, keep running in Hand and have 1-3 call Maintenance and Area Supervisor. If the belt does not work in Hand, it will be necessary to push boats across the belt and go for a controlled shutdown with Area Supervisor permission. This is done by holding the start button down for the belt that does not work (to release the Brake) and starting the belts behind the broken belt. Always ensure all guests are clear on the exit or securely seated in the boat before pushing the boats across.

PROBLEM: Back-up on the lift with boats in the water

SOLUTION: If certified have the unloader go to the bottom of the lift. If not certified, 4-7 operator goes after putting his stops up and informing 1-3. Boats in the station should be dispatched as soon as possible to clear the back-up. If necessary send re-rides or send empties. The person at the bottom should have the guests undo their seat belts but remain seated, and clip off the last boat with the rope and drape it on the catwalk. Watch the boats for buckling or taking on water. If this happens signal to 1-3 to hit the pumps.

PROBLEM: Man overboard

SOLUTION:

- If the man overboard is in the distribution box, put down your stops, and say "DO NOT HIT THE PUMPS, there is a bobby in the distribution box". Attempt a rescue. Have the unloader help you. The pumps can be hit once the "bobby" has floated past the first curve. Inform 1-3.
- If the man overboard is in Lake #1, tell the queuer there is a "bobby" in Lake #1. Leave your stops down and take the safety equipment from the station and go to Lake #1 to attempt a rescue.
- If the man overboard is past Lake #1's gate, put your stops down and go to Lake #1 to assist the Tower #1 operator for a Lake #1 evacuation.
- If the man overboard is in Lake #2, send the queuer or unloader to Lake #2 to assist the Tower #2 operator. The 4-7 operator stays.
- If the man overboard is past Lake #2's gates, send the queuer down to the bottom through the observation area, the unloader to the reservoir and you go to the bottom of the lift. Attempt a rescue. If operating without a queuer, the Tower #2 operator goes to the reservoir wall and the unloader to the bottom of the lift via the observation area.

- If the man overboard is at the bottom of the lift, inform the station attendants, ensure the pumps are hit, put your stops down, and take the safety equipment from the station and go to the bottom of the lift and attempt a rescue. The unloader will go to the reservoir and the queuer to the bottom of the lift on the observation side.
- If the man overboard is in the reservoir, the pumps will not be hit. Send the unloader down to the reservoir with at lifevest to get the person out. The 4-7 operator stays in the station. Security should be called and the guests should remain at the ride until Security arrives.

PROBLEM: Boat jam in Lake #2

SOLUTION: Stop dispatch and send the unloader or queuer down to Lake #2 to guest relate if needed. You may send more boats out to Lake #1 if you need to make room on the lift. Make sure you check with Tower #1 first to make sure the lake is not full already.

PROBLEM: Person falling into the belts

SOLUTION: Hit your Station Stop immediately and tell 1-3 and say "Juice" so 1-3 can stop their belts. If the person is getting out on their own, it is okay to help them out. Make sure person is all right and ask them to wait for First Aid to check on them. If the person cannot get out, call 5333. Do not attempt to get them out. The sprayers should be turned off. Do not apologize to the guest, but offer any help necessary.

PROBLEM: Cereal

SOLUTION: Stop dispatch, send only empties if necessary. Send the queuer to Lake #2 to guest relate or to Waterfall #1 if the pumps are hit. If pumps are hit, 4-7 operator must go to Lake #1 for evacuation.

PROBLEM: Power failure or Power blink

SOLUTION: The signs of power failure are: belt failure, headset failure, the fan shutting off and the pumps cutting off. Treat both as Pumps Hit - Code 2.

PROBLEM: Belt coming unlaced or is tracking

SOLUTION: If it is minor, put it on the Maintenance Sheet and call Maintenance. If it is major, or it starts to get worse (i.e. damaging the boats), call Maintenance and advise the Area Supervisor. Then go for a controlled shutdown. If the belt comes off, or it appears certain to come unlaced, stop and go down Code 2.

PROBLEM: Roller falling off

SOLUTION: Send the unloader to either put it back on or to take it off. If it is damaging the tubes, stop and call down Code 2.

PROBLEM: Boats stop unexpectedly

SOLUTION: Hit your Station Stop to avoid restarting the belts and say "Juice" so 1-3 can stop their belts. Have 1-3 switch you to Hand and bring the boats in once the unloader gives you thumbs up and everyone is seated. Perform a belt test if needed.

PROBLEM: Close boats after dispatch from Tower #1

SOLUTION: Stop dispatch and send the queuer to the cereal area. Be ready to go to the bottom of the lift if the pumps are hit. If station attendants are not certified, 4-7 operator goes to cereal area.

PROBLEM: Smoking motor

SOLUTION:

- If it is gray or white smoke, it is probably electrical. Keep the belt running and go for a controlled shutdown. Keep watching the motor. If it catches on fire or sparks, stop and have a Code 2. The unloader or queuer should use the ABC fire extinguisher to attempt to extinguish the motor.
- If the smoke is black, it is probably a brake problem. If the belt is smoking when the belt is running, stop and have a Code 2 because the brake is engaged and will not disengage. Continuing to run will probably burn out the motor. If the belt is only smoking when the belt stops, keep the belt running and go for a controlled shutdown.

PROBLEM: Motor falling off

SOLUTION: Keep the belt running and go for a controlled shutdown. Send the unloader or queuer down to see if it is damaging the tubes. Make sure he does not get too close. If it catches on fire or sparks, stop dispatch and clear the station of the guests. Attempt to extinguish it. If the motor falls off, or is damaging tubes, stop and have a Code 2.

PROBLEM: Gates stuck open in Lake #2

SOLUTION: Stop dispatch; Send the unloader or queuer to the sawmill. Send empties to Lake #1 if necessary. Be ready in case the pumps are hit.

PROBLEM: Gates stuck shut in Lake #2

SOLUTION: Stop dispatch, send the unloader down to Lake #2 to guest relate.

PROBLEM: Headset failure

SOLUTION: If it is either the Towers or total ride, stop dispatch and use the A-phone system to shut down Code 3. If it is just 4-7's headset, keep running by using hand signals with 1-3. You can also try a spare headset in the computer room.

PROBLEM: Boat stuck on the rollers

SOLUTION: If the pumps are hit and a boat is stuck on the rollers, take all of the available station ropes, and secure the boat. Do this by clipping the ropes around the eye rings or the center ring and from the queue side, clipping the other ends to the metal supports along the rollers. Make sure the ropes will not hurt any guests. Stay with the boat until you are relieved. If pumps are on, bump the stuck boat with another empty boat.

PROBLEM: Boat jam in the station

SOLUTION: Keep moving the belts unless the boats stop. If the boats stop moving stop and call down Code 2. Make sure guests stay seated when trying to move boats. Only unload boats that are fully in the station.

PROBLEM: Pinched boat in Lake 2 gates

SOLUTION: Stop dispatch. Send empties if 1-3 has no more room. Send a station attendant to Lake 2. Guest relate and be ready to send additional station attendants to a "jelly".

PROBLEM: Small child in a boat

SOLUTION: Make sure the child is tall enough. Either you or the certified unloader check the child's height if you are unsure of whether the child is tall enough. Do not send the boat out unless you are

absolutely sure the child is tall enough. Ask the group to wait to the side until the height is verified. If you catch a small child as you are dispatching boats, stop the boat with the small child on belt 7 and measure the child on the exit. Ensure your station stop is down when loading and unloading the child.

PROBLEM: Station gates do not work

SOLUTION: Call Maintenance and try 1-3's gate switch. If the gates are stuck open, run with a loader, continue operation, and call Maintenance and your Area Supervisor. If stuck shut or there are no extras, shutdown Code 3.

1-3 Board Operator Downtime Procedures

PROBLEM: Boat stuck at the bottom of the lift

SOLUTION: Make sure Belt #1 is on. If it is, alert all headset positions there is a boat stuck at the bottom. Make sure 4-7 or unloader responds to the bottom of the lift. Allow one follow boat, then open the swing gate at the bottom of the lift. If the associate at the bottom of the lift gives you the double thumbs down, hit the pumps immediately and call the ride down Code 2. If he doesn't give you the signal, wait until the boats come onto the lift. If any boats go into the reservoir, call in a cycling Code 2.

PROBLEM: Belt #1 failure

SOLUTION: Alert everyone on the headset that you have Belt #1 failure. Switch the belts to Hand mode to see if the belt will start in Hand (make sure you tell the 4-7 operator that you are switching to hand.) Open the swing gate. Keep trying to restart the belt. Watch the boats in the water at the bottom of the lift and the 4-7 operator or unloader at the bottom. If this doesn't cause a Code 2, call Maintenance and the Area Supervisor and advise them that you have just had Belt #1 failure. If you are Code 2, call down Code 2.

PROBLEM: Loaded boat in the reservoir

SOLUTION: Call down for a cycling Code 2. If the pumps are not hit, it may be necessary to run 1-7 from the 1-3 board if the 4-7 operator is with the boat(s) in the reservoir. Once you have received Area Supervisor's permission to add the boat(s), have Tower #2 send a gap, add the boat(s) as normal. After the boat is added, call the Code 2 clear. Loaded boat in reservoir with the pumps hit, See Pumps hit - Code 2.

PROBLEM: Pumps hit - Code 2

SOLUTION: Whenever anyone says or signals for the pumps to be hit, do it immediately, *WITHOUT QUESTION*. After the pumps are hit, make sure that the Towers have stopped dispatch, 4-7 has locked out the pump box, and that someone (unloader or 4-7) has gone to the bottom of the lift. Call down Code 2 and get a boat count. If there is no room on the lift, the swing gate must be engaged. If there is a loaded boat in the reservoir, do not let an associate retrieve it until the current is calmed. Send down another associate to assist the operator in the reservoir if needed. These boats will be evacuated later. The 1-3 operator must also be aware of what is going on with the Towers. Send an associate to Lake #2 to guest relate and if a Lake #1 evacuation is necessary, send an associate to assist with that. You also need to record down time on the capacity sheet. Once the evacuations are done and the ride is ready to be restarted, restart the pumps and open the line. Also make sure to call the Code 2 clear and record the start-up time on the capacity sheet. Make sure you have the proper approval to restart before doing so and the proper initials on the capacity sheet. Resume operation with a sense of urgency.

PROBLEM: Boat jam at the bottom of the lift

SOLUTION: If the boat jam is in the gate, first have Tower #2 stop. Try opening and closing the swing gate to direct the boats into the reservoir. If this does not work, or if the jam is after the gate, alert everyone that you have a boat jam at the bottom of the lift. Open the swing gate to direct any other boats into the reservoir. Watch the operator at the bottom of the lift for the double thumbs down and the boats at the bottom for buckling or taking on water. If the pumps are hit, follow the procedures for PUMPS HIT - CODE 2. If a boat is directed into the reservoir, follow the procedures for loaded boat in the reservoir.

PROBLEM: Boat jam in the sawmill

SOLUTION: Pumps should be hit once the boats actually jam. Call down Code 2. Send a station operator to the sawmill to assist.

PROBLEM: Belt #2 or #3 failure

SOLUTION: Alert everyone on the headset that you have Belt #2 or #3 failure. Switch to Hand mode to see if the belt will restart. Make sure that the Towers have stopped dispatch. If there are any boats in the water at the bottom of the lift, tell 4-7 and open the swing gate at the bottom to prevent anymore boats from backing up at the bottom. Then have Tower #1 start dispatch. (We do this so that if we have to hit the pumps because the boats at the bottom begin to buckle or take on water, we will not have to do a Lake #1 evacuation or at least reduce the number of boats to be evacuated.) If you can fit more boats on the lift, have Tower #2 send you the amount you can fit. Keep trying to restart the belt and call the ride down Code 2.

PROBLEM: Belt 4-7 failure

SOLUTION: Switch the belt mode to Hand. If it works in Hand, continue operation, trying Auto from time to time. Inform Maintenance and your Area Supervisor. If the belt will not start in Hand, then push boats across the belts and go for a controlled shutdown, Code 3, after attaining permission from your Area Supervisor. If necessary, Code 2.

PROBLEM: Tracking belt or Belt coming unlaced

SOLUTION: If it is minor, keep an eye on it and make sure it is put on the Maintenance Sheet. If it becomes worse, call Maintenance and advise the Area Supervisor. If it is bad and looks as if it may come off, go for a controlled shutdown. If it comes off, stop and have a Code 2. It is better to stop and have a Code 2 before the belt comes completely off.

PROBLEM: Back up on the lift with boats in the water.

SOLUTION: Have Tower #2 stop dispatch. Open the swing gate. Send the unloader to the bottom of the lift. Clear the station of boats as soon as possible. Send empties or re-ride guests to help clear the back-up. Watch the associate at the bottom for the double thumbs down. Bring the boats onto the lift as soon as possible.

PROBLEM: Man overboard

SOLUTION:

- If the man overboard is at the bottom of the lift or elsewhere in the trough, hit the pumps immediately and call the numbers Code 1.
- If the man overboard is in the distribution box, in Lake #1 or the reservoir, do NOT hit the pumps. Hit the Auxiliary E-Stop immediately. If man overboard is in the distribution box, do NOT hit the pumps until they have floated around the first curve. If in Lake #1, hit the pumps as soon as the Tower operator says to.
- If an associate has fallen into Lake #2, do NOT hit the pumps, unless they cannot get out, and then call it in as a Code 1.
- Any man overboard is a Code 1, then downgraded to a Code 2 once the person has gotten out.

PROBLEM: Boat jam - Lake #2 (Jelly)

SOLUTION: Make sure that Tower #1 has stopped dispatch. Send a station attendant to Lake #2 to guest relate if needed. Call down and advise them that you have a Code 2 Jelly. Turn the geysers off. Make sure Tower #1 resumes when Tower #2 is down to four boats. Call the ride back up.

PROBLEM: Close boats after dispatch from Lake #1

SOLUTION: Have the Towers stop and be ready to hit the pumps. Send the unloader or queuer to Waterfall #1/Cereal Area. Make sure Tower #2 is aware of the boat numbers and tells you when the boats have reached Lake #2. Advise the Area Supervisor and maintenance.

PROBLEM: Power blink or Power failure

SOLUTION: Follow the same procedures for PUMPS HIT - CODE 2. If it is a power failure, it will be necessary to send runners to get a boat count since there will be no headset communication. If the power failure is at night, have everyone stay in place until the emergency lighting or the power comes back on.

PROBLEM: Cereal

SOLUTION: Have Tower #2 and the 4-7 operator stop dispatch. If you cannot fit the boats on the lift that Tower #2 has already sent, then engage the swing gate. If you can fit more boats on the lift, then have Tower #2 send you however many boats you may fit on the lift. The queuer should be sent to the inside of Lake #1 to guest relate. If the back-up gate outside of Lake #1 does not work, hit the pumps.

PROBLEM: Gates stuck open in Lake #1

SOLUTION: Treat the same as a cereal except you should not send any empties to Lake #1. Send someone to the cereal area to guest relate. With Area Supervisors permission, cycle down Code 3 by sending an empty boat one at a time from the station. Once the first empty boat passes the Lake #1 gate, another empty boat can be sent.

PROBLEM: Gates stuck shut in Lake #1

SOLUTION: Everyone should stop dispatch. If there is more room on the lift, Tower #2 can send more boats to fill the lift. Once all of the boats from the station have reached Lake #1, the Tower #1 operator should leave the Tower and run his hand in front of the photo eyes. If the gates open, resume dispatch. If the gates still do not work, the tower operator will need to wipe both cells, starting with the first one and then the second. If the gates still do not open, everyone should stay stopped and 1-3 should call the ride down Code 2.

PROBLEM: Person falling into belts

SOLUTION: Hit the Auxiliary Emergency Stop even though the 4-7 operator should hit their Station Stop. If the person gets out, make sure you call First Aid and the Area Supervisor. If the person cannot get out, make sure the Towers stop and call 5333 (Emergency) to come and get them out. Also make sure the sprayers are turned off. Call all other numbers, Code 2. Do not try to move the person. Do not apologize to the guest, but offer any help necessary.

PROBLEM: Boats stop unexpectedly or 1-3 runs boats into belt #4

SOLUTION: Stop your belts. Switch the belts to Hand mode and have the 4-7 operator start belt #4 at the same time you are starting Belt #3 ONLY after you have thumbs up from the unloader. Bring the boats into the station. If necessary, have the Towers stop. If you were running in Auto, call

Maintenance and your Area Supervisor since the photo cell at the top of belt #3 may not be working correctly.

PROBLEM: Gates stuck open in Lake #2

SOLUTION: Make sure that the unloader or queuer have gone to the sawmill. Keep your belts as clear as possible; have the 4-7 operator send empties if necessary. Make sure Tower #1 has stopped dispatch and be ready to hit the pumps if necessary. Call in a Code 2. With Area Supervisor permission, try sending one boat out of Lake #1 and waiting for that boat to pass through the Lake #2 gate before sending the next boat through.

PROBLEM: Gates stuck shut in Lake #2

SOLUTION: Have the 4-7 and Tower #1 operators stop dispatch. When Tower #2 get the last boat from Lake #1, they should go and push the red reset button in front of the tower. If the gates work, resume dispatch and advise Maintenance and Area Supervisor. If the gates still do not work, have the unloader guest relate in Lake #2 and call the ride down Code 2. Also turn off the geysers.

PROBLEM: Roller falling off

SOLUTION: Send the unloader to either put it back on or take it off. If it is damaging tubes, stop and have a Code 2. If it is taken off, advise Area Supervisor and Maintenance about the roller.

PROBLEM: Boat jam in the station

SOLUTION: If the boats start twisting when they come into the station and the first boat of the group has gotten on belt #4, stop belt #3 and let the first boat go all the way into the station. Then restart belt #3 so the second and third boats can come up. If the boats still doesn't move, turn off the belts and have a Code 2. Make sure the Towers stop dispatch.

PROBLEM: Smoking motor

SOLUTION:

- If it is gray or white smoke, it is probably electrical. Keep the belt running and go for a controlled shutdown. Keep watching the motor. If it catches on fire or sparks, stop and have a Code 2 and clear the station. Have a station attendant use the ABC fire extinguisher.
- If the smoke is black, it is probably brake smoke. If the belt is smoking when the belt is running, stop and have a Code 2 because the brake is engaged and will not disengage. Continuing to run will probably burn out the motor. If the belt is only smoking when the belt stops, keep the belt running and go for a controlled shutdown.

PROBLEM: Motor falling off

SOLUTION: Keep the belt running and go for a controlled shutdown. Send the unloader down to see if it is damaging tubes. Make sure they do not get too close. If it is sparking, stop dispatch, clear the station and attempt to extinguish it. Make sure you use an ABC fire extinguisher. If the motor falls off or is damaging tubes, stop and have a Code 2.

PROBLEM: Small child in boat

SOLUTION: Make sure the child is tall enough. Have the 4-7 operator or certified unloader check the child's height if you are unsure of whether the child is tall enough. Do not send the boat out unless you are absolutely sure the child is tall enough. Ask the group to wait to the side until the height is verified.

PROBLEM: Headset failure

SOLUTION: If it is total headset failure, everyone will stop using the headsets and you will use the A-phone system to shut down Code 3. If it is just 1-3's headset, keep running and keep in contact with 4-7 by using hand signals. Switch headsets with either the computer room or 4-7. If the A-phones and headsets do not work properly, shut down Code 2.

PROBLEM: Capsized boat (pancake)

SOLUTION: If the boat is at the bottom of the lift, wait until the boat has floated past the opening, open the swing gate and then hit the pumps. Call in a Code 1. If the capsized boat is anywhere else in the trough, hit the pumps immediately and call in a Code 1. Ensure to find out the number of people in that boat.

PROBLEM: Belt 1-3 brake failure

SOLUTION: Try to keep the belt running and go for a controlled shutdown. Slow the Tower's dispatch if necessary. If you have to stop the belt, make sure there are boats high on the belt below the affected belt in order to stop the boat from drifting all the way back down the lift.

PROBLEM: Swing gate at the bottom of the lift does not work

SOLUTION: Slow down dispatch. Call Maintenance and your Area Supervisor. If the gate is engaged, call down Code 2.

PROBLEM: Pumps cut off

SOLUTION: If the pumps cut off, follow the procedure for PUMPS HIT - CODE 2. If just one of the pumps cuts off, they should all cut off. If they don't, hit the pumps and have a Code 2.

PROBLEM: Pinched boat in Lake #2 gates

SOLUTION: Make sure Tower #1 and 4-7 stop. Get the number of the last boat from Tower #2. Once Tower #2 operator gets last boat from Lake #1, get the boat count and give him permission to release the gates manually. Once there is no chance of jelly, page your Area Supervisor and let him know that you had a pinched boat.

PROBLEM: Monitor failure

SOLUTION: If any monitor goes out, stop cycling all boats until an operator is positioned in the area of the broken camera/monitor. Once that person is properly positioned around the ride resume operation. Maintenance and your Area Supervisor should be called.

PROBLEM: Loss of lighting from Eiffel Tower

SOLUTION: All dispatch should stop until the Area Supervisor gives permission for a controlled shutdown. Lighting from the Eiffel Tower is vital to proper visibility. Once the Area Supervisor gives permission to shut down, do so at a visual dispatch. You are down Code 2 until granted permission to shut down. Once guests are off ride, do not resume normal operation until Area Supervisor gives permission.

- In cases of emergency shutdowns resulting from serious injury or mechanical malfunction, Operations, Maintenance, and Safety personnel must all agree before operation is resumed.
- If any mechanical or electrical function of the ride fails to operate properly or an operator feels that the ride or operation of the ride is unsafe, shut the ride down promptly and notify Maintenance, Area Supervisor, and Guest Services.

Ride Evacuation Procedures

NO EVACUATION TAKES PLACE WITHOUT AREA SUPERVISORS PERMISSION. THE RIDE SHOULD NEVER BE EVACUATED UNLESS IT HAS BEEN LOCKED OUT (except for in extreme emergencies). Ensure the Lock-Out Accountability Log is filled out for all personnel entering the lock out area.

Belts 1-3

- The belts on the 1-3 board must be locked. The system should be keyed out.
- There should be at least two associates (preferably 3) on the lift to help the guests out of the boats.
- A trashcan should be used to aid in this part of the evacuation. One from the station should be emptied and laid down on its side (hinges side up) on the catwalk for the guests to step on. The evacuation should start at the top of the lift.
- There should be one associate on either side of the guests when they get out of the boats. Tell the guests to step down carefully and to take their time. Do not allow them to step on the tubes since they are very slippery. They should then be walked up the catwalk and directed down the exit ramp.
- Before the guests are evacuated and up until the time that they are, there should be an associate on the catwalk guest relating.

From the station to Lake #1

- There should be no boats in the trough between the station and Lake #1 unless a boat was dispatched after the pumps were hit.
- See Lake Evacuation procedures from Problems and Solutions from Tower #1.

Lake #1

- Anytime the pumps are hit, a Lake #1 evacuation is required.
- Tower #1 spiels to the guests that there will be a delay.
- Tower #1 informs the 1-3 operator of the number of boats in the lake and the boat number of the last boat dispatched.
- Tower #1 must inform the 1-3 operator that he/she is leaving their tower. If 1-3 does not acknowledge, ensure the Tower #2 is aware. Tower #1 must also receive confirmation that the Pumps Start Box has been locked out before leaving the Tower.
- Next, the Tower #1 operator, goes to the boats in the lake and informs the riders that an evacuation is necessary.
- While water continues to drain out of the trough, the ladder next to Tower #1 is then placed in the trough at the point where the wooden guide boards meet the trough wall (near the wave maker). The ladder must be closed and leaning against the trough wall.
- Once most of the water has drained but not all of the water, the Tower #1 operator enters the lake to start arranging the boats in a "U" shape with the boat opening lined up so guests will be able to easily step from one boat to the next when it comes time to evacuate.
- A boat with disabled guests who may need assistance getting off the ride should be placed farthest away from the ladder.
- Hold the boats in this formation until all water has drained and the boats are resting on the trough floor (and not a weir board).
- While waiting for the Area Supervisor to arrive at the Lake, inform the guests of how they will get out of the boats and trough. Keep everyone calm.
- As guests get out of the ride, they should wait next to the large rock at the Tower.

- Once everyone is off the ride, remove the ladder and inform 1-3 that the lake is clear.
- Take the entire group of guests back to the gate in the entrance line near the computer room and let them go up to the station to get their articles

Between Lake #1 & Lake #2

- Tower #3 should spiel to the guests to remain seated and then go guest relate with that boat.
- Once another (higher trained) operator is available they will respond to the boat.
- When the water has all drained and the ride has been locked out, assist the guest with getting out of the boat and onto the trough floor. Walk the guests upstream towards Lake #1.
- At the back-up gate, use the ladder to assist the guests out of the trough and then to meet up with any guests who were in Lake #1.

Lake #2

- Most of the time it will not be necessary to evacuate guests from Lake #2. They will, however, have to wait until Lake #1 has been emptied and the reservoir is clear until the pumps can be restarted. Regardless, an associate from the station should be at Lake #2. Tower #2, guest relates using the P.A. before the station attendant gets there. Tower #2 operator doesn't leave the tower unless it is Code 1 situation or is instructed to do so by the Location Supervisor or Area Supervisor.
- If it becomes necessary to evacuate Lake #2, four associates should be sent to the lake to tie all of the boats together with ropes and make a train. Tie the evacuation rope to the first boat.
- After the train has been completed, explain to the guests very specifically how the evacuation will take place.
- Tower #2 keeps strict communication with 1-3 concerning the situation. After the speech has been given, open the gates.
- The associates should begin to pull the boats through the gates with the evacuation rope(s).
- Once inside the sawmill, unload the guests when their boat is in front of the fake saw. There should be at least 3 associates helping the guests. One holds one set of seats, and one holds the other set of seats. The boat should be positioned so that the opening is towards the side of the trough. The third associate stands there to help the guests out of the boats. Stress the importance of staying away from the edge of the trough and staying in a group.
- The boats that are unloaded will then be pushed out of the sawmill and toward the reservoir (NOTE: The boats should not be pushed out of the sawmill as soon as they are unloaded as they are needed to help steady the other boats that are being unloaded.) After all the boats are unloaded, it will be necessary to pull all of the boats back to Lake #2 so the pumps can be restarted. Be sure to disconnect all boats once back in Lake #2 and move them toward the gates before restarting the pumps.
- Remind guests to be careful and to stay away from the edge of the trough. Another associate should direct them to a waiting area near the door. All guests are escorted from the sawmill to the observation area fence with an associate walking on the trough side.
- Once at the fence, the guests will go through the gate. Make sure that the gate is unlocked before the guests arrived.
- If the gates in Lake #2 are stuck shut, it will be necessary to evacuate the guests backwards up the trough by the observation area. Guests will never be evacuated directly from Lake #2 because the rocks are too hard for them to climb on. The boats will be tied together in groups of 3 and pushed/pulled up to a spot to be determined by the Area Supervisor. An evacuation of this type will differ from time to time depending on the circumstances so remain flexible, and look towards your Area Supervisor for instructions.

The Reservoir

- If an associate is at the bottom of the lift when the pumps are hit, he should tell the guests to remain calm and seated until they can be retrieved from the reservoir.
- Boats should be pulled to the end of the catwalk behind the sawmill and the guests are helped onto the catwalk. They should walk down the steps and wait there until the people are out of the boats. Once all guests are unloaded and in one group, lead them back to the station around Kings Dominion Theater, using the service road. If the ride is going to be down for a long time, the guests can re-enter the park by the Kings Dominion Theater. If any of the guests have people waiting for them at the station, escort them back to the station. While behind the scenes there should be an associate in the front.
- Generally the pumps should not be restarted with loaded boats in the reservoir. Always guest relate but do not tell them the specific problem.
- 1-3 should ask the guests to remain seated using the P.A.
- If the pumps are still running, boats can be added back to the ride if there is room on the lift with permission from 1-3. Operators would push the boat(s) to the opening at the end of the sawmill and when given permission, push the boat back into the current.

Entrance, Station, and Queues

- One associate goes to the end of the line to inform the guest relater and assist him in evacuating the line. Do not allow anyone to climb the fences.
- The guests on the loading side of the station should go over the stairs by 1-3.
- The guests on the stairs over 4-7 exit the same way.
- The rest of the line should be evacuated by taking a left behind 4-7 and then going down the exit ramp. DO NOT turn the line around at any time. This will prevent guest from jumping the fences.
- The observation area should also be cleared by exiting over the station and down the ramp.
- One associate should follow the last guests off the ride. There should be at least 1, preferably 2, associates guest relating at the main entrance of the ride.
- Discourage a line forming unless you are instructed to do so.

Closing Procedures

- Contact Maintenance to subtract boats if needed. Go down to 15 boats unless otherwise told. Leave 9 boats on the lift and 6 in Lake #2.
- After the correct number of boats have been removed, the ride is parked. The pumps should then be shut down. This is done on a nightly alternating basis. The pumps should be shut off from the 1-3 E-stop one night, the main pumps start the next, tower one next, and so forth.
- Put rope across Lake #2.
- All lost articles should be taken to the property room near Guest Services as soon as your ride shuts down.
- Clean up.
 - Observation area, station, entrance ramp, and circle by the fountain need to be swept.
 - Trash bags.
 - Pick up trash along sides of exit and entrance ramps.
- Turn out lights in the towers and make sure headsets and monitors are covered.
- Key out the system and make sure all E-stops are up.
- Clean assigned night time clean-up area.
- With Supervisor's permission, call out on Time and Attendance and sign out on the Roster.

Service Facilities

The most convenient service facilities for guests near the White Water Canyon are listed here.

- Restrooms/Drinking Fountains – Old Virginia Restroom
- Smoking Area – area between the WWC exit and the Old Virginia Restroom
- Lockers – inside the Front Gate at Stroller Rental and Old Virginia Restroom
- Pay Phone – outside the Front Gate near Guest Services
- ATM – outside of Starbucks on International Street or outside the Candy Apple Grove Arcade
- Indoor Restaurant – Country Kitchen

Certification Checklists

Name _____ Crew _____ Associate # _____

WHITE WATER CANYON OPERATOR CERTIFICATION CHECKLIST
Level 5 – Queue/Unload (WWC5S)

Name _____ Crew _____ Associate # _____

	Operator's Initials	Trainer's Initials	Date
General Responsibilities:			
Verify General Procedures Certification Checklist Passed	_____	_____	_____
Verify Height Certification Checklist Passed	_____	_____	_____
Demonstrate/Explain Queuing	_____	_____	_____
Demonstrate/Explain Unloading	_____	_____	_____
Explain Unloading Without A Queuer	_____	_____	_____
Knowledge Of Height Restriction	_____	_____	_____
Demonstrate Ride Hand Signals	_____	_____	_____
Demonstrate Proper Crossing Of Trough	_____	_____	_____
Knowledge Of Station Rules	_____	_____	_____
Show Proper Operating Positioning	_____	_____	_____
Explain Eye Cycle	_____	_____	_____
Explain Safety Guide Sign	_____	_____	_____
Knowledge Of Ride Rating	_____	_____	_____

Special Responsibilities:			
Knowledge Of Restricted Items/Holding Items	_____	_____	_____
Explain Procedures For Guest With Disabilities	_____	_____	_____
Identify Location Of Wheelchair Parking	_____	_____	_____
Explain Procedures For Distressed Guest	_____	_____	_____
Explain Small Child In A Boat	_____	_____	_____
Explain Lockout Policy	_____	_____	_____
Explain Procedures For Walking Up/Down The Lift	_____	_____	_____
Demonstrate Turning A Boat For A Code 6	_____	_____	_____
Demonstrate Checking A Boat	_____	_____	_____
Demonstrate Airing A Boat	_____	_____	_____

Downtime Responsibilities:			
Explain Downtime Positioning/Responsibilities	_____	_____	_____
Demonstrate Downtime Spiels	_____	_____	_____
Show Location Of Station Fire Extinguishers	_____	_____	_____
Demonstrate Tying Off A Boat	_____	_____	_____
Explain Procedures For A Cereal	_____	_____	_____

I acknowledge that I have been fully trained in the above material and am comfortable with this material.

Operator's Signature _____ Print Name _____ Date _____

Trainer's Signature _____ Print Name _____ Date _____

WHITE WATER CANYON OPERATOR CERTIFICATION CHECKLIST
Level 5 – Tower 3 (WWC5T)

Name _____ Crew _____ Associate # _____

Operator's Initials	Trainer's Initials	Date
------------------------	-----------------------	------

General Responsibilities:

Verify General Procedures Certification Checklist Passed	_____	_____	_____
Explain Eye Cycle & Proper Rider Positioning	_____	_____	_____
Explain Spelling, P.A. Zones, & A-Phone Use	_____	_____	_____
Explain Tower & Headset Rules	_____	_____	_____
Explain Safety Guide Sign	_____	_____	_____
Knowledge Of Ride Rating	_____	_____	_____

Special Responsibilities:

Explain Tower 3 Opening Procedures:

P.A. System/Monitor	_____	_____	_____
Safety Equipment	_____	_____	_____
Explain Tower Closing Procedures	_____	_____	_____
Demonstrate Proper Use Of Throw Bag	_____	_____	_____
Demonstrate Use of Shepherd's Crook	_____	_____	_____
Demonstrate Elementary Reaching Assist	_____	_____	_____
Explain Lockout Policy	_____	_____	_____
Explain Capacity Responsibilities	_____	_____	_____

Downtime Responsibilities:

Explain Procedures For:

Close Boats After Lake 1	_____	_____	_____
Gates Stuck Open In Lake 1	_____	_____	_____
Trough Obstruction	_____	_____	_____
<i>Man Overboard:</i>			
Lake 2	_____	_____	_____
Lake 1	_____	_____	_____
After Lake 1	_____	_____	_____
Headset Failure	_____	_____	_____
Pumps Hit – Code 2	_____	_____	_____
Capsized Boat	_____	_____	_____
Monitor Failure	_____	_____	_____

I acknowledge that I have been fully trained in the above material and am comfortable with this material.

Operator's Signature	Print Name	Date
----------------------	------------	------

Trainer's Signature	Print Name	Date
---------------------	------------	------

WHITE WATER CANYON OPERATOR CERTIFICATION CHECKLIST
Level 4 – Station (WWC4)

Name _____ Crew _____ Associate # _____

	Operator's Initials	Trainer's Initials	Date
General Responsibilities:			
Verify WWC Level 5 Queue/Unload Checklist Passed	_____	_____	_____
Verify WWC Level 5 Tower 3 Checklist Passed	_____	_____	_____
Explain Procedures For Walking The Trough	_____	_____	_____
Explain Lake #2 Rope/Starting Pumps & Auxiliaries	_____	_____	_____
<i>Explain Location & Use Of:</i>			
Throw Ring	_____	_____	_____
Throw Bags	_____	_____	_____
Shepherd's Crook	_____	_____	_____
Fire Extinguishers	_____	_____	_____
Push Pole	_____	_____	_____
Evacuation Ladder	_____	_____	_____
Evacuation Rope	_____	_____	_____
Explain When To Check A Boat	_____	_____	_____
Downtime Responsibilities:			
Explain Reopening Procedures	_____	_____	_____
Identify Potentials & Responsibilities For Each	_____	_____	_____
<i>Explain Responsibilities For:</i>			
Boats Stop Unexpectedly	_____	_____	_____
Boat Jam In The Sawmill	_____	_____	_____
Boat Jam In The Trough	_____	_____	_____
<i>Man Overboard:</i>			
Distribution Box	_____	_____	_____
Lake 1	_____	_____	_____
After Lake 1's Gates But Before Back-Up Gate	_____	_____	_____
After Lake 1	_____	_____	_____
Lake 2	_____	_____	_____
After Lake 2's Gates	_____	_____	_____
At The Bottom Of The Lift	_____	_____	_____
Reservoir	_____	_____	_____
Capsized Boat	_____	_____	_____
Gates Stuck Open In Lake 1	_____	_____	_____
Gates Stuck Open In Lake 2	_____	_____	_____
Close Boats After Lake 1	_____	_____	_____
Close Boats After Lake 2	_____	_____	_____
Boats In The Reservoir	_____	_____	_____
Pumps Hit - Code 2	_____	_____	_____
Lake 1 Evacuation	_____	_____	_____
Lake 2 Evacuation	_____	_____	_____
Reservoir Evacuation	_____	_____	_____
Station / Line Evacuation	_____	_____	_____
Lift Evacuation	_____	_____	_____

WWC Level 4 – Station (WWC4)

Name _____ Crew _____ Associate # _____

I acknowledge that I have been fully trained in the above material and am comfortable with this material.

Operator's Signature	Print Name	Date
----------------------	------------	------

Trainer's Signature	Print Name	Date
---------------------	------------	------

WHITE WATER CANYON OPERATOR CERTIFICATION CHECKLIST
Level 3 – Tower 2 (WWC32)

Name _____ Crew _____ Associate # _____

	Operator's Initials	Trainer's Initials	Date
General Responsibilities:			
Verify WWC Level 4 Certification Checklist Passed	_____	_____	_____
Explain Eye Cycle	_____	_____	_____
Explain/Demonstrate Dispatch And Dispatch Points	_____	_____	_____
Explain Proper Use Of Gates	_____	_____	_____
Explain Proper Use Of Drive Drums	_____	_____	_____
Explain Proper Use Of Geysers	_____	_____	_____
Explain Air Pressure	_____	_____	_____
Explain Maximum Number Of Boats Allowed In Lake 2	_____	_____	_____
Special Responsibilities:			
<i>Explain/Demonstrate Opening Tower Procedures:</i>			
P. A. System/Monitor	_____	_____	_____
Safety Equipment	_____	_____	_____
Evacuation Rope	_____	_____	_____
Lake 2 Rope	_____	_____	_____
Block Check	_____	_____	_____
Explain Adding A Boat	_____	_____	_____
Explain Subtracting A Boat	_____	_____	_____
Explain Procedures For Guests With Disabilities	_____	_____	_____
Explain Capacity Responsibilities	_____	_____	_____
Explain Closing Tower Procedures	_____	_____	_____
Downtime Responsibilities:			
Identify Signs Of Low Water	_____	_____	_____
Identify Potentials & Responsibilities For Each	_____	_____	_____
<i>Explain Procedures For:</i>			
Cereal	_____	_____	_____
Close Boats After Lake 1	_____	_____	_____
Close Boats After Lake 2	_____	_____	_____
Gates Stuck Open Lake 1	_____	_____	_____
Gates Stuck Shut Lake 1	_____	_____	_____
Boat Jam In The Sawmill	_____	_____	_____
Boat Jam In Lake 2	_____	_____	_____
Gates Stuck Open In Lake 2	_____	_____	_____
Gates Stuck Shut In Lake 2	_____	_____	_____
Belt 2 Or 3 Failure	_____	_____	_____
Lake 2 Evacuation With Gates Operational	_____	_____	_____
Lake 2 Evacuation With Gates Not Operational	_____	_____	_____
Headset Failure	_____	_____	_____
Pumps Hit Code 2	_____	_____	_____
Monitor Failure	_____	_____	_____

Name_____Crew_____Associate #_____

I acknowledge that I have been fully trained in the above material and am comfortable with this material.

Trainer's Signature _____ Print Name _____ Date _____

WHITE WATER CANYON OPERATOR CERTIFICATION CHECKLIST
Level 3 – Tower 1 (WWC31)

Name _____ Crew _____ Associate # _____

	Operator's Initials	Trainer's Initials	Date
General Responsibilities:			
Verify WWC Level 4 Certification Checklist Passed	_____	_____	_____
Explain Eye Cycle	_____	_____	_____
Demonstrate/Explain Dispatch And Dispatch Points	_____	_____	_____
Explain Proper Use Of The Gates	_____	_____	_____
Explain Use Of Drive Drums	_____	_____	_____
Explain Use Of Wave Maker	_____	_____	_____
Explain Air Pressure	_____	_____	_____
Explain Maximum Number Of Boats Allowed In Lake 1	_____	_____	_____
Special Responsibilities:			
<i>Demonstrate/Explain Tower Opening Procedures:</i>			
P.A. System/Monitor	_____	_____	_____
Safety Equipment	_____	_____	_____
Block Check	_____	_____	_____
Back-Up Gate Test	_____	_____	_____
Explain Adding A Boat	_____	_____	_____
Explain Subtracting A Boat	_____	_____	_____
Explain Guest With Disabilities Procedures	_____	_____	_____
Explain Tower Closing Procedures	_____	_____	_____
Downtime Responsibilities:			
Demonstrate Push Pole	_____	_____	_____
Identify Signs Of Low Water	_____	_____	_____
Identify Potentials & Responsibilities For Each	_____	_____	_____
<i>Explain Procedures For:</i>			
Cereal	_____	_____	_____
Close Boats After Lake 1	_____	_____	_____
Close Boats After Lake 2	_____	_____	_____
Gates Stuck Open In Lake 1	_____	_____	_____
Gates Stuck Shut In Lake 1	_____	_____	_____
Boat Jam In The Sawmill	_____	_____	_____
Boat Jam In Lake 2	_____	_____	_____
Boat Jam in Trough	_____	_____	_____
Gates Stuck Open In Lake 2	_____	_____	_____
Gates Stuck Shut In Lake 2	_____	_____	_____
Pinched Boat In Lake 2	_____	_____	_____
Trapped Boat In Lake 2	_____	_____	_____
Belt 2 Or 3 Failure	_____	_____	_____
Wave Maker Failure	_____	_____	_____
Drive Drum Failure	_____	_____	_____
Tower #2 Stops Or Slow Dispatch	_____	_____	_____

Name_____Crew_____Associate #_____

I acknowledge that I have been fully trained in the above material and am comfortable with this material.

Trainer's Signature _____ Print Name _____ Date _____

WHITE WATER CANYON OPERATOR CERTIFICATION CHECKLIST
Level 2 – 4-7 Board Operator (WWC2)

Name _____ Crew _____ Associate # _____

	Operator's Initials	Trainer's Initials	Date
General Responsibilities:			
Verify WWC Level 3 Tower 1 Certification Checklist Passed	_____	_____	_____
Verify WWC Level 3 Tower 2 Certification Checklist Passed	_____	_____	_____
Verify WWC Water Rescue Certification Checklist Passed	_____	_____	_____
Explain Eye Cycle	_____	_____	_____
Demonstrate Operating Sequence	_____	_____	_____
Explain/Demonstrate Running Belts In Automatic	_____	_____	_____
Explain/Demonstrate Running Belts In Manual	_____	_____	_____
Explain Maximum Number Of Boats On Lift	_____	_____	_____
Explain/Demonstrate Allowing Associates To Cross	_____	_____	_____
Explain Buttons On Board	_____	_____	_____
Identify Operator And Guest Positioning	_____	_____	_____
Demonstrate Use Of Station Gates	_____	_____	_____

Special Responsibilities:

Explain/Demonstrate Opening 4-7 Procedures:

Board	_____	_____	_____
Emergency Equipment	_____	_____	_____
Headset	_____	_____	_____
Testing Belts	_____	_____	_____
Cycling Boats	_____	_____	_____
Explain Taking Capacity	_____	_____	_____
Explain Adding Boats	_____	_____	_____
Explain Subtracting Boats	_____	_____	_____
Explain Guest With Disabilities Procedures	_____	_____	_____
Explain Procedures For Distressed Guest	_____	_____	_____
Demonstrate Station Spiels	_____	_____	_____
Explain Airing Boats	_____	_____	_____
Explain Closing 4-7 Procedures	_____	_____	_____

Downtime Responsibilities:

Explain Procedures For:

Belt 1 Failure	_____	_____	_____
Belt 2 Or 3 Failure	_____	_____	_____
Belt 4-7 Failure	_____	_____	_____
Motor Problems	_____	_____	_____
Automatic System Failure	_____	_____	_____
Loaded Boat In Reservoir	_____	_____	_____
Gates Stuck Open Lake 1	_____	_____	_____
Gates Stuck Shut Lake 1	_____	_____	_____
Gates Stuck Open Lake 2	_____	_____	_____
Gates Stuck Shut Lake 2	_____	_____	_____
Capsized Boat	_____	_____	_____

WWC Level 2 – 4-7 Board Operator (WWC2)

Name _____ Crew _____ Associate # _____

	Operator's Initials	Trainer's Initials	Date
<i>Man Overboard:</i>			
Distribution Box	_____	_____	_____
Lake 1	_____	_____	_____
After Lake 1 Before Back-Up Gate	_____	_____	_____
After Lake 1	_____	_____	_____
Lake 2	_____	_____	_____
After Lake 2	_____	_____	_____
Bottom Of Lift	_____	_____	_____
Reservoir	_____	_____	_____
Drive Drum/Wave Maker Failure	_____	_____	_____
Boat Jam In The Trough	_____	_____	_____
Boat Jam In Lake 2	_____	_____	_____
Boat Jam In The Station	_____	_____	_____
Close Boats After Lake 1	_____	_____	_____
Close Boats After Lake 2	_____	_____	_____
Station Headset Failure	_____	_____	_____
Power Failure/Power Blink	_____	_____	_____
Pumps Hit Code 2	_____	_____	_____
Boat Stuck At Bottom Of Lift	_____	_____	_____
Boat Jam At Bottom Of Lift	_____	_____	_____
Boat Jam In The Sawmill	_____	_____	_____
Boats In The Water At The Bottom Of The Lift	_____	_____	_____
Person Falling In The Belts	_____	_____	_____
Boats Stop Unexpectedly	_____	_____	_____
Boat Stuck On The Rollers	_____	_____	_____
Small Child In Boat	_____	_____	_____
Pinched Boat	_____	_____	_____
Cereal	_____	_____	_____
Belt Coming Unlaced/Tracking	_____	_____	_____
Roller Falling Off	_____	_____	_____
Station Gates Do Not Work	_____	_____	_____

I acknowledge that I have been fully trained in the above material and am comfortable with this material.

Operator's Signature _____ Print Name _____ Date _____

Trainer's Signature _____ Print Name _____ Date _____

WHITE WATER CANYON OPERATOR CERTIFICATION CHECKLIST
Level 1 – 1-3 Board Operator (WWC1)

Name _____ Crew _____ Associate # _____

	Operator's Initials	Trainer's Initials	Date
General Responsibilities:			
Verify WWC Level 2 Certification Checklist Passed	_____	_____	_____
Verify Associate Is At Least 18 Years Old	_____	_____	_____
Knowledge Of Water Rescue Certified Associate Requirement	_____	_____	_____
Explain Proper Eye Cycle	_____	_____	_____
Demonstrate Normal Operating Sequence	_____	_____	_____
Demonstrate Running 1-7	_____	_____	_____
Explain Function Of Board Buttons And Lights	_____	_____	_____
Identify Proper Operator & Guest Positioning	_____	_____	_____

Special Responsibilities:

Explain 1-3 Board Opening Procedures

P.A. System/Headset	_____	_____	_____
Board	_____	_____	_____
Cycle Ride	_____	_____	_____
Belt Test	_____	_____	_____
Auto System	_____	_____	_____
Swing Gate At Bottom Of Lift	_____	_____	_____
Block Check And Lake 1 Back-Up Gate Test	_____	_____	_____
Gates	_____	_____	_____
Explain Adding A Boat	_____	_____	_____
Explain Subtracting A Boat	_____	_____	_____
Explain Guest With Disabilities Procedures	_____	_____	_____
Explain Use Of Swing Gate	_____	_____	_____
Explain Lockout Policy & Procedures	_____	_____	_____
Explain Test Ride Procedures/What To Look For	_____	_____	_____

Downtime Responsibilities:

Explain Reopening Procedures	_____	_____	_____
<i>Explain Procedures For:</i>			
Weather Shutdowns	_____	_____	_____
Belt 1 Failure	_____	_____	_____
Belt 2 Or 3 Failure	_____	_____	_____
Belts 4-7 Failure	_____	_____	_____
Lake 1 Gate Failure	_____	_____	_____
Lake 2 Gate Failure	_____	_____	_____
<i>Man Overboard:</i>			
Distribution Box	_____	_____	_____
Lake 1	_____	_____	_____
Lake 2	_____	_____	_____
Bottom Of Lift	_____	_____	_____
Reservoir	_____	_____	_____
Low Water	_____	_____	_____

WWC Level 1 – 1-3 Board Operator (WWC1)

Name _____ Crew _____ Associate # _____

	Operator's Initials	Trainer's Initials	Date
Auto System Failure	_____	_____	_____
Air Pressure	_____	_____	_____
Ride Evacuation	_____	_____	_____
Power Failure/Power Blink	_____	_____	_____
Pump Failure	_____	_____	_____
Cereal	_____	_____	_____
Belt 1-3 Brake Failure	_____	_____	_____
<i>Boat Jam:</i>			
Lake 2	_____	_____	_____
Sawmill	_____	_____	_____
Bottom Of Lift	_____	_____	_____
Elsewhere In The Trough	_____	_____	_____
Station	_____	_____	_____
Loss Of Lighting From Eiffel Tower	_____	_____	_____
Drive Drum/Wave Maker Failure	_____	_____	_____
Motor Problems	_____	_____	_____
Pumps Hit Code 2	_____	_____	_____
Boat Stuck At The Bottom Of The Lift	_____	_____	_____
Boats In The Water At Bottom Of Lift	_____	_____	_____
Capsized Boat	_____	_____	_____
Controlled Shutdown	_____	_____	_____
Boat Loose In Reservoir	_____	_____	_____
Person Falling Into Belts	_____	_____	_____
Boats Stop Unexpectedly	_____	_____	_____
Roller Falling Off	_____	_____	_____
Gate At Bottom Of Lift Does Not Work	_____	_____	_____
Pinched Boat	_____	_____	_____
Close Boats After Lake 1 Gates	_____	_____	_____
Close Boats After Lake 2 Gates	_____	_____	_____
Headset Failure	_____	_____	_____

Opening/Closing Procedures:

Explain All Parts Of The Opening Procedures Checklist	_____	_____	_____
Explain Closing Procedures	_____	_____	_____

I acknowledge that I understand the contents of this ride's training manual and I am comfortable with the operation of all aspects of this ride.

Operator's Signature _____ Print Name _____ Date _____

Trainer's Signature _____ Print Name _____ Date _____