dJONt

Manual for v0.9: setup, presets and scenes, Wham, Sustain, Hush, MIDI and REAPER automation, and every module explained



dJONt in the Chrome look. Settings (the gear) picks another: Red Foil, Shards, Circuit, Copper or Neon.

Where it sits in your signal

new in 0.7

Guitar → Input → HUSH → WHAM → SUSTAIN → TIGHT → GRIT → SUB → LO-FI → Output → amp

each module has its own power light; off = untouched signal

1 Install and set up

2 The panel at a glance

3 Wham: the virtual whammy

4 Sustain: Hold and Sustainer

5 Presets, scenes, footswitches, MIDI learn and REAPER


6 Troubleshooting

7 Module reference (same as the ? manual in the plugin)

1 Install and set up

1. Run **dJONt-v...-windows-x64.exe**. It installs the VST3 plugin and the standalone app. Windows SmartScreen may warn the first time: *More info → Run anyway*.
2. **In Reaper:** open *Options → Preferences → Plug-ins → VST* and click *Re-scan*, then add dJONt to your guitar track **before** T3KJ (or any amp sim). dJONt goes in front of the amp, like a pedal.
3. **Standalone instead:** open **dJONt** from the Start menu and click the gear. Set up your interface there (below).

Standalone audio settings

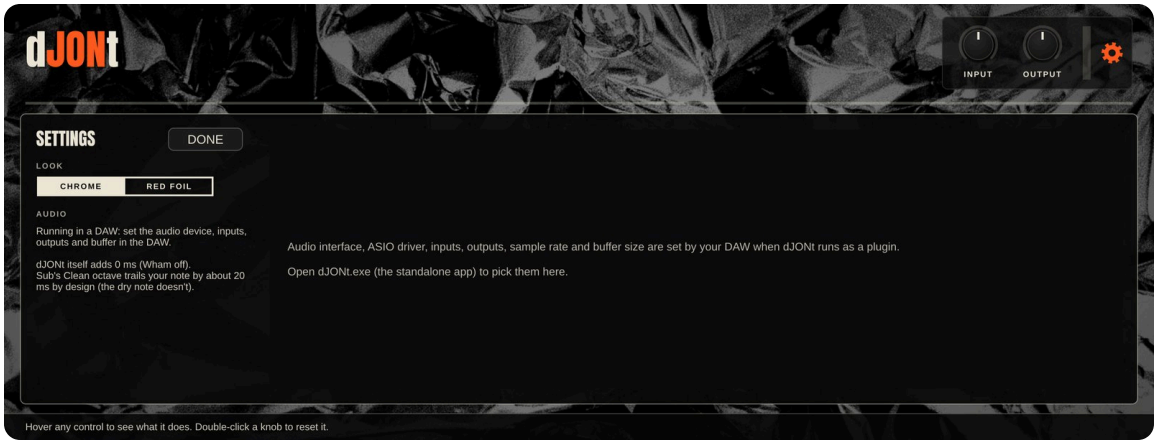

Settings as it looks inside a DAW. In the standalone app, the right side shows your audio device instead.

1. **Audio device type:** pick **ASIO** for the lowest latency, then your interface (the Quad Cortex shows up here).
2. **Active input channels:** tick the input your guitar is on. dJONt is mono: it plays the first input you enable.
3. **Output channels:** pick the pair that goes to your amp or speakers.
4. **Sample rate / buffer:** 48 kHz, and the smallest buffer that doesn't crackle (64 or 128 is typical).
5. **Hear yourself:** turn it **on**. The app mutes the input by default to avoid feedback with mics, so this is the usual reason for silence.
6. **MIDI inputs:** tick your Quad Cortex if you want its footswitches to control dJONt (section 5).

> **Latency:** the readout on the left adds up input + output + buffer for a round trip. dJONt itself adds **0 ms**, except **Wham adds about 16 ms while it's on** (pitch shifting needs a short buffer). It reports that to Reaper, so Reaper lines your tracks back up.

2 The panel at a glance



1 **Wordmark.** The accent color follows the look (six to pick from in Settings).

2 **Input / Blend / Output:** levels (±24 dB), the whole board against your dry DI, and the output meter (red = clipping).

3 **Manual** (?) and **Settings** (gear): every module explained right in the plugin; look, audio device, MIDI inputs, latency.

4 **Wham:** a virtual whammy pedal with presets (section 3). **ADV** flips a module to its voicing controls.

5 **Sustain:** Hold (freeze) or Sustainer (section 4).

6 **Tight, Grit, Sub, Lo-Fi:** palm-mute punch or a tight boost (FOCUS), low fuzz, octave down, radio filter.

7 **Hint bar:** hover anything to see what it does, its value, and its MIDI CC if it has one.

8 **Power lights:** lit = on. Off modules dim and pass the signal untouched.

10 **PRESET:** your presets and the starters, each with its MIDI Program Change number. SAVE edits the current preset; ••• saves a new one, renames, deletes or reorders (section 5).

11 **SCENES:** up to eight versions of the board (A to H). Click to switch, + to add, double-click to name, right-click for more (section 5).

9 **HUSH:** the de-noiser for your DI, before Wham, zero latency. Off until you turn it on; it reads HUSH ON when it's working (section 7, Hush).

Moves that work everywhere

DO THIS	TO
Drag a knob up / down	Turn it. While dragging, its label shows the value.
Double-click a knob	Reset it to its default.
Hover anything	Read what it does in the hint bar at the bottom.
Right-click any control	MIDI Learn / Forget MIDI (section 5).

The other four modules, quickly

MODULE	CONTROLS	WHAT IT'S FOR
Tight	Punch / Focus, Amount, Freq	PUNCH pushes each pick attack and trims the ring-out; FOCUS is a tight boost (low cut, mid push, a little clip) into your amp.
Grit	Drive, Blend, Freq	Fuzz on the lows only (below Freq), blended under your dry tone.
Sub	Clean / Synth, Blend, Tone	An octave below. Clean handles chords (~20 ms behind); Synth is instant and buzzy, single notes.
Lo-Fi	Tone, Blend	Radio / telephone band-pass for intros and breakdowns.

3 Wham: the virtual whammy

Wham bends your pitch between the **heel** (pedal up) and the **toe** (pedal down). **INTERVAL** picks those: a classic Whammy setting, a Harmony, Detune, or **Custom** with your own Heel / Toe knobs (±24 st). Something has to move the pedal: you (**PEDAL**) or an LFO (**AUTO**). The next page covers the Whammy sounds.



AUTO: Rate, Shape and Retrig show.

Quick start (no pedal needed)


1. Click Wham's **power light**. It starts in **AUTO**, Custom, Heel 0 and Toe +12: an octave sweep, once a second.
2. Turn **Toe** to taste (+12 octave, +7 fifth, −12 octave down), or pick an **INTERVAL** instead.
3. Pick a **Shape**: *Sine* (smooth), *Triangle*, *Rise* (up, then snaps back), *Square* (jumps).
4. Turn on **RETRIG** to restart the sweep on every pick. **Rise + Retrig** = one scoop per note.



PEDAL with Whammy: Oct Up. Mix shows instead of Heel / Toe; Glide replaces the LFO controls.

Playing the pedal yourself

1. Click **PEDAL**.
2. **Mouse:** drag the rocker up toward TOE. Scroll works too; double-click sends it back to HEEL; Shift-drag is fine control.
3. **Expression pedal (later):** map it to *Wham Pedal* (section 5) and it moves the rocker smoothly.
4. **A footswitch:** map it to *Wham Pedal* and turn up **Glide**. Press = sweep up to Toe, release = sweep back (graph below).

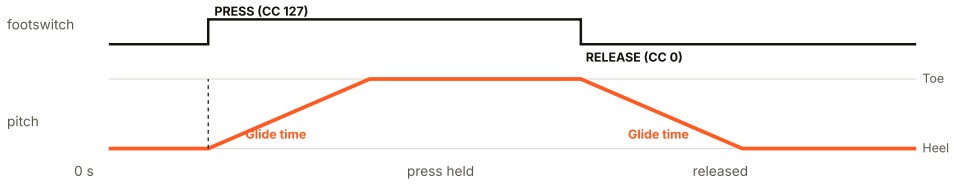

Presets: save the settings you like

1. **Load:** click *Presets*. Factory: Octave Scoop, Dive Bomb, Siren, Octave Stabs, Whole-Step Trill, Seasick, Pedal: Classic Octave Up, Pedal: 2 Octaves Up, Pedal: Drop Tune, Footswitch: Octave Sweep, Harmony: Blues 3rds, Detune: Thick.
2. **Save:** set it up (engine, Interval, Heel / Toe, Rate, Shape, Retrig, Glide, mode, ADV), click **SAVE**, type a name, **Enter** (Esc cancels). Same name = replace it. Saved in `%APPDATA%\dJONt\wham-presets.json`.
3. **Delete:** pick one of yours, click **DEL** twice. Factory presets can't be deleted.

3 Wham: the Whammy sounds

Two engines: CLASSIC | CHORDS

	CLASSIC	CHORDS
How it works	The old-school two-tap shifter. It tracks the note you play and sizes its sweep to it, like the original pedals.	A smarter splicing shifter (the one T3KJ's Pitch uses).
Single notes	Clean	Clean
Chords	Warbles and glitches: the classic sound	Stays clean and in tune
Use it for	Leads, dive bombs, the Morello-style squeals	Drop-tune chugs, chord bends

INTERVAL: the mode knob

GROUP	SETTINGS	WHAT THE PEDAL DOES
Custom	your Heel / Toe knobs	Sweeps from Heel to Toe. The shifted signal replaces your dry note.
Whammy	2 Oct Up, Oct Up, 5th Up, 4th Up, 2nd Down, 4th Down, 5th Down, Oct Down, 2 Oct Down, Dive Bomb (3 octaves down)	Heel = no shift, toe = the interval. Replaces the dry; **Mix** blends dry back in.
Harmony	2nd > 3rd Up, b3 > 3rd Up, 3rd > 4th Up, 4th > 5th Up, 5th > 6th Up, 5th > 7th Up, 4th > 3rd Down, 5th > 4th Down, Oct Down > Oct Up	Your note stays; a second voice moves from the first interval (heel) to the second (toe). **Mix** = the voice's level. No added latency.
Detune	Shallow, Deep	Your note plus a slightly detuned copy: thickness, like a doubler. The pedal does nothing.

Harmony intervals are fixed in semitones (no key setting), so "3rd" is a major third. b3 > 3rd is the bluesy one.



ADV (the back of the module).

ADV: voicing


Grain	**Classic only.** The size of the shifter's sweep. Short = tighter, more metallic on chords; long = smoother, wobblier. Longer adds a little latency.
Buffer	**Chords only.** 20 ms tightest, 60 ms smoothest on low notes and bass.
Tone	Darkens the shifted signal. Up-shifts get fizzy; roll this back. Fully up = off.
Mix	The same Mix as the front.

Click **ADV** (next to the power light) to flip over, **BACK** to return. ADV settings save with presets.

4 Sustain: Hold and Sustainer

Two different ways to keep notes ringing. The **HOLD | SUSTAINER** switch at the top of the module picks one.


Hold: the piano pedal for guitar

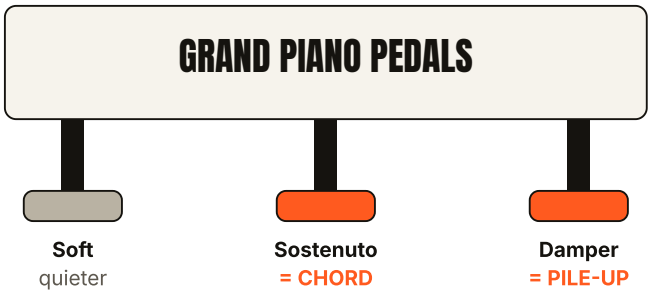


CHORD (the middle pedal): press HOLD and the chord ringing at that moment keeps sounding. Everything you play after that is normal, on top of it.

PILE-UP (the right pedal): while HOLD is down, every note you play joins the held sound and keeps ringing.

The held sound is a **freeze**: it keeps the pitches smooth and steady, like a pad, until you let go. Your live guitar passes through untouched.

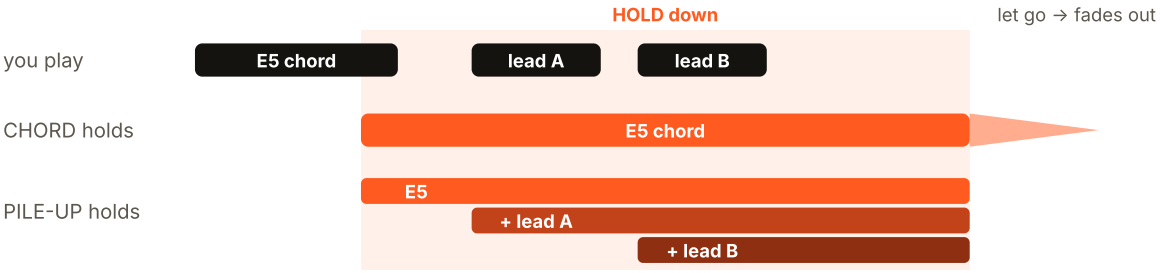

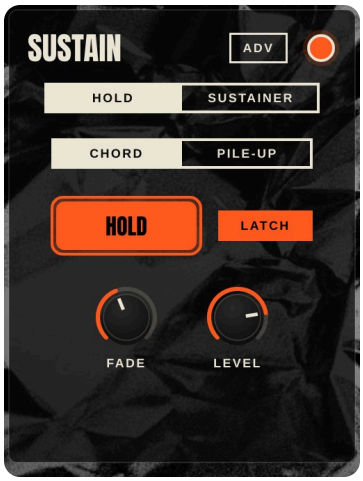


1. Turn Sustain on (power light) and pick **HOLD**.
2. Pick **CHORD** or **PILE-UP**.
3. Play a chord and click **HOLD** while it rings. It lights up.
4. Play over it. Click HOLD again to let go.


LATCH	**On:** one click holds, the next lets go. **Off:** holds only while the mouse (or footswitch) is down.
Fade	How fast the held sound swells in and dies away. Short = a stab; long = a pad.
Level	Held sound vs your live playing. 100% = as loud as it was.

Sustainer: the Sustainiac idea

A real sustainer pickup (Sustainiac, Fernandes) uses a magnet to push your strings, so a note can ring forever, and its *harmonic* mode makes the note bloom into the octave above.

Software can't push a string, so dJONt does the next best thing: as your note dies away it brings the level back up to where you picked it (up to +40 dB), and **HARM** blends in the octave above over the **Bloom** time. When you mute the strings it lets go, so silence stays silent.

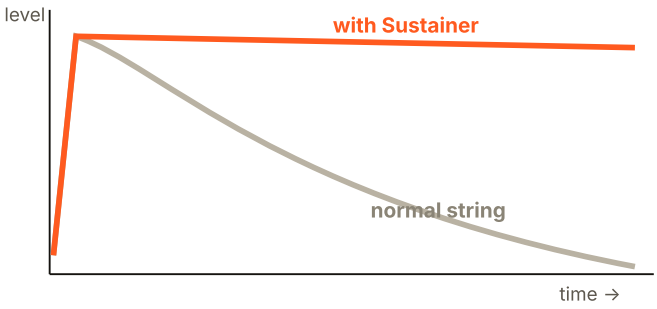


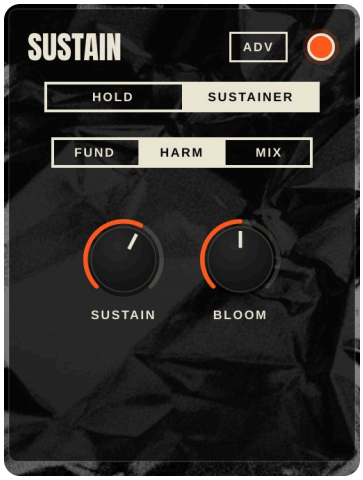


1. Turn Sustain on and pick **SUSTAINER**.
2. Pick a type: **FUND** holds the note you played, **HARM** blooms into the octave, **MIX** blooms halfway.
3. **Sustain** sets how much it holds the note up. Start around 60%.
4. **Bloom** sets how long HARM / MIX take to bloom after each pick (0.2 to 6 s).

> **Best on single notes and two-note shapes,** like the real thing. Turn Sustain up and it also brings up string and amp noise; Tight helps, and so does a gate after dJONt.

ADV: voicing for Hold and the Sustainer

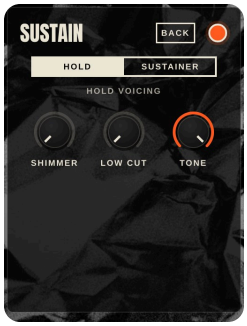

Hold: Shimmer adds movement so it's less of a static pad. **Low Cut** thins the held lows so they don't muddy what you play over them. **Tone** darkens it.

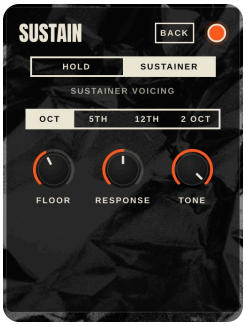

Sustainer: Interval is what HARM / MIX bloom into (Oct, 5th, 12th, 2 Oct). **Floor**: how quiet a note gets before it lets go. **Response**: fast = tight, slow = swells. **Tone** tames the noise it brings up.

Hold or Sustainer?

	HOLD	SUSTAINER
What rings	A frozen copy of what you played	The note you're playing now
Bends / vibrato	Not on the held part (it's a copy)	Yes, while the string still rings
Chords	Great: hold a chord, solo over it	OK on simple shapes; best on single notes
Needs a switch?	Yes: HOLD (mouse or footswitch)	No, it works on every note

5 Footswitches, pedals and MIDI learn


The Quad Cortex footswitches are **on / off** switches (they sense touch, but not how far down you press). That's perfect for **HOLD**, and with **Glide** it drives Wham too. An expression pedal plugged into the QC's EXP jack gives you a real, smooth Wham pedal.

Step 1: make the QC send MIDI

1. Connect the QC to the computer over **USB** (MIDI travels on the same cable).
2. In your QC preset, set a footswitch to send a **MIDI CC** message, e.g. **CC 20** for HOLD and **CC 21** for Wham. Use numbers nothing else in that preset uses. MIDI setup is per preset on the QC.
3. For an expression pedal: set the EXP pedal to send a CC (e.g. **CC 11**) the same way.

Neural's menu names change between CorOS versions; if a step doesn't match your screen, search their manual for "MIDI" / "footswitch MIDI". Your T3KJ scene footswitches already use the same idea.

Step 2: connect it to dJONt

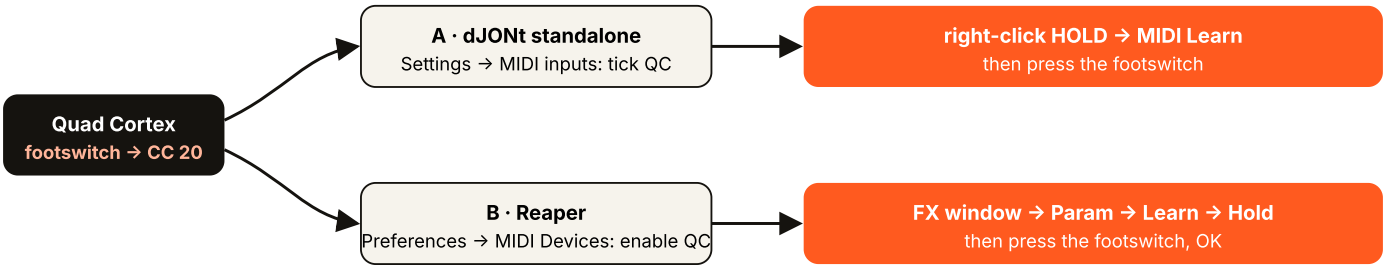

A · In the standalone app (dJONt's own MIDI learn)

1. Gear → **MIDI inputs**: tick the Quad Cortex. Close Settings.
2. **Right-click** the control (e.g. **HOLD**, the Wham rocker, any knob or power light) → **MIDI Learn**. It gets an orange outline and the hint bar says it's waiting.
3. Press the footswitch (or move the pedal). The hint bar confirms: *"Hold is on MIDI CC 20."*
4. To undo: right-click it → **Forget MIDI CC 20**. Right-click while waiting → **Cancel MIDI learn**.


Mappings save with dJONt's state: in the standalone app between sessions, and inside your Reaper project.

B · In Reaper (simplest there)

1. *Options → Preferences → Audio → MIDI Devices*: enable the Quad Cortex as an input (and for control).
2. In dJONt, click the control once so Reaper knows it was the last one touched.
3. In the FX window, click **Param** → **Learn** → pick the parameter (e.g. *Hold*).
4. Press the footswitch; Reaper fills in the CC. Click **OK**.

5 Presets, scenes and automation

Presets

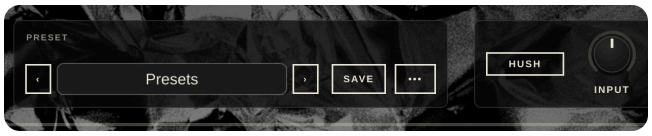

A preset is everything dJONt is doing, **every scene included**. Your presets come first in the list, then the read-only starters.

TO	DO THIS
Make a new preset	Set up the sound, then ••• → *Save as new preset*, type a name, Enter. (With no preset loaded, **SAVE** does the same.)
Edit one of yours	Load it, change things, press **SAVE**. That's it.
Rename / delete	••• → *Rename* or *Delete*.
Change its PC number	••• → *Move up* / *Move down*. The list order is the MIDI Program Change order: PC 0 = first.
Keep a starter's tweaks	Starters can't be overwritten: *Save as new preset*.

Scenes



A scene is a full snapshot inside the preset: which modules are on, every knob, Input, Blend, Output and Hush. There's no save step: whatever you change in a scene stays in it. **Not** part of scenes, because they follow your feet: the **HOLD** button and the **Wham pedal's position** (Wham's intervals, heel / toe and mode *are*, so a scene can drop your tuning). Hush's learned noise is shared.

TO	DO THIS
Switch	Click it (or a footswitch / the Scene parameter, below).
Add one	**+**: up to 8 (A to H); it starts as a copy of the scene you're in.
Name / delete	Double-click to name; right-click → *Rename* / *Delete scene* (later scenes move up a letter).
Put it on a footswitch	Right-click a scene → *MIDI Learn: scene switch*, press the switch. From then on that CC's **value** picks the scene: 0 = A, 1 = B, 2 = C...

> **One footswitch, three devices.** On the Quad Cortex, a preset change sends a **Program Change**: dJONt and T3KJ each load their preset at that number, so keep your presets in the **same order** in both. For scenes, have the QC send the **same CC** to both plugins with values 0, 1, 2...: Scene A in dJONt and Scene A in T3KJ switch together (the letters even share colors).

Automating in REAPER

1. **Envelope (no MIDI):** in dJONt, click the control (say Lo-Fi's power light) so it's the last one touched. In REAPER's FX window: **Param → Show track envelope**.
2. Set the envelope's points to **square**, then draw **high = on, low = off**: on where the section starts, off where it ends. Leave the track on *Read*.
3. **Whole scenes:** do the same with the **Scene** parameter. Each step is one scene.
4. **MIDI instead:** right-click the control → *MIDI Learn*, send the CC once. Put an empty MIDI item on the same track over the section, add that CC's lane and draw **127** at the start, **0** at the end. Power lights follow the value (64 and up = on), so they can't get out of sync. The MIDI continues down the FX chain to T3KJ.

6 Troubleshooting

PROBLEM	TRY THIS
No sound in the standalone app	Settings → turn on **Hear yourself**. Check that your guitar's input is ticked and the outputs go to your amp or speakers.
Wham does nothing	Power light on? Toe different from Heel? In PEDAL mode, move the rocker (or switch to AUTO).
Everything feels a bit late with Wham on	That's Wham's ~16 ms. Turn Wham off when you're not using it, and use a smaller buffer in Settings.
Footswitch does nothing in the standalone app	Settings → MIDI inputs: QC ticked? Hover the control: the hint bar shows *MIDI CC n* if it's mapped. Check the QC sends that CC in the current preset.
Footswitch does nothing in Reaper	Use Reaper's **Param → Learn** (section 5B), with the QC enabled under MIDI Devices.
HOLD turns off when I lift my foot	Turn **LATCH** on (or set the QC switch to latch and LATCH off).
Sustainer gets noisy	Lower Sustain, turn on Tight, and gate after dJONt.
Presets are missing	Your presets are in `%APPDATA%\dJONt\presets.xml` and Wham's in `%APPDATA%\dJONt\wham-presets.json`. Back those files up to keep them.
The QC changes T3KJ's preset but not dJONt's (or the wrong one)	Both load the preset at the PC number: check the list order (the number next to each name) matches T3KJ's, and the QC sends its Program Change on the channel REAPER passes to the track.
A scene switch doesn't change something	HOLD and the Wham pedal position never change with scenes, by design. Everything else is per scene; tweak it while in that scene.


LATCH: match it to how your switch behaves

YOUR QC FOOTSWITCH SENDS...	SET LATCH	RESULT
127 on press, 0 on release (momentary)	**ON**	Tap to hold, tap again to let go.
127 on press, 0 on release (momentary)	**OFF**	Holds while your foot is down, like a piano pedal.
127 on one press, 0 on the next (latching)	**OFF**	The switch does the latching.

Cheat sheet. Right-click = MIDI. Double-click = reset. Hover = explain. HOLD + LATCH = tap on, tap off. Wham Glide = footswitch sweeps. Rise + Retrig = scoop per pick. dJONt goes **before** the amp.

7 Module reference

The same text as the manual inside the plugin: click **?** in dJONt's header, pick a topic on the left.

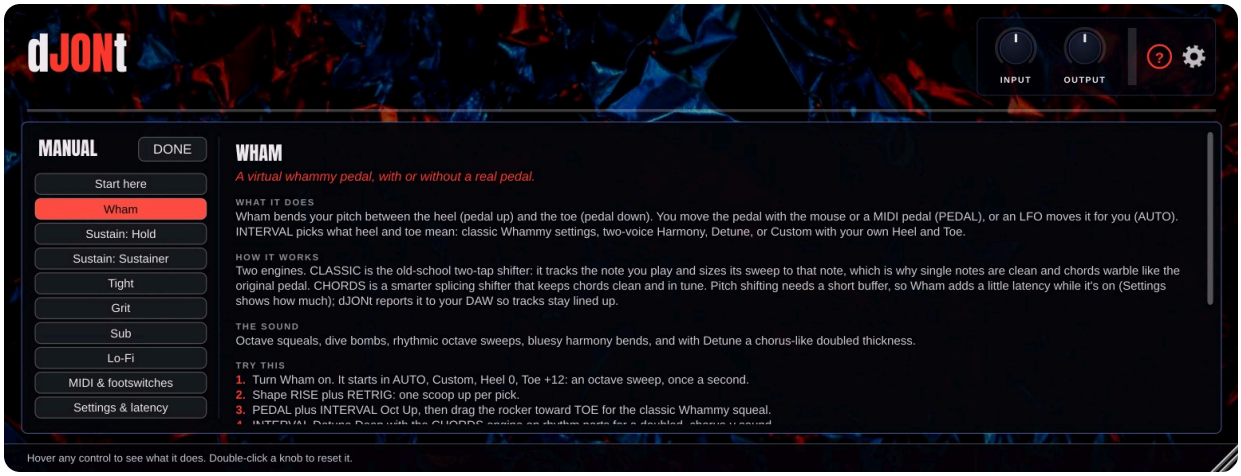

The ? manual in the Red Foil look.

Start here *A pedalboard that goes in front of your amp sim.*

What it does. dJONt is a set of effects for guitar that run before the amp: Wham (a virtual whammy), Sustain (Hold and Sustainer), Tight, Grit, Sub and Lo-Fi. Each module has a power light; off modules pass your signal untouched.

How it works. The signal runs left to right in a fixed order: Wham, Sustain, Tight, Grit, Sub, Lo-Fi. dJONt works on your guitar's dry signal, so put it on the track before T3KJ (or any amp sim), like pedals in front of an amp.

The sound. Everything here is built for low tunings and heavy rhythm playing, plus the pitch and sustain tricks you'd normally need a pedalboard for.

Try this.

1. In Reaper: add dJONt to your guitar track, then T3KJ after it.
2. Turn on Tight and play palm mutes. That's the module most people leave on.
3. Hover over anything: the hint bar at the bottom explains it and shows its value.
4. Drag knobs up and down. Double-click a knob to reset it. Right-click any control for MIDI learn.

CONTROL	WHAT IT DOES
PRESET	Your presets and the starters, with their MIDI PC numbers. SAVE edits the current one; ••• for save as new, rename, delete, reorder.
SCENES	Up to eight versions of the board (A to H) above the hint bar. Click to switch, + to add.
HUSH	The de-noiser on your DI, before Wham (zero latency). Click HUSH in the header.
Input / Output	Level into and out of dJONt, ±24 dB. The meter turns red when the output clips.
Blend	The whole board against your dry DI (after Hush). 100% is all dJONt; lower keeps your amp's own tone under the effects. The dry is delayed to line up when Wham adds latency.
Gear	Settings: the look (Chrome, Red Foil, Shards, Circuit, Copper or Neon), and in the standalone app your audio interface, MIDI inputs and latency.
?	This manual.
ADV	Flips Wham or Sustain over to their voicing controls. BACK returns.

Wham *A virtual whammy pedal, with or without a real pedal.*

What it does. Wham bends your pitch between the heel (pedal up) and the toe (pedal down). You move the pedal with the mouse or a MIDI pedal (PEDAL), or an LFO moves it for you (AUTO). INTERVAL picks what heel and toe mean: classic Whammy settings, two-voice Harmony, Detune, or Custom with your own Heel and Toe.

How it works. Two engines. CLASSIC is the old-school two-tap shifter: it tracks the note you play and sizes its sweep to that note, which is why single notes are clean and chords warble like the original pedal. CHORDS is a smarter splicing shifter that keeps chords clean and in tune. Pitch shifting needs a short buffer, so Wham adds a little latency while it's on (Settings shows how much); dJONt reports it to your DAW so tracks stay lined up.

The sound. Octave squeals, dive bombs, rhythmic octave sweeps, bluesy harmony bends, and with Detune a chorus-like doubled thickness.

Try this.

1. Turn Wham on. It starts in AUTO, Custom, Heel 0, Toe +12: an octave sweep, once a second.
2. Shape RISE plus RETRIG: one scoop up per pick.
3. PEDAL plus INTERVAL Oct Up, then drag the rocker toward TOE for the classic Whammy squeal.
4. INTERVAL Detune Deep with the CHORDS engine on rhythm parts for a doubled, chorus-y sound.
5. Presets: load a factory one (Dive Bomb, Siren, Octave Stabs) and SAVE your own.

CONTROL	WHAT IT DOES
PEDAL / AUTO	Who moves the pedal: you (mouse, scroll, MIDI) or an LFO.
INTERVAL	Custom (your Heel / Toe), Whammy (2 Oct Up … Dive Bomb), Harmony (your note plus a moving second voice), Detune (your note plus a slightly detuned copy).
Heel / Toe	Custom only: the pitch at each end of the pedal, ±24 semitones.
Rate / Shape / Retrig	AUTO only: LFO speed, its shape (Sine, Triangle, Rise, Square), and restarting the sweep on every pick.
Glide	PEDAL only: how long the pitch takes to follow the pedal. Up it for footswitch sweeps.
Mix	Dry vs shifted. In Harmony it's the second voice's level.
ADV: Grain	Classic only: short is tighter and more metallic on chords, long is smoother and wobblier.
ADV: Buffer	Chords only: 20 ms is tightest, 60 ms smoothest on low notes.
ADV: Tone	Darkens the shifted signal. Up-shifts get fizzy; roll this back.

Sustain: Hold *A piano sustain pedal for guitar.*

What it does. Press HOLD and what's ringing keeps sounding as a smooth pad, while you keep playing normally on top. CHORD freezes the chord ringing at that moment; PILE-UP keeps adding every note you play while HOLD is down.

How it works. Hold takes a snapshot of the sound's spectrum and keeps resynthesizing it (a spectral freeze), so the held part is steady instead of a stuttering loop. Your live guitar passes through untouched.

The sound. Ambient pads under a lead, held chords in breakdowns, swelling drones. Long Fade gives pads, short Fade gives stabs.

Try this.

1. Turn Sustain on and pick HOLD, then CHORD.
2. Strum a chord, click HOLD while it rings, then solo over it. Click HOLD again to let go.
3. Map HOLD to a footswitch (right-click it, MIDI Learn) and use LATCH: tap on, tap off.

CONTROL	WHAT IT DOES
HOLD	Holds the sound. Works with the mouse or a MIDI footswitch.
CHORD / PILE-UP	Freeze one moment, or keep stacking notes while held.
LATCH	On: one press holds, the next lets go. Off: holds only while pressed.
Fade	How fast the held sound swells in and dies away.
Level	Held sound vs your live playing. 100% = as loud as it was.
ADV: Shimmer	Adds movement so the pad is less static.
ADV: Low Cut / Tone	Thin the held lows so they don't muddy what you play over them; darken the pad.

Sustain: Sustainer *The Sustainiac idea: notes that don't die.*

What it does. As your note fades, the Sustainer brings it back up to where you picked it, so single notes ring for as long as you hold them. In HARM it blooms into the octave (or the Interval you pick) the way a sustainer pickup's harmonic mode does.

How it works. A level-riding gain stage follows the note's level and makes up the loss, up to +40 dB, then lets go when the note drops under the Floor, so muting the strings still means silence. HARM and MIX fade in a pitch-shifted copy over the Bloom time.

The sound. Endless lead notes, feedback-style blooms into the octave without standing in front of an amp. Best on single notes and two-note shapes.

Try this.

1. Turn Sustain on, pick SUSTAINER, type FUND, Sustain around 60%.
2. Switch to HARM and hold a note: it blooms into the octave over the Bloom time.
3. If it gets noisy: lower Sustain, turn on Tight, or put a gate after dJONt.

CONTROL	WHAT IT DOES
FUND / HARM / MIX	Hold the note you played, bloom into the Interval, or bloom halfway.
Sustain	How much it holds the note up.
Bloom	How long HARM / MIX take to bloom after each pick (0.2 to 6 s).
ADV: Interval	What it blooms into: Octave, 5th, 12th, 2 Octaves.
ADV: Floor	How quiet a note gets before it lets go.
ADV: Response	Fast is tight, slow swells.
ADV: Tone	Tames the hiss it brings up.

Tight *Palm mutes that hit harder, or a tight boost into your amp.*

What it does. Tight has two voicings. PUNCH pushes each pick attack and trims the ring-out after it, in the band where your low strings live. FOCUS is the classic tight boost in front of a high-gain amp: it cuts the lows below Freq, pushes the mids and clips a little.

How it works. PUNCH: a detector band-passes the signal at Freq and compares a fast envelope with a slow one. On an attack the band is lifted (up to about +12 dB); as the note decays it's trimmed a little, like a transient shaper aimed at the chug. FOCUS: a 12 dB/oct low cut at Freq, a mid hump around 720 Hz, then Amount drives a soft clipper (0 to +30 dB). The clipper is anti-aliased without oversampling, so FOCUS adds no latency.

The sound. PUNCH: tighter, punchier rhythm parts without changing your tone between hits. FOCUS: a tighter, more focused amp. Less flub on low notes, more bite, and a bit more gain for the amp to chew on.

Try this.

1. Leave PUNCH on for any heavy rhythm part. Amount 50% is a good start.
2. PUNCH: set Freq near your low string, around 80–120 Hz for drop tunings, higher for more pick click.
3. FOCUS: Amount low (10–30%) and Freq 150–250 Hz is the classic boost into a high-gain amp. Turn the amp's gain down a little to make room.
4. FOCUS with Amount up gets you a drive pedal's grit on its own.

CONTROL	WHAT IT DOES
PUNCH / FOCUS	Which voicing Tight uses.
Amount	PUNCH: how hard each attack is pushed and how much the ring-out is trimmed. FOCUS: how hard the boost drives your amp.
Freq	PUNCH: the band Tight listens to (60 Hz to 1 kHz). FOCUS: the low cut; higher is tighter.

Grit *Fuzz on the low end only.*

What it does. Grit adds a fuzzed copy of just your lows, under your dry signal.

How it works. The lows below Freq are split off, driven into an asymmetric clipper, low-passed again so the fizz stays out, and blended back in.

The sound. A thicker, growlier bottom end, especially into a clean or lightly driven amp, without making the top end harsher.

Try this.

1. Blend around 40%, Drive to taste.
2. Use a low Freq (around 100 Hz) so only the very bottom gets fuzzed.

CONTROL	WHAT IT DOES
Drive	How hard the low-end fuzz is pushed.
Blend	How much fuzz sits under your dry signal.
Freq	Only the lows below this get fuzzed (60 to 400 Hz).

Sub *An octave below, under your dry signal.*

What it does. Sub adds the octave down, through a low-pass so it stays a round, heavy bottom.

How it works. CLEAN uses a pitch shifter that handles chords (the octave trails your note by about 20 ms; your dry note doesn't). SYNTH is a flip-flop divider like an analog octave pedal: instant, buzzy, single notes only.

The sound. Bass-guitar weight under riffs, or a synthy octave growl with SYNTH.

Try this.

1. CLEAN, Blend 40%, Tone low, for chugs that sound like there's a bass player.
2. SYNTH on single-note riffs for an analog-octaver buzz.

CONTROL	WHAT IT DOES
CLEAN / SYNTH	Chord-friendly shifter, or an instant analog-style divider.
Blend	How loud the octave below is.
Tone	Low-pass on the octave; lower is rounder.

Lo-Fi *A radio / telephone filter.*

What it does. Lo-Fi squeezes your sound into a narrow band, like an old radio or a phone speaker.

How it works. A band-pass filter around Tone with a touch of drive.

The sound. Intros, breakdowns and 'before the drop' moments that open up when you switch it off.

Try this.

1. Map its power light to a footswitch and kick it off for the drop.
2. Tone around 1 kHz is classic telephone; lower is muffled AM radio.

CONTROL	WHAT IT DOES
Tone	Center of the band (300 Hz to 3 kHz).
Blend	Dry to fully filtered.

Hush *A de-noiser for your DI, with zero latency.*

What it does. Hush turns down the hiss and electrical buzz (EMI) your pickups bring, before anything in the chain amplifies it. It works between notes and also under them, in the parts of the spectrum your note isn't using. It's off until you turn it on: click HUSH in the header.

How it works. Hush watches eight bands from 200 Hz up. Each band has a noise floor (set by LEARN) and opens the moment your note shows up in it, within about two milliseconds, so pick attacks get through. A band with only noise in it is turned down with an EQ cut, by up to Strength. Nothing is delayed, and with every band open your signal is untouched. Below 200 Hz nothing changes: hum is a job for the gates (and, on a Jazz Bass, both pickup volumes full up).

The sound. A quiet floor under high gain: no hiss between riffs and less fizz around held notes, without a gate's chop. Too much Strength or Sensitivity can make quiet notes a little duller.



Try this.

1. Click HUSH and turn it ON.
2. Volume up on your instrument, hands off the strings, click LEARN and wait two seconds.
3. Play, and raise Strength until the hiss is gone. If quiet notes lose sparkle, lower Sensitivity or Strength.
4. Use it with the gates, not instead of them: with Hush on you can set them lower, so notes fade out more naturally.

CONTROL	WHAT IT DOES
ON / OFF	Off is a perfect bypass.
LEARN	Two seconds of listening, hands off the strings, to set each band's noise floor. Saved with your settings.
Strength	How far a noise-only band is turned down (100% = 30 dB).
Sensitivity	How far over its floor a band has to be to count as your note (0 to 24 dB).
Release	How fast a band turns down once your note leaves it (10 to 500 ms).
Meters	How far each band is being turned down right now.

Presets *Your whole board, every scene, under one name.*

What it does. A preset stores everything dJONt is doing: every module's power and knobs, Input, Blend, Output, Hush's settings, and all of your scenes with their names. Your presets come first in the list, then a few starters. The list order is also the MIDI Program Change map: PC 0 loads the first preset, PC 1 the second, and so on.

How it works. The PRESET bar is in the header. Click the name for the list (each shows its PC number), or step with ‹ and ›. SAVE stores what you hear into the current preset, so editing a preset is just changing things and pressing SAVE. With no preset (or a starter) loaded, SAVE asks for a name and makes a new one. The ••• menu has Save as new, Rename, Delete and Move up / down; moving a preset changes its PC number. Presets live on this computer in %APPDATA%\dJONt\presets.xml and every dJONt (plugin and standalone) shares them. What a preset leaves alone: your MIDI mappings, Hush's learned noise, the look and the window size.

The sound. One preset per song is the easy way to work: its scenes are the song's sections.

Try this.

1. Set up a sound, click •••, Save as new preset, type a name, Enter.
2. Change a knob and press SAVE: that's an edit.
3. Keep the same order in dJONt and T3KJ: then one Quad Cortex preset change (it sends a Program Change) switches both plugins together.
4. Starters are read-only. Load one, tweak it, and Save as new to keep your version.

CONTROL	WHAT IT DOES
Name	The list, with PC numbers. Check mark = the current preset.
‹ ›	Previous / next preset.
SAVE	Save into the current preset (or name a new one).
•••	Save as new, Rename, Delete, Move up / down.

Scenes *Up to eight versions of the board, switched in one click or one footswitch.*

What it does. A scene is a full snapshot of the board inside a preset: which modules are on, every knob, Input, Blend, Output and Hush. Switch scenes for the sections of a song: Tight and Grit for the verse, Sustainer for the lead, Lo-Fi for the intro, Wham an octave down for the breakdown. Two things never change with a scene because they follow your feet: the HOLD button and the Wham pedal's position. Hush's learned noise is also shared, since it's your rig's noise, not a sound.

How it works. The SCENES row is above the hint bar. Click a scene to switch; there's no save step: whatever you change while in a scene is what that scene keeps. + adds a scene (up to eight, A to H) that starts as a copy of the one you're in. Double-click a scene to name it; right-click it to rename, delete (later scenes move up a letter) or MIDI-learn the scene switch. Switching is instant and glitch-free: modules glide in and out over about 20 ms. Scenes are saved with the preset and with your DAW project.

The sound. The letters use the same colors as T3KJ's scenes, so Scene B in dJONt and Scene B in T3KJ can be the same section of the song.

Try this.

1. Build scene A, click +, change a few things: that's scene B. Click A and B to compare.
2. Right-click a scene, MIDI Learn: scene switch, then send a CC from your controller. From then on the CC's value picks the scene: 0 = A, 1 = B, 2 = C...
3. Map the same CC to Scene in T3KJ too: one footswitch on the Quad Cortex switches both plugins.

CONTROL	WHAT IT DOES
Click	Switch to that scene.
Double-click	Name it.
Right-click	Rename, Delete, MIDI Learn.
+	Add a scene (copy of the current one).

MIDI & footswitches *Put any control on a footswitch or expression pedal.*

What it does. Every knob, power light, the HOLD button and the Wham rocker can be driven by MIDI CC from a controller, like a Quad Cortex footswitch or an expression pedal.

How it works. Right-click a control and choose MIDI Learn, then move or press the controller; dJONt maps that CC to it. Mappings save with the plugin's state (in the standalone app between sessions, and in your DAW project). In a DAW you can also use the DAW's own parameter learn.

The sound. Hands-free HOLD, footswitch Wham sweeps (map Wham Pedal and turn up Glide), or a real expression pedal on the rocker.

Try this.

1. Standalone: gear, then tick your controller under MIDI inputs.
2. Right-click HOLD, MIDI Learn, press the footswitch. The hint bar confirms the CC.
3. Right-click again to Forget it.

CONTROL	WHAT IT DOES
Right-click	MIDI Learn / Forget MIDI / Cancel.
Hint bar	Shows a control's CC when it's mapped.

Automating in REAPER *Turn Sustain or Lo-Fi on for one section, then off again.*

What it does. Every dJONt control is a REAPER parameter, so you can draw it as an automation envelope: no MIDI needed. You can also drive dJONt with MIDI from a MIDI item on the same track, or switch whole scenes from the timeline.

How it works. Envelope (simplest): in dJONt click the control you want (for example Lo-Fi's power light) so it's the last one touched, then in REAPER's FX window click Param > Show track envelope. A lane appears under the track. Set its points to square so it switches instead of fading, then draw high = on, low = off: on where the section starts, off where it ends. Keep the track's automation mode on Read. To switch whole scenes, do the same with the Scene parameter (each step is one scene). MIDI instead: right-click the control in dJONt, MIDI Learn, and send it a CC (or draw one CC event in a MIDI item and play it once while learning). Then put an empty MIDI item on the same track over the section, open it, add that CC's lane and draw 127 where the section starts and 0 where it ends: power lights follow the value (64 and up = on), so they never get out of sync. For scenes, the CC's value picks the scene (0 = A, 1 = B, ...). MIDI keeps going down the FX chain, so the same MIDI item can drive T3KJ after dJONt.

The sound. Automation is exact to the sample grid and repeats every playback; a footswitch is for playing live.

Try this.

1. Lo-Fi on for a 4-bar intro: Param > Show track envelope on Lo-Fi, square points, high for 4 bars, low after.
2. A whole-song plan: set up scenes A to D, then automate Scene: A verse, B chorus, C bridge.
3. Recording live with the Quad Cortex: arm the track with the QC as MIDI input and REAPER records your footswitch CCs into a MIDI item you can edit later.

CONTROL	WHAT IT DOES
Param > Show track envelope	Envelope for the last control you touched.
CC 64-127 / 0-63	Power on / off.
Scene CC value	0 = A, 1 = B, 2 = C ...

Settings & latency *Audio setup for the standalone app.*

What it does. The gear opens Settings: the look, and in the standalone app your audio interface, inputs, outputs, sample rate, buffer, MIDI inputs and a live latency readout.

How it works. In a DAW, the DAW owns the audio device, so those controls only appear in the standalone app. dJONt itself adds no latency, except Wham while it's on.

The sound. The lowest latency comes from ASIO and the smallest buffer that doesn't crackle (64 or 128 is typical).

Try this.

1. No sound in the standalone app? Turn on Hear yourself, and check your guitar's input is ticked.
2. Pick ASIO and your interface, 48 kHz, buffer 64 or 128.

CONTROL	WHAT IT DOES
Look	Chrome, Red Foil, Shards, Circuit, Copper or Neon: the photo and accent color. Saved with the plugin's state.
Hear yourself	Plays dJONt's output while your input is live. Off by default to prevent feedback.
Window size	Drag the bottom-right corner: 60% to 200%. dJONt remembers it.