

The Live View Display

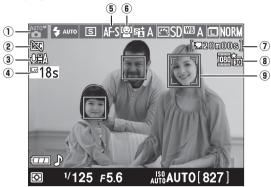

ltem	Description	m
1) Shooting mode	The mode currently selected with the mode dial. Select \Box or \odot for automatic scene selection (autofocus only; \Box 49).	4
② "No movie" icon	Indicates that movies can not be recorded.	51
3 Audio recording indicator	Indicates whether sound is being recorded with movies.	51
4 Time remaining	The amount of time remaining before live view ends automatically. Displayed if shooting will end in 30 s or less.	50, 52
5 Focus mode	The current focus mode.	45
6 AF-area mode	The current AF-area mode.	46
7 Time remaining (movie mode)	The recording time remaining in movie mode.	51
8 Movie frame size	The frame size of movies recorded in movie mode.	53
Focus point	The current focus point. The display varies with the option selected for AF-area mode.	47

Live View Display Options

Press the M button to cycle through display options as shown below.

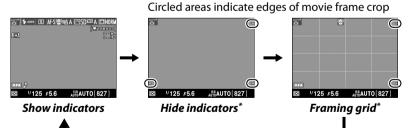

* A crop showing the area recorded is displayed during movie recording when frame sizes other than 640 × 424 are selected for **Movie settings** > **Movie quality** in the shooting menu (\$\square\$ 53; the area outside the movie frame crop is grayed out during recording).