
7.

1 Display the menus.

Press the MENU button to display the menus.



2 Highlight the icon for the current menu.


Press ◀ to highlight the icon for the current menu.





3 Select a menu.

Press ▲ or ▼ to select the desired menu.

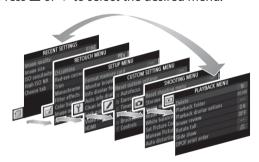





4 Position the cursor in the selected menu.

Press ▶ to position the cursor in the selected menu.





5 Highlight a menu item.

Press ▲ or ▼ to highlight a menu item.



