

EXT

MIDI IN





MIDI OUT

AUDIO IN

AUDIO OUT

PHONES

DC 24V

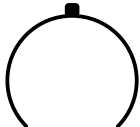

TUNING

CUT OFF FREQ

RESONANCE

ENV MOD

DECAY

ACCENT



EXT

EXT

EXT

+

ML-303^{V5}
Computer Controlled



VOLUME

PATTERN CLEAR

PITCH MODE

MODE EDIT

BPM MIDI SYSTEM

TIME MODE

BACK

C# D#

F# G# A#



RUN/STOP

FUNC

PATTERN

CHAIN

C D E F G A B C+

1 2 3 4 5 6 7 8

DOWN UP

+8 +16

- +

ACCENT SLIDE

+32 +64

OK

NEXT