


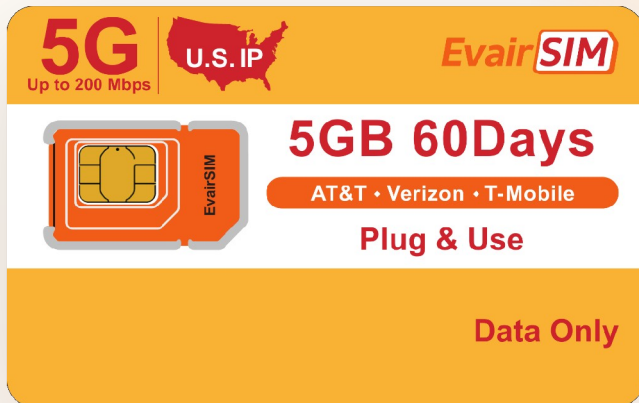

## SIM CARD USER MANUAL

# Get connected with EvairSIM

A compact setup guide for phones, tablets, MiFi devices,  
and supported cameras.



YOU ARE IN

## Welcome to EvairSIM

Scan the QR code to visit [www.evairdigital.com](http://www.evairdigital.com) and start your global connectivity experience.



### On the EvairSIM website, you can:

**Check plan details instantly.**

View your plan validity and remaining data.

**Order new plans easily.**

Renew or switch plans with a few taps.

**Get quick support.**

Report issues and connect with our team.

# Table of contents

|                            |    |
|----------------------------|----|
| Top up or check balance    | 04 |
| Switch carriers on iOS     | 05 |
| Configure APN on iOS       | 06 |
| Switch carriers on Android | 07 |
| Configure APN on Android   | 08 |
| Set up APN on MiFi         | 09 |
| Set up APN on Reolink      | 10 |
| Q&A                        | 12 |

## First things first

Take these key steps before using the SIM card.

### 1. Check whether your phone is unlocked

If your phone is network-locked, contact the customer service team of the device retailer or carrier to unlock it.

### 2. Confirm device support

Make sure your phone supports third-party SIM cards and has data roaming enabled.

### APN values

Use one of these APNs when manual setup is required: globaldata, plus, or internet. Leave username and password blank.

# Easy ways to top up or check your balance

Use the EvairSIM website to view your plan, add more data, or get support.

1

**Open EvairSIM**

Visit [www.evairdigital.com](http://www.evairdigital.com) or scan the QR code in this booklet.

2

**Find your SIM**

Use your SIM information to view plan validity, usage, and remaining data.

3

**Choose a plan**

Browse available plans and select the option that matches your device and use case.

4

**Need help?**

Contact support in the app or email [service@evairdigital.com](mailto:service@evairdigital.com).

Tip: If data stops working after normal use, check your remaining data first before changing device settings.

# How to switch carriers on iOS devices

Use this when your iPhone or iPad does not connect automatically.

1

## Insert SIM card

Power on your device after inserting the EvairSIM card.

2

## Open Settings

Tap Cellular, then tap the SIM card that uses EvairSIM.

3

## Enable roaming

Turn on Data Roaming, then open Network Selection.

4

## Select manually

Disable Automatic, wait 1-2 minutes, then manually select the carrier.

# How to configure APN for iOS devices

Most devices connect automatically. If not, enter the APN manually.

1

## Insert SIM card

Install the EvairSIM card and wait for the device to detect it.

2

## Open Settings

Tap Cellular, then tap the SIM card.

3

## Open Cellular Data Network

Enable Data Roaming, then tap Cellular Data Network.

4

## Set APN

Enter APN plus. Leave Username and Password blank.

|          |             |
|----------|-------------|
| APN      | plus        |
| Username | Leave blank |
| Password | Leave blank |

# How to switch carriers on Android devices

Menu names can vary by Android brand, but the carrier-selection flow is similar.

1

## Insert SIM card

Install the EvairSIM card and power on your device.

2

## Open Settings

Tap Mobile Network, then tap SIM Card.

3

## Enable roaming

Turn on Data Roaming and tap Carrier or Network Operator.

4

## Select manually

Disable Automatic Selection, wait 1-2 minutes, then manually select the carrier.

# How to configure APN for Android devices

Use this if the device has no internet after roaming is enabled.

1

## Open SIM settings

Go to Settings, then Mobile Network, then SIM Card.

2

## Open APN settings

Tap Access Point Names or APN. This label varies by model.

3

## Add a new APN

Tap + or Add New APN, then create a manual configuration.

4

## Enter APN details

Set APN to plus. Leave Username and Password blank. Save and select it.



# How to set up APN on MiFi

Use the device admin panel to enter the APN manually.

1

## Insert SIM card

Insert the SIM card into the MiFi, hotspot, or router.

2

## Access admin panel

Open a browser and enter the device IP address, often 192.168.0.1 or 192.168.1.1.

3

## Log in

Use the admin username and password from your device manual.

4

## Find APN settings

Go to Settings, Network, then APN. Enable roaming if the device offers it.

APN

plus

Username / Password

Leave both blank

## What if a Reolink camera fails to connect automatically?

Based on Reolink camera settings. Some models require APN import by SD card.

1

### Create a TXT file

On a computer, create a text file named `my_custom_apn`.

2

### Add APN information

Enter `apn=plus`, `username=`, and `password=`. Leave username and password empty.

3

### Transfer to SD card

Save the file, then upload `my_custom_apn.txt` to the root directory of a FAT32 Micro SD card.

4

### Import to camera

Turn off the camera. Install the SIM card and SD card. Power on, then press reset for a few seconds.

### Reboot and verify

The camera should reboot and import the settings automatically. A blue LED light or voice prompt usually indicates successful configuration.

## Manual APN quick reference

Use this page when phone, MiFi, or camera menus ask for network values.

|                            |                        |
|----------------------------|------------------------|
| <b>Preferred APN</b>       | plus                   |
| <b>Other accepted APNs</b> | globaldata or internet |
| <b>Username</b>            | Leave blank            |
| <b>Password</b>            | Leave blank            |
| <b>Roaming</b>             | Enable data roaming    |

### After changing APN

Save the APN, select it as active, wait about 2 minutes, then restart the device if it still does not connect.

### Need support?

Send screenshots of your Data Roaming and APN configuration pages to [service@evairdigital.com](mailto:service@evairdigital.com).

**1. Why is there no network connection after inserting the SIM card?**

Please enable Data Roaming on your phone and wait about 2 minutes for the SIM card to activate and connect automatically. Alternatively, restart your phone after enabling roaming.

**2. Why is there still no network connection after enabling roaming?**

Your device may not support automatic APN configuration. Please manually set the APN to one of the following: globaldata, plus, or internet.

**3. Why does my SIM card show as expired even though I have not used all the data?**

EvairSIM SIM cards support automatic APN configuration. Some MiFi and IoT devices have roaming enabled by default, which triggers automatic activation once the SIM is inserted. The plan shows as expired once the package duration ends.

**4. Why does my device display Invalid SIM, SIM Locked, No Service, or SIM Network Unlock PIN?**

This indicates that your device is carrier-locked and does not support SIM cards from other providers. Contact the device provider to unlock it. EvairSIM IoT cards are compatible with unlocked devices.

### **5. Why is there still no internet after I enabled data roaming and configured APN on my mobile Wi-Fi?**

Please check if your device supports US network bands. Our SIM cards support B2, B4, B12, B13, B14, B30, B66, B71 for 4G/LTE and n5, n41, n71, n77, n258, n260, n261 for 5G. If your device supports these bands but still cannot connect, send screenshots of your roaming and APN pages to EvairSIM support.

### **6. How can I contact you?**

You can reach us via the app or by emailing [service@evairdigital.com](mailto:service@evairdigital.com).

### **7. Why is my network speed only 50 Mbps?**

Your network speed depends on the carrier your device selects and the signal strength in your area. Try manually switching network providers and choosing the strongest signal among AT&T, Verizon, or T-Mobile.

**8. Why did my internet stop working after I had been using it for a while?**

Please log in to the EvairSIM app or website and wait 15 minutes to check if your data package has been exhausted. If you still have data but cannot connect, manually switch to a different carrier.

**9. Do I need to buy a new SIM card once my data is used up?**

No. Download the EvairSIM app or visit the top-up page to subscribe to a new plan. You can continue using the same SIM card.

**10. Why is my security camera unable to connect after inserting the SIM card?**

Your device may not support automatic APN configuration. Contact the camera support team to ask how to manually configure the APN on that device. The EvairSIM APN is any of these: globaldata, plus, or internet.

**11. Can the US SIM card I purchased be used in Mexico or Europe?**

No. If you need to use the SIM card in multiple regions, such as the US and Europe, or the US, Mexico, and Canada, you will need to purchase our Multi-Region SIM card.

**12. Does the SIM card provide a static US IP address?**

Not exactly. The EvairSIM IoT card provides a local US IP, which supports US-based apps and streaming services. Because the card supports all three major US carriers, the IP address may change during network fluctuations or carrier switching.

**13. Can I use the SIM card in American Samoa?**

No. The EvairSIM card is supported in the Mainland US, Alaska, and Hawaii. It is not currently supported in other US overseas territories or islands.

**Support email**

[service@evairdigital.com](mailto:service@evairdigital.com)



## Scan to manage your SIM

Check data, top up, and contact support at [www.evairdigital.com](http://www.evairdigital.com).

