


Introduction

Custom Control Editor is used to create custom user interfaces for AHM audio matrix processors, dLive MixRacks and Avantis mixers.

The CC Editor runs on a Windows PC or Mac. The user interface is deployed via the Custom Control App on Windows, Mac, Android or iOS devices.

Config CC Editor creates a configuration, termed Config. A Config is stored as an .xml file, uploaded to a compatible mixer, and deployed to the Custom Control app at user login.

Layout Each Config can contain one or more Layouts. Each Layout can be a specific interface that is presented to a user for a specific purpose. Layouts can be triggered by different device types (desktop, tablet, phone), for specific users, or for specific Presets/Scenes.

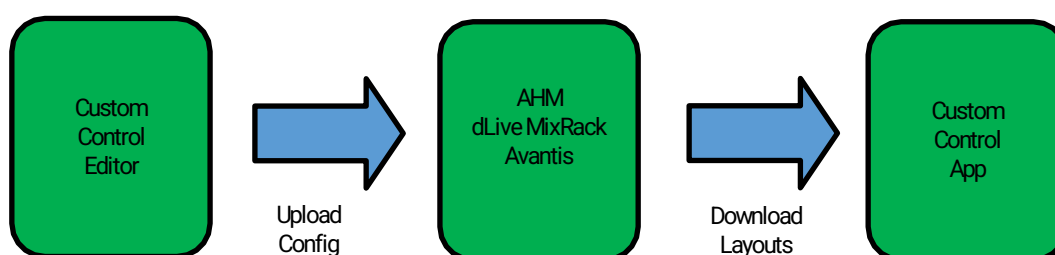

① To upload a Config you must log in as the Admin user and supply a password if one is set.

Contents

Introduction.....	1
Contents.....	1
Start Screen	2
Units.....	2
Keyring.....	3
Config Options.....	3
Layout Manager.....	4
Layout Editor	5
Test Window.....	8
Widget Properties.....	9
Resource Manager	19
Keyboard / Mouse Shortcuts	21
Kiosk Mode	22

Start screen



On starting the editor, you are presented with four options. If you have already stored a Config locally or uploaded a Config to an AHM, dLive or Avantis, you may load or download it, respectively.


❗ To download a Config you must log in as the Admin user and supply a password if one is set.

Select "Create single unit config" to start a new single unit Config. Use this option to control one unit (e.g. an AHM, a dLive MixRack, etc) at a time.

Select "Create multi unit config" to start a new multi unit Config. Use this option to control multiple units (e.g. AHMs, dLive MixRacks, etc or a mix thereof) from a single Config uploaded to a single unit.

Units

The Units screen shows the units associated with this Config.

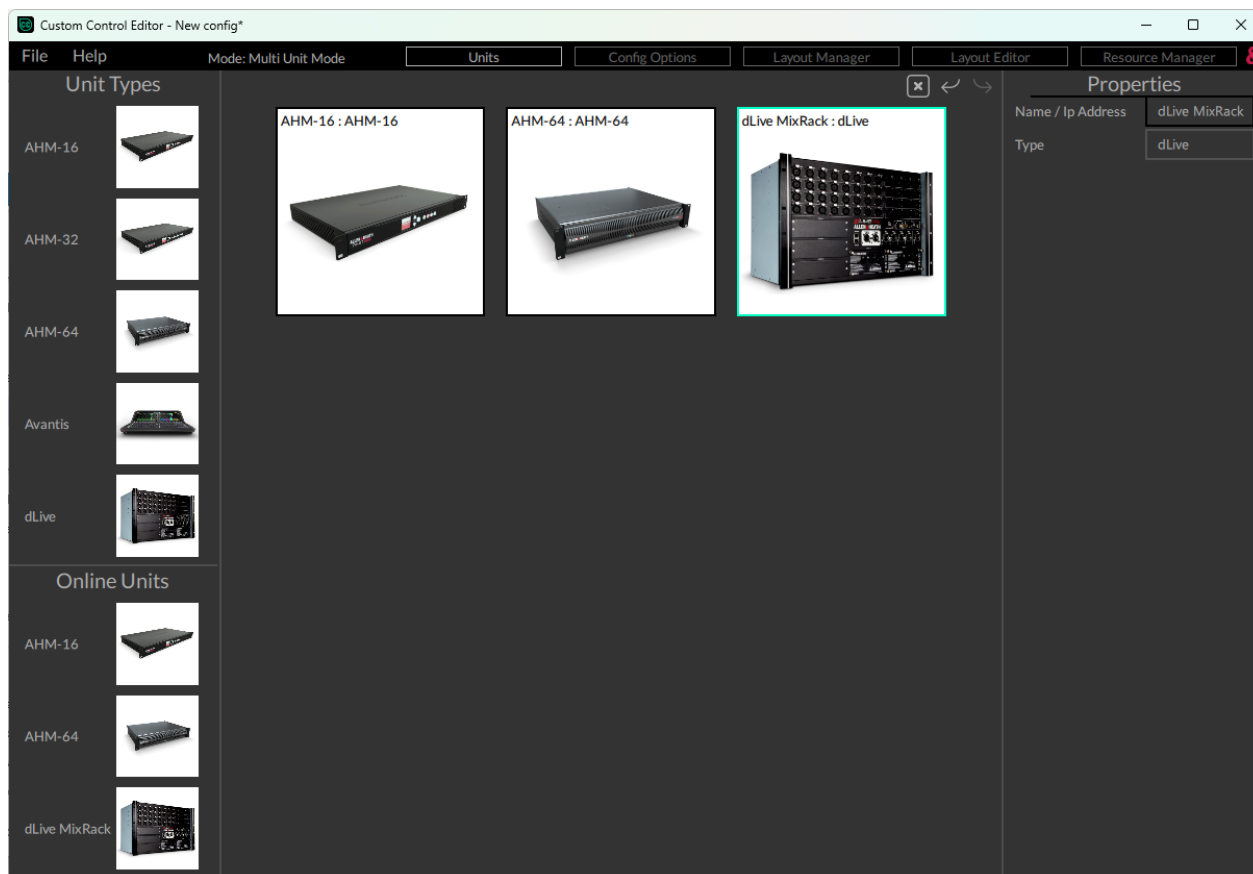

Drag units from the Unit Types or Online Units panes to the centre pane to add Units to the Config.

In a Single Unit Config, Unit Types lists all the different unit types that Custom Control supports.

Use Mode located in the top bar to change from Single Unit Mode to Multi Unit Mode. Multi Unit Configs add the ability to control multiple units from a single Config.


In Multi Unit Mode, Online Units lists all Units on the local network that are visible to CC Editor. When adding Units from this pane, the name of the online Unit will be used to identify which widgets are assigned to which units. Selecting a Unit in the centre pane shows its properties in the Properties pane. You can specify the Name/IP Address of the Unit here.

The Undo and Redo buttons can be used to undo new and deleted units and changes to Unit properties.

Keyring

The Keyring stores Unit administrator passwords in CC Editor to avoid having to remember multiple passwords across multiple projects or Units.

The passwords in the keyring are hashed and encrypted for security. The keyring requires its own password to decrypt the stored Unit passwords and is separate from any User passwords set up on the Unit itself.

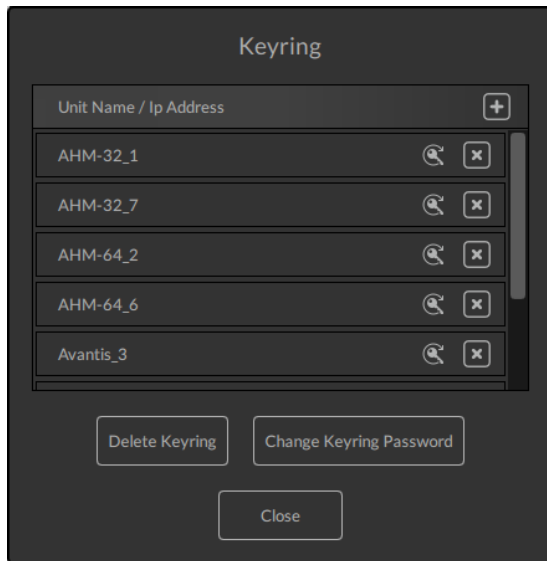


The first time a Unit Admin password is required, you will be asked to enter a new keyring password or enter your existing keyring password to unlock the keyring. The keyring then remains unlocked while CC Editor is open. All unit administrator passwords entered will be stored in the keyring. Once stored, the administrator passwords will be used automatically when connecting to units via upload/download and the test window.

The Keyring may be edited through the File > Keyring menu option. Passwords stored in the keyring can be deleted or changed and new passwords can be added.

Config Options

The Config Options screen shows options that relate to the entire config.

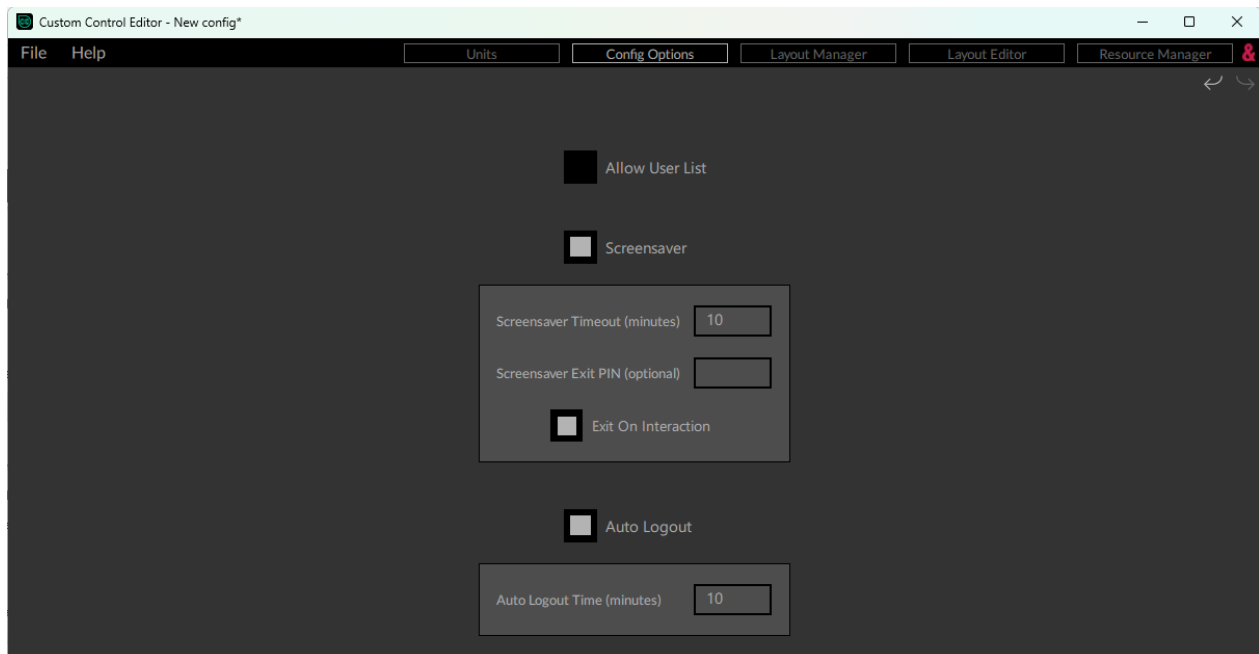

Allow User List enables Custom Control to display a list of active user profiles at login, so the user can pick from a list instead of entering a username manually.

Screensaver enables Custom Control to change from the current layout to a screensaver layout after a specified amount of time.


An optional Screensaver Exit PIN can be used as a way to exit the screensaver via a numerical code.

Exit On Interaction can be disabled when using a button in the screensaver layout assigned to the Exit Screensaver function.

Auto Logout enables an automatic logout for all users of the Custom Control config after a specified amount of time.

Layout Manager

The Layout Manager screen shows thumbnails of all the Layouts in the current Config.

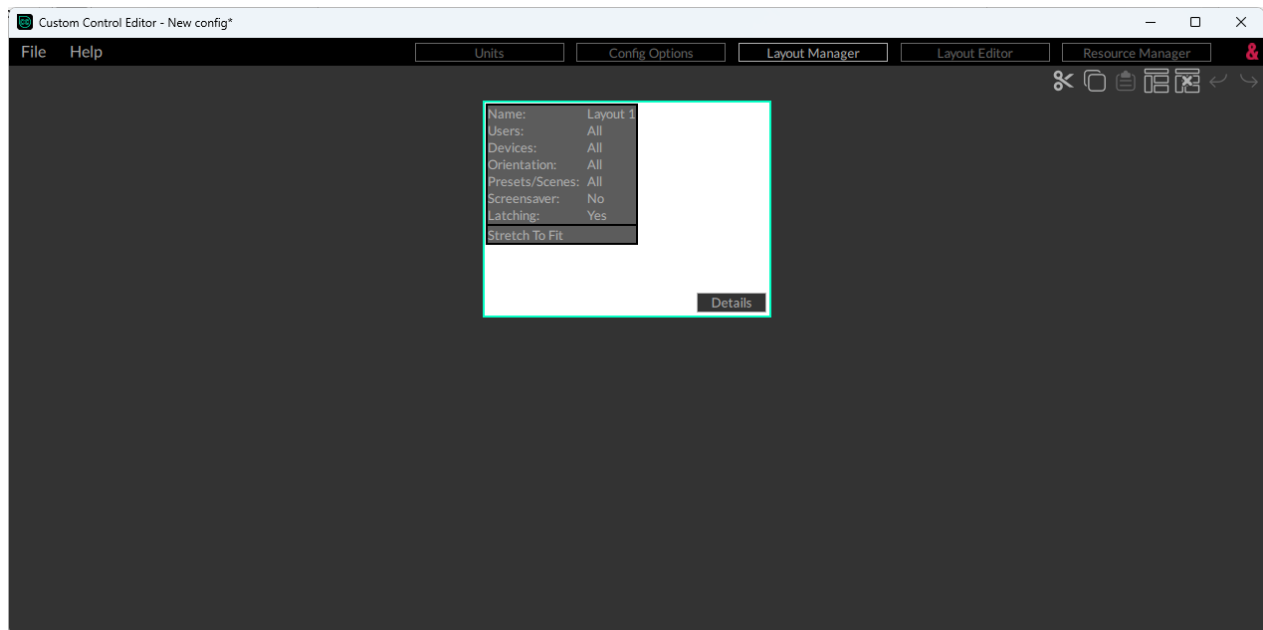

On creating a new Config there will be one empty Layout.

A Layout can be selected by clicking on it. The selected Layout is indicated by a blue outline.

In the top left of the Layout thumbnail is a summary of the Layout Details. These Details determine which users, devices, device orientation and Scenes or Presets the Layout applies to. Click on Details to edit the Layout Details.

You can Cut, Copy and Paste selected Layouts using the buttons in the top right.

A new Layout can be added, or the current Layout deleted, using the New Layout and Delete Layout buttons.

The Undo and Redo buttons can be used to undo new and deleted Layouts and changes to Layout Details.

The 'Add new layout' dialog box is shown. It has the following fields: Name (text box with 'New layout 1'), Users (checkbox 'All'), Devices (checkbox 'Desktop', checkbox 'Phone', checkbox 'Tablet'), Orientation (text box with 'Any'), Presets/Scenes (checkbox 'All'), Screensaver (checkbox), Aspect Ratio (checkbox 'Fixed', text boxes '4' and '3'), and Latching (checkbox). A red warning message is displayed: 'The above layout details cannot be the same as another existing layout'. There are 'OK' and 'Cancel' buttons at the bottom.

When adding a new Layout, its Details must be different from all the other Layouts so that the CC App can determine which Layout to download. On the "Add new layout" popup, red exclamation marks indicate a conflict of Details.

The Layout must be given a unique name and you also have the option of setting a fixed Aspect Ratio. By default, a Layout is stretched horizontally and vertically to fit a device screen in the Custom Control app. By setting a fixed aspect ratio the app will make the view of the Layout as large as possible for the screen while maintaining the aspect ratio.

Latching is used when a preset/scene or a range of presets/scenes are used as criteria for a layout to become active. If your AHM configuration or use case heavily relies on Presets, latching may be a useful tool to mitigate preset-based CC layout confusion. Latching designates a Layout to stay active even when a Preset is recalled with no Layout associated with it.

Screensaver denotes that a layout is used when Screensaver is enabled on the Config Options page. Enable screensaver in the feature in a regular layout.

Layout Details for the layout to be displayed as the screensaver. The screensaver layout can include any widgets that feature in a regular layout.


Double-clicking a Layout thumbnail or selecting "Layout Editor" from the menu bar will take you to the Layout Editor to edit the Layout.

If there are unsaved changes to a Config, a * will appear by the Config name in the title bar:




Layout Editor

The Layout Editor screen allows changes to be made to a Layout. The white canvas in the centre represents the device screen area.

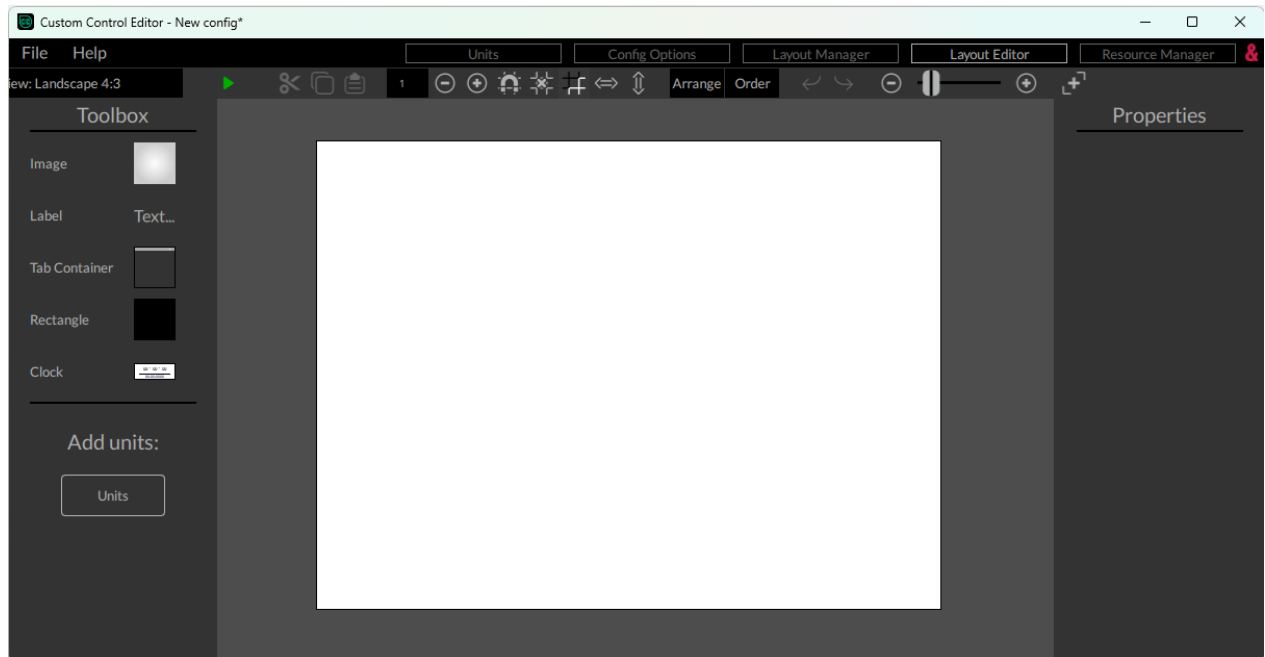

Toolbox

Drag a widget from the Toolbox pane to the central area to position it and select it to change its properties and functions.

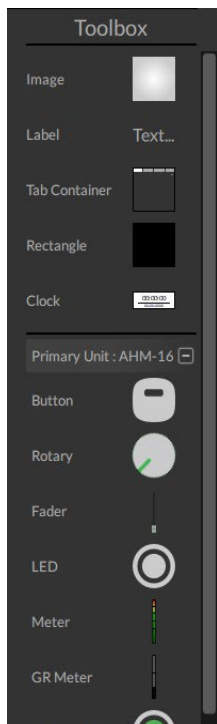

The top section of the Toolbox pane shows generic widgets common to all Units.

Below the generic widgets are widgets specific to each Unit in the Config.

If there are no Units currently in the Config, press the Units button to jump to the Units page to add one.

Sizing

The size and position of widgets are relative to the device screen unless it is placed in a tab container, where the widgets size and position are relative to the tab container. An X position of 0 is the left edge of the screen or tab container and a position of 100 is the right edge. Similarly, for Y.

A width value of 50 means the widget will take up 50% of the width of the screen or tab container. Similarly, for height.


The position and size of widgets may be locked to prevent changes by clicking the lock icon next to the position and size properties.




Setting a widget's Content Size Mode property to Lock Aspect will fix the aspect ratio of the widget to the ratio currently displayed in the Editor. This can be useful for company logos, round custom graphics and more.

Selection

A selected widget will be outlined by a red dotted line and its properties will appear in the Properties pane.

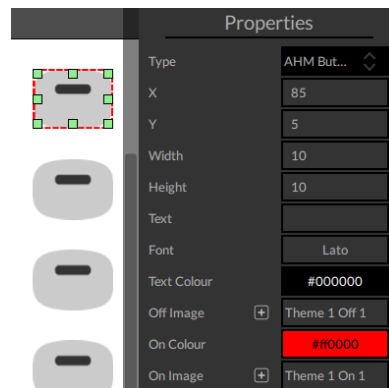

Multiple widgets may be selected by clicking and dragging a box around them. Only widgets completely within the box will be selected and the box must start away from a widget perimeter or off canvas. Multiple widgets can also be selected by holding shift and clicking on each widget.

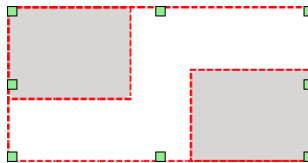

When multiple widgets are selected, only properties which are common between them are shown in the Properties pane. Changing a property when multiple widgets are selected will change the value for all the selected widgets.

Hovering over an unselected widget will outline it in blue to indicate the widget that would be selected if you were to click.

Widgets placed behind other widgets can be accessed by using Tab (→) to cycle through all widgets in the Layout.

Grouping Widgets

Multiple selected widgets can be grouped together using the Arrange > Group toolbar menu option or keyboard shortcut (Ctrl/⌘ + g). Groups themselves may also be grouped. A group of widgets acts as if the widgets have been simultaneously selected.


A single widget in a group may be selected without removing it from the group by first clicking the group, then clicking again on the widget, for example, to edit an individual widget's properties.

Moving/Resizing Widgets

Click and drag a widget to move it. A selected group of widgets can be dragged together.

Selected widgets may be resized using the square green handles. If multiple widgets are selected, they will be resized as a group. Holding the Shift key while dragging one of the corner handles will maintain the aspect ratio of the widget or group of widgets. The square handles of a widget are white when the size and position properties are locked.


Toolbar

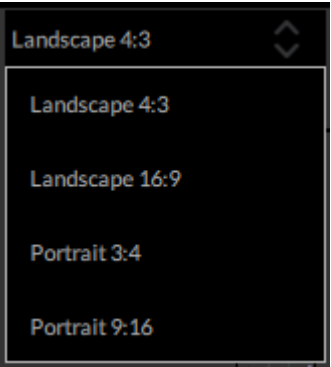

The View dropdown can be used to see how the Layout would appear in landscape and portrait orientation at different aspect ratios. Custom aspect ratios can be specified via the Layout Details on the Layout Manager page.



The Play button runs the Layout in a test window to simulate the user interface.



Hovering the mouse over toolbar buttons will show a tooltip with the button function.




The Cut, Copy and Paste buttons apply to the selected widgets. Widgets can be copied and pasted between Layouts.



The Grid buttons are used to show or hide the grid, and to enable snapping to the nearest grid line when moving or resizing a widget. The edit box and "+" and "-" buttons determine the spacing of the grid lines.



The Stretch buttons will stretch a widget to fill the whole width or height of its container.

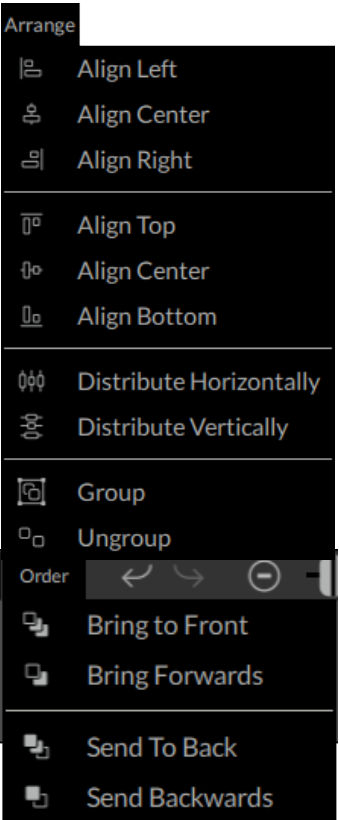

The Arrange menu items are active when multiple widgets are selected.

Align Left will align all the widgets with the leftmost edge of the selected widgets. Similarly Align Right, Top and Bottom.

Align Center will align the centre of the widgets with the centre of the selected area. The first Align Center aligns the selected items on the vertical axis and the second aligns items on the horizontal axis. The icons for each alignment control can be used to prompt the direction of alignment.

Distribute Horizontally will distribute the selected widgets evenly between the leftmost and rightmost selected widgets. Distribute Vertically works similarly.

Group will group selected widgets. Ungroup will ungroup selected groups.

The Order menu can be used to change the layering of widgets. "Bring to Front" will place the widget on top of all other widgets. "Bring Forwards" will bring the widget in front of the first other widget that overlaps it.



Undo and Redo can be used to undo and redo any property changes.



The Zoom buttons and slider control and indicate the zoom level.



The Zoom to Fit button will zoom so that the Layout fits in the current window.

Colour Selector

The Colour Selector window appears anytime a colour property is selected for a widget. There are several ways to select a colour.

	Hue, Saturation, Value. Use Hue to select the base colour, Saturation to adjust the white content and Value to adjust the black content.
	Red, Green, Blue. With all colours at 0 value, the current colour selection is black. Increase Red, Green or Blue or a combination of the three colours.
Hex Code	Enter a RGB Hex code in #000000 format.
Eye Dropper 	Choose a colour from anywhere onscreen. Use ESC to cancel.

Use Alpha to change the transparency of the selected colour where 0.00 is fully transparent with no colour and 1.00 is fully opaque.

Use a Colour Palette to quickly select colours from up to 32 custom colours.

Colours can be added to a Palette via the Colour Selector.

Use  to select or create a new colour palette.

Use  to add the current colour selection to the selected colour palette.

Delete a colour from a colour palette by hovering over the colour and pressing the



Test Window

This window is opened from the Layout Editor by pressing the green Play button located in the top bar of the Layout Editor. It simulates the user interface as it will look on the Custom Control app. You can interact with the widgets and the window can be dynamically resized to see how the Layout will look on different devices.

The Connect button will allow you to connect to an AHM/dLive/Avantis and test the controls in the Layout without uploading or overwriting the current Config on the mixer.

When connected to a compatible mixer, any invalid widget is shown with hatched lines. For example, if a widget is set to control a channel which does not exist in the connected mixer, it will be shown as invalid. This will also be shown if attempting to use a new widget or feature that doesn't exist in the firmware of the connected unit.



Widget Properties

The Type property shows type of the widget. For unit-specific widgets, the Type property also shows which unit the widget will connect to.

All widgets have the properties X, Y, Width and Height to define the size and location of the widget.

The Content Size Mode property Lock Aspect option will fix the aspect ratio of the widget to the ratio currently displayed in the Editor. Fill will stretch the widget as the display size changes.

Generic Widgets

Image



Image	Click on the image name box (Default) to open the image picker and select an image from the existing images.
	The plus button is a quick way of importing a new image. The imported image will automatically apply to the selected image widget and appears in the Resource Manager and the image picker.

Label

Text	One or more lines of text. Use Tab to indent and Enter to place text on a new line.
Font	The font of the text. Use to  import a custom font file in .ttf or .otf format.
Text Colour	The colour of the text.
Background Colour	The colour of a background rectangle behind the text. The default is transparent.
Border Colour	The colour of a border rectangle around the text. The default is transparent.
Align	The horizontal alignment of the text within the widget.
Align Vertical	The vertical alignment of the text within the widget.
Radius	The radius of the corners on the background rectangle.
Margin	The margin between the text and the rectangle of the widget.
Wrap Mode	Visible when Scale Mode is set to Fixed Size. The behaviour of text that extends beyond the size of the widget. With No Wrap selected, the visible text depends on the size of the widget. With Word Wrap selected, the text is automatically formatted to fit in the widget by placing text on a new line.
Scale Mode	Scale Text automatically adjusts the text size based on the size of the widget. Fixed Size allows a fixed font size to be specified.
Font Size	Specifies the size of the font.
Border Size	Specifies the size of the border line. Only affects text if the border is visible.

Tab Container

A tab container is used to switch between multiple pages of widgets within the same Layout.

To add a widget to a tab, click on the tab then drag the widget so that it is wholly within the tab page. When dragging the widget, the Tab outline will turn red when the widget is within the tab. To move a widget from one page to another, remove the widget from the tab container, click a new tab and then drag the widget into the tab container. The size and position of widgets within a tab container are relative to the size of the tab container itself (i.e. a value of 0 for X corresponds to the left edge of the tab).

Tab Position	The tabs can be positioned at either the top or bottom of the widget.
Font	The font of the text. Use to  import a custom font file in .ttf or .otf format.
Colour Off	When Image Off is set to Basic, this determines the colour of the rectangle.
Image Off	The image used for unselected tabs. The default is a rectangle.
Colour On	When Image On is set to Basic, this determines the colour of the rectangle.
Image On	The image used for the selected tab. The default is a rectangle.
Text Colour On	The colour of the text for the selected tab.
Text Colour Off	The colour of the text for the tabs that aren't selected.
Number Of Tabs	The number of tabs – minimum 1, maximum 20.
Default Tab	The number of the tab that is displayed when the layout is first recalled.
Tab Names	Enter a custom name for each tab. The tab name properties appear/disappear depending on the number of tabs.

By default, the tab container is populated with 4 tabs labelled 1-4.

Rectangle

Radius	The radius of the corners on the rectangle.
Colour	Colour of the rectangle
Colour Mode	Solid colour or Gradient
Gradient Style	Available when Colour Mode is Gradient. Left to Right or Top to Bottom gradient.
Gradient Start	Available when Colour Mode is Gradient. The colour at the Left or Top of the rectangle.
Gradient End	Available when Colour Mode is Gradient. The colour at the Right or Bottom of the rectangle.
Border Colour	The colour of a border around the rectangle. The default is transparent.
Border Size	Specifies the size of the border line.

Clock

Face Format	Show the time as digital, analogue or just show the date.
Time Format	When the Face Format is Digital, choose the format of the time. When the Face Format is Analogue, choose to hide or show the second hand.
Date Format	Choose the format of the date or hide the date.
Font	The font used for the time and date text. Use to  import a custom font file in .ttf or .otf format.
Colour	The colour of the date and time text.
Background Colour	The background colour. This can be transparent.
Show Border	Shows/hides the border
Border Colour	The border colour
Radius	The radius of the corners on the background rectangle.

Custom Date Format	Available when the Date Format is Custom.	
	The format can also include the time.	
	Text codes are used to represent different parts of the time/date and are interpreted as follows:	
	h	Hour without leading zero
	hh	Hour with leading zero
	H	Hour without leading zero 24h format
	HH	Hour with leading zero 24h format
	m	Minute without leading zero
	mm	Minute with leading zero
	s	Second without leading zero
	ss	Second with leading zero
	AP or A	Use 12 hour format. Put AM/PM
	ap or a	Use 12 hour format. Put am/pm
	t	Timezone
	d	Day number without leading zero e.g. 1, 6, 30
	dd	Day number with leading zero e.g. 01, 06, 30
	ddd	Short day name e.g. Mon, Fri
	dddd	Long day name e.g. Monday, Friday
	M	Month number without leading zero e.g. 1, 6, 12
	MM	Month number with leading zero e.g. 01, 06, 12
	MMM	Short month name e.g. Jan, Feb
	MMMM	Long month name e.g. January, February
	yy	Two digit year e.g. 22, 23
	yyyy	Four digit year e.g. 2022, 2023
	Single quotes can be used to escape text containing the above codes.	
	Examples:	
	hh:mm:ss A	01:30:59 PM
	ddd HH:mm:ss	Wed 13:30:59
	ddd dd MM yyyy	Wed 15 Jun 2022
	'Today is' dddd	Today is Wednesday

Unit-Specific Widgets

There are different versions of the unit-specific widgets which change the list of available functions for different unit types.

Button

Radius	The radius of the rectangle corners when the Off or On images are set to Basic. A value of 0 means square corners.
Text	A text label for the button. The text is scaled to always fit within the button.
Font	The font of the text label. Use to  import a custom font file in .ttf or .otf format.
Off Colour	When the Off Image is Basic this is the colour of the rectangle. When the Off Image is recolourable, the highlight colour is modified to be as close to this colour as possible.
Off Image	The image shown when the button is off.
On Colour	When the On Image is Basic this is the colour of the rectangle. When the On Image is recolourable, the highlight colour is modified to be as close to this colour as possible.
On Image	The image shown when the button is on.
Press/Hold Time	This indicates how long (in milliseconds) the button should be held before it activates. A time of 0 means that the button will activate when released. A time of 1 means that the button will activate as soon as it is pressed.
Function	Depending on the function, various other properties will appear to control the button function.

❗ AHM button GPO Toggle function in CC App will overwrite the GPO function assigned in AHM System Manager to the Static State function.

Rotary

Overlay Colour	The rotary will be overlaid with this colour when the rotary is pressed.
Text	A text label under the rotary. The size scales with the rotary size.
Font	The font of the text label. Use to  import a custom font file in .ttf or .otf format.
Text Colour	The colour of the text label.
Knob Colour	When the Knob Image is recolourable, the highlight colour is modified to be as close to this colour as possible.
Knob Image	The rotating part of the rotary.
Background Image	The image shown as the background to the rotary.
Control Type	Depending on the type, various other properties will appear to control the rotary function.

Fader

Overlay Colour	The fader will be overlaid with this colour when the fader is pressed.
Text	A text label under the fader. The size scales with the fader size.
Font	The font of the text label. Use to  import a custom font file in .ttf or .otf format.
Text Colour	The colour of the text label
Knob Colour	When the Knob Image is recolourable, the highlight colour is modified to be as close to this colour as possible.
Knob Image	The fader knob.
Background Image	The image shown as the background to the fader.
Show Scale	Show the dB scale next to the fader.
Orientation	Vertical or Horizontal
Audio Taper	Choose between On for logarithmic control or Off for linear control with min/max values.

LED

Radius	The radius of the rectangle corners when the images are set to Basic. A value of 0 means square corners.
Text	A text label for the LED. The text is scaled to always fit within the LED.
Font	The font of the text label. Use to  import a custom font file in .ttf or .otf format.
Off Colour	When the Off Image is recolourable, the highlight colour is modified to be as close to this colour as possible. When the Off image is Basic this is the colour of the rectangle.
Off Image	The image shown when the LED is off.
On Colour	When the On Image is recolourable, the highlight colour is modified to be as close to this colour as possible. When the On image is Basic this is the colour of the rectangle.
On Image	The image shown when the LED is on.
Function	Depending on the function, various other properties will appear to control the LED function.

Meter & GR Meter

Radius	The radius of the rectangle corners when the image is set to Default. A value of 0 means square corners.
Text	A text label under the meter. The size scales with the meter size.
Font	The font of the text label. Use to  import a custom font file in .ttf or .otf format.
Text Colour	The colour of the text label.
Image	The background image of the meter. A dark, partially transparent overlay is drawn on top of this to indicate the meter level. The overlay will respect transparent parts of the image.
Show Scale	Shows the dB scale next to the meter.
Orientation	Vertical or Horizontal

Chromatic Meter

The Chromatic Meter changes colour depending on the dB level.

Radius	The radius of the rectangle corners when the image is set to Basic. A value of zero means square corners.
Text	A text label under the meter. The size scales with the meter size.
Font	The font of the text label. Use to  import a custom font file in .ttf or .otf format.
Text Colour	The colour of the text label
LED Image	The image must be recolourable so that it can show the different levels.

The next properties determine the colour assigned to specific dB values from high to low. The colour of the meter at this dB value is specified by the colour property underneath. Intermediate dB values are represented by smoothly fading from one colour to the next. Here are the default values:

Upper Nominal Level	12
Colour Upp Nom	#d35400
Nominal Level	3
Colour Nom	#f1c40f
Lower Nominal Level	-20
Colour Low Nom	#2ecc71
Signal Present	-40
Colour Sig Pres	#16a085
Active 'Open Mic'	-50
Colour Active	#2471a3
Inactive	-78
Colour Inactive	#001326

Selector

Interface Type	Swipe Box – the source for the source selector can be changed by swiping and then pressing the Ok button. Combo Box – the source for the source selector can be change by opening the drop-down box and selecting the source.
Confirm Text	Available when Interface Type is Swipe Box. The text on the confirm button.
Font	The font used for text on the source selector. Use to  import a custom font file in .ttf or .otf format.
Scale Mode	Scale Text automatically adjusts the text size based on the size of the widget. Fixed Size allows a fixed font size to be specified.
Font Size	Specifies the size of the font.
Text Colour	The text colour

ConfirmButton Style	Available when Interface Type is Swipe Box. Simple – only the confirm text is drawn Contrast – a grey rectangle is drawn under the confirm text to provide contrast Hidden – confirm text is hidden
Arrow Style	Simple – only the arrows are drawn Contrast – a grey rectangle is drawn under the arrows to provide contrast Hidden – arrows are hidden The arrows are left/right when the Interface Type is Swipe Box and up/down when the Interface Type is Combo Box.
Arrow Alignment	Available when Interface Type is Combo Box. Put the up/down arrows on the left or right.
Background Image	Background image
Background Colour	Background colour when the default Background Image is used.
Border Colour Mode	Source Colour – use the colour of the source channel for the border. Custom – use a fixed border colour.
Border Colour	Available when Border Colour Mode is Custom. Sets a fixed border colour.
Item Colour	Item background colour when the default Item Image is used.
Item Image	Available with Interface Type is Combo Box. The background image of items in the combo box dropdown.
Radius	The radius of the background rectangle corners when the background image is the default background image. A value of 0 means square corners.
Selector Type	Depending on the Selector Type, various other properties will appear to control the Selector.

❗ With Playback selected as the Selector Type, the Tracklist Specifier can be used to make a specific list of tracks using comma separated track numbers ("1,2,3") or a range ("1-3"). Leave blank for all available tracks to be displayed in the Selector.


Dynamic Label

Example Text	A text field to be displayed in the Layout Editor only.
Font	The font of the text. Use to  import a custom font file in .ttf or .otf format.
Text Colour	The colour of the text.
Background Colour	The colour of a background rectangle under the text. The default is transparent.
Use Channel Colour	For Channel Name and Fader Level functions. On uses the channel colour used by the host for the border. Off uses the border colour property.
Border Colour	The colour of the border
Align	The horizontal alignment of the text within the widget.
Align Vertical	The vertical alignment of the text within the widget.

Radius	The radius of the corners on the background rectangle.
Margin	The margin between the text and the rectangle of the widget.
Wrap Mode	Visible when Scale Mode is set to Fixed Size. The behaviour of text that extends beyond the size of the widget. With No Wrap selected, the visible text depends on the size of the widget. With Word Wrap selected, the text is automatically formatted to fit in the widget by placing text on a new line.
Scale Mode	Scale Text automatically adjusts the text size based on the size of the widget. Fixed Size allows a fixed font size to be specified.
Font Size	Specifies the size of the font.
Border Size	Specifies the size of the border line. Only affects text if the border is visible.
Function	Depending on the function, various other properties will appear to control the button function.

Panel LED Ctrl

The Panel LED represents the physical LED on CC-7 and CC-10 touch panels. This widget is to link to the CC-7 and CC-10 LED and is not shown on the Custom Control App screen. You may only have a single Panel LED Ctrl widget per Layout. Drag the widget into the layout but off the canvas area.

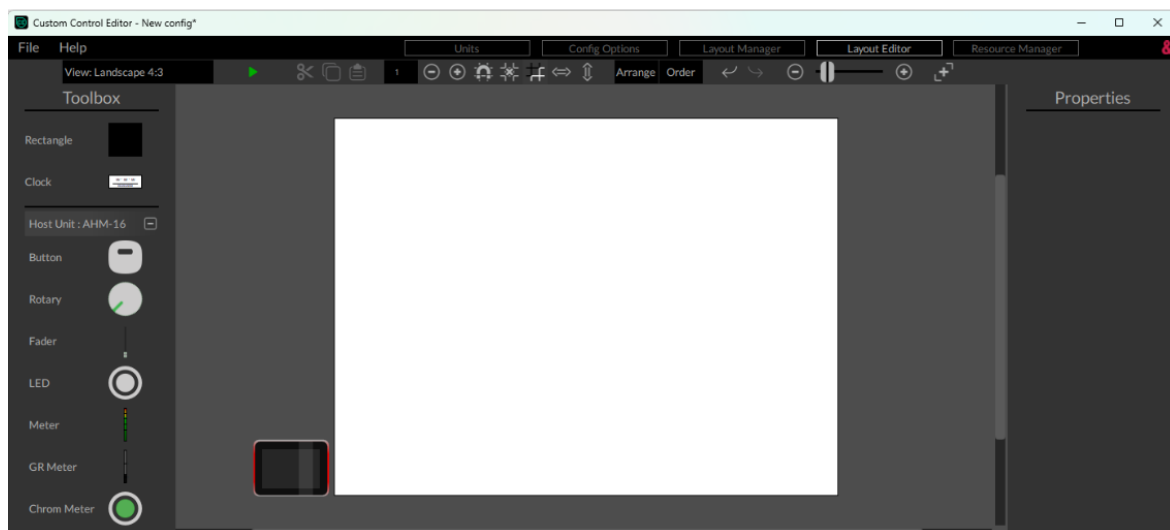

On Colour	The colour when on
Off Colour	Available when Mode is Mixer Controlled The colour when off
Mode	Always on Mixer Controlled – enables the LED to be controlled by various mixer functions
Function	Available when Mode is Mixer Controller Depending on the function, various other properties will appear to control the LED.

Rooms

Rooms in the Room Combiner are a visual representation of the floor plan of the building, multifunction room or space that requires the audio to be combined or divided. The room is configured in AHM System Manager and can be displayed in Custom Control. Rooms can be controlled using buttons, rotaries and faders.

Room Labels	Turns Room Labels On / Off
Zone Labels	Turns Zone Labels On / Off


Combiners	Show Combiner buttons, allows rooms to be combined.
Combiner Size	Set the size of Combiner buttons.

PEQ (AHM Only)

PEQ Type	The type of PEQ.
Input / Zone Number	The channel number.
XOver Number	Available when Zone XOver PEQ Type is selected. The way number of the XOver. (e.g. XOver Number 2 relates to the second band in a 2 or more way XOver of the specified Zone)
Margin	The margin between the edge of the widget and the PEQ graph.
Line Width	The width of all lines in the PEQ.
Background Colour	The background colour of the PEQ widget.
Border Colour	The border colour of the PEQ widget.
Border Size	The size of the border.
Radius	The radius of the corners on the background rectangle.
Handle Size	The size of the handle to move a PEQ band.
Handle Rounding %	The shape of the handle. A value of 0 creates a square handle and a value of 100 creates a circular handle.
Show Handles	Show or hide the handles. With the handles hidden, the PEQ cannot be controlled from the PEQ widget.
Combined Mode	Show – Displays a combined EQ line based on the parameters of each band. Show Only – Displays the combined EQ line and hides the per band line. Hide – Displays the per band line without the combined EQ line.
Combined Line	The colour of the combined line.
Combined Fill	The colour of the space between the combined line and 0 amplitude. The default is transparent.
Show Scale	Show / hide the graph behind the PEQ.
Scale Colour	The colour of the graph behind the PEQ.
Show Labels	Show / hide the level and frequency labels around the PEQ graph.
Label Colour	The colour of the level and frequency labels.
Label Size	The size of the level and frequency labels.
Fully Bypassed Colour	The colour of the lines when the PEQ is bypassed.
Fully Bypassed Fill	The colour of the fill when the PEQ is bypassed.
Band Line	The colour of the per band line.
Band Fill	The colour of the space between the per band line and 0 amplitude.

Resource Manager

This screen shows thumbnails of resources that are stored in the Config and allows you to import and export resource packs. Resources may be either images or colour palettes.

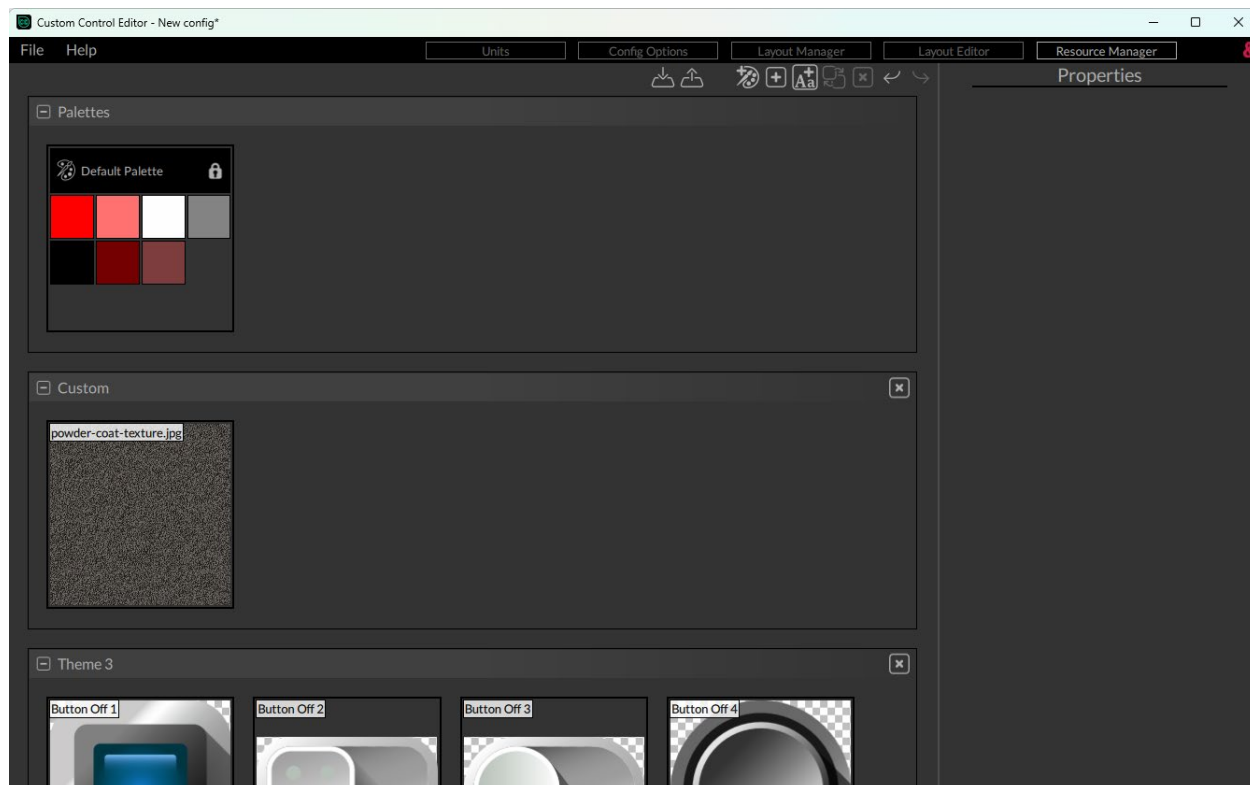

❗ Images will be included in the .xml file when uploaded to an AHM, dLive or Avantis, so be aware that having many large custom images will increase the time to download Layouts in the Custom Control App. The time to load a layout decreases after the initial load.

Resources are organised into Palettes, Custom files and imported Resource Packs. Click the resource group title to expand/contract the group. Press the X button on the group title to delete the whole group.

Resource Packs are sets of resources that can be imported from or exported to CC configs with the .rpc extension. Several resource packs are built into the editor.



Click the left Import button to open the Resource Pack Import page. Select one or more Built-in or User files and click Ok to import into the config. Unused resources from Resource Packs can be removed individually from the config in the Resource Manager.

Themes images from v1.2 and earlier are now stored as Resource Packs. To use those theme images, you must first import the relevant Theme resource pack. Configs saved in v1.2 and earlier and opened in v1.3 will automatically have any relevant Theme resource packs imported.

Resource Properties

Click on a resource thumbnail to select it. Its properties are shown in the Properties pane.

Palettes

Name	Name of the palette. Editable, except for default palette.
Type	Colour Palette
Number Of Colours	Number of colours in this palette

Image

Name	Name of the image. This appears in the Image Picker on the Layout Editor screen.
Type	Image type (e.g. jpg, png)
Tags	An editable list of tags that can be used to filter images in the Image Picker on the Layout Editor screen. Each tag should be on a new line
Source size	The dimensions of the image
Size in config	The amount of space this image uses in the config
Recolourable	Yes if this image has a single highlight colour that can be recoloured.
Layouts	A list of the layouts that use this image

Font

Name	Name of the font (Editable). This appears in the Font Picker on the Layout Editor screen.
Type	Font
Layouts	A list of the layouts that use this font.

Resource Toolbar



Open the import resource pack window



Export all Config resources as a resource pack



Add a new empty palette



Add new image. Images can be .jpg, .png or .svg format. All new images will be added to the 'Custom' resource group.



Add a custom font file in .ttf or .otf format. All custom fonts will be added to the font list.



Change the selected image. This will change the image in any Layouts in which it is used.



Delete the selected image/palette



Undo and redo actions in the Resource Manager screen.

Keyboard / mouse shortcuts

All screens

Action	Windows	Mac
New Config	Ctrl + n	⌘ + n
Open Config	Ctrl + o	⌘ + o
Save	Ctrl + s	⌘ + s
Save As	Ctrl + shift + s	⌘ + Shift + s
Undo	Ctrl + z	⌘ + z
Redo	Ctrl + y	⌘ + Shift + z
Exit	Alt + F4	⌘ + q
Switch to Units	Ctrl + m	⌘ + m
Switch to Layout Manager	Ctrl + ,	⌘ + ,
Switch to Layout Editor	Ctrl + .	⌘ + .
Switch to Resource Manager	Ctrl + /	⌘ + /

Layout Manager

Action	Windows	Mac
Delete Layout	Delete or ←	←

Layout Editor

Action	Windows	Mac
Pan	Space + mouse drag Mouse wheel to scroll vertically Alt + Mouse wheel to scroll horizontally	Space + mouse drag or use two finger drag on trackpad
Zoom	Ctrl + Mouse wheel	
Cut	Ctrl + x	⌘ + x
Copy	Ctrl + c	⌘ + c
Paste	Ctrl + v	⌘ + v
Delete widget	Delete or ←	←
Add/Remove from selection	Shift + click	Shift + click
Add/Remove from selection	Ctrl + click	⌘ + click
Group selected widgets	Ctrl + g	⌘ + g
Ungroup selected widgets	Ctrl + Shift + g	⌘ + Shift + g
Selection rectangle	Mouse drag or Ctrl + mouse drag if starting the drag over a widget	Mouse drag or ⌘ + mouse drag if starting the drag over a widget
Move widget	Arrow keys	Arrow keys
Select next widget	Tab Ctrl + Tab (when a property is selected)	Tab Alt + Tab (when a property is selected)
Select previous widget	Shift + Tab Ctrl + Shift + Tab (when a property is selected)	Shift + Tab Alt + Shift + Tab (when a property is selected)
Select all widgets	Ctrl + a	⌘ + a
Select next property	Tab (when a property is selected)	Tab (when a property is selected)
Select previous property	Shift + Tab (when a property is selected)	Shift + Tab (when a property is selected)
Resize, maintaining aspect ratio	Hold Shift while dragging corner drag handle	Hold Shift while dragging corner drag handle

Resource Manager

Action	Windows	Mac
Move selection	Arrow keys	Arrow keys
Delete image	Delete or ←	←

Kiosk mode

The Custom Control app can be set to Kiosk mode to lock down the device so that only the Custom Control app can be used. Once Kiosk mode is enabled, the status bar will be hidden.

iOS

Kiosk mode on iOS will disable the slide out menu.

There are two methods to enable Kiosk mode on iOS devices:

- Enable and enter Guided Access mode:
Go to Settings -> General -> Accessibility -> Guided Access and set up the Guided Access options.
Start the app and triple click the home button (or side button for iPhone X) to enter Guided Access mode. Triple click the home button again to exit Guided Access mode.
- Use Apple Configurator on a Mac:
Use Apple Configurator 2 on a Mac to enable Single Device mode with the Custom Control app selected as the single app (Single Device mode requires iOS 9+).
The Configurator is required to turn off Single Device mode again.

Android

Kiosk mode is only available via a special version of the Custom Control app available for download at www.allenheath.com

❗ Kiosk mode can only be enabled on unprovisioned Android devices i.e. devices with no accounts. The app must be set as the device owner and to remove its device owner status the device must be factory reset. The app cannot be uninstalled while set as the device owner.

To enable Kiosk Mode on Android devices:

- Remove all accounts from the device.
- Use the adb command available with Android studio to set the app as the device owner:

```
adb shell dpm set-device-owner com.allenheath.customcontroller.androidrunner/.AdminReceiver
```

- Start the app, open the slide out menu and select the Kiosk Mode option.
- You will be required to enter a password that will be used when exiting Kiosk Mode.
- Once in Kiosk mode, the Unlock option in the slide out menu can be used to exit Kiosk Mode.

Windows/Mac

Kiosk Mode can only be enabled or disabled by starting the app from the command line. The app will be full screen and the menus will be hidden. The keyboard is still active so, for example, ⌘-Q on Macs will quit the app. To lock down the app completely, keyboard access should be restricted.

The app will retain the Kiosk Mode setting between runs.

The app must be started with the command line option `KioskMode` or `NoKioskMode` to enter or exit Kiosk Mode.