

EVCS-ACR

Connection Guide

1 Overview

The EVCS-ACR Toilet/Bedroom Repeater is compatible with the Honeywell range of products; it provides repeat indication of Toilet/Bedroom activations and acknowledgement function. The repeater is intended for desk mounting or wall mounting in receptions or similar.

The EVCS-ACR is connected to the Honeywell panel using either 1×4-Core or 2×2-Core FP200 cable up to a maximum length of 100m. It can be connected to either a EVCS-EX8 System Expander Panel, or a EVCS-TMS3 Touchscreen Master Panel via the supplied connection board.

2 Connections

2.1 Mounting the Connector Board

Each EVCS-ACR is supplied with a small connector board containing a Cat5 header and a 4-way green connector. This connector board is mounted in the panel, below the power supply unit (as shown in Figure 1).

To mount the connector board, first loosen the two lower screws on holding the power supply into the backbox. The connector board can then be slid underneath these screws and held in place whilst they are tightened back down.

DO NOT connect the connector board to the port labelled “Display” on the Exchange PCB, this is for the EX8 or TMS display only. Connecting this port can cause a failure of the Exchange PCB, connector board or the ACR unit, and will void the warranty .

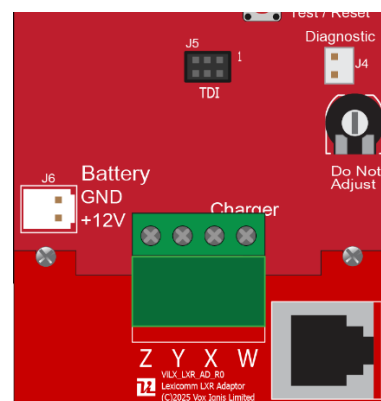


Figure 1 - Connector Board Mounting Location

2.2 Connecting to the ACR

The connection from the connector board to the ACR is made using FP200 fire rated cable, either 1×4-Core or 2×2-Core. This connection can be up to 100m in length. The cabling should be Earthed to the connector block inside the panel, and into the backbox (if applicable) on the ACR side.

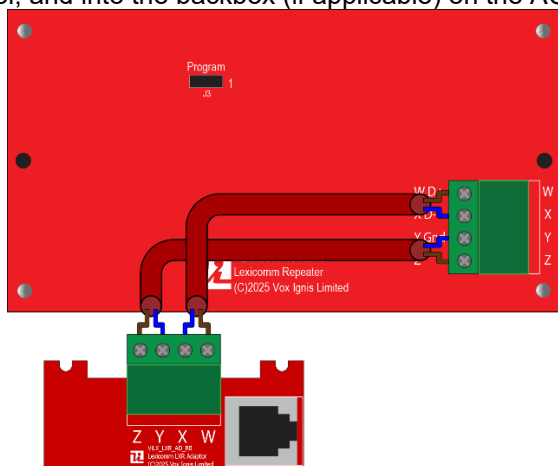


Figure 2 - Connection to ACR using 2-Core

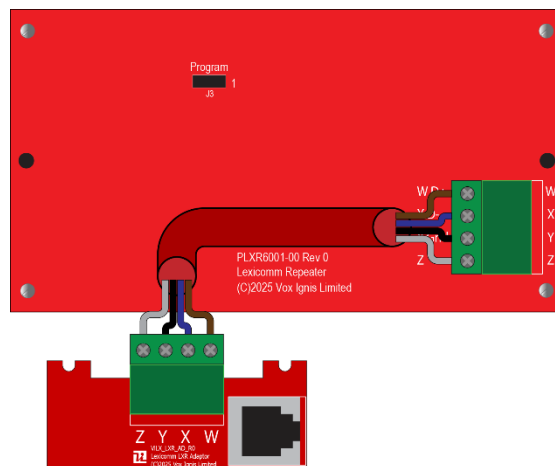


Figure 3 - Connection to ACR using 4-Core

2.3 Connection to EVCS-EX8

The EVCS-EX8 display PCB, shown in Figure 3, can be identified by the lamp test button. To connect an ACR to this panel you require a EVCS-EX8-AB Adaptor Board, which is shown fitted in Figure 3.

The ACR connection board can be connected to the port labelled **To EVCS-Commander or EVCS-ACR**, as indicated in Figure 3 using the supplied Cat5 cable.

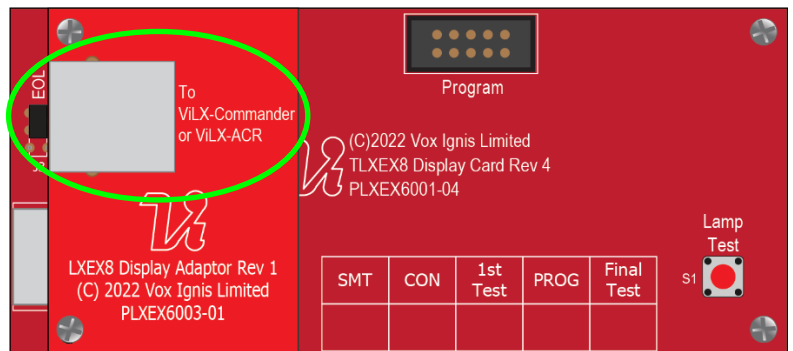


Figure 4 - EVCS-EX8 with Adaptor Fitted

2.4 Connection to EVCS-TMS3 or EVCS-ACM3

The EVCS-ACR can be fitted to EVCS-TMS3 panels that have been fitted with the EVCS-TMS3-AB Adaptor Board.

Connection to the ACR connection board is through the RJ45 labelled **ACR Port** using the supplied Cat5 cable.

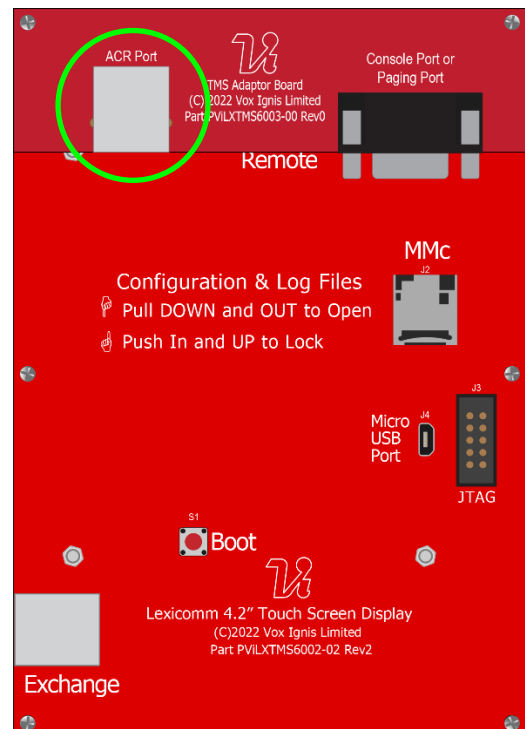


Figure 5 - EVCS-TMS3 with Adaptor Fitted

Honeywell



WEEE
Compliant
Product