



NZMPTA AutoRep

Tester Work Instructions

Running, signing off and syncing machine tests in the AutoRep app

Document	AUTOREP-WI-01
Version	1.1 (draft for review)
Date	23 September 2026
Applies to	AutoRep tester app (September 2026)
Prepared by	Pedersen Group for NZMPTA

Contents

1 About AutoRep	4
2 Getting started.....	4
2.1 Opening the app and installing it on your device.....	4
2.2 Signing in for the first time	4
2.3 Forgotten password.....	6
2.4 Your tester licence in the app.....	6
2.5 Account settings, password and two-factor security	8
3 The Home screen	10
4 Your equipment calibration dates.....	10
5 Starting a new test	12
5.1 Choosing the farm	12
5.2 Farm not listed? Add it in the field	12
6 The test wizard	14
6.1 How the wizard behaves.....	14
6.2 Pick the layout that suits how you work	15
7 The steps, in order	19
7.1 Step 1 — Farm & Your Details	19
7.2 Step 2 — Machine Configuration & Ancillary	19
7.3 Steps 3 & 4 — Visual faults (Pre-Start, then Running).....	21
7.4 Step 5 — Vacuum Tests (ISO 1–9)	23
7.5 Step 6 — Airflow Tests (ISO 10–12).....	24
7.6 If 12b fails — Individual Cluster Tests (ISO 13).....	25
7.7 Step 7 — Pulsation & Ancillary (ISO 14–15)	25
7.8 Step 8 — Additional Tests	26
7.9 Step 9 — Fault Summary & Recommendations.....	26
7.10 Step 10 — Review & Sign-Off.....	27
8 The Test Summary report (PDF).....	30
9 Correcting a completed test — versions.....	30
10 My tests	33
11 Company tests.....	34
12 Working offline, and how sync behaves	36
12.1 What works offline.....	36
12.2 What needs a connection	36
12.3 Syncing.....	37
13 Troubleshooting.....	41

14 Quick reference	41
--------------------------	----

If the contents list appears empty or out of date, right-click it in Word and choose "Update field".

1 About AutoRep

AutoRep is the NZMPTA app for machine testing of milking plants. You run the whole test from a tablet or laptop in the shed: the app walks you through every step of the NZMPTA / ISO 6690 test sequence, checks each reading against the current test standards as you type it, carries every fault through to a recommendations summary, and generates the signed-off Test Summary report as a PDF on the spot.

AutoRep is built to work **offline**. Everything you enter is saved on your device immediately, and is sent to the NZMPTA server whenever you have a connection ("syncing"). You can run a full test in a shed with no coverage and sync it from home later.

Words used in this guide

Term	Meaning
Sync	Sending your saved tests up to the NZMPTA server, and pulling your own tests back down to the device you are using.
Complete / sign-off	The final wizard step where you attest the test, lock it, and generate the report.
Version	Editing a completed test creates a new version of it; the original is kept read-only for the audit trail.
Test standards	The pass/fail limits maintained by NZMPTA. They update themselves on your device — you are told in-app when they change.

2 Getting started

2.1 Opening the app and installing it on your device

AutoRep runs in a web browser — there is nothing to download from an app store. Your administrator will give you the web address for the app. For day-to-day use in the shed, install it to your home screen so it opens full-screen like a normal app and keeps working offline:

- **iPad / iPhone (Safari):** open the app address, tap the Share button, then choose **Add to Home Screen**.
- **Android tablet / phone (Chrome):** open the app address, tap the : menu, then **Add to Home screen** (or "Install app").
- **Windows laptop (Chrome / Edge):** open the app address and click the install icon at the right-hand end of the address bar.

Note Install the app and open it once **while you have a connection** before relying on it in a shed with no coverage — the first visit is what stores the app on the device.

2.2 Signing in for the first time

Your account is created for you by NZMPTA. You will receive a welcome email with a link to set your own password. The link is valid for 1 hour — if it has expired, use **Forgot your password?** on the sign-in page to get a fresh one.

1. Open the link in your welcome email and choose a password. Passwords need 12 or more characters, including an upper-case letter, a lower-case letter and a digit.
2. Sign in with your **email address** and new password. Tick **Keep me signed in on this device** on your own tablet so you stay signed in between visits — leave it unticked on anyone else's device.
3. The first time you sign in you are shown the **Terms of Use**. Tick *"I have read and accept the Terms of Use"* and press **Accept & continue**, then sign in again.

The image shows a sign-in page for MPNZ AutoRep. The page has a solid blue background. In the center is a white rounded rectangle containing the MPNZ logo at the top, which includes the text 'MPNZ' and 'Milking & Pumping since 1932'. Below the logo is the heading 'Sign in to AutoRep'. There are two input fields: 'Email' and 'Password'. Below the password field is a checkbox labeled 'Keep me signed in on this device'. At the bottom of the white box is a blue 'Sign in' button and a link that says 'Forgot your password?'.

MPNZ
Milking & Pumping since 1932

Sign in to AutoRep

Email

Password

☐ Keep me signed in on this device

Sign in

[Forgot your password?](#)

Figure 1. The sign-in page.

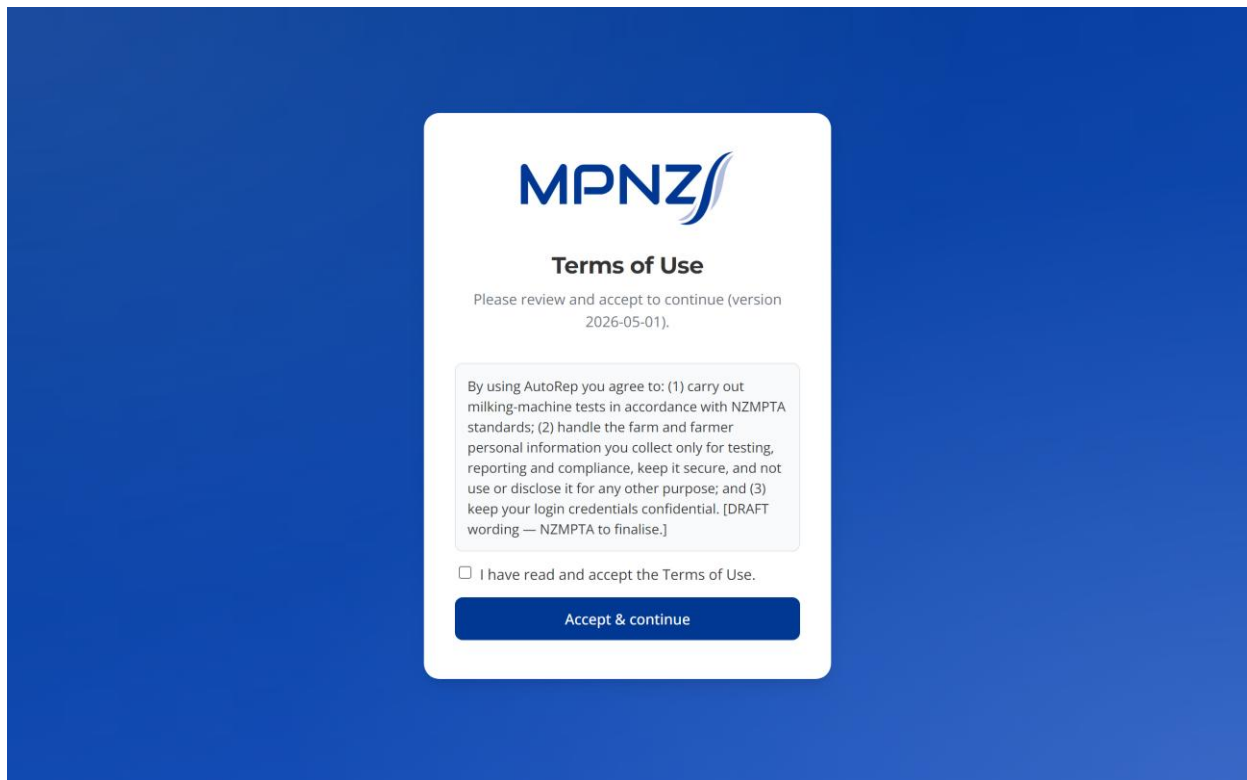


Figure 2. First sign-in — accept the Terms of Use, then sign in again.

Note You will be asked to re-accept the terms again whenever NZMPTA updates them, and after your licence is renewed.

2.3 Forgotten password

1. On the sign-in page choose **Forgot your password?**, enter your email address and submit. The page always says "Check your email" — the email only arrives if the address matches an active account.
2. Open the link in the email (valid for 1 hour) and set a new password.

Important A reset email is **not** sent if your tester licence has expired — contact NZMPTA about your licence first.

2.4 Your tester licence in the app

Your NZMPTA licence expiry date is recorded against your account. The app reminds you ahead of time with a banner under the header — from about six months out as a plain reminder, and more urgently in the last 60 days:

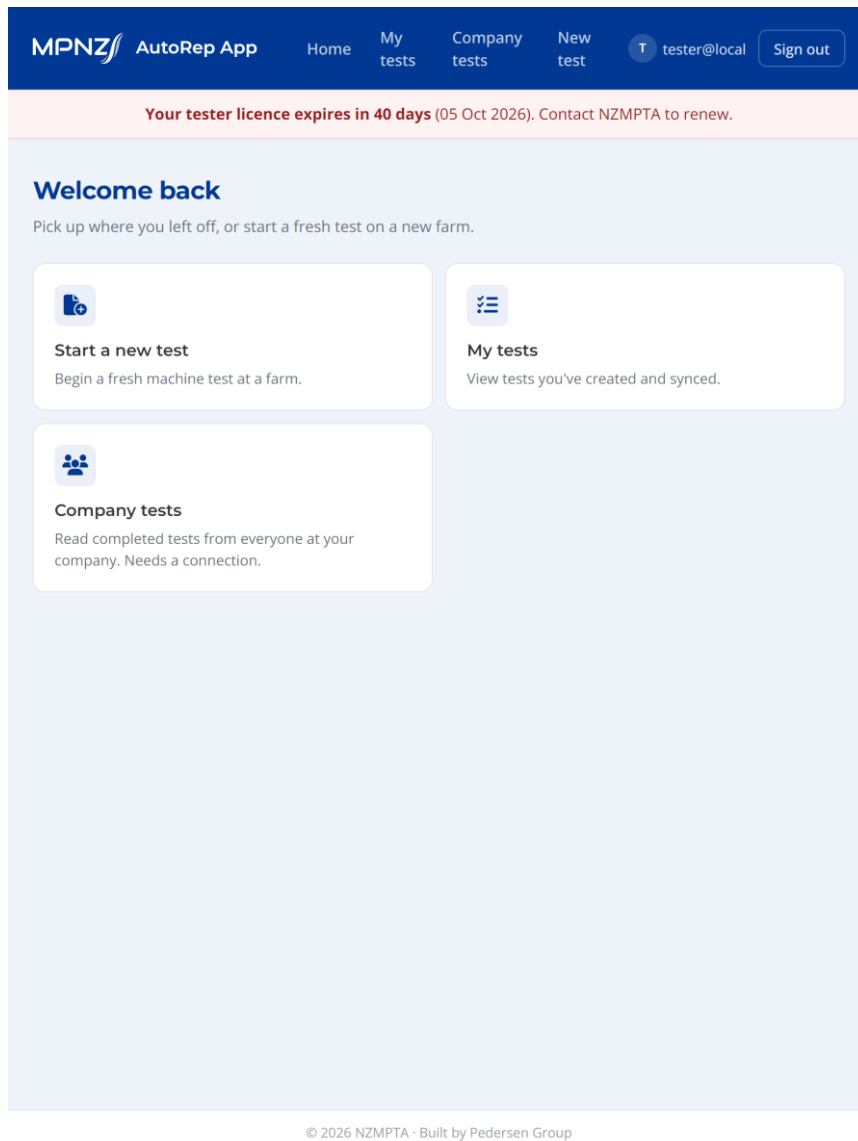


Figure 3. The licence banner during the last 60 days before expiry.

If your licence expires, you can no longer start or edit tests. Signing in takes you to a single page whose only job is to let you **send any tests still saved on your device** to the server, so no work is lost while you sort your renewal with NZMPTA:

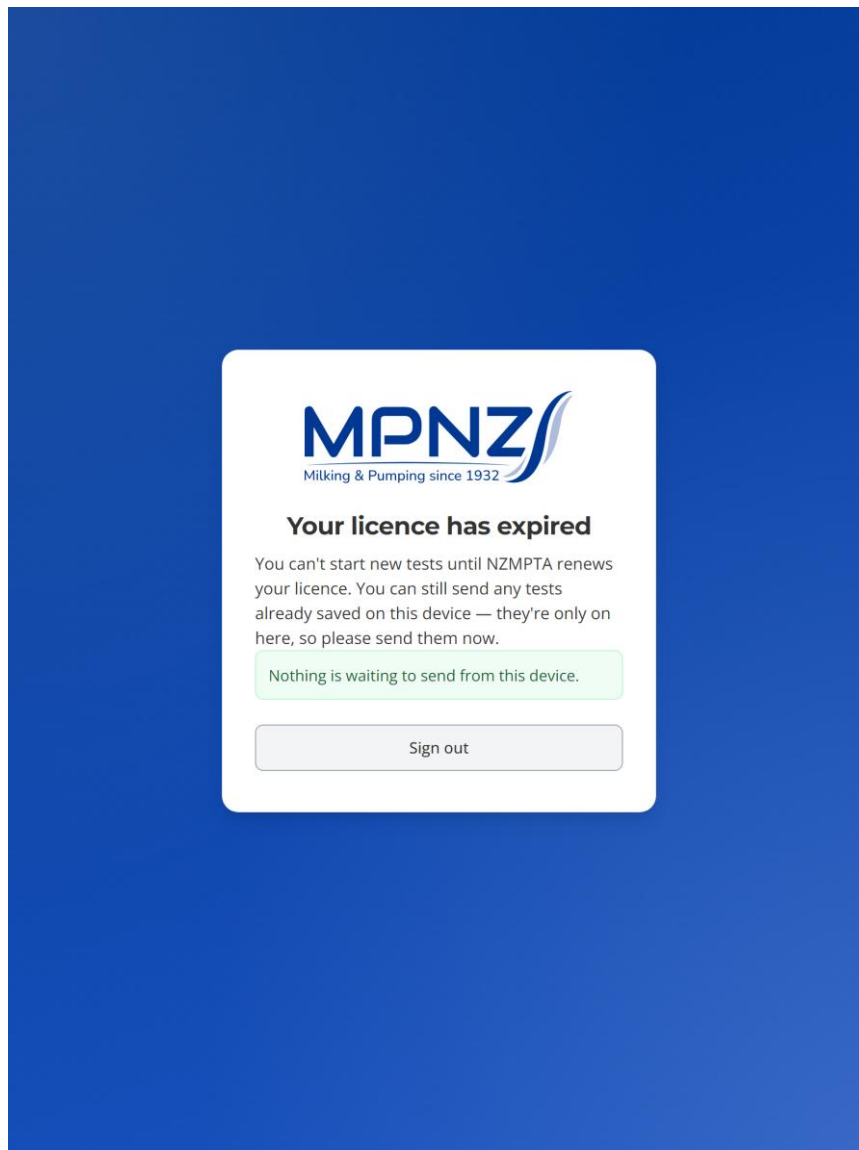


Figure 4. After licence expiry the app is send-only until NZMPTA renews your licence.

2.5 Account settings, password and two-factor security

Your name in the header links to **Account settings**, where you can send yourself a password-reset email and set up optional two-factor authentication with an authenticator app (Google Authenticator, Microsoft Authenticator or similar). If you enable two-factor, keep the recovery codes it gives you somewhere safe.

The screenshot shows the 'Account settings' page of the MPNZ AutoRep App. The header is dark blue with the MPNZ logo, 'AutoRep App', and navigation links 'Home', 'All tests', and 'Farms'. A user profile section shows a circular icon with the letter 'C', the email 'casey@waikatoplant.example.nz', and a 'Sign out' button. The main content area is light blue and contains two white rounded rectangular boxes. The first box is titled 'Two-factor authentication' and contains the text 'Add a second step to your sign-in with an authenticator app.' followed by a blue 'Set up two-factor' button. The second box is titled 'Password' and contains the text 'Send yourself a password-reset link.' followed by a 'Send reset email' button. At the bottom of the page, there is a small copyright notice: '© 2026 NZMPTA · Built by Pedersen Group'.

MPNZ AutoRep App Home All tests Farms C casey@waikatoplant.example.nz Sign out

Account settings

casey@waikatoplant.example.nz

Two-factor authentication

Add a second step to your sign-in with an authenticator app.

Set up two-factor

Password

Send yourself a password-reset link.

Send reset email


© 2026 NZMPTA · Built by Pedersen Group

Figure 5. Account settings — two-factor authentication and password reset.

Note Everything else about your account — your display name, certificate number, company and licence — is maintained by NZMPTA. Contact them if any of it is wrong.

3 The Home screen

After signing in you land on the Home screen. The header gives you **Home**, **My tests**, **Company tests** and **New test** from anywhere in the app.

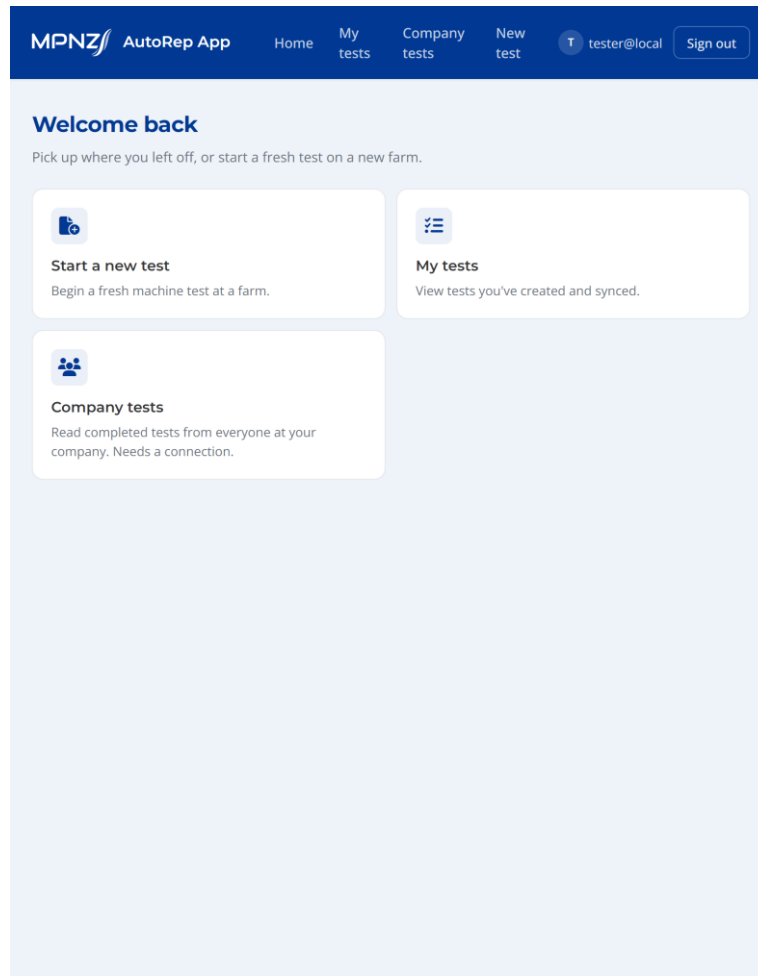

© 2026 NZMPTA · Built by Pedersen Group


Figure 6. Home — start a new test, or return to your saved tests.

Tile	What it does
Start a new test	Choose a farm (or add one) and begin a fresh machine test.
My tests	Every test you have created — in-progress and completed — saved on this device.
Company tests	Read-only access to completed tests from everyone at your testing company. Needs a connection.

4 Your equipment calibration dates

The expiry dates for your own instruments — **air-flow meters**, **pulsator testers** and **vacuum gauges** — belong to you, not to a farm. They are kept on your profile, shown at the top of **My tests** and on the first step of every test, and you can update them in either place whenever an instrument is recalibrated.

- Each date shows a chip with its status. It turns **amber six weeks** before expiry, and **red** once expired.
- An expired calibration **never blocks testing** — the app warns you clearly, but the decision and the follow-up are yours. Arrange recalibration as soon as you can.
- When you sign a test off, your calibration dates at that moment are **stamped into the test record** and printed on the report — so keep them current.

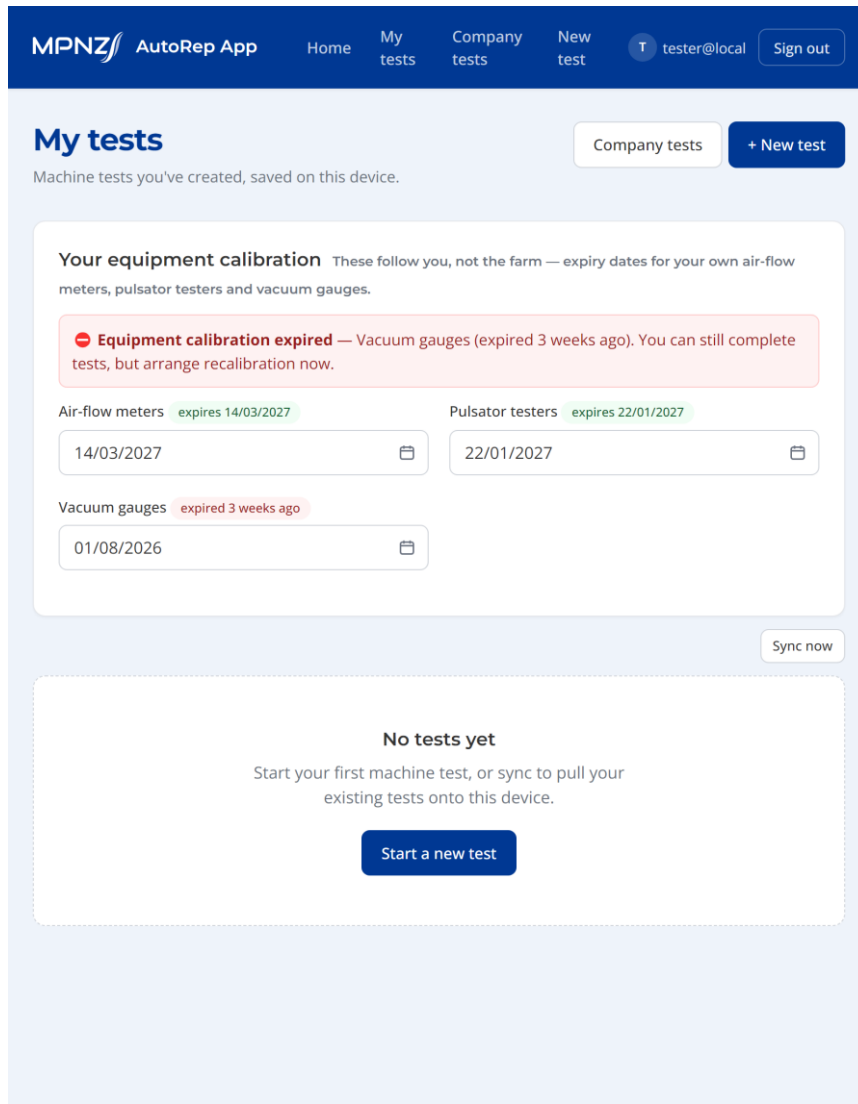


© 2026 NZMPTA · Built by Pedersen Group

Figure 7. My tests with an expired vacuum-gauge calibration — the alert shows, but testing is not blocked.

5 Starting a new test

5.1 Choosing the farm

1. Press **New test** (header) or **Start a new test** (Home).
2. Start typing the farm name in the **Farm** box and pick it from the list. The list shows farms your company has set up or has tested before. Picking a farm also shows its milk-company logo so you can confirm it is the right one.
3. Press **Start test**. The test wizard opens on step 1.

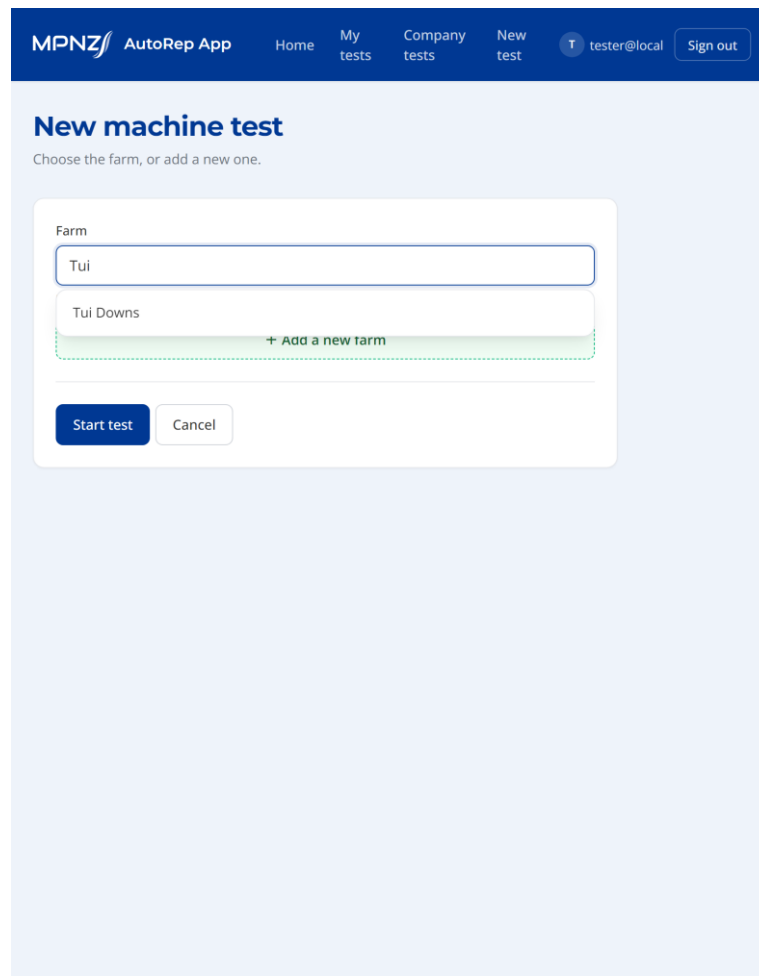

The screenshot shows the 'New machine test' page in the MPNZ AutoRep App. The page has a dark blue header with the MPNZ logo and 'AutoRep App' text. Navigation links include 'Home', 'My tests', 'Company tests', and 'New test'. A user profile 'tester@local' with a 'Sign out' button is also visible. The main content area is light blue and titled 'New machine test' with the instruction 'Choose the farm, or add a new one.' Below this is a white form box. Inside the form, there is a 'Farm' label above a search input field containing 'Tui'. A dropdown menu is open, showing 'Tui Downs' and a '+ Add a new farm' button. At the bottom of the form are 'Start test' and 'Cancel' buttons.

© 2026 NZMPTA - Built by Pedersen Group

Figure 8. Type-ahead farm search on the New machine test page.

5.2 Farm not listed? Add it in the field

You do not need to ring the office to set up a farm. Press **+ Add a new farm**, fill in what you know (only the farm name is required, but supply number, region and contact details make the report and the farm book much more useful), and press **Add farm**. The new farm is selected for you — carry straight on with the test.

Add a new farm

Farm name
Kowhai Flats

Supply number
58212

Milk supply company
Fonterra

Region
Waikato

Address line 1
97 Kowhai Road

Address line 2

Town / city
Matamata

Post code
3400

RAPID number

Farmer name
R Kereopa

Phone
07 888 6120

Email

ⓘ The farm and farmer contact details entered here are collected by your testing company and NZMPTA to perform and report this milking-machine test and for compliance records, and are stored securely in New Zealand. The farmer may request access to or correction of their information. Please make sure the farmer is aware of this. [DRAFT]

New farms are flagged for your Company Administrator to review — you can start testing straight away.

Add farm Cancel

© 2026 NZMPTA · Built by Pedersen Group

Figure 9. Adding a farm in the field. Only the name is required.

Note Farms you add are flagged for your Company Administrator to check and approve afterwards. That review does not hold you up — you can start testing straight away.

Note The farmer contact details you record are covered by the Privacy Act collection notice shown on this form — only collect what is needed for the test report.

6 The test wizard

6.1 How the wizard behaves

- **Everything saves instantly to your device** — there is no Save button anywhere in the wizard. You can press **Exit** at any time and pick the test up later from **My tests**.
- The badge under the farm name shows **Online** or **Offline** — **saved on device**. Working offline changes nothing about how you test.
- The steps adapt to the machine: what you declare on step 2 (Machine Configuration) decides which sections appear in the later steps, so you are never asked about equipment the shed does not have.
- If the shed has no ISO test ports, unticking **ISO test ports available** on step 2 switches the wizard to a **short test** — only the essential tests are required, and a banner reminds you why.

The screenshot shows the MPNZ AutoRep App interface. At the top is a navigation bar with links for Home, My tests, Company tests, and New test, along with a user profile for 'tester@local' and a Sign out button. The main header displays 'Tui Downs' with an 'Online' status badge and an 'Exit' button. A vertical sidebar on the left lists 10 numbered steps: 1. Farm & Your Details, 2. Machine Configuration & Ancillary (current step), 3. Visual Faults — Pre-Start, 4. Visual Faults — Running, 5. Vacuum Tests (ISO 1-9), 6. Airflow Tests (ISO 10-12), 7. Pulsation & Ancillary (ISO 14-15), 8. Additional Tests, 9. Fault Summary & Recommendations, and 10. Review & Sign-Off. The main content area for Step 2 is divided into two sections. The 'Farm & details' section contains a form with fields for Farm (Tui Downs), Supply number (71234), Milk supply company, Region, Address (Morrinsville), RAPID number, Farmer (Sam Walker), Phone, and Email. Below this is a note: 'Farm details are managed in the admin area.' The 'Your equipment calibration' section includes a note: 'These follow you, not the farm — expiry dates for your own air-flow meters, pulsator testers and vacuum gauges.' It features two rows of date pickers: 'Air-flow meters' with an expiry date of 14/03/2027, and 'Pulsator testers' with an expiry date of 02/02/2027. A 'Next >' button is located at the bottom right of the main content area.

© 2026 NZMPTA · Built by Pedersen Group

Figure 10. The wizard in the default Step rail layout — numbered steps at the left, one panel at a time.

6.2 Pick the layout that suits how you work

The cog beside **Exit** opens the **Workflow layout** menu. All three layouts are the same test with the same steps — switching layout mid-test never touches your entries. The choice is per-tester and per-device, so set up each device the way you like it.

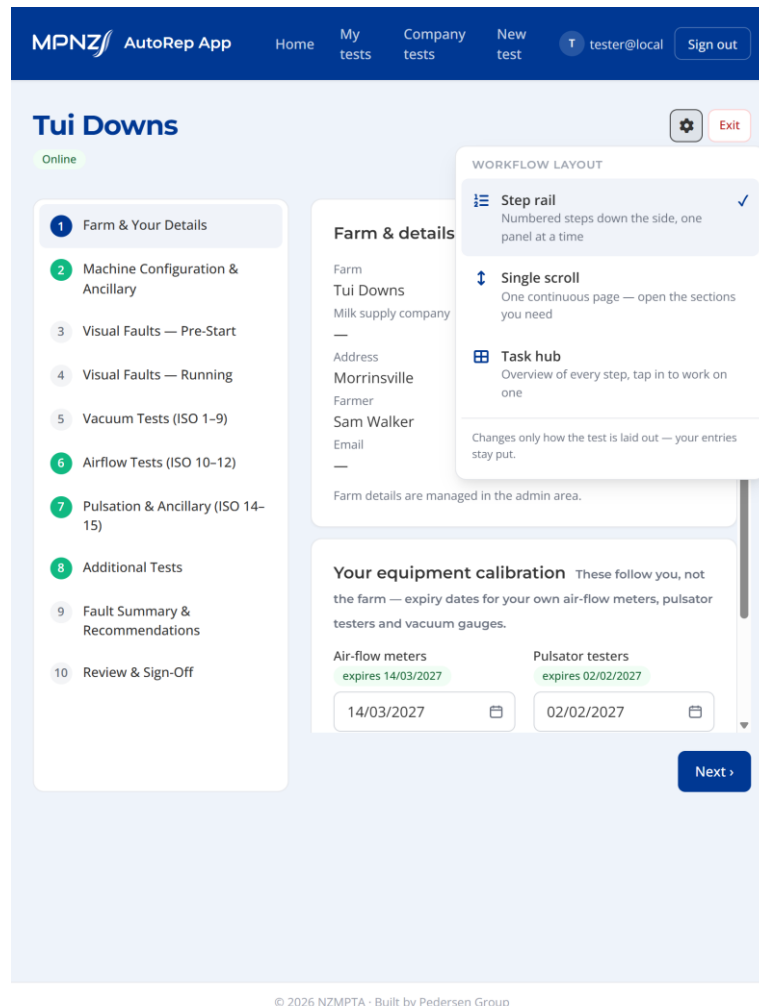


Figure 11. The layout cog — switch between Step rail, Single scroll and Task hub at any time.

Layout	Best for
Step rail (default)	Working through the test in order, one step at a time.
Single scroll	One long page with every step as a collapsible block — good for scanning the whole test and jumping around. A sticky bar tracks overall % complete, and the footer always names the next unfinished step.
Task hub	A card overview of every step with progress rings and fault counts — tap a card to focus on that step. Good on a tablet when several people call you back and forth across the shed.

MPNZ AutoRep App Home My tests Company tests New test tester@local Sign out

Tui Downs
Machine test · one continuous record

1 Farm 2 Machine 3 Pre-start 4 Running 5 Vacuum 6 Airflow 7 Pulsation

Farm & Your Details Complete

Farm record, contacts, calibration dates

Farm & details

Farm	Supply number
Tui Downs	71234
Milk supply company	Region
—	—
Address	RAPID number
Morrinsville	—
Farmer	Phone
Sam Walker	—
Email	—
—	—

Farm details are managed in the admin area.

Your equipment calibration These follow you, not the farm — expiry dates for your own air-flow meters, pulsator testers and vacuum gauges.

Air-flow meters expires 14/03/2027

14/03/2027

Pulsator testers expires 02/02/2027

02/02/2027

Vacuum gauges expires 20/11/2026

20/11/2026

Machine Configuration & Ancillary Complete

Declare what's fitted — later steps adapt

3 Visual Faults — Pre-Start Not started

Machine off - vacuum pumps, releaser

4 Visual Faults — Running 1 fault 1% entered

Machine running - airline to jetties

5 Vacuum Tests (ISO 1-9) 97% entered

ISO 1-9 - vacuum, reserve, gauges, pump

Airflow Tests (ISO 10-12) Complete

ISO 10-12 - leakage, ACIs, cluster air admission

Pulsation & Ancillary (ISO 14-15) 1 fault Complete

ISO 14-15 - air consumption, test pulsation, faulty pulsators

Additional Tests 1 fault Complete

This machine's ancillaries - meters, sprayer, gates, releaser

9 Fault Summary & Recommendations Not started

Add a recommendation for every fault

10 Review & Sign-Off Not started

Attest, complete, and generate the report

0 critical 3 major 0 minor Go there

© 2026 NZMPTA · Built by Pedersen Group

Figure 12. Single scroll — every step on one page, with live progress.

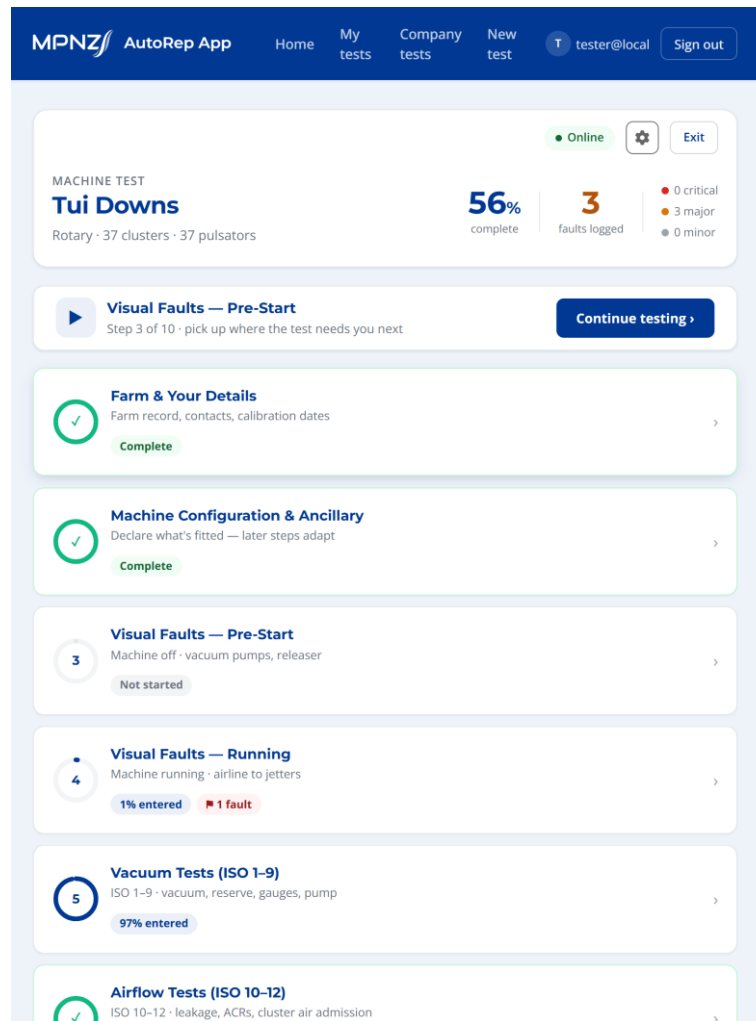


Figure 13. Task hub — the whole test at a glance.

MPNZ

AutoRep App

Home

My tests

Company tests

New test

T tester@local

Sign out

Overview

Tui Downs

Vacuum Tests (ISO 1-9) · Step 5 of 10

Vacuum tests

ISO 1-9. Enter readings — pass/fail is live against the standard for this machine.

1 · System vacuum

1 · Min pump-speed vacuum

2 · Reserve

3 · Regulation

4 · Airline drop

5

Working vacuum @ receiver (1a)

max 50 — guideline 40-50 by lift height

44

kPa

PASS

Nominal vacuum (1b)

44.5

kPa

—

Vacuum regulation deviation (1c)

CALCULATED

-0.5

kPa

PASS

$\approx 1a - 1b \pm 2 \text{ kPa}$

Vacuum @ regulator (1d)

44.3

kPa

—

Vacuum @ pump (1e)

45.2

kPa

—

Previous

Next: Airflow Tests

© 2026 NZMPTA · Built by Pedersen Group

Figure 14. Task hub focus view — working inside one step, with jump dots and Previous / Next.

7 The steps, in order

The steps follow the NZMPTA ISO flowchart: vacuum tests, then airflow, then pulsation, then the additional tests. Most tests have ten steps. **Individual Cluster Tests** (ISO 13) only appears when cluster air admission (12b) fails. It then sits straight after Airflow Tests, and the steps after it move down one number, so go by the step name rather than the number.

7.1 Step 1 — Farm & Your Details

Check you are on the right farm — the farm card shows the details as recorded in the farm book (they are managed in the admin area; tell your Company Administrator if something is wrong). Below it, confirm your three equipment calibration dates are current (section 4).

7.2 Step 2 — Machine Configuration & Ancillary

Declare what is fitted in this shed across the four tabs — **Plant, Pulsation, Cluster & liners** and **Ancillary equipment**. Be accurate here: cluster and pulsator counts drive the standards the readings are checked against, and the ancillary toggles decide which extra test sections appear later.

On the **Plant** tab, enter a row for each vacuum pump: make, model, motor size (kW), regulator type, and whether it drives the milk pump. The number of rows follows the pump count. Ticking **Releaser pump** on the Ancillary tab adds rows for the releaser pump make, model and motor size; use **+ Add releaser pump** for more than one.

MPNZ AutoRep App

HomeMy testsCompany testsNew test

T tester@localSign out

Tui Downs

Online

1 Farm & Your Details

2 Machine Configuration & Ancillary

3 Visual Faults — Pre-Start

4 Visual Faults — Running

5 Vacuum Tests (ISO 1–9)

6 Airflow Tests (ISO 10–12)

7 Pulsation & Ancillary (ISO 14–15)

8 Additional Tests

9 Fault Summary & Recommendations

10 Review & Sign-Off

Milkline size (mm)
100

Atmospheric pressure (kPa)
100 kPa

Last BMCC
145000

No. of vacuum pumps
1

Pump lubrication
Oil lubricated

Vacuum pump details
One row per pump, following the pump count above.

Vacuum pump

Make
De Laval

Model
DVP1600

Motor size (kW)
7.5

Regulator type
DeLaval servo

☐ Drives the milk pump

< Back

Next >

© 2026 NZMPTA · Built by Pedersen Group

Figure 15. Machine Configuration — the Plant tab, with a row for each vacuum pump.

© 2026 NZMPTA · Built by Pedersen Group

Figure 16. The Ancillary equipment toggles decide which sections appear in Additional Tests.

Tip Dropdowns like pulsator model, shells and liners come from the NZMPTA equipment catalogues, and you can also type a value that is not listed.

7.3 Steps 3 & 4 — Visual faults (Pre-Start, then Running)

Two visual walk-arounds: first with the machine off (vacuum pumps, releasers), then with it running (from the bail area right through to the cleaning jetters). Each section is a tab; each item gets **OK** or **Fault**. Items you leave blank are treated as not present on this machine.

Some items are a choice from a list, for example cluster position (Side / Back) and pulse-tube type (Single / Twin / Triple / Quad). Claw, shell and liner types are not asked again here; they come from Machine Configuration.

1. Work through each item and press **OK** — or, once you have genuinely inspected everything in a section, use **✓ Check all as verified** and confirm the attestation. That records a per-section attestation on the test.

- For anything wrong, press **Fault**: pick the standard fault wording (or type your own), set the severity (**Critical / Major / Minor** — the standard faults pre-fill their CMM severity), and add a note if useful.
- On the Running step, also confirm **Guards installed on pulsators**.

The screenshot displays the MPNZ Tui Dow software interface. A modal dialog box is centered on the screen with the title "Confirm: check all as verified". The dialog contains the text: "I have inspected all items in this section and confirm they have been seen, tested and are in order." followed by "Recorded as an attestation on this test. You can still amend individual items afterwards." Below the text are two buttons: "I confirm" and "Cancel".

The background interface shows a sidebar with a list of steps: 1 Farm & V, 2 Machine Ancillary, 3 Visual Faults — Pre-Start, 4 Visual Faults — Running, 5 Vacuum Tests (ISO 1-9), 6 Airflow Tests (ISO 10-12), 7 Pulsation & Ancillary (ISO 14-15), 8 Additional Tests, 9 Fault Summary & Recommendations, and 10 Review & Sign-Off. The main area displays a list of inspection items with "OK" and "Fault" buttons. The items listed are: Oil / water supply protected, Wick condition, Belt condition, End play, Guards on shaft or belts, Interceptor connection, Exhaust system restrictions, Direct coupling condition, and Vacuum pump belt size. At the bottom of the main area is a button labeled "✓ Check all as verified".

At the bottom of the screen, the copyright notice "© 2026 NZMPTA · Built by Pedersen Group" is visible.

Figure 17. "Check all as verified" records a real attestation — only use it after you have inspected the section.

© 2026 NZMPTA · Built by Pedersen Group

Figure 18. Logging a fault: standard wording, CMM severity and an optional note.

7.4 Step 5 — Vacuum Tests (ISO 1–9)

The numbered ISO groups 1–9: system vacuum, effective reserve, regulation, airline drop, regulator sensitivity, reserve off cluster, gauge accuracy and the vacuum pump(s). Enter each reading. The PASS / FAIL badge updates as you type, against the current standard for this machine's configuration, and the grey hint under each label tells you the limit that applies. Decimals such as 41.5 type normally.

Calculated readings. Readings tagged **calculated**, such as 1c (1a – 1b), 2d, 3f–3h, 4c, 4e, 5b and the gauge errors, are worked out for you. They are read-only, fill in as soon as every reading they depend on is entered, and show the formula in the hint. You never need to type them, and they do not hold up the step. The required effective reserve (2g) and cleaning reserve (2h) are shown the same way, so you can see the target.

Vacuum pumps (8–9). Sections 8 and 9 are now one section: minimum speed, capacity (8a) and maximum speed for each pump, then air flow start (pump capacity at working vacuum, 9b) and, only if the pump is out of spec, exhaust pressure (9a). Where the pump's make and

model are in the catalogue, the manufacturer's capacity at the tested speed is shown under 8a for comparison.

MPNZ AutoRep App Home My tests Company tests New test T tester@local Sign out

Tui Downs Online

1 Farm & Your Details
2 Machine Configuration & Ancillary
3 Visual Faults — Pre-Start
4 Visual Faults — Running
5 **Vacuum Tests (ISO 1-9)**
6 Airflow Tests (ISO 10-12)
7 Pulsation & Ancillary (ISO 14-15)
8 Additional Tests
9 Fault Summary & Recommendations
10 Review & Sign-Off

Vacuum tests ISO 1-9. Enter readings — pass/fail is live against the standard for this machine.

1 · System vacuum 1 · Min pump-speed vacuum 2 · Rese

Working vacuum @ receiver (1a) 44 kPa **PASS**
max 50 — guideline 40-50 by lift height

Nominal vacuum (1b) 44.5 kPa —

Vacuum regulation deviation (1c) **CALCULATED** -0.5 kPa **PASS**
= 1a - 1b ± 2 kPa

Vacuum @ regulator (1d) 44.3 kPa —

Vacuum @ pump (1e) 45.2 kPa —

< Back Next >

© 2026 NZMPTA · Built by Pedersen Group

Figure 19. Live pass/fail as you enter each reading.

Note A failed reading is not a problem with your entry — it is a finding. It flows through to the Fault Summary automatically.

7.5 Step 6 — Airflow Tests (ISO 10-12)

Vacuum system and milking system leakage (10), ACR consumption (11, only when ACRs are fitted) and cluster air admission (12), measured from air flow start (9b) on the previous step. 10b, 10d, 11b and 12b are calculated for you.

12b is the cluster air admission for the whole machine, so its limit is the per-cluster standard multiplied by the number of clusters. The hint shows the working, for example “4-12 L/min × 37 clusters = 148-444”. If 12b fails, **Individual Cluster Tests** appears as the next step.

© 2026 NZMPTA · Built by Pedersen Group

Figure 20. Airflow Tests — 12b is the whole-machine total, judged at the per-cluster limit × clusters.

7.6 If 12b fails — Individual Cluster Tests (ISO 13)

This step only appears when 12b fails, or once a cluster row has been recorded, so you are not asked for it on a machine that passes. Record only the clusters that fail: press **+ Add cluster**, type the unit (bail) number, then its total air admission, leakage and air-vent admission. It does not hold up sign-off.

7.7 Step 7 — Pulsation & Ancillary (ISO 14–15)

Enter the ISO 14–15 readings first: the airflow readings for pulsator consumption and ancillary leakage (14b, 14d and 14f are calculated), the pulsator airline drop (15b, calculated as 1a – 15a) and stability. Then enter the fastest and slowest rate and the highest and lowest ratio from your pulsation analyser. The rate and ratio spreads are calculated from those four figures and judged against the standard.

The **Faulty pulsators** table appears below when a pulsation reading fails. Record only the faulty units, by unit number (for example 27): press **+ Add pulsator**, type the unit number,

then its readings. The app warns if a number is repeated or higher than the number of bails. If a unit is faulty but no reading failed, press **Record a faulty pulsator anyway**. The recorded units are also checked against the rate and ratio band for the pulsator model in Machine Configuration.

MPNZ AutoRep App Home My tests Company tests New test T tester@local Sign out

Tui Downs Online

- 1 Farm & Your Details
- 2 Machine Configuration & Ancillary
- 3 Visual Faults — Pre-Start
- 4 Visual Faults — Running
- 5 Vacuum Tests (ISO 1–9)
- 6 Airflow Tests (ISO 10–12)
- 7 Pulsation & Ancillary (ISO 14–15)
- 8 Additional Tests
- 9 Fault Summary & Recommendations
- 10 Review & Sign-Off

between pulsators

Highest pulsator ratio from the analyser, all units: 66 %

Lowest pulsator ratio: 58 %

Ratio spread
CALCULATED = highest – lowest ≤ 5% between pulsators: 8 % **FAIL**

Faulty pulsators Add each pulsator that failed, by unit number — its readings off the analyser.

+ Add pulsator Clear

Unit no.	Rate (ppm)	Ratio front (%)	Ratio back (%)	Phase
27	60	58	57	31

Model rate band: 60–60 within 57–63 ppm

Model ratio band: 57–58 outside 60–70%

Limp: worst 2% ≤ 5%

Back Next

© 2026 NZMPTA · Built by Pedersen Group

Figure 21. Pulsation & Ancillary — a failed ratio spread brings up the faulty-pulsator table.

7.8 Step 8 — Additional Tests

The extra checks after ISO 15 for the ancillary equipment you declared on step 2 (milk meters, teat sprayer, gates and the releaser pump), plus the peak regulator load check. The releaser pump's speed and power are checked against the minimum for the machine's cluster count and number of heads.

7.9 Step 9 — Fault Summary & Recommendations

Every fault you logged on the visual checks and every failed reading is gathered here, grouped by component, with its severity. **Write a recommendation against each fault** — this is what the farmer reads on the report, so make it actionable ("Replace liner set",

"Regulator service required"). Standard faults arrive with a default recommendation already filled in for you to keep or reword.

At the bottom, **General comments** is for anything the farmer should know that is not a fault, for example settings adjusted on the day, or dirty clusters and shells as a milk-quality risk. It prints on the report straight after the fault summary.

MPNZ AutoRep App Home My tests Company tests New test T tester@local Sign out

Tui Downs Online

1 Farm & Your Details
2 Machine Configuration & Ancillary
3 Visual Faults — Pre-Start
4 Visual Faults — Running
5 Vacuum Tests (ISO 1–9)
6 Airflow Tests (ISO 10–12)
7 Pulsation & Ancillary (ISO 14–15)
8 Additional Tests
9 **Fault Summary & Recommendations**
10 Review & Sign-Off

Fault Summary & Recommendations Carried

from the visual checks and failed readings — add a recommendation for each.

0 critical 3 major 0 minor

15 · Test pulsation Major

Ratio spread: 8 % Service the pulsators outside

Liner Major

Shell compatibility: Liners
Not Compatible With Shells Replace liners with a shell-cor

Peak regulator load Major

Peak regulator load: 43.5 kPa Service the regulator and re-c

General comments
Anything the farmer should know that isn't tied to a fault above — printed on the report.

Regulator undershoot adjusted on the day. Clusters and shells need a proper clean — a milk-quality risk.

Back Next

© 2026 NZMPTA · Built by Pedersen Group

Figure 22. The fault summary — add a recommendation for every fault.

7.10 Step 10 — Review & Sign-Off

A final check: the machine summary, the fault totals, and a checklist of every step. If the farmer has a pulsation analyser report, drop the PDF into the dropzone and it is appended to the back of the Test Summary report.

1. Read the checklist — anything unfinished is listed here. (You *can* complete a test with steps unfinished; the report simply records what was and was not done.)
2. Tick "I confirm this test has been completed and the results are accurate." — this is your attestation and it is required.

3. Press **Mark as complete & sync**. The test locks, your calibration dates are stamped into the record, and if you are online it syncs to NZMPTA immediately.

The screenshot shows the 'Review & sign-off' screen in the MPNZ AutoRep App. The top navigation bar includes the MPNZ logo, 'AutoRep App', and links for Home, My tests, Company tests, and New test. A user profile for 'tester@local' and a 'Sign out' button are also present. The main header shows the test name 'Tui Downs' and an 'Online' status. A sidebar on the left lists 10 steps: 1. Farm & Your Details, 2. Machine Configuration & Ancillary, 3. Visual Faults — Pre-Start, 4. Visual Faults — Running, 5. Vacuum Tests (ISO 1-9), 6. Airflow Tests (ISO 10-12), 7. Pulsation & Ancillary (ISO 14-15), 8. Additional Tests, 9. Fault Summary & Recommendations, and 10. Review & Sign-Off (highlighted). The main content area for 'Review & sign-off' includes a title, a description 'Check the test over, then mark it complete to sync.', and test details: Farm 'Tui Downs', Plant 'Rotary · 37 clusters', and Pulsators '37'. A summary shows '0 critical', '3 major', and '0 minor' faults. A scrollable list of steps shows steps 1-5 as completed (green) and steps 6-7 as pending (red). A confirmation checkbox is present with the text 'I confirm this test has been completed and the results are accurate.' Below this is a blue button labeled 'Mark as complete & sync'. A 'Back' button is at the bottom left.

MPNZ AutoRep App Home My tests Company tests New test T tester@local Sign out

Tui Downs Online

1 Farm & Your Details
2 Machine Configuration & Ancillary
3 Visual Faults — Pre-Start
4 Visual Faults — Running
5 Vacuum Tests (ISO 1-9)
6 Airflow Tests (ISO 10-12)
7 Pulsation & Ancillary (ISO 14-15)
8 Additional Tests
9 Fault Summary & Recommendations
10 Review & Sign-Off

Review & sign-off Check the test over, then mark it complete to sync.

Farm Tui Downs Plant Rotary · 37 clusters

Pulsators 37

0 critical 3 major 0 minor

● Farm & Your Details
● Machine Configuration & Ancillary
● Visual Faults — Pre-Start
● Visual Faults — Running
● Vacuum Tests (ISO 1-9)
● Airflow Tests (ISO 10-12)
● Pulsation & Ancillary (ISO 14-15)

☐ I confirm this test has been completed and the results are accurate.

Mark as complete & sync

< Back

© 2026 NZMPTA · Built by Pedersen Group

Figure 23. Review & sign-off — attest, then mark the test complete.

MPNZ AutoRep App Home My tests Company tests New test T tester@local Sign out

Tui Downs

Online

Read-only — this test can't be edited here. Pass/fail is shown as recorded at the time of testing.

- 1 Farm & Your Details
- 2 Machine Configuration & Ancillary
- 3 Visual Faults — Pre-Start
- 4 Visual Faults — Running
- 5 Vacuum Tests (ISO 1-9)
- 6 Airflow Tests (ISO 10-12)
- 7 Pulsation & Ancillary (ISO 14-15)
- 8 Additional Tests
- 9 Fault Summary & Recommendations
- 10 Review & Sign-Off

Review & sign-off

Check the test over, then mark it complete to sync.

Farm: Tui Downs Plant: Rotary · 37 clusters

Pulsators: 37

0 critical 3 major 0 minor

- Farm & Your Details
- Machine Configuration & Ancillary
- Visual Faults — Pre-Start
- Visual Faults — Running
- Vacuum Tests (ISO 1-9)
- Airflow Tests (ISO 10-12)
- Pulsation & Ancillary (ISO 14-15)

✓ Completed 23/09/2026, 9:36:37 pm · sync: **synced**

Download report (PDF) Sync again

◀ Back

© 2026 NZMPTA · Built by Pedersen Group

Figure 24. Completed and synced. From here you can download the report or sync again.

8 The Test Summary report (PDF)

After completion, **Download report (PDF)** generates the Test Summary on your device. No connection is needed once the app has warmed up (it prepares the report generator after each successful sync). The report covers the farm and machine details (including the vacuum and releaser pumps), every reading with its as-recorded pass/fail, the fault summary with your recommendations and general comments, the measurements recorded on the visual checks (such as tube types and sizes), and the sign-off (your name and certificate number). If you attached a pulsation analyser PDF, it goes at the back.

Milking Machine Test Summary

NZMPTA AutoRep

Farm
Tui Downs
 352 Hautapu Road, Cambridge, 3493
 Supply no: 44231 · Fonterra · Waikato

Test
Completed: 27/08/2026, 11:14:41 am
 Farmer: P & J Hansen · 07 823 4410
 Calibration expiry – airflow: 14/03/2027 · pulsator:
 22/01/2027 · vacuum: 30/11/2026

Machine configuration

Plant	HerringboneLowline · 20 a-side	Clusters	20
Pulsators	10 · Dairymaster Electronic (Simultaneous)	Configuration	4 + 0
Shell	140x20 14 gauge DL Short	Claw	—
Liners (F/B)	100-022-123 / 100-022-123	Milkline	50 mm
Vacuum pumps	1 · OilLubricated	Atmos. pressure	100 kPa
Equipment	ACRs, Milk meters, Releaser pump		

Fault summary & recommendations

0 critical · 15 major · 0 minor

Severity	Area	Fault	Recommendation
Major	11 · ACR	ACR consumption (11b): 1150 L/min	Replace the liner set and re-check at the next scheduled test.
Major	12 · Cluster air admission	Cluster air admission per cluster (12b): 1150 L/min	Replace the liner set and re-check at the next scheduled test.
Major	14 · Pulsator & ancillary	Pulsator consumption (14d): 1150 L/min	Replace the liner set and re-check at the next scheduled test.
Major	2 · Reserve	Regulation loss (2d): 1150 L/min	Replace the liner set and re-check at the next scheduled test.
Major	3 · Regulation	Fall-off (3f): 44 kPa	Replace the liner set and re-check at the next scheduled test.
Major	3 · Regulation	Regulation undershoot (3g): 44 kPa	Replace the liner set and re-check at the next scheduled test.
Major	3 · Regulation	Regulation overshoot (3h): 44 kPa	Replace the liner set and re-check at the next scheduled test.
Major	4 · Airline drop	Drop receiver II regulator (4c): 1.2 kPa	Replace the liner set and re-check at the next scheduled test.
Major	7 · Gauge accuracy	Gauge error – point 1 (7c): 44 kPa	Replace the liner set and re-check at the next scheduled test.
Major	7 · Gauge accuracy	Gauge error – point 2 (7f): 44 kPa	Replace the liner set and re-check at the next scheduled test.
Major	7 · Gauge accuracy	Gauge error – point 3 (7i): 44 kPa	Replace the liner set and re-check at the next scheduled test.
Major	Liner	Shell compatibility: Liners Not Compatible With Shells	Replace liners with a shell-compatible type
Major	Milk meters	Milk meter consumption: 1150 L/min	Replace the liner set and re-check at the next scheduled test.
Major	Peak regulator load	Peak regulator load: 44 kPa	Replace the liner set and re-check at the next scheduled test.
Major	Stability	Pulsator airline stability: 44 kPa	Replace the liner set and re-check at the next scheduled test.

Numerical test results

1 · System vacuum

Reading	Value	Standard	Result
---------	-------	----------	--------

AutoRep · generated 27/08/2026, 11:14:43 am

Personal information in this report is held under the Privacy Act 2020 for milking machine test reporting and compliance. To access or correct it, contact privacy@nzmpa.co.nz. [DRAFT]

1 / 5

Figure 25. Page one of the generated Test Summary report.

Note Older tests migrated from the previous AutoRep print with their original as-recorded results — the app never re-marks history against today's standards.

9 Correcting a completed test — versions

A completed test is locked. Open it and you will see the read-only banner — this is deliberate: the signed-off record never changes silently. To correct something, press **Edit** on the test in **My tests**:

1. The app creates a **new version** of the test (v2, v3, ...). The original stays exactly as signed off, marked **superseded**.
2. Make your corrections. The attestations and sign-off are yours to give again — they are not carried over.
3. Sign the new version off as usual. The report for the new version includes an **Amendment history** page listing exactly what changed, when, and by whom.

The screenshot shows the MPNZ AutoRep App interface. At the top is a dark blue header with the MPNZ logo, 'AutoRep App', and navigation links: Home, My tests, Company tests, New test, a user profile icon for 'tester@local', and a 'Sign out' button. Below the header, the main content area has a light blue background. On the left is a sidebar with 10 numbered steps: 1. Farm & Your Details, 2. Machine Configuration & Ancillary, 3. Visual Faults — Pre-Start, 4. Visual Faults — Running, 5. Test Record (Vacuum, Airflow & Pump), 6. Additional Tests, 7. Pulsator Test Results, 8. Individual Cluster Tests (marked as OPTIONAL), 9. Fault Summary & Recommendations, and 10. Review & Sign-Off (highlighted in blue). The main content area is titled 'Tui Downs' with 'Online' and 'Version 2' status indicators. It features a 'Review & sign-off' section with the instruction 'Check the test over, then mark it complete to sync.' Below this, test details are shown: Farm 'Tui Downs', Plant 'Herringbone (lowline) · 20 clusters', and Pulsators '10'. A summary bar indicates '0 critical', '15 major', and '0 minor' faults. A list of completed steps (1-7) is shown with green dots. At the bottom of the main content area is a checkbox labeled 'I confirm this test has been completed and the results are accurate.' and a blue button labeled 'Mark as complete & sync'. A 'Back' button is located at the bottom left of the main content area.

© 2026 NZMPTA · Built by Pedersen Group

Figure 26. Editing a completed test — you are working on Version 2; the original is preserved.

MPNZ AutoRep App

HomeMy testsCompany testsNew test

Ttester@localSign out

My tests

Machine tests you've created, saved on this device.

Company tests+ New test

Your equipment calibration

These follow you, not the farm — expiry dates for your own air-flow meters, pulsator testers and vacuum gauges.

Air-flow meters expires 14/03/2027
14/03/2027

Pulsator testers expires 22/01/2027
22/01/2027

Vacuum gauges expires 30/11/2026
30/11/2026

Sync now

FARM	CREATED	STATUS	
Tui Downs	27/08/2026, 11:17:08 am	Complete synced v2	View Edit
Tui Downs	27/08/2026, 11:12:25 am	Complete synced superseded	View


Looking for a colleague's test? Try Company tests (needs a connection).

© 2026 NZMPTA · Built by Pedersen Group

Figure 27. My tests after an amendment — v2 is current, the original shows as superseded.

10 My tests

My tests lists every test you have created, with its state at a glance. **Continue** reopens an in-progress test; **View** opens a completed one read-only; **Edit** starts a new version (section 9).

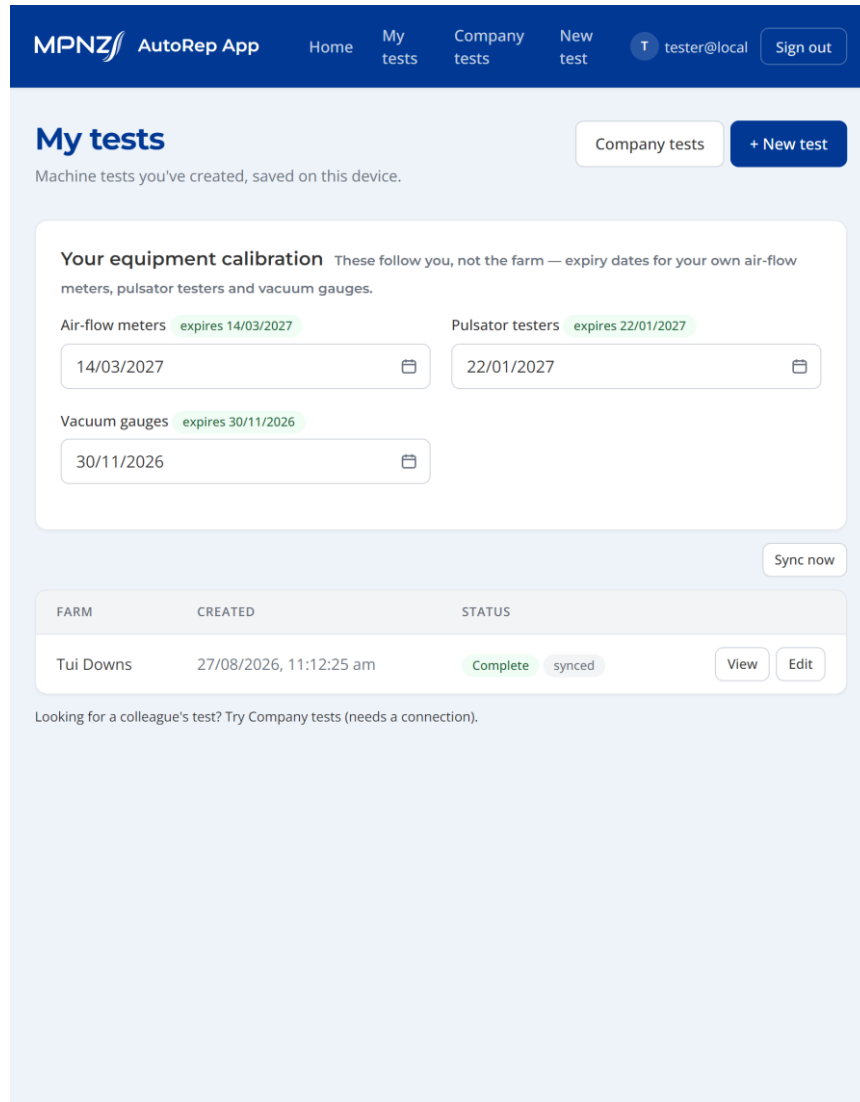

© 2026 NZMPTA · Built by Pedersen Group

Figure 28. My tests — calibration panel on top, then your tests with status and sync state.

Badge	Meaning
In progress	Not yet signed off — reopen with Continue.
Complete	Signed off and locked.
on device	Saved locally, not yet sent to the server.
synced	The server has this test.
syncing... / conflict	A sync is running / needs another sync to resolve.
v2, v3, ...	This test is an amendment version (section 9).

Badge	Meaning
superseded	An older version kept read-only for the record.

Deleting a test

You can delete a test only while it is **in progress** and **has never been sent to the server** — a tidy-up for false starts. Anything the server has seen is permanent (amend it with a new version instead).


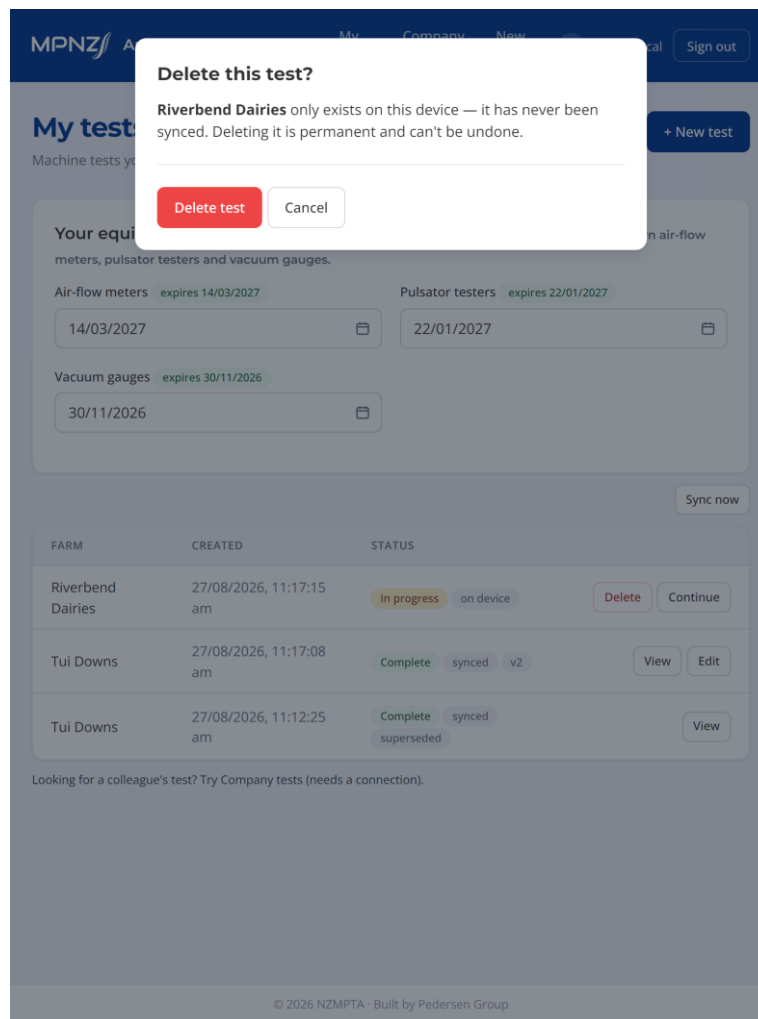


Figure 29. Deleting a never-synced, in-progress test.

11 Company tests

Company tests shows the **completed** tests from every tester at your company — handy for seeing the last test on a farm before you go out. It is read-only, works only while you are online, and colleagues' tests are never stored on your device. Search by farm or tester, and tap a test to read it; your own tests carry a **You** badge.

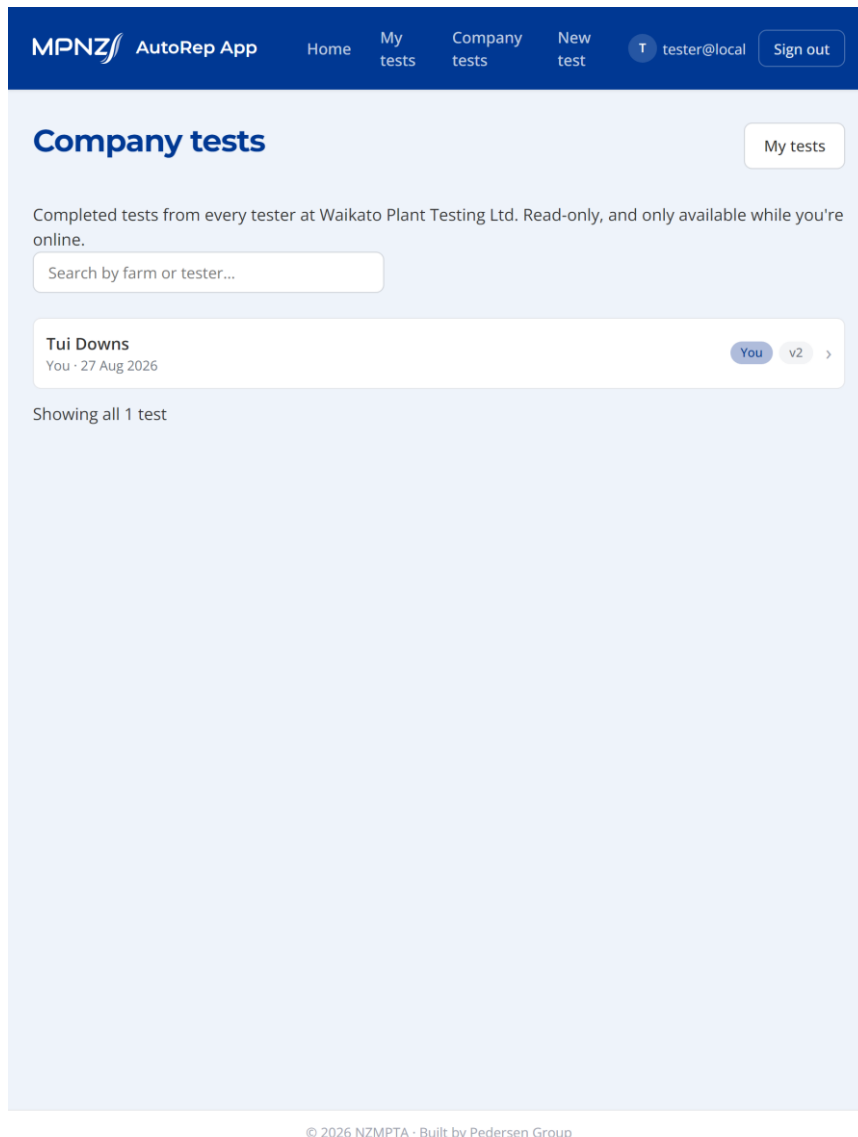

© 2026 NZMPTA · Built by Pedersen Group

Figure 30. Completed tests from everyone at your company — online only, read-only.

Note Opening a colleague's test is recorded in the NZMPTA audit trail.

12 Working offline, and how sync behaves

12.1 What works offline

- Everything inside a test: readings, faults, configuration, sign-off — all of it saves to the device. The wizard badge flips to **Offline — saved on device** so you always know.
- **My tests** and continuing any test already on the device.
- Generating the report PDF for a completed test (after the app has synced at least once on that device).

MPNZ AutoRep App Home My tests Company tests New test T tester@local Sign out

Riverbend Dairies Offline — saved on device

1 Farm & Your Details

2 Machine Configuration & Ancillary

3 Visual Faults — Pre-Start

4 Visual Faults — Running

5 Test Record (Vacuum, Airflow & Pump)

6 Additional Tests

7 Pulsator Test Results

8 Individual Cluster Tests OPTIONAL

9 Fault Summary & Recommendations

10 Review & Sign-Off

Test Record Enter readings — pass/fail is live against the standard for this machine.

1 · System vacuum 2 · Reserve 3 · Regulation 4 · Airlin

Working vacuum @ receiver (1a)
max 50 — guideline 40–50 by lift height kPa —

Nominal vacuum (1b) kPa —

Vacuum regulation deviation (1c)
± 2 kPa kPa —

Vacuum @ regulator (1d) kPa —

Vacuum @ pump (1e) kPa —

◀ Back Next ▶

© 2026 NZMPTA · Built by Pedersen Group

Figure 31. Testing continues unchanged when the shed has no coverage.

12.2 What needs a connection

- **Company tests** (colleagues' tests are never stored on your device).
- Starting the app on a page it has not stored yet — if you navigate somewhere new while offline you will see the offline page below; your saved work is unaffected.

- Syncing, obviously — but it happens automatically the next time you are connected and press Sync now (or sign a test off).

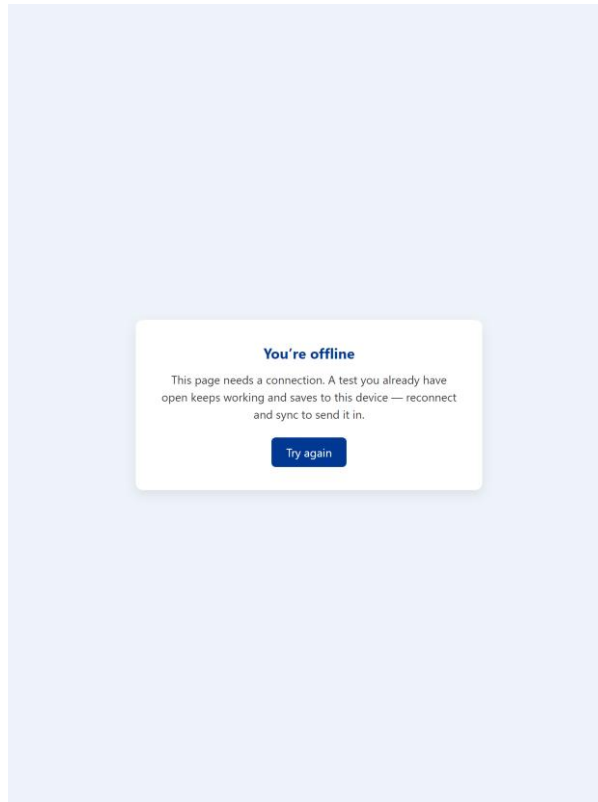


Figure 32. The offline page — shown only if the app needs the network for a page it has not stored.

12.3 Syncing

Sync now on My tests pushes your unsent tests and pulls your tests onto the device you are using. Signing in on a new tablet? Press **Sync now** and your tests appear.

MPNZ

AutoRep App

Home

My tests

Company tests

New test

Synced — 0 pushed, 1 pulled.

My tests

Machine tests you've created, saved on this device.

Company tests + New test

Your equipment calibration These follow you, not the farm — expiry dates for your own air-flow meters, pulsator testers and vacuum gauges.

Air-flow meters expires 14/03/2027

14/03/2027

Pulsator testers expires 22/01/2027

22/01/2027

Vacuum gauges expires 30/11/2026

30/11/2026

Sync now

FARM	CREATED	STATUS		
Tui Downs	27/08/2026, 11:12:25 am	Complete	synced	ViewEdit

Looking for a colleague's test? Try Company tests (needs a connection).

© 2026 NZMPTA · Built by Pedersen Group

Figure 33. A fresh device after Sync now — your tests are pulled down from the server.

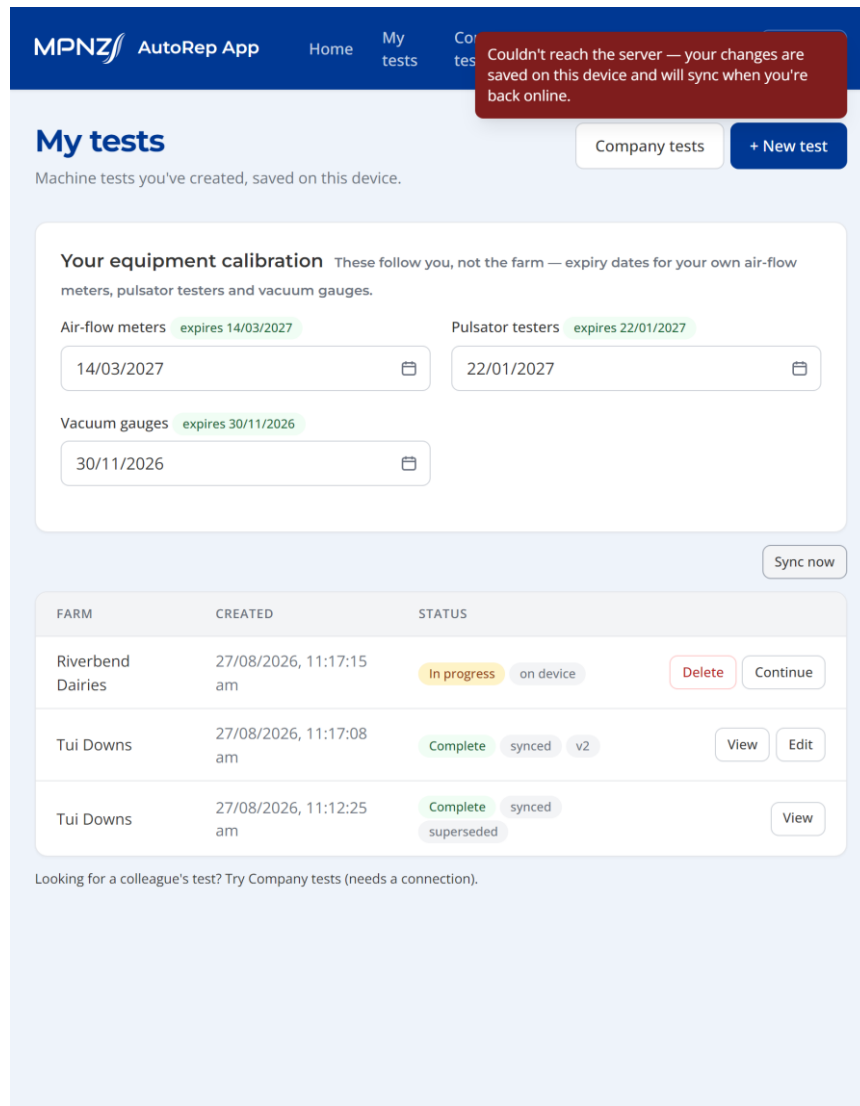


Figure 34. Syncing with no connection — nothing is lost; the app tells you it will send later.

Message you may see	What it means
"Synced — N pushed, N pulled."	All good. Pushed = sent up; pulled = fetched to this device.
"Couldn't reach the server — your changes are saved on this device..."	You are offline. Work on; sync later.
"You've been signed out, so nothing could be synced..."	Sign in again, then sync — your work is safe on the device.
"Test standards have been updated since your last sync..."	NZMPTA changed a limit; the app is already using the new one.
"This device still holds N unsynced tests from another tester..."	Shared device: the other tester must sign in and sync their own tests. You cannot send someone else's work.

Message you may see	What it means
Important One tester's local data is never visible to another tester on a shared device — so on shared tablets, always sync before handing the device over.	

13 Troubleshooting

Symptom	What to do
I can't sign in.	Check the email address; use Forgot your password?. After 5 wrong attempts the account locks for 15 minutes. If your licence has expired, the app will tell you after a correct password — contact NZMPTA.
My test isn't on this tablet.	My tests is per-device until you sync. Press Sync now while online — completed and in-progress tests you have synced elsewhere are pulled down.
A farm is missing from the picker.	The picker shows farms your company has set up or tested. Add the farm from the New test page — it is flagged for your admin to review, and you can test immediately.
The report button says Generating... for a long time.	The first report on a fresh device needs the report generator, which is fetched during a sync. Sync once while online, then try again.
A reading shows FAIL but I'm sure it's right.	FAIL compares the value with the current NZMPTA standard for this machine — check the machine configuration (cluster/pulsator counts) is correct. If the finding stands, it belongs on the report with a recommendation.
I can't type in a reading.	It is a calculated reading (tagged "calculated"). It fills in once the readings it depends on are entered; the hint shows the formula.
Individual Cluster Tests is missing.	It only appears when cluster air admission (12b) fails. If a cluster looks faulty anyway, check 12b was entered correctly.
I signed off with a mistake in it.	Open My tests and press Edit on the test — fix it in a new version and sign off again. The report shows an amendment history (section 9).
The app looks out of date.	The app updates itself while online and shows a notice when a new version has taken over; reload when it asks. If it still looks out of date, close it fully and reopen it while online.

14 Quick reference

- **Start:** New test → pick farm (or + Add a new farm) → Start test.
- **Test:** work through the steps in any order; calculated readings fill themselves in; blank visual items = not present; PASS/FAIL is live; faults need recommendations.
- **Finish:** Review & Sign-Off → attach pulsation PDF (if any) → tick the attestation → Mark as complete & sync → Download report (PDF).

- **Fix a signed-off test:** My tests → Edit → new version → sign off again (amendment history goes on the report).
- **Offline:** keep testing — it is all on the device; Sync now when you are back in coverage.
- **Calibration dates:** keep the three dates current — they are stamped into every report at sign-off.