



ElphaPex DG Home 1 Miner Setup Guide

The home miner connects to the Honest.Money merged-mining pool — **pool.honest.money** — mining Litecoin (LTC), Dogecoin (DOGE), Texitcoin (TXC), Iskander (ISK), and Zero Chill U (ZCU); merge-mined over the same connection. **Only LTC and DOGE are paid out to you.** These payouts help offset the electricity cost of running the miner.

You'll need your own LTC and DOGE receive addresses. **Use a hot or hardware wallet you control, not an exchange address** — many exchanges don't accept the small "dust" deposits mining payouts arrive in. The same wallet can hold both addresses.

Wallets confirmed to support LTC and DOGE:

- **Hot wallet:** We recommend the <https://mobile.honest.money/> wallet!
- **Hardware wallet:** Tangem, Ledger, or Trezor.

STEP 1 — REGISTER YOUR WALLETS WITH THE POOL

Before connecting your miner, register your LTC and DOGE addresses with the pool so your payouts are credited correctly. This is a one-time, per-pool registration. If you've already registered these addresses with the previous pool (pool.texitcoin.org), skip this step, the same LTC address and dogelink token will work on the new pool.

1. Go to: <https://pool.honest.money/register>
2. Enter your LTC mining wallet address and your DOGE payout address, then answer the simple security question and submit. Both must be mainnet addresses — LTC begins with ltc1, L, M, or 3; DOGE begins with D, A, or 9. The pool validates each address against its coin wallet before registering it.
3. **Note:** If signing up for the first time, use brand-new LTC/DOGE addresses only — each LTC address links to exactly one DOGE address (and vice versa), so double-check both before submitting. If you've mined here before under this LTC address, use the DOGE-link panel on your wallet page instead.
4. The confirmation screen shows your **Permanent DOGE Token** — labeled there as both "Permanent DOGE Token" and "Miner Password" (same value). Copy it down; you'll use it as the password in Step 3.

HME POOL TXC \$0.186032 ~-0.95% 🔍 Search block height, hash, txid, or address (L... or txid...) Search

Register LTC + DOGE payouts

You mine with your **LTC address** as the stratum username. To also get paid in DOGE, link a Dogecoin payout address here. You'll receive a permanent **dogeLink** token to put in your miner's password field.

LTC MINING ADDRESS
ltc1q...
This becomes your stratum username. Mainnet only: ltc1... or L / M / 3...

DOGE PAYOUT ADDRESS
D...
Where your merged-mined DOGE is sent. Mainnet only: D... A... or 9...

HUMAN CHECK
answer
What is 7 + 07?


[Create registration](#)

We store only the two addresses and the token. Both are verified against the live LTC and DOGE daemons before anything is written. Registration is additive — an address that's already linked can't be re-registered here.

STEP 2 — SET UP THE MINER HARDWARE

Physically set up the machine and find it on your network:

1. Download **ElphaPexTool** (Windows only) and the **DG Home 1 Server Manual** from elphapex.com/support/download?type=Manual. Follow the manual to power on and physically connect the miner to your home network (Ethernet recommended for initial setup).
2. Extract and open **ElphaPexTool.exe**. Make sure your computer is on the same network as the miner, add your network segment range, then click **Scan**.
3. Double-click the miner's line in the results list — this opens its web dashboard in your browser.

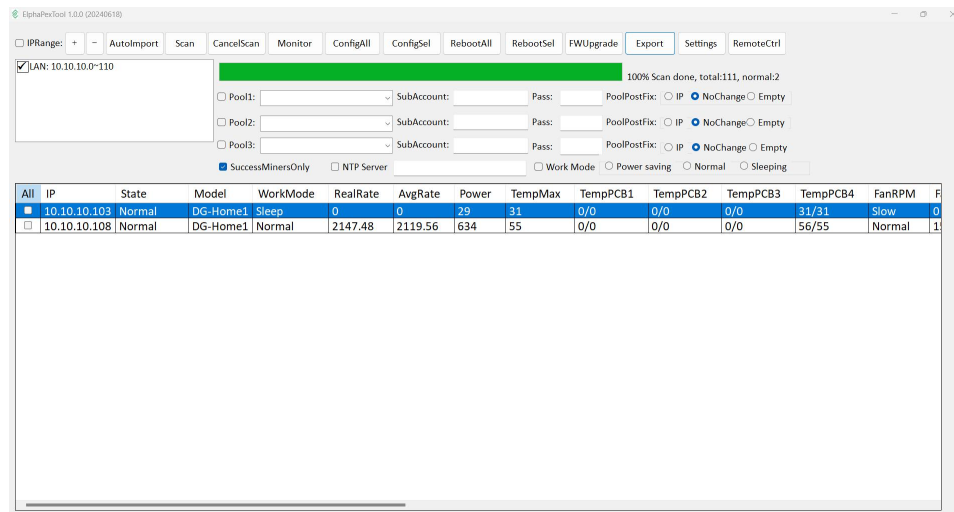


ElphaPexTool after a completed scan — double-click a server's row to open its dashboard

4. Log in with username **root** and password **root** (default credentials).
5. Optional: set a static IP (IP section) or connect the miner to WiFi (WIFI section) so you can unplug the Ethernet cable later.

STEP 3 — CONNECT TO THE POOL

In the miner's web dashboard, open the **Miner** tab (Pool Setting). The miner supports up to three pool entries, but **you only need to fill in one (Pool 1):**

- **Mining Address:** stratum+tcp://stratum.pool.honest.money:3433
- **User Name:** your LTC wallet address, entered by itself — no “@” symbol and nothing appended to it.
- **User Password:** dogelink=<your Permanent DOGE Token from Step 1>

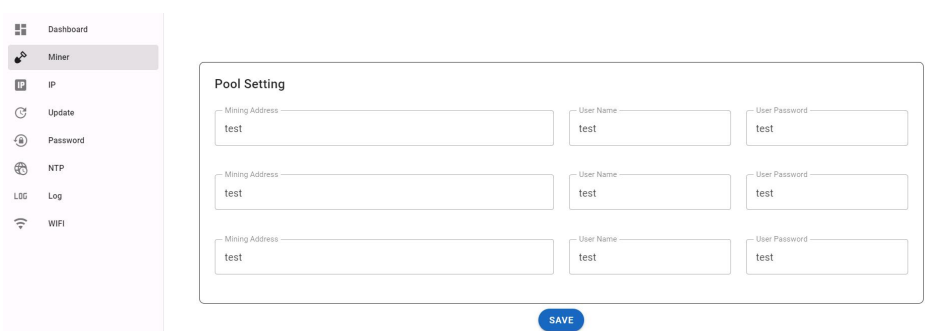


Example format:

Mining Address: stratum+tcp://stratum.pool.honest.money:3433

User Name: ltc1qexampleaddress0000000000000000000000

User Password: dogelink=A1B2C3D4E5F60708A9B0C1D2

1. Click **SAVE** at the bottom of the Pool Setting screen.
2. Reboot the machine (button at the bottom of the dashboard) and wait about 60 seconds.
3. If the dashboard doesn't reload automatically, use ElphaPexTool again to rescan and find the miner's IP address, then reconnect in your browser.
4. It takes 5–10 minutes for the miner to start working. You'll know it's mining when the status circles at the top of the Dashboard (Rate, Network, Fans, Temp) turn from red to green.

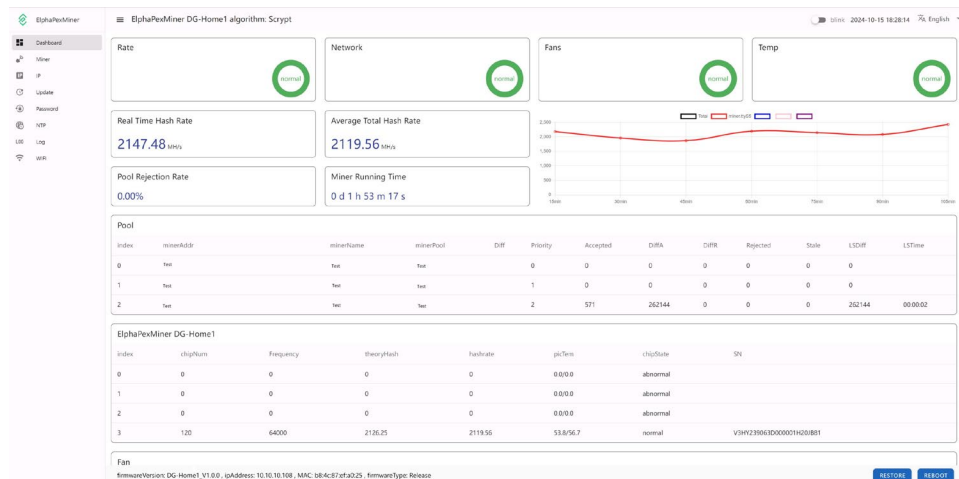

The Dashboard — Rate/Network/Fans/Temp circles turn green once the miner is working normally

TROUBLESHOOTING NOTE

If the outlet temperature on a hash board reaches 85°C, the miner's built-in protection automatically stops mining until it cools. This is normal safety behavior, not a fault — check airflow around the unit if it happens often.