

LEMKEN QR Guide Solitaire DT



4 – Main points for correct operation of the drill

1. Level the drill while operating at normal operating speed, may need to use the “Big Donut” P/N-305 6444
2. Set the Heliodor working depth. A separate hydraulic remote provides infinite adjustment. Confirm seed depth behind tractor tires and the center section of the drill. If the depth is not the same, go deeper with the Heliodor.
3. Calibrate the drill for the desired seeding rate, kg/ha (seeding rate x 1.136 ex. 120lbs x 1.136 = 136.3 kg/ha)
4. Set the seeding depth – adjust the pins by trapeze packer roller and fine tune with screws on back. One turn equals 1 millimeter.

Hydraulic Adjustment Heliodor

Set the tillage depth of the Heliodor with hydraulic remote 2. You can change on the go, just watch the % indicator.

Front tire packer roller – functions in sequence with the Heliodor.


Calibration

1. Select bin B (front bin) or A (back bin).
2. Select Seed Type
3. Seeding rate is kg/ha (seed rate x 1.136 = kg/ha)
4. Select the correct feed rollers - 8N or 10N for small grains, 8F for alfalfa, 2N for grass

Follow the calibration menu on the CCI controller.

1. Make sure **fan is OFF** and open the baffle on below the feed rollers.
2. Start the sequence for calibration in the CCI Controller, will charge for 2 revolutions.
3. Always dump the red calibration tray after charging the seed rollers. Place empty tray under feed rollers.
4. Check the seed in the calibration tray to verify uniformity from all four seed rollers, note: they should all be the same.
5. Remove tray from under the drill, place on the scale and **TARE scale to ZERO.**
6. Empty the red calibration tray, place tray back onto the scale. The number on the scale will be the actual seed weight in grams. Add a zero - then you enter this number into the CCI Controller.
7. DO NOT touch any buttons and wait about 4 seconds so that the controller calculates the new cal number, then you will see a min/max

speed and new cal number appear on the screen.

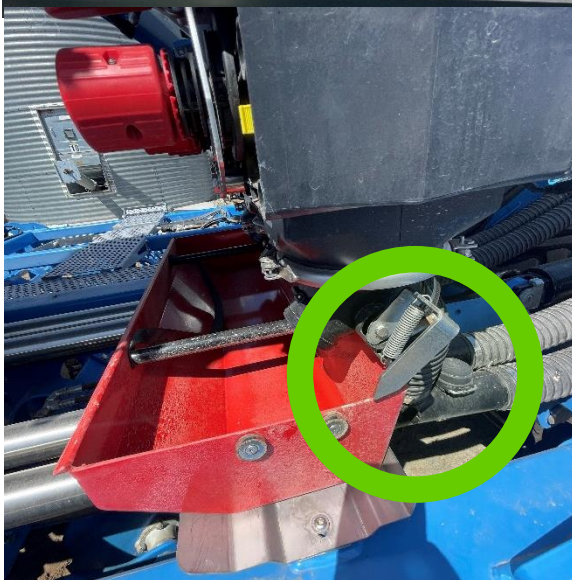



Seeding Depth

1. Adjusting the pins with seed bar in the air for a general adjustment.
2. Turning the handle on the back of each seeding bar, one turn equals one millimeter.
3. Make sure all rear handles and pins are the same length to ensure uniform seeding depth on both sides.
4. Hydraulic down pressure on the seeding is set by the CCI controller and usually the ideal setting is between 2-4 depending on conditions, although you may need to adjust according to conditions.



Other Items:

Side shields and the **outside adjustable discs**. Adjust these as needed for the various soil conditions so that you have uniformity pass to pass.

Fan speed should range from 4000 - 4800 depending on seed density and fertilizer rates.

Grease the unit daily at all hinge points, just a couple shots of grease daily.

Hydraulic Hoses – P6 in spool valve 3 run continuous for the fan, **T6 goes to tank “ZERO” pressure!** The unit will not unfold or function with out the P6 and T6 hoses attached.

Wheels & Tires – check all lug nuts regularly, service all wheel bearings annually, refer to the owner’s manual.

Seed Sensors – inspect on a regular basis, please clean with a tooth brush and wipe off seed treat with a towel.

Seed Hoses/Clamps – inspect daily to ensure no wearing holes in the seed hoses and that the clamps are tight.

