

# RE01 1500KB Group

## **R\_SYSTEM Driver Detailed Specification**

R01AN4770EJ0120 Rev.1.20 Aug. 17, 2020

#### Introduction

This document describes the detailed specifications of the system driver R\_SYSTEM provided in the RE01 1500KB CMSIS Driver Package.

### **Target Device**

RE01 1500KB Group

#### Contents

1. Ove	rview	3
2. Inte	rnal Structure of Software Components	4
	ile Structure	
3. Inte	rnal Operation of Software Components	7
4. Det	ailed Information of Software Unit	8
4.1 C	onfigurations	8
4.1.1	Parameter Checking	8
4.1.2	Critical Section	8
4.1.3	Register Protection	8
4.1.4	Value of API Timeout	9
4.1.5	Event Link Number Setting	9
4.1.6	Function Allocation to RAM	13
4.2 N	acro and Type Definitions	14
4.3 F	unction Specifications	16
4.3.1	R_SYS_CodeCopy Function	16
4.3.2	R_SYS_Initialize Function	17
4.3.3	R_SYS_BoostSpeedModeSet Function	18
4.3.4	R_SYS_HighSpeedModeSet Function	20
4.3.5	R_SYS_LowSpeedModeSet Function	23
4.3.6	R_SYS_32kHzSpeedModeSet Function	25
4.3.7	R_SYS_SpeedModeGet Function	27
4.3.8	R_SYS_SystemClockHOCOSet Function	28
4.3.9	R_SYS_SystemClockMOCOSet Function	31
4.3.10	R_SYS_SystemClockLOCOSet Function	32
4.3.1	1 R_SYS_SystemClockMOSCSet Function	33
4.3.12	2 R_SYS_SystemClockSOSCSet Function	34
4.3.13	3 R_SYS_SystemClockPLLSet Function	35
4.3.1	4 R_SYS_SystemClockFreqGet Function	38
4.3.1	5 R_SYS_PeripheralClockFreqGet Function	40
4.3.10	6 R_SYS_SystemClockDividerSet Function	42
	7 R_SYS_MainOscSpeedClockStart Function	
4.3.18	B R_SYS_MainOscSpeedClockStop Function	46
4.3.19	9 R_SYS_HighSpeedClockStart Function	47



4.3.20	R_SYS_HighSpeedClockStop Function	49
4.3.21	R_SYS_MediumSpeedClockStart Function	50
4.3.22	R_SYS_MediumSpeedClockStop Function	51
4.3.23	R_SYS_LowSpeedClockStart Function	52
4.3.24	R_SYS_LowSpeedClockStop Function	53
4.3.25	R_SYS_SubOscSpeedClockStart Function	54
4.3.26	R_SYS_SubOscSpeedClockStop Function	55
4.3.27	R_SYS_PLLSpeedClockStart Function	56
4.3.28	R_SYS_PLLSpeedClockStop Function	58
4.3.29	R_SYS_OscStabilizationFlagGet Function	59
4.3.30	R_SYS_IrqEventLinkSet Function	60
4.3.31	R_SYS_IrqStatusGet Function	61
4.3.32	R_SYS_IrqStatusClear Function	62
4.3.33	R_SYS_EnterCriticalSection Function	63
4.3.34	R_SYS_ExitCriticalSection Function	63
4.3.35	R_SYS_ResourceLock Function	64
4.3.36	R_SYS_ResourceUnlock Function	64
4.3.37	R_SYS_RegisterProtectEnable Function	65
4.3.38	R_SYS_RegisterProtectDisable Function	65
4.3.39	R_SYS_SoftwareDelay Function	66
4.3.40	R_SYS_GetVersion Function	68
4.3.41	r_sys_BoostFlagGet Function	69
4.3.42	r_sys_BoostFlagSet Function	69
4.3.43	r_sys_BoostFlagClr Function	70
4.3.44	r_system_wdt_refresh Function	70
4.3.45	IELn_IRQHandler Function (n = 0 to 31)	71
4.3.46	R_NVIC_EnableIRQ Function	72
4.3.47	R_NVIC_GetEnableIRQ Function	73
4.3.48	R_NVIC_DisableIRQ Function	74
4.3.49	R_NVIC_GetPendingIRQ Function	75
4.3.50	R_NVIC_SetPendingIRQ Function	76
4.3.51	R_NVIC_ClearPendingIRQ Function	77
4.3.52	R_NVIC_SetPriority Function	78
4.3.53	R_NVIC_GetPriority Function	79
4.3.54	R_NVIC_SetVector Function	80
4.3.55	R_NVIC_GetVector Function	80
4.3.56	R_NVIC_SystemReset Function	81
Wehsite a	and Support	82
V V CDSILE O	114 Ouppoit	J۷



#### 1. Overview

The following shows a list of abbreviations used in this document and a list of related documents.

Table 1-1 Abbreviation List

Name	Abbreviation
RENESAS-DRIVER R_SYSTEM	R_SYSTEM Driver
RENESAS CMSIS-Core	R_CORE
RE01 Group User's Manual: Hardware	UMH

#### Table 1-2 Related Document List

Document Name	Document Number
RE01 Group (with 1.5-Mbyte Flash Memory) User's	r01uh0796
Manual: Hardware	
RE01 1500KB,256KB Group Getting Started Guide to	r01an4660
Development Using CMSIS Package	

#### Table 1-3 ROM and RAM Size List

ROM/RAM Name	Cache Type	Size
Program ROM	ROM/Flash memory	1.5 Mbytes
ROM	ROM/Flash memory	256 bytes
Option-setting memory	ROM/Flash memory	32 bytes
Memory mirror	ROM/Flash memory	8 Mbytes
RAM	RAM	256 Kbytes

Table 1-4 Maximum Stack Size

Maximum stack size	0x400 (1 Kbyte)
--------------------	-----------------

## 2. Internal Structure of Software Components

#### 2.1 File Structure

The R\_SYSTEM driver is part of the Hardware Abstraction Layer ( HAL ) compatible with the CMSIS Driver specification, this consists of three files: r\_system\_api.c, r\_system\_api.h, and r\_system\_cfg.h in the vendor-specific file storage directory. The roles of the files are shown in Table 2-1. Figure 2.1 shows the file structure of the R\_SYSTEM driver in the RE01 1500KB Group CMSIS Driver Package. The R\_SYSTEM driver capabilities are implemented by the functions shown in Figure 2.2.

Table 2-1 Roles of the Files of R\_SYSTEM Driver

File Name	Description	
r_system_api.c	Driver source file.	
	It provides the entities of driver functions.	
	To use the R_SYSTEM driver, it is necessary to build this file.	
r_system_api.h	Driver header file.	
	It provides macro, type, and prototype declarations that can be referenced by the user.	
	To use the R_SYSTEM driver, it is necessary to include this file.	
r_system_cfg.h	Configuration definition file.	
	It provides configuration definitions that can be modified by the user.	

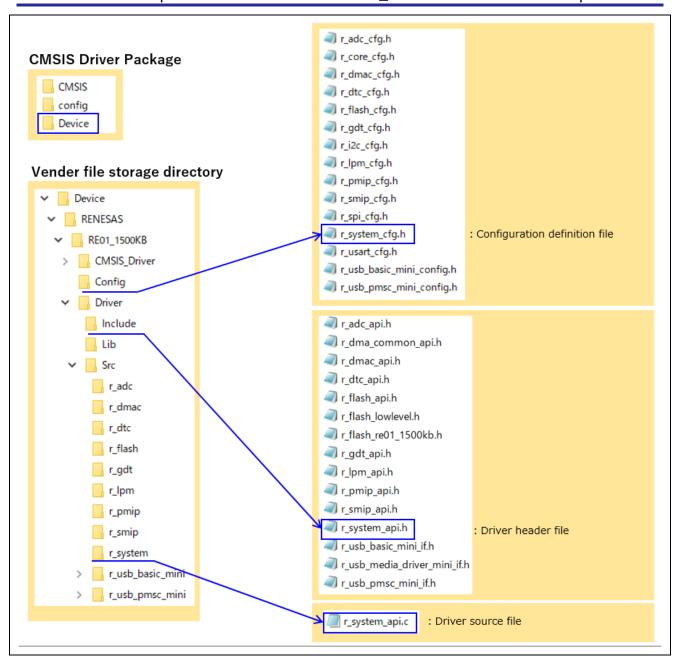


Figure 2.1 File Structure of R\_SYSTEM Driver in CMSIS Driver Package

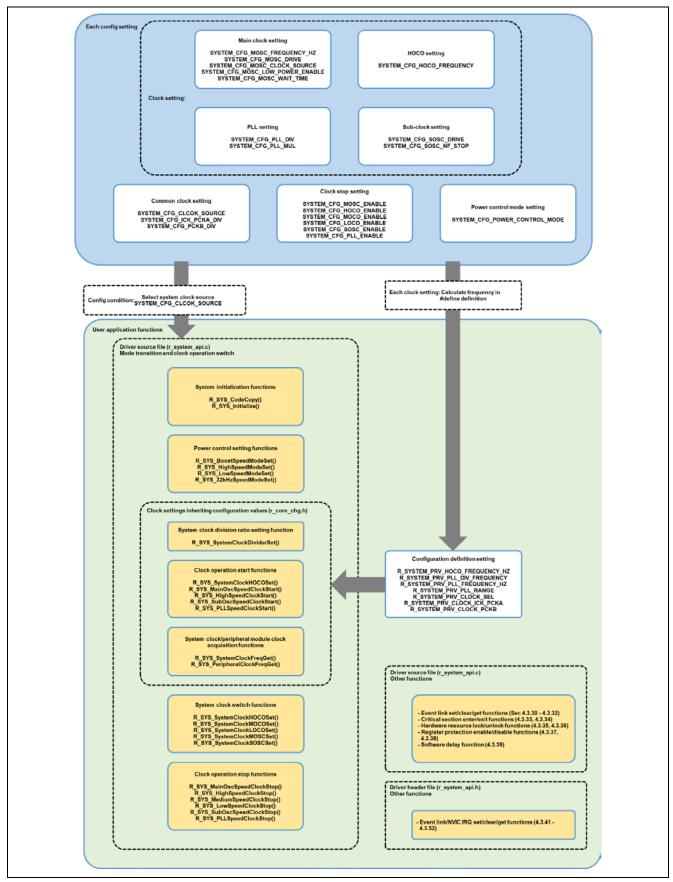


Figure 2.2 Relationship between R\_CORE Configuration Settings and R\_SYSTEM Driver Functions

#### 3. Internal Operation of Software Components

The R\_SYSTEM driver implements mode transitions and clock operation switching. This section shows the procedure for calling the R\_SYSTEM driver functions that make mode transitions and select clock operation. For procedures for causing transitions between power supply modes or entry to VBB mode, refer to the specification of the R\_LPM driver.

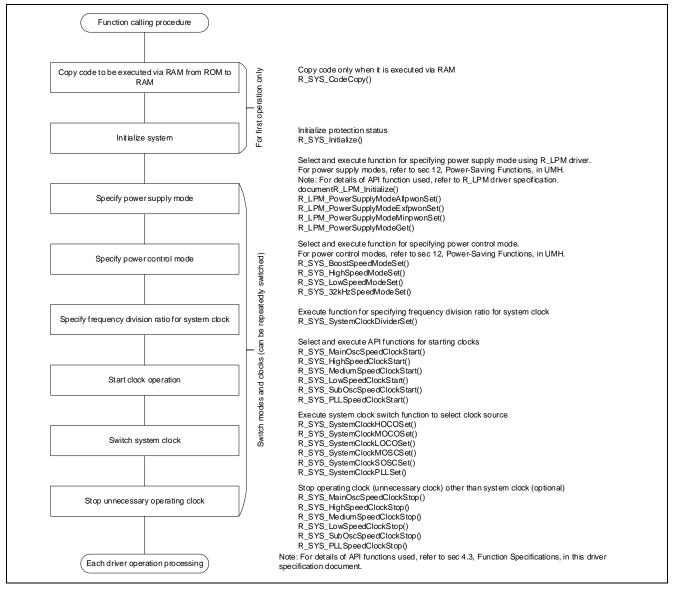


Figure 3.1 Procedure for Calling API Functions Using R\_SYSTEM Driver

#### 4. Detailed Information of Software Unit

#### 4.1 Configurations

For the R\_SYSTEM driver, configuration definitions that can be modified by the user are provided in the r\_system\_cfg.h file.

#### 4.1.1 Parameter Checking

This enables or disables the parameter checking in the R\_SYSTEM driver.

Name: SYSTEM\_CFG\_PARAM\_CHECKING\_ENABLE

Table 4-1 Settings of SYSTEM\_CFG\_PARAM\_CHECKING\_ENABLE

Setting	Description	
0	Disables the parameter checking.	
	The error conditions described in Function Specifications will not be detected.	
1 (initial value)	Enables the parameter checking.	
	The error conditions described in Function Specifications will be detected.	

#### 4.1.2 Critical Section

This enables or disables the critical section control in the R\_SYSTEM driver.

In reading the value of a register, modifying the value of some bits, and then writing it back to the register, it is necessary to control the critical section so that no interrupt will occur during this process.

Name: SYSTEM\_CFG\_ENTER\_CRITICAL\_SECTION\_ENABLE

Table 4-2 Settings of SYSTEM\_CFG\_ENTER\_CRITICAL\_SECTION\_ENABLE

Setting	Description	
0	Disables the control of critical sections.	
1 (initial value) Enables the control of critical sections.		

#### 4.1.3 Register Protection

This enables or disables the register write protection control in the R\_SYSTEM driver.

In writing to a target register, it is necessary to control register write protection.

Name: SYSTEM\_CFG\_REGISTER\_PROTECTION\_ENABLE

Table 4-3 Settings of SYSTEM\_CFG\_REGISTER\_PROTECTION\_ENABLE

Setting	Description	
0 Disables the control of register write protection.		
1 (initial value) Enables the control of register write protection.		

#### 4.1.4 Value of API Timeout

This specifies the timeout time when a CMSIS driver API waits for a value to be reflected.

Name: SYSTEM\_CFG\_API\_TIMEOUT\_COUNT

Table 4-4 Settings of SYSTEM\_CFG\_API\_TIMEOUT\_COUNT

Setting	Description
268,435,456	This specifies the timeout time when a CMSIS driver API waits for a value to be
(0x10000000)	reflected.

#### 4.1.5 Event Link Number Setting

The interrupt handler of each event link number specified here is called as a callback function.

For the event signal linked with this setting, refer to UMH.

Name: SYSTEM\_CFG\_EVENT\_NUMBER\_\*\*\*\*\_\*\*\*\*

Table 4-5 Settings of SYSTEM\_CFG\_EVENT\_NUMBER\_\*\*\*\*\_\*\*\*\*

Setting	Description
0x00 (initial value)	Disables an event output to the specified peripheral
SYSTEM_IRQ_EVENT_NUMBER_NOT_USED	module.
0x01-0xAB	Specifies the number of the event signal to be linked to.
SYSTEM_IRQ_EVENT_NUMBERn (n=0-31)	

Table 4-6 Event Number Settings of SYSTEM\_CFG\_EVENT\_NUMBER\_\*\*\*\*\_\*\*\*\*

Event Number	Source of Interrupt	Name	Configuration Definition Name of Event (r_system_cfg.h)
	Request		
01h	Port	PORT_IRQ0	SYSTEM_CFG_EVENT_NUMBER_PORT_IRQ0
02h		PORT_IRQ1	SYSTEM_CFG_EVENT_NUMBER_PORT_IRQ1
03h		PORT_IRQ2	SYSTEM_CFG_EVENT_NUMBER_PORT_IRQ2
04h		PORT_IRQ3	SYSTEM_CFG_EVENT_NUMBER_PORT_IRQ3
05h		PORT_IRQ4	SYSTEM_CFG_EVENT_NUMBER_PORT_IRQ4
06h		PORT_IRQ5	SYSTEM_CFG_EVENT_NUMBER_PORT_IRQ5
07h		PORT_IRQ6	SYSTEM_CFG_EVENT_NUMBER_PORT_IRQ6
08h		PORT_IRQ7	SYSTEM_CFG_EVENT_NUMBER_PORT_IRQ7
09h	DMAC0	DMAC0_INT	SYSTEM_CFG_EVENT_NUMBER_DMAC0_INT
0Ah	DMAC1	DMAC1_INT	SYSTEM_CFG_EVENT_NUMBER_DMAC1_INT
0Bh	DMAC2	DMAC2_INT	SYSTEM_CFG_EVENT_NUMBER_DMAC2_INT
0Ch	DMAC3	DMAC3_INT	SYSTEM_CFG_EVENT_NUMBER_DMAC3_INT
0Dh	DTC	DTC_COMPLETE	SYSTEM_CFG_EVENT_NUMBER_DTC_COMPLETE
0Fh	ICU	ICU_SNZCANCEL	SYSTEM_CFG_EVENT_NUMBER_ICU_SNZCANCEL
10h	FCU	FCU_FIFERR	SYSTEM_CFG_EVENT_NUMBER_FCU_FIFERR
11h		FCU_FRDYI	SYSTEM_CFG_EVENT_NUMBER_FCU_FRDYI
12h	LVD	LVD_LVD1	SYSTEM_CFG_EVENT_NUMBER_LVD_LVD1
13h		LVD_LVDBAT	SYSTEM_CFG_EVENT_NUMBER_LVD_LVDBAT
14h	MOSC	MOSC_STOP	SYSTEM_CFG_EVENT_NUMBER_MOSC_STOP
15h	Low power consumption mode	SYSTEM_SNZREQ	SYSTEM_CFG_EVENT_NUMBER_SYSTEM_SNZREQ
16h	EHC	SOL_DH	SYSTEM_CFG_EVENT_NUMBER_SOL_DH

17h		SOL_DL	SYSTEM_CFG_EVENT_NUMBER_SOL_DL
18h	AGT0	AGT0_AGTI	SYSTEM_CFG_EVENT_NUMBER_AGT0_AGTI
1Ah		AGT0_AGTCMBI	SYSTEM_CFG_EVENT_NUMBER_AGT0_AGTCMBI
1Bh	AGT1	AGT1_AGTI	SYSTEM_CFG_EVENT_NUMBER_AGT1_AGTI
1Ch		AGT1_AGTCMAI	SYSTEM CFG EVENT NUMBER AGT1 AGTCMAI
1Dh	AGT0	AGT0_AGTCMAI	SYSTEM_CFG_EVENT_NUMBER_AGT0_AGTCMAI
1Eh	IWDT	IWDT NMIUNDF	SYSTEM_CFG_EVENT_NUMBER_IWDT_NMIUNDF
1Fh	WDT	WDT NMIUNDF	SYSTEM CFG EVENT NUMBER WDT NMIUNDF
20h	RTC	RTC_ALM	SYSTEM_CFG_EVENT_NUMBER_RTC_ALM
21h		RTC_PRD	SYSTEM_CFG_EVENT_NUMBER_RTC_PRD
22h		RTC_CUP	SYSTEM_CFG_EVENT_NUMBER_RTC_CUP
23h	S14AD	ADC140 ADI	SYSTEM_CFG_EVENT_NUMBER_ADC140_ADI
24h		ADC140_GBADI	SYSTEM_CFG_EVENT_NUMBER_ADC140_GBADI
25h		ADC140_CMPAI	SYSTEM_CFG_EVENT_NUMBER_ADC140_CMPAI
26h		ADC140_CMPBI	SYSTEM CFG EVENT NUMBER ADC140 CMPBI
27h		ADC140 WCMPM	SYSTEM CFG EVENT NUMBER ADC140 WCMPM
28h		ADC140_WCMPUM	SYSTEM_CFG_EVENT_NUMBER_ADC140_WCMPUM
29h		ADC140 GCADI	SYSTEM_CFG_EVENT_NUMBER_ADC140_GCADI
2Ah	ACMP	ACMP_CMPI	SYSTEM_CFG_EVENT_NUMBER_ACMP_CMPI
2Bh	USB	USBFS_D0FIFO	SYSTEM_CFG_EVENT_NUMBER_USBFS_D0FIFO
2Ch		USBFS_D1FIFO	SYSTEM_CFG_EVENT_NUMBER_USBFS_D1FIFO
2Dh		USBFS USBI	SYSTEM_CFG_EVENT_NUMBER_USBFS_USBI
2Eh		USBFS_USBR	SYSTEM_CFG_EVENT_NUMBER_USBFS_USBR
2Fh	RIIC0	IIC0 RXI	SYSTEM_CFG_EVENT_NUMBER_IICO_RXI
30h		IIC0 TXI	SYSTEM_CFG_EVENT_NUMBER_IICO_TXI
31h		IIC0 TEI	SYSTEM_CFG_EVENT_NUMBER_IICO_TEI
32h		IICO EEI	SYSTEM_CFG_EVENT_NUMBER_IICO_EEI
33h	RIIC1	IIC1 RXI	SYSTEM_CFG_EVENT_NUMBER_IIC1_RXI
34h		IIC1_TXI	SYSTEM_CFG_EVENT_NUMBER_IIC1_TXI
35h		IIC1_TEI	SYSTEM_CFG_EVENT_NUMBER_IIC1_TEI
36h		IIC1 EEI	SYSTEM CFG EVENT NUMBER IIC1 EEI
37h	KINT	KEY INTKR	SYSTEM_CFG_EVENT_NUMBER_KEY_INTKR
38h	DOC	DOC_DOPCI	SYSTEM_CFG_EVENT_NUMBER_DOC_DOPCI
39h	CAC	CAC_FEERI	SYSTEM_CFG_EVENT_NUMBER_CAC_FEERI
3Ah		CAC_MENDI	SYSTEM_CFG_EVENT_NUMBER_CAC_MENDI
3Bh		CAC_OVFI	SYSTEM_CFG_EVENT_NUMBER_CAC_OVFI
3Ch	I/O port	IOPORT_GROUP3	SYSTEM CFG EVENT NUMBER IOPORT GROUP3
3Dh		IOPORT_GROUP2	SYSTEM CFG EVENT NUMBER IOPORT GROUP2
3Eh	ELC	ELC_SWEVT0	SYSTEM_CFG_EVENT_NUMBER_ELC_SWEVT0
3Fh		ELC_SWEVT1	SYSTEM_CFG_EVENT_NUMBER_ELC_SWEVT1
40h	POE	POEG_GROUPA	SYSTEM_CFG_EVENT_NUMBER_POEG_GROUPA
41h		POEG GROUPB	SYSTEM_CFG_EVENT_NUMBER_POEG_GROUPB
42h	TMR	TMR_CMIA0	SYSTEM_CFG_EVENT_NUMBER_TMR_CMIA0
43h		TMR_CMIB0	SYSTEM_CFG_EVENT_NUMBER_TMR_CMIB0
44h		TMR_OVF0	SYSTEM_CFG_EVENT_NUMBER_TMR_OVF0
45h		TMR_CMIA1	SYSTEM_CFG_EVENT_NUMBER_TMR_CMIA1
46h	$\dashv$	TMR_CMIB1	SYSTEM_CFG_EVENT_NUMBER_TMR_CMIB1
47h	$\dashv$	TMR_OVF1	SYSTEM_CFG_EVENT_NUMBER_TMR_OVF1
48h	ccc	CCC_PRD	SYSTEM_CFG_EVENT_NUMBER_CCC_PRD
49h	$\dashv$	CCC_CUP	SYSTEM_CFG_EVENT_NUMBER_CCC_CUP
4Ah	LPG	CCC_ERR	SYSTEM_CFG_EVENT_NUMBER_CCC_ERR
4Bh	MTDV	MTDV_PM1INT	SYSTEM_CFG_EVENT_NUMBER_MTDV_PM1INT
ווטד	IVIIDV	INTIDATI MILIMI	1 0 1 0 1 E M - 01 0 - E A E 14 1 - 140 MIDE I (

4Ch		MTDV_PM25INT	SYSTEM_CFG_EVENT_NUMBER_MTDV_PM25INT
4Dh		MTDV_PM36INT	SYSTEM_CFG_EVENT_NUMBER_MTDV_PM36INT
4Eh	ELC	ELC_INT0	SYSTEM_CFG_EVENT_NUMBER_ELC_INTO
4Fh	0	ELC_INT1	SYSTEM_CFG_EVENT_NUMBER_ELC_INT1
50h	GPT320	GPT0_CCMPA	SYSTEM_CFG_EVENT_NUMBER_GPT0_CCMPA
51h		GPT0_CCMPB	SYSTEM_CFG_EVENT_NUMBER_GPT0_CCMPB
52h		GPT0_CMPC	SYSTEM_CFG_EVENT_NUMBER_GPT0_CMPC
53h		GPT0_CMPD	SYSTEM_CFG_EVENT_NUMBER_GPT0_CMPD
54h		GPT0_OVF	SYSTEM_CFG_EVENT_NUMBER_GPT0_OVF
55h		GPT0_UDF	SYSTEM_CFG_EVENT_NUMBER_GPT0_UDF
56h	GPT321	GPT1_CCMPA	SYSTEM_CFG_EVENT_NUMBER_GPT1_CCMPA
57h		GPT1_CCMPB	SYSTEM_CFG_EVENT_NUMBER_GPT1_CCMPB
58h		GPT1_CMPC	SYSTEM_CFG_EVENT_NUMBER_GPT1_CMPC
59h		GPT1_CMPD	SYSTEM_CFG_EVENT_NUMBER_GPT1_CMPD
5Ah		GPT1_OVF	SYSTEM_CFG_EVENT_NUMBER_GPT1_OVF
5Bh		GPT1_UDF	SYSTEM_CFG_EVENT_NUMBER_GPT1_UDF
5Ch	GPT162	GPT2_CCMPA	SYSTEM_CFG_EVENT_NUMBER_GPT2_CCMPA
5Dh		GPT2_CCMPB	SYSTEM_CFG_EVENT_NUMBER_GPT2_CCMPB
5Eh		GPT2_CMPC	SYSTEM_CFG_EVENT_NUMBER_GPT2_CMPC
5Fh		GPT2_CMPD	SYSTEM_CFG_EVENT_NUMBER_GPT2_CMPD
60h		GPT2_OVF	SYSTEM_CFG_EVENT_NUMBER_GPT2_OVF
61h		GPT2_UDF	SYSTEM_CFG_EVENT_NUMBER_GPT2_UDF
62h	GPT163	GPT3_CCMPA	SYSTEM_CFG_EVENT_NUMBER_GPT3_CCMPA
63h		GPT3_CCMPB	SYSTEM_CFG_EVENT_NUMBER_GPT3_CCMPB
64h		GPT3_CMPC	SYSTEM_CFG_EVENT_NUMBER_GPT3_CMPC
65h		GPT3_CMPD	SYSTEM_CFG_EVENT_NUMBER_GPT3_CMPD
66h		GPT3_OVF	SYSTEM_CFG_EVENT_NUMBER_GPT3_OVF
67h		GPT3_UDF	SYSTEM_CFG_EVENT_NUMBER_GPT3_UDF
68h	GPT164	GPT4_CCMPA	SYSTEM_CFG_EVENT_NUMBER_GPT4_CCMPA
69h		GPT4_CCMPB	SYSTEM_CFG_EVENT_NUMBER_GPT4_CCMPB
6Ah		GPT4_CMPC	SYSTEM_CFG_EVENT_NUMBER_GPT4_CMPC
6Bh		GPT4_CMPD	SYSTEM_CFG_EVENT_NUMBER_GPT4_CMPD
6Ch		GPT4_OVF	SYSTEM_CFG_EVENT_NUMBER_GPT4_OVF
6Dh		GPT4 UDF	SYSTEM_CFG_EVENT_NUMBER_GPT4_UDF
6Eh	GPT165	GPT5 CCMPA	SYSTEM_CFG_EVENT_NUMBER_GPT5_CCMPA
6Fh		GPT5 CCMPB	SYSTEM_CFG_EVENT_NUMBER_GPT5_CCMPB
70h		GPT5_CMPC	SYSTEM_CFG_EVENT_NUMBER_GPT5_CMPC
71h		GPT5_CMPD	SYSTEM_CFG_EVENT_NUMBER_GPT5_CMPD
72h		GPT5_OVF	SYSTEM_CFG_EVENT_NUMBER_GPT5_OVF
73h		GPT5_UDF	SYSTEM_CFG_EVENT_NUMBER_GPT5_UDF
74h	GPT	GPT_UVWEDGE	SYSTEM_CFG_EVENT_NUMBER_GPT_UVWEDGE
75h	SCI0	SCI0 RXI	SYSTEM CFG EVENT NUMBER SCI0 RXI
76h		SCI0_TXI	SYSTEM_CFG_EVENT_NUMBER_SCI0_TXI
77h		SCI0_TEI	SYSTEM_CFG_EVENT_NUMBER_SCI0_TEI
78h		SCI0_ERI	SYSTEM_CFG_EVENT_NUMBER_SCI0_ERI
79h		SCIO_AM	SYSTEM_CFG_EVENT_NUMBER_SCI0_AM
7Ah		SCI0_RXI_OR_ERI	Unused
7Bh	SCI1	SCI1_RXI	SYSTEM_CFG_EVENT_NUMBER_SCI1_RXI
7Ch	<b>-</b>	SCI1_TXI	SYSTEM_CFG_EVENT_NUMBER_SCI1_TXI
7Dh	$\dashv$	SCI1_TEI	SYSTEM_CFG_EVENT_NUMBER_SCI1_TEI
7Eh		SCI1 ERI	SYSTEM_CFG_EVENT_NUMBER_SCI1_ERI
7Fh		SCI1_AM	SYSTEM_CFG_EVENT_NUMBER_SCI1_AM
_ · · · · ·		00/ ((V)	0.0.10.01

80h	SCI2	SCI2_RXI	SYSTEM_CFG_EVENT_NUMBER_SCI2_RXI
81h		SCI2_TXI	SYSTEM_CFG_EVENT_NUMBER_SCI2_TXI
82h		SCI2_TEI	SYSTEM_CFG_EVENT_NUMBER_SCI2_TEI
83h		SCI2_ERI	SYSTEM_CFG_EVENT_NUMBER_SCI2_ERI
84h		SCI2_AM	SYSTEM_CFG_EVENT_NUMBER_SCI2_AM
85h	SCI3	SCI3_RXI	SYSTEM_CFG_EVENT_NUMBER_SCI3_RXI
86h		SCI3_TXI	SYSTEM_CFG_EVENT_NUMBER_SCI3_TXI
87h		SCI3_TEI	SYSTEM_CFG_EVENT_NUMBER_SCI3_TEI
88h		SCI3_ERI	SYSTEM_CFG_EVENT_NUMBER_SCI3_ERI
89h		SCI3_AM	SYSTEM_CFG_EVENT_NUMBER_SCI3_AM
8Ah	SCI4	SCI4_RXI	SYSTEM_CFG_EVENT_NUMBER_SCI4_RXI
8Bh		SCI4_TXI	SYSTEM_CFG_EVENT_NUMBER_SCI4_TXI
8Ch		SCI4_TEI	SYSTEM_CFG_EVENT_NUMBER_SCI4_TEI
8Dh		SCI4_ERI	SYSTEM_CFG_EVENT_NUMBER_SCI4_ERI
8Eh		SCI4_AM	SYSTEM_CFG_EVENT_NUMBER_SCI4_AM
8Fh	SCI5	SCI5_RXI	SYSTEM_CFG_EVENT_NUMBER_SCI5_RXI
90h		SCI5_TXI	SYSTEM_CFG_EVENT_NUMBER_SCI5_TXI
91h		SCI5_TEI	SYSTEM_CFG_EVENT_NUMBER_SCI5_TEI
92h		SCI5_ERI	SYSTEM_CFG_EVENT_NUMBER_SCI5_ERI
93h		SCI5_AM	SYSTEM_CFG_EVENT_NUMBER_SCI5_AM
94h	SCI9	SCI9_RXI	SYSTEM_CFG_EVENT_NUMBER_SCI9_RXI
95h		SCI9_TXI	SYSTEM_CFG_EVENT_NUMBER_SCI9_TXI
96h		SCI9_TEI	SYSTEM_CFG_EVENT_NUMBER_SCI9_TEI
97h		SCI9_ERI	SYSTEM_CFG_EVENT_NUMBER_SCI9_ERI
98h		SCI9_AM	SYSTEM_CFG_EVENT_NUMBER_SCI9_AM
99h	SPI0	SPI0_SPRI	SYSTEM_CFG_EVENT_NUMBER_SPI0_SPRI
9Ah		SPI0_SPTI	SYSTEM_CFG_EVENT_NUMBER_SPI0_SPTI
9Bh		SPI0_SPII	SYSTEM_CFG_EVENT_NUMBER_SPI0_SPII
9Ch		SPI0_SPEI	SYSTEM_CFG_EVENT_NUMBER_SPI0_SPEI
9Dh		SPI0_SPTEND	SYSTEM_CFG_EVENT_NUMBER_SPI0_SPTEND
9Eh	SPI1	SPI1_SPRI	SYSTEM_CFG_EVENT_NUMBER_SPI1_SPRI
9Fh		SPI1_SPTI	SYSTEM_CFG_EVENT_NUMBER_SPI1_SPTI
A0h		SPI1_SPII	SYSTEM_CFG_EVENT_NUMBER_SPI1_SPII
A1h		SPI1_SPEI	SYSTEM_CFG_EVENT_NUMBER_SPI1_SPEI
A2h		SPI1_SPTEND	SYSTEM_CFG_EVENT_NUMBER_SPI1_SPTEND
A3h	QSPI	QSPI_INTR	SYSTEM_CFG_EVENT_NUMBER_QSPI_INTR
A4h	DIV	DIV_CALCCOMP	SYSTEM_CFG_EVENT_NUMBER_DIV_CALCCOMP
A6h	MLCD	MLCD_TEI	SYSTEM_CFG_EVENT_NUMBER_MLCD_TEI
A7h		MLCD_TEMI	SYSTEM_CFG_EVENT_NUMBER_MLCD_TEMI
A8h	GDT	GDT_DATII	SYSTEM_CFG_EVENT_NUMBER_GDT_DATOI
A9h		GDT_DATOI	SYSTEM_CFG_EVENT_NUMBER_GDT_FDCENDI
AAh		GDT_FDCENDI	SYSTEM_CFG_EVENT_NUMBER_GDT_DATII
B4h	Port	PORT_IRQ8	SYSTEM_CFG_EVENT_NUMBER_PORT_IRQ8
B5h		PORT_IRQ9	SYSTEM_CFG_EVENT_NUMBER_PORT_IRQ9

#### 4.1.6 Function Allocation to RAM

This makes the settings for executing specific functions of the R\_SYSTEM driver from the RAM.

Programs to be executed while the power supply to the flash memory is switched off need to be allocated to RAM and executed from the RAM.

This configuration definition for setting function allocation to RAM has function-specific definitions.

Name: SYSTEM\_CFG\_SECTION\_R\_SYS\_xxxxx

SYSTEM\_CFG\_SECTION\_IELn\_IRQHANDLER (n = 0 to 31)

An API name xxxxx should be written in all capital letters.

Example:  $R_SYS_Initialize$  function  $\rightarrow SYSTEM_CFG_SECTION_R_SYS_INITIALIZE$ 

Table 4-7 Settings of SYSTEM\_CFG\_SECTION\_xxxxx

Setting	Description
SYSTEM_SECTION_CODE	Does not allocate the function to RAM.
SYSTEM_SECTION_RAM_FUNC	Allocates the function to RAM.

Table 4-8 Initial State of Function Allocation to RAM

No.	Function Name	Allocation to RAM
1	R_SYS_Initialize	
2	R_SYS_BoostSpeedModeSet	
3	R_SYS_HighSpeedModeSet	✓
4	R_SYS_LowSpeedModeSet	<b>✓</b>
5	R_SYS_32kHzSpeedModeSet	✓
6	R_SYS_SpeedModeGet	✓
7	R_SYS_SystemClockHOCOSet	✓
8	R_SYS_SystemClockMOCOSet	✓
9	R_SYS_SystemClockLOCOSet	✓
10	R_SYS_SystemClockMOSCSet	✓
11	R_SYS_SystemClockSOSCSet	✓
12	R_SYS_SystemClockPLLSet	
13	R_SYS_SystemClockFreqGet	✓
14	R_SYS_PeripheralClockFreqGet	✓
15	R_SYS_SystemClockDividerSet	✓
16	R_SYS_MainOscSpeedClockStart	✓
17	R_SYS_MainOscSpeedClockStop	✓
18	R_SYS_HighSpeedClockStart	✓
19	R_SYS_HighSpeedClockStop	✓
20	R_SYS_MediumSpeedClockStart	✓
21	R_SYS_MediumSpeedClockStop	✓
22	R_SYS_LowSpeedClockStart	✓
23	R_SYS_LowSpeedClockStop	✓
24	R_SYS_SubOscSpeedClockStart	✓
25	R_SYS_SubOscSpeedClockStop	✓
26	R_SYS_PLLSpeedClockStart	
27	R_SYS_PLLSpeedClockStop	
28	R_SYS_OscStabilizationFlagGet	✓

29	R_SYS_IrqEventLinkSet	✓
30	R_SYS_IrqStatusGet	✓
31	R_SYS_IrqStatusClear	✓
32	R_SYS_EnterCriticalSection	✓
33	R_SYS_ExitCriticalSection	✓
34	R_SYS_ResourceLock	✓
35	R_SYS_ResourceUnlock	✓
36	R_SYS_RegisterProtectEnable	✓
37	R_SYS_RegisterProtectDisable	✓
38	R_SYS_SoftwareDelay	✓
39 to	IELn_IRQHandler (n = 0 to 31)	✓
70		
71	R_SYS_GetVersion	

## 4.2 Macro and Type Definitions

For the  $R\_SYSTEM$  driver, macro and type definitions that can be referenced by the user are provided in the  $r\_system\_api.h$  file.

Table 4-9 Macro Definition List

Macro Definition	Setting	Remarks
R_SYSTEM_PRV_PRCR_KEY	(0xA500U)	Releases PRCR register protection.
R_SYSTEM_PRV_IRQ_EVENT_N UMBER_TOTAL	(32)	Total number of interrupts of IRQ event links: 32 interrupts
R_SYSTEM_PRV_LOCK_LOCKED	(0x01)	Lock value of Valid st_system_lock_t: 1
R_SYSTEM_PRV_LOCK_UNLOCK ED	(0x00)	Unlock value of Valid st_system_lock_t: 0
R_SYSTEM_PRV_IELSR_IR_MSK	(0x00010000)	Mask value for IR interrupt status flag in ICU->IELSR register
R_SYSTEM_PRV_IELSR_IELS_M SK	(0x0000001F)	Mask value for IELS in ICU->IELSR register
R_SYSTEM_PRV_OSCSF_HOCO SF_MSK	(0x01)	Mask value for HOCO clock oscillation stabilization flag
R_SYSTEM_PRV_OSCSF_MOSC SF_MSK	(80x0)	Mask value for main clock oscillation stabilization flag
R_SYSTEM_PRV_OSCSF_PLLSF _MSK	(0x20)	Mask value for PLL clock oscillation stabilization flag
R_SYSTEM_PRV_SCKSCR_CKSE L_MSK	(0x07)	Mask value for clock source selection
R_SYSTEM_PRV_SCKSCR_CKSE L_HOCO	(0x00)	Selects HOCO for the clock source.
R_SYSTEM_PRV_SCKSCR_CKSE L_MOCO	(0x01)	Selects MOCO for the clock source.
R_SYSTEM_PRV_SCKSCR_CKSE L_LOCO	(0x02)	Selects LOCO for the clock source.
R_SYSTEM_PRV_SCKSCR_CKSE L_MOSC	(0x03)	Selects the main clock for the clock source.
R_SYSTEM_PRV_SCKSCR_CKSE L_SOSC	(0x04)	Selects the sub-clock for the clock source.
R_SYSTEM_PRV_SCKSCR_CKSE L_PLL	(0x05)	Selects the PLL for the clock source.

R_SYSTEM_PRV_HOCO_FREQU ENCY_HZ	(2400000U)	Set to 24 MHz when SYSTEM_CFG_HOCO_FREQUENCY = 0.
	(3200000U)	Set to 32 MHz when SYSTEM_CFG_HOCO_FREQUENCY = 1.
	(4800000U)	Set to 48 MHz when SYSTEM_CFG_HOCO_FREQUENCY = 2.
	(6400000U)	Set to 64 MHz when SYSTEM_CFG_HOCO_FREQUENCY = 3.
R_SYSTEM_PRV_MOCO_FREQU ENCY_HZ	(2000000U)	Set to 2 MHz when MOCO is selected.
R_SYSTEM_PRV_LOCO_FREQU ENCY_HZ	(32768U)	Set to 32.768 kHz when LOCO is selected.
R_SYSTEM_PRV_SUBCLOCK_FR EQUENCY_HZ	(32768U)	Set to 32.768 kHz when the sub-clock is selected.
R_SYSTEM_PRV_PLL_DIV_FREQ UENCY	(SYSTEM_CFG_MOSC_FRE QUENCY_HZ / (SYSTEM_CFG_PLL_DIV+1))	Specifies the frequency to be input to the PLL circuit in accordance with the setting of the main clock frequency and the division ratio of the PLL frequency.
R_SYSTEM_PRV_PLL_FREQUEN CY_HZ	(R_SYSTEM_PRV_PLL_DIV_ FREQUENCY*(SYSTEM_CF G_PLL_MUL+1))	Specifies the frequency to be generated by PLL operation in accordance with the frequency input to the PLL circuit and the multiplication ratio of the PLL frequency.
R_SYSTEM_PRV_PLL_RANGE	(1)	Specify this value when 48000000 < output frequency of PLL circuit ≤ 64000000.
	(0)	Specify this value when 32000000 ≤ output frequency of PLL circuit ≤ 48000000.
R_SYSTEM_PRV_CLOCK_SEL	(R_SYSTEM_PRV_HOCO_F REQUENCY_HZ)	Specifies the frequency selected by R_SYSTEM_PRV_HOCO_FREQUENCY_H Z when HOCO is selected.
	(R_SYSTEM_PRV_MOCO_F REQUENCY_HZ)	Specifies the frequency selected by R_SYSTEM_PRV_MOCO_FREQUENCY_H Z when MOCO is selected.
	(R_SYSTEM_PRV_LOCO_FR EQUENCY_HZ)	Specifies the frequency selected by R_SYSTEM_PRV_LOCO_FREQUENCY_H Z when a LOCO is selected.
	(SYSTEM_CFG_MOSC_FRE QUENCY_HZ)	Specifies the frequency selected by SYSTEM_CFG_MOSC_FREQUENCY_HZ when the main clock is selected.
	(R_SYSTEM_PRV_SUBCLOC K_FREQUENCY_HZ)	Specifies the frequency selected by R_SYSTEM_PRV_SUBCLOCK_FREQUEN CY_HZ when the sub-clock is selected.
	(R_SYSTEM_PRV_PLL_FRE QUENCY_HZ)	Specifies the frequency selected by R_SYSTEM_PRV_PLL_FREQUENCY_HZ when the PLL is selected.
R_SYSTEM_PRV_CLOCK_ICK_P CKA	(R_SYSTEM_PRV_CLOCK_S EL / (1 << SYSTEM_CFG_ICK_PCKA_D IV))	Specifies the frequency obtained by dividing each determined clock by the frequency division ratio  SYSTEM_CFG_ICK_PCKA_DIV.
R_SYSTEM_PRV_CLOCK_PCKB	(R_SYSTEM_PRV_CLOCK_S EL / (1 << SYSTEM_CFG_PCKB_DIV))	Specifies the frequency obtained by dividing each determined clock by the frequency division ratio SYSTEM_CFG_PCKB_DIV.
R_SYSTEM_PRV_DELAY_LOOP_ CYCLES	(4)	Specifies the number of delay cycles: 4 cycles

#### 4.3 Function Specifications

The specifications and processing flow of each function of the R\_SYSTEM driver are described in this section.

The function specification tables in this section are equivalent to the descriptions in Doxygen.

For error checking in the processing flow, only the error conditions are listed and the specific checking method is omitted.

Conditional branch descriptions in the processing flow include the register names and variable names to clarify what are used for judgment on conditions. However, the judgment is not always made as that described in the processing flow.

#### 4.3.1 R\_SYS\_CodeCopy Function

Table 4-10 R\_SYS\_CodeCopy Function Specifications

Format	void R_SYS_CodeCopy(void)
Description	Expands the data and programs stored in the specified addresses in ROM to the specified addresses in RAM.
Argument	None
Return value	None
Remarks	1

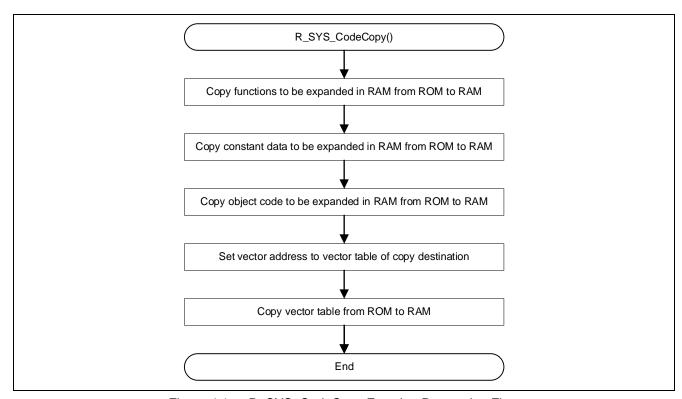


Figure 4.1 R\_SYS\_CodeCopy Function Processing Flow

#### 4.3.2 R\_SYS\_Initialize Function

Table 4-11 R\_SYS\_Initialize Function Specifications

Format	void R_SYS_Initialize(void)
Description	Initializes the RAM (callback functions, resource lock status, and register protection status).
Argument	None
Return value	None
Remarks	-

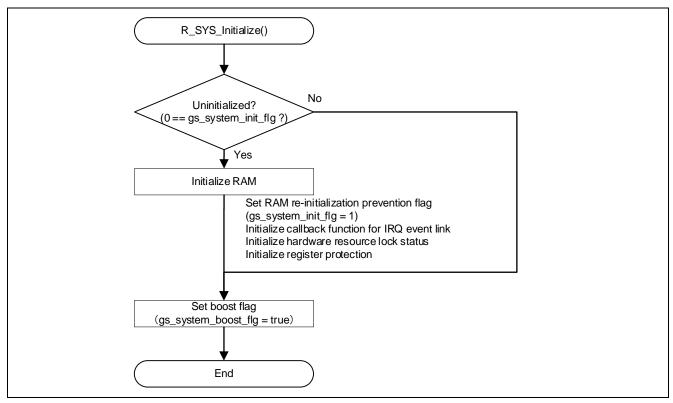


Figure 4.2 R\_SYS\_Initialize Function Processing Flow

## 4.3.3 R\_SYS\_BoostSpeedModeSet Function

Table 4-12 R\_SYS\_BoostSpeedModeSet Function Specifications

Format	int32_t R_SYS_BoostSpeedModeSet(void)
Description	Sets the power control mode to boost mode.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	1

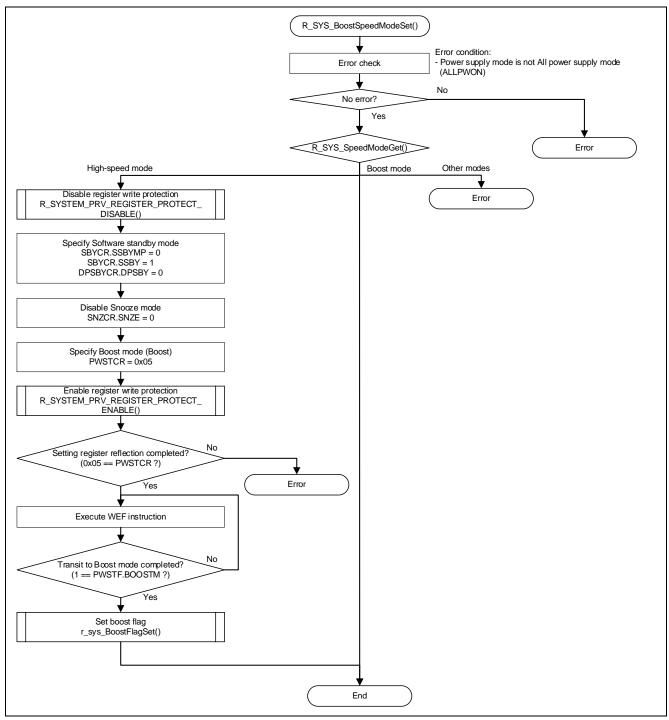


Figure 4.3 R\_SYS\_BoostSpeedModeSet Function Processing Flow

## 4.3.4 R\_SYS\_HighSpeedModeSet Function

Table 4-13 R\_SYS\_HighSpeedModeSet Function Specifications

Format	int32_t R_SYS_HighSpeedModeSet(void)
Description	Sets the power control mode to high-speed mode.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	1

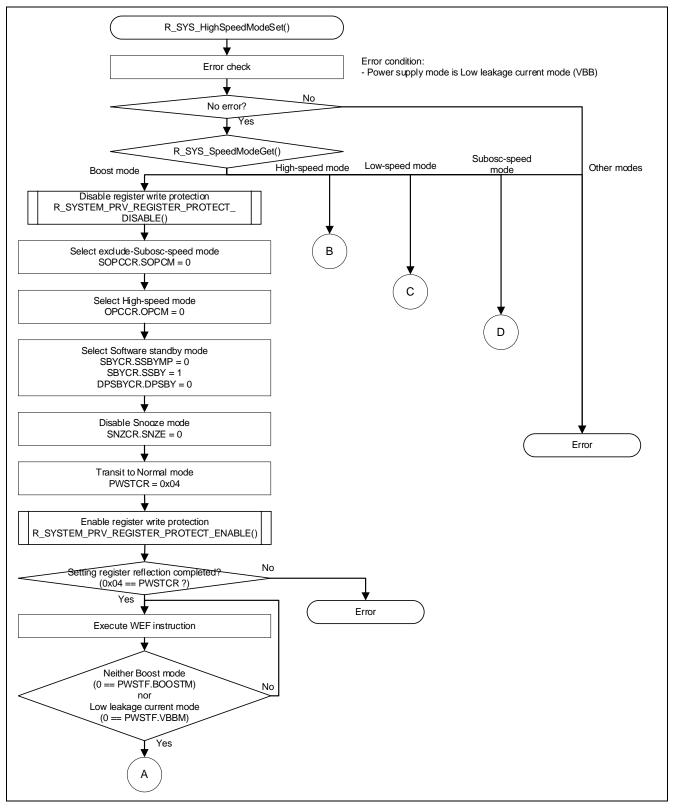


Figure 4.4 R\_SYS\_HighSpeedModeSet Function Processing Flow (1/2)

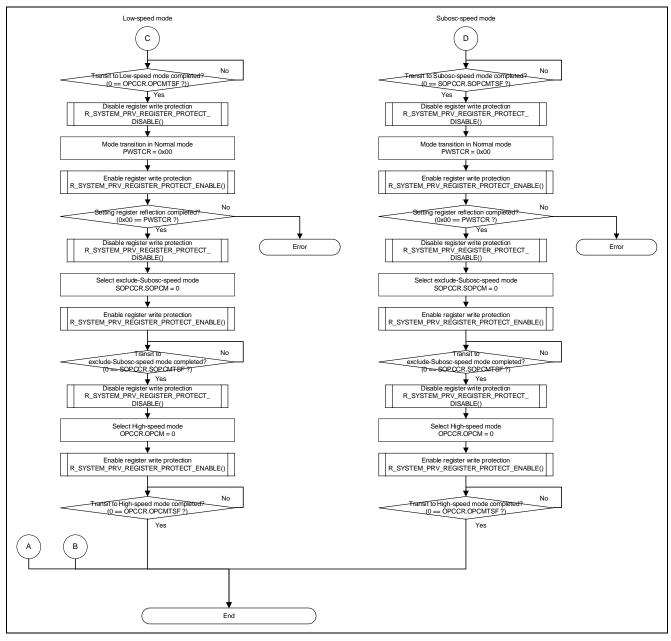


Figure 4.5 R\_SYS\_HighSpeedModeSet Function Processing Flow (2/2)

## 4.3.5 R\_SYS\_LowSpeedModeSet Function

Table 4-14 R\_SYS\_LowSpeedModeSet Function Specifications

Format	int32_t R_SYS_LowSpeedModeSet(void)
Description	Sets the power control mode to low-speed mode.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	_

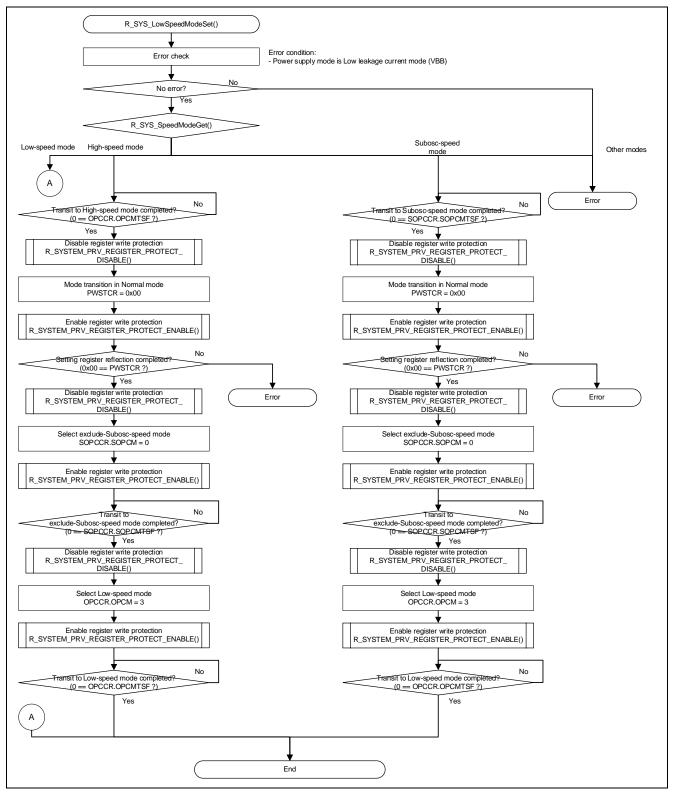


Figure 4.6 R\_SYS\_LowSpeedModeSet Function Processing Flow

## 4.3.6 R\_SYS\_32kHzSpeedModeSet Function

Table 4-15 R\_SYS\_32kHzSpeedModeSet Function Specifications

Format	int32_t R_SYS_32kHzSpeedModeSet(void)
Description	Sets the power control mode to subosc-speed mode.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	1



Figure 4-7 R\_SYS\_32kHzSpeedModeSet Function Processing Flow

#### 4.3.7 R\_SYS\_SpeedModeGet Function

Table 4-16 R\_SYS\_SpeedModeGet Function Specifications

Format	e_system_speed_mode_t R_SYS_SpeedModeGet(void)
Description	Obtains the current power control mode.
Argument	None
Return	Boost (0)
value	High-speed (1)
	Low-speed (2)
	32kHz-speed (3)
Remarks	-

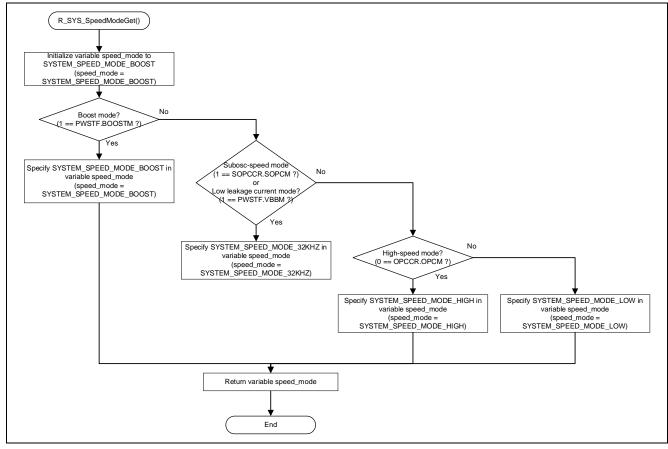


Figure 4.8 R\_SYS\_SpeedModeGet Function Processing Flow

## 4.3.8 R\_SYS\_SystemClockHOCOSet Function

Table 4-17 R\_SYS\_SystemClockHOCOSet Function Specifications

Format	int32_t R_SYS_SystemClockHOCOSet(void)
Description	Specifies the high-speed on-chip oscillator for the system clock source.  When the operating frequency is higher than 32 MHz, the wait cycle in flash memory access is set to one cycle. When the operating frequency is 32 MHz or lower, the wait cycle count for the flash memory is set to prove cycles.
Argument	for the flash memory is set to zero cycles.  None
Return	Normal (0)
value	Abnormal (-1)
Remarks	

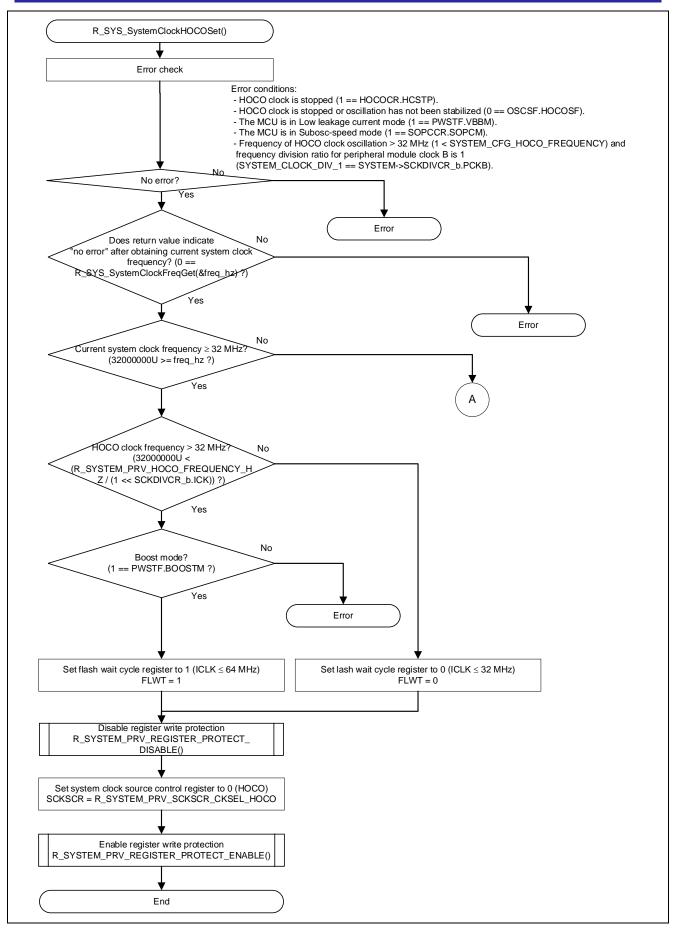


Figure 4.9 R\_SYS\_SystemClockHOCOSet Function Processing Flow (1/2)

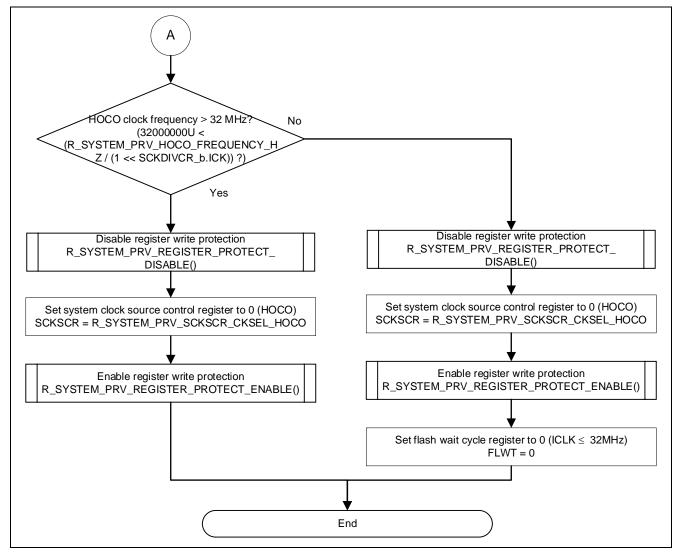


Figure 4.10 R\_SYS\_SystemClockHOCOSet Function Processing Flow (2/2)

#### 4.3.9 R\_SYS\_SystemClockMOCOSet Function

Table 4-18 R\_SYS\_SystemClockMOCOSet Function Specifications

Format	int32_t R_SYS_SystemClockMOCOSet(void)
Description	Specifies the middle-speed on-chip oscillator for the system clock source.
	The flash memory wait state count is set to zero cycles.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	_

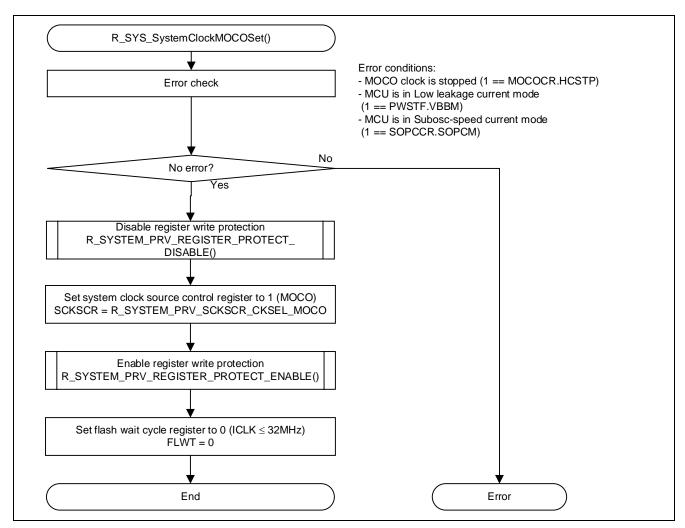


Figure 4.11 R\_SYS\_SystemClockMOCOSet Function Processing Flow

#### 4.3.10 R\_SYS\_SystemClockLOCOSet Function

Table 4-19 R\_SYS\_SystemClockLOCOSet Function Specifications

Format	int32_t R_SYS_SystemClockLOCOSet(void)
Description	Specifies the low-speed on-chip oscillator for the system clock source.
	The flash memory wait state count is set to zero cycles.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	-

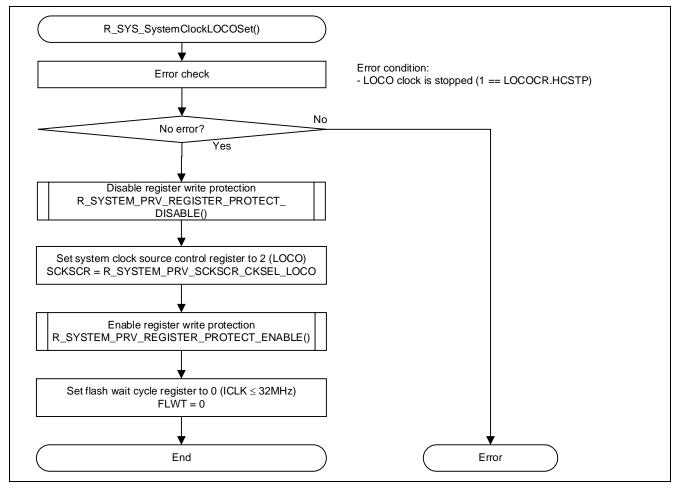


Figure 4.12 R\_SYS\_SystemClockLOCOSet Function Processing Flow

#### 4.3.11 R\_SYS\_SystemClockMOSCSet Function

Table 4-20 R\_SYS\_SystemClockMOSCSet Function Specifications

Format	int32_t R_SYS_SystemClockMOSCSet(void)
Description	Specifies the main clock oscillator for the system clock source.
	The flash memory wait cycle count is set to zero cycles.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	-

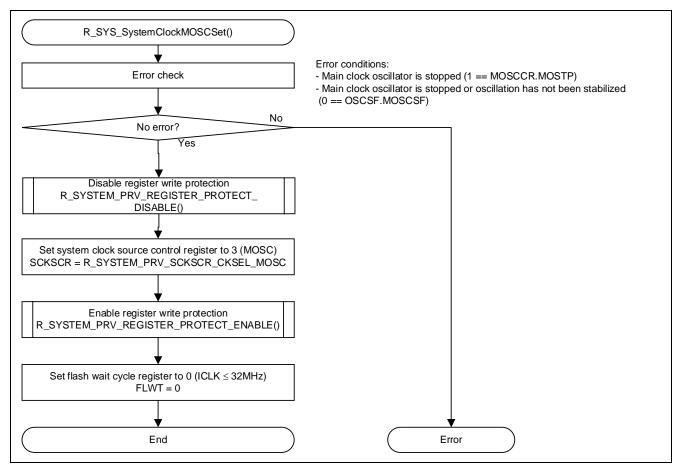


Figure 4.13 R\_SYS\_SystemClockMOSCSet Function Processing Flow

#### 4.3.12 R\_SYS\_SystemClockSOSCSet Function

Table 4-21 R\_SYS\_SystemClockSOSCSet Function Specifications

Format	int32_t R_SYS_SystemClockSOSCSet(void)
Description	Specifies the sub-clock oscillator for the system clock source.
	The flash memory wait cycle count is set to zero cycles.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	-

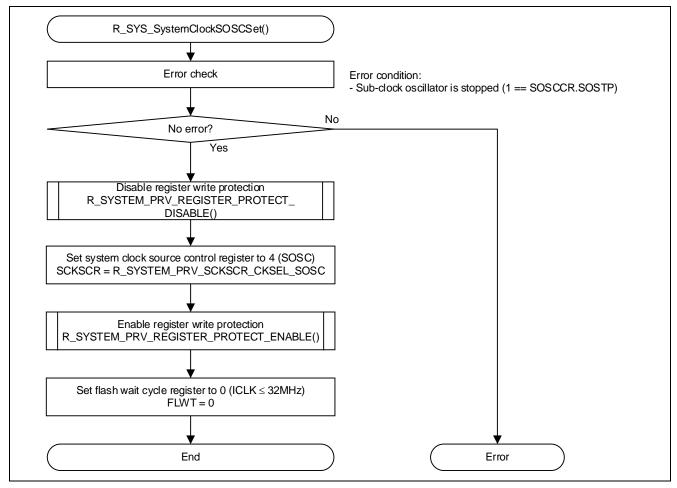


Figure 4.14 R\_SYS\_SystemClockSOSCSet Function Processing Flow

## 4.3.13 R\_SYS\_SystemClockPLLSet Function

Table 4-22 R\_SYS\_SystemClockPLLSet Function Specifications

Format	int32_t R_SYS_SystemClockPLLSet(void)
Description	Specifies the PLL circuit for the system clock source.  When the operating frequency is higher than 32 MHz, the wait cycle in flash memory access is set to one cycle. When the operating frequency is 32 MHz or lower, the flash memory wait
	cycle count is set to zero cycles.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	_

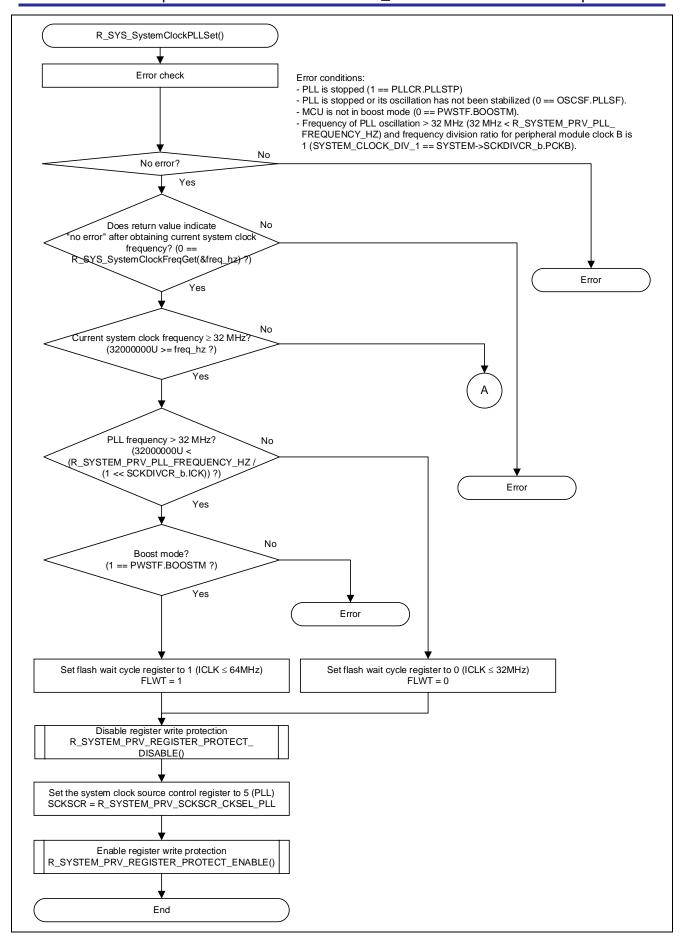


Figure 4.15 R\_SYS\_SystemClockPLLSet Function Processing Flow (1/2)


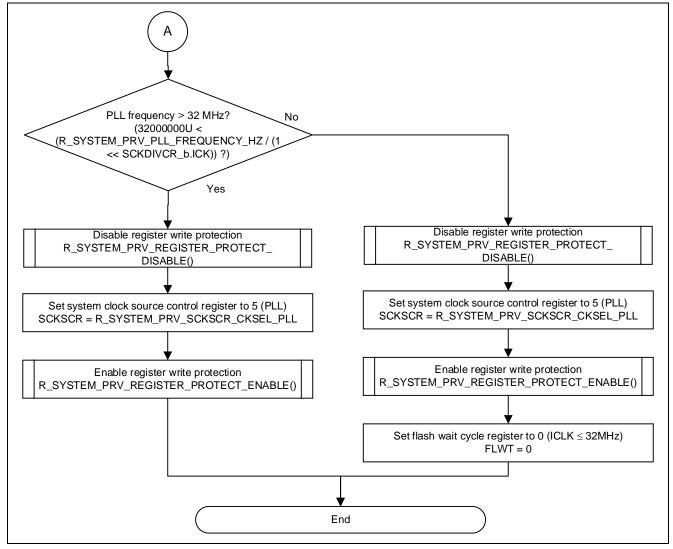


Figure 4.16 R\_SYS\_SystemClockPLLSet Function Processing Flow (2/2)

#### 4.3.14 R\_SYS\_SystemClockFreqGet Function

**Table 4-23** R\_SYS\_SystemClockFreqGet Function Specifications

Format	int32_t R_SYS_SystemClockFreqGet(uint32_t * p_freq_hz)
Description	Obtains the frequency of the system clock (ICLK) and peripheral module clock (PCLKA).
Argument	uint32_t * p_freq_hz [Input]: Specifies the location for storing the obtained frequency.
Return	Normal (0)
value	Abnormal (-1)
Remarks	-

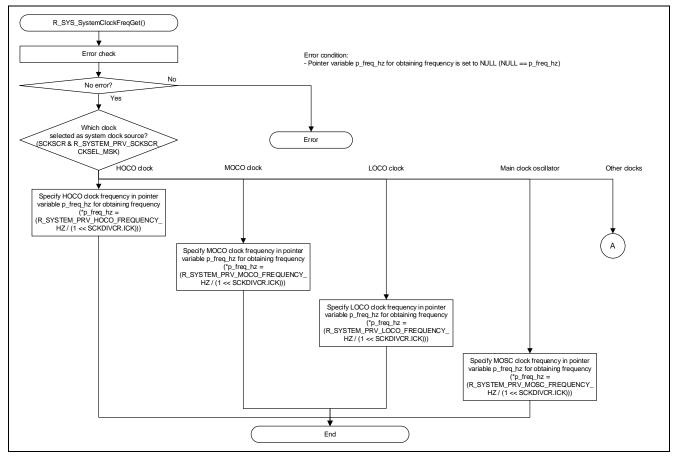

R\_SYS\_SystemClockFreqGet Function Processing Flow (1/2) Figure 4.17

Aug. 17, 2020

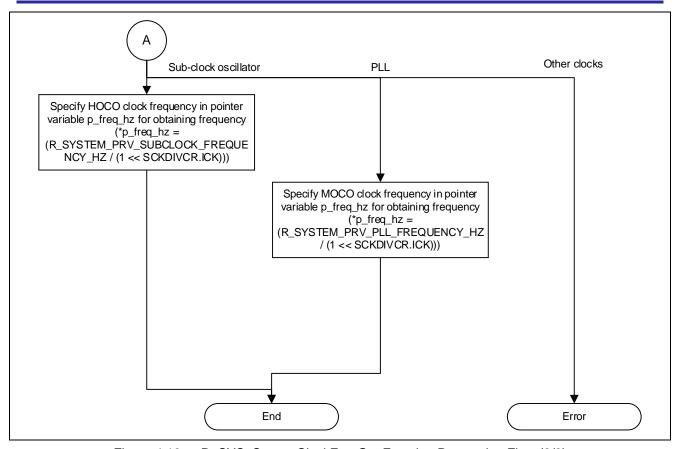


Figure 4.18 R\_SYS\_SystemClockFreqGet Function Processing Flow (2/2)

## 4.3.15 R\_SYS\_PeripheralClockFreqGet Function

Table 4-24 R\_SYS\_PeripheralClockFreqGet Function Specifications

Format	int32_t R_SYS_PeripheralClockFreqGet(uint32_t * p_freq_hz)
Description	Obtains the frequency of the peripheral module clock B (PCLKB).
Argument	uint32_t * p_freq_hz [Input]: Specifies the location for storing the obtained frequency.
Return	Normal (0)
value	Abnormal (-1)
Remarks	-

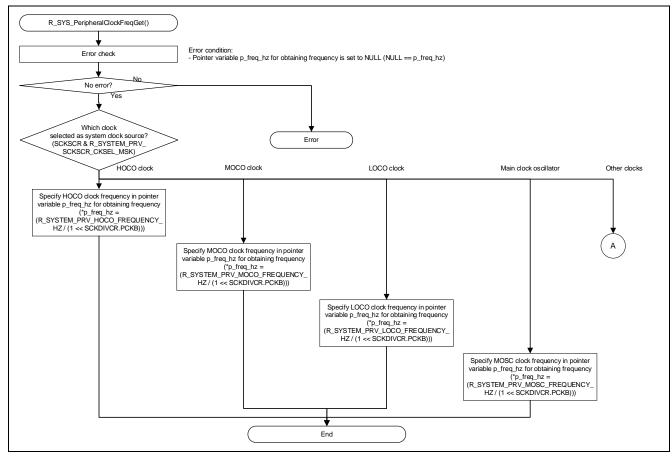


Figure 4.19 R\_SYS\_PeripheralClockFreqGet Function Processing Flow (1/2)

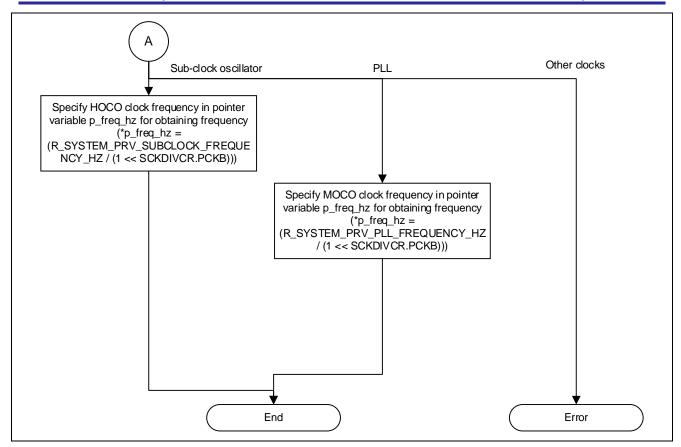


Figure 4.20 R\_SYS\_PeripheralClockFreqGet Function Processing Flow (2/2)

# 4.3.16 R\_SYS\_SystemClockDividerSet Function

Table 4-25 R\_SYS\_SystemClockDividerSet Function Specifications

Format	int32_t R_SYS_SystemClockDividerSet(e_system_sys_clock_div_t iclk_div, e_system_sys_clock_div_t pclkb_div)
Description	Specifies the frequency division values for the system clock (ICLK)/peripheral module clock A (PCLKA) and the peripheral module clock B (PCLKB).
Argument	e_system_sys_clock_div_t iclk_div [Input]: Specifies the frequency division value for the system clock (ICLK) and peripheral module clock A (PCLKA).
	e_system_sys_clock_div_t pclkb_div [Input]: Specifies the frequency division value for the peripheral module clock B (PCLKB).
Return	Normal (0)
value	Abnormal (-1)
Remarks	-

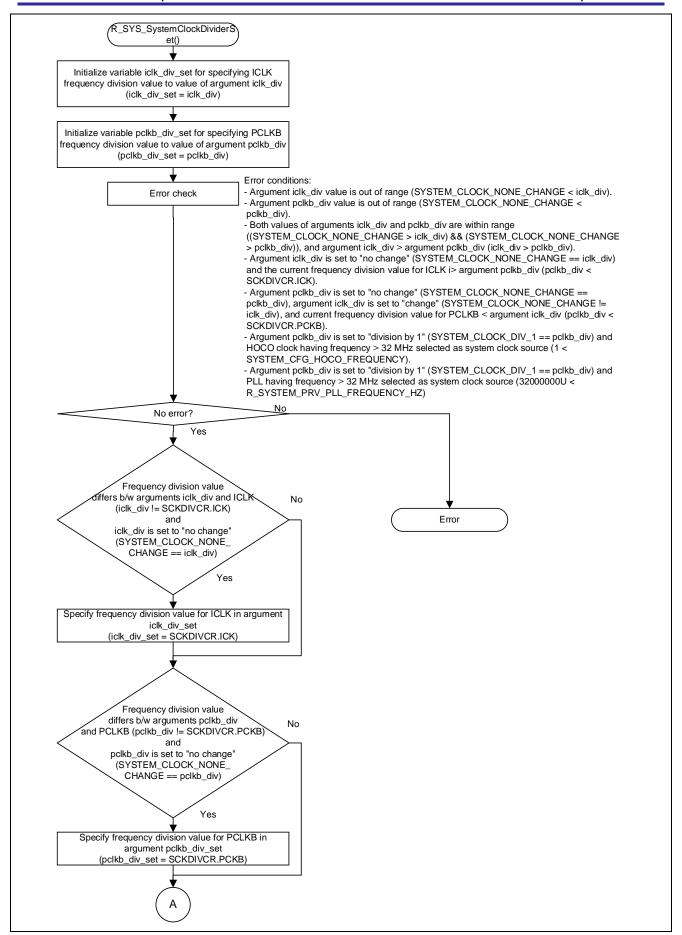


Figure 4.21 R\_SYS\_SystemClockDividerSet Function Processing Flow (1/2)

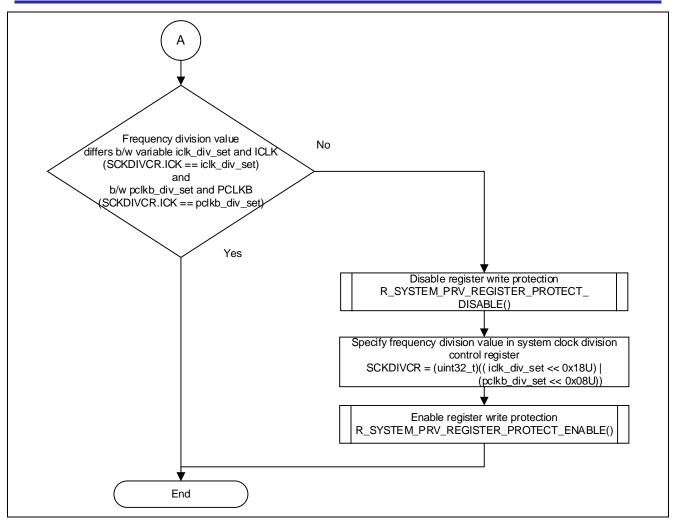


Figure 4.22 R\_SYS\_SystemClockDividerSet Function Processing Flow (2/2)

## 4.3.17 R\_SYS\_MainOscSpeedClockStart Function

Table 4-26 R\_SYS\_MainOscSpeedClockStart Function Specifications

Format	void R_SYS_MainOscSpeedClockStart(void)
Description	Starts the operation of the main clock oscillator.
Argument	None
Return	None
value	
Remarks	

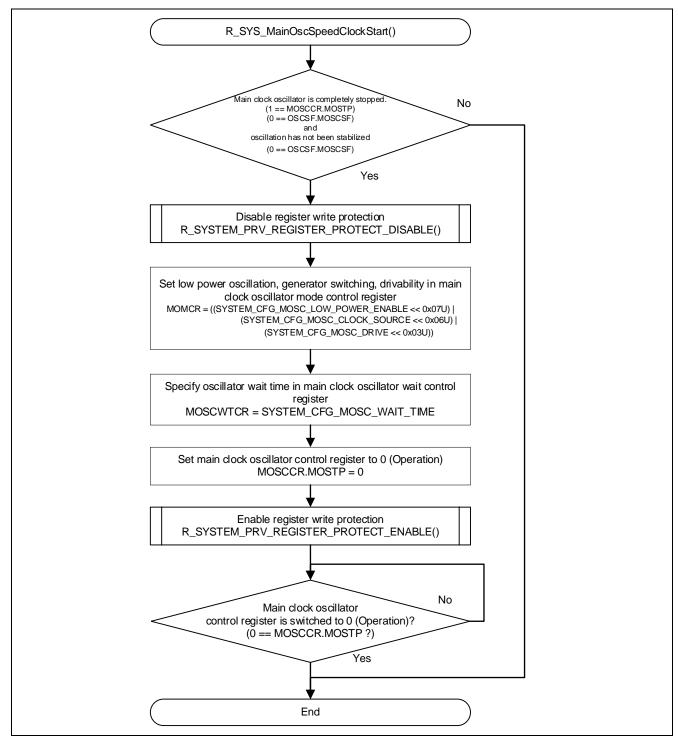


Figure 4.23 R\_SYS\_MainOscSpeedClockStart Function Processing Flow

## 4.3.18 R\_SYS\_MainOscSpeedClockStop Function

Table 4-27 R\_SYS\_MainOscSpeedClockStop Function Specifications

Format	int32_t R_SYS_MainOscSpeedClockStop(void)
Description	Stops the operation of the main clock oscillator.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	1

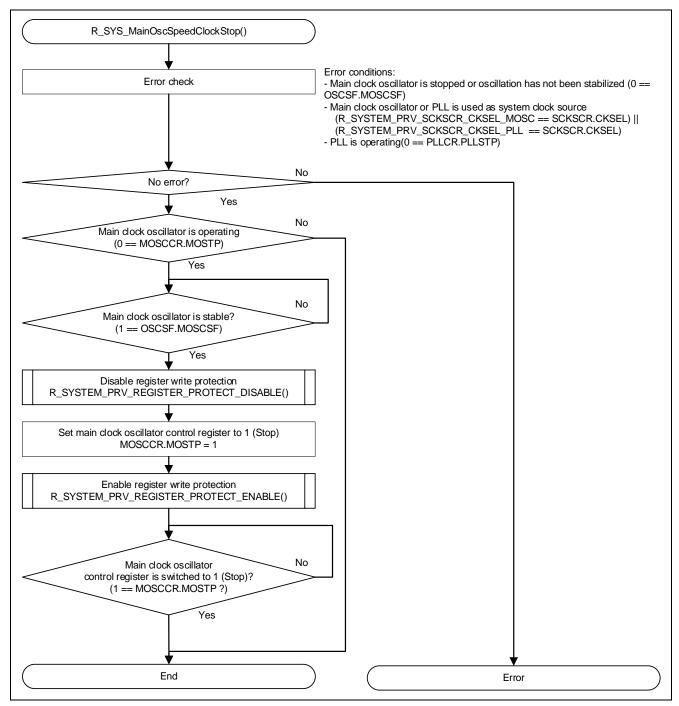


Figure 4.24 R\_SYS\_MainOscSpeedClockStop Function Processing Flow

# 4.3.19 R\_SYS\_HighSpeedClockStart Function

Table 4-28 R\_SYS\_HighSpeedClockStart Function Specifications

Format	int32_t R_SYS_HighSpeedClockStart(void)
Description	Starts the operation of the high-speed on-chip oscillator.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	1

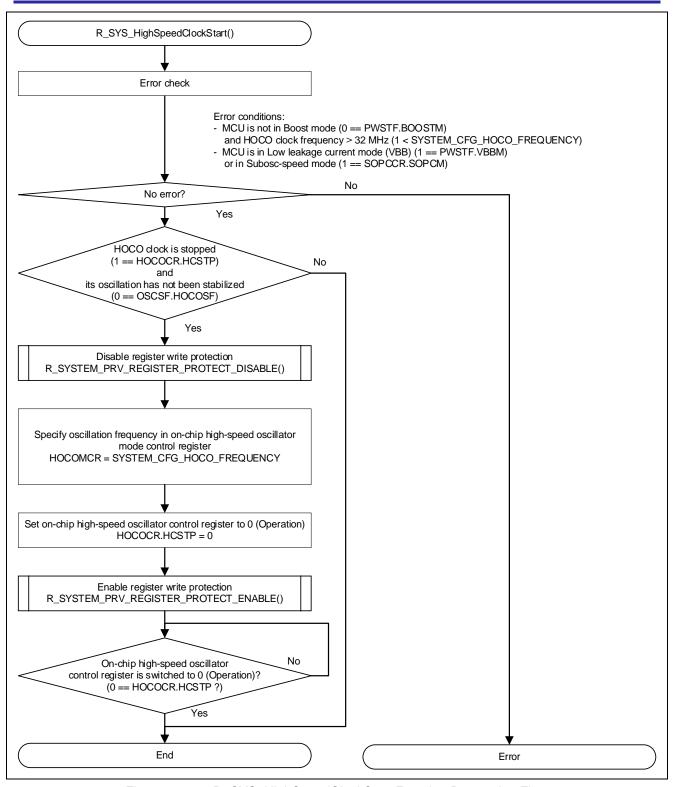


Figure 4.25 R\_SYS\_HighSpeedClockStart Function Processing Flow

## 4.3.20 R\_SYS\_HighSpeedClockStop Function

Table 4-29 R\_SYS\_HighSpeedClockStop Function Specifications

Format	int32_t R_SYS_HighSpeedClockStop(void)
Description	Stops the operation of the high-speed on-chip oscillator.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	1

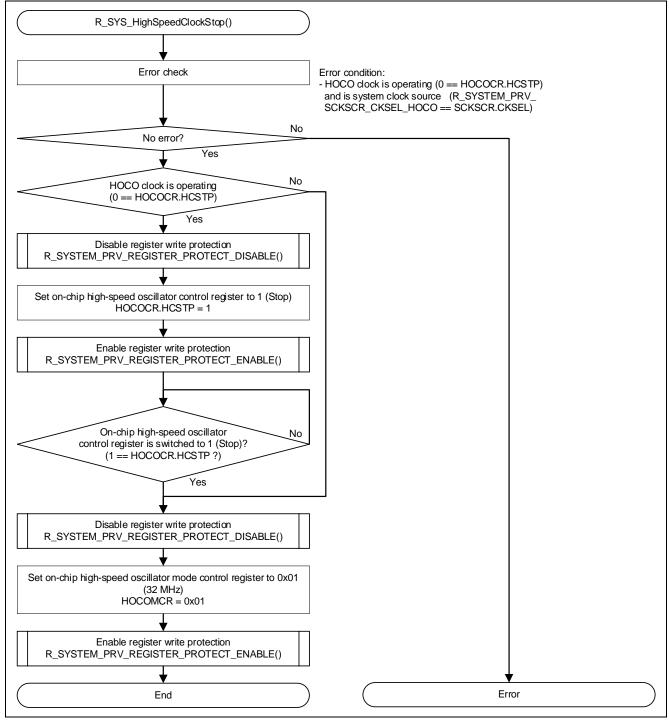


Figure 4.26 R\_SYS\_HighSpeedClockStop Function Processing Flow

## 4.3.21 R\_SYS\_MediumSpeedClockStart Function

Table 4-30 R\_SYS\_MediumSpeedClockStart Function Specifications

Format	int32_t R_SYS_MediumSpeedClockStart(void)
Description	Starts the operation of the middle-speed on-chip oscillator.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	1

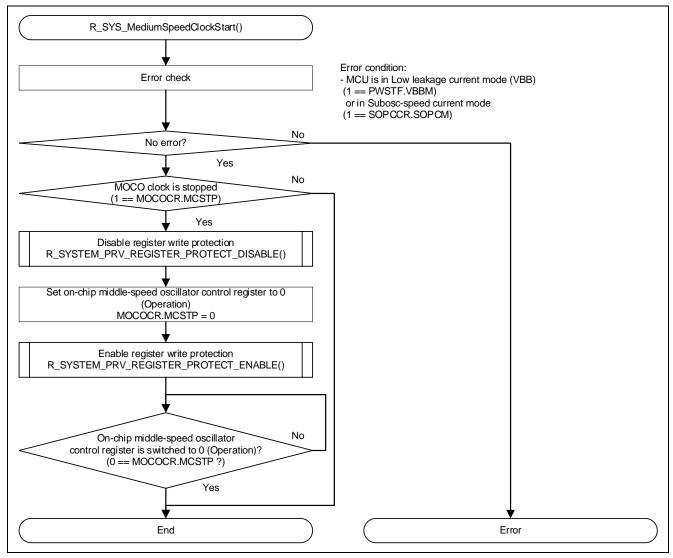


Figure 4.27 R\_SYS\_MediumSpeedClockStart Function Processing Flow

## 4.3.22 R\_SYS\_MediumSpeedClockStop Function

Table 4-31 R\_SYS\_MediumSpeedClockStop Function Specifications

Format	int32_t R_SYS_MediumSpeedClockStop(void)
Description	Stops the operation of the middle-speed on-chip oscillator.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	1

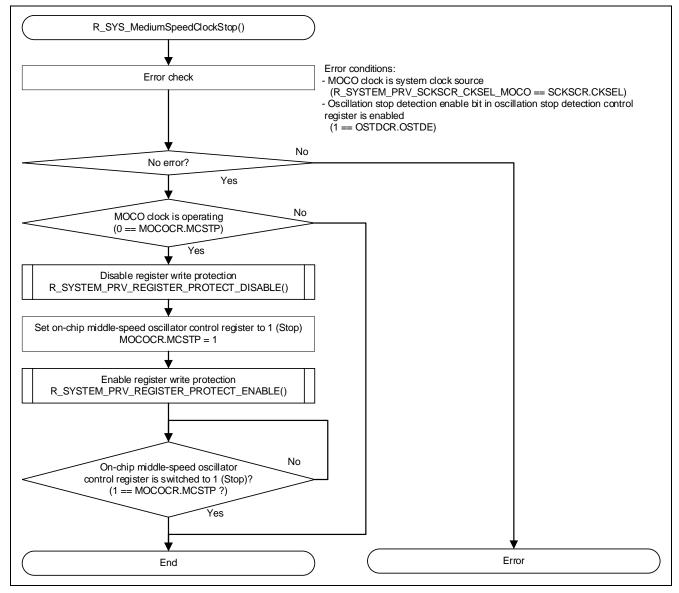


Figure 4.28 R\_SYS\_MediumSpeedClockStop Function Processing Flow

## 4.3.23 R\_SYS\_LowSpeedClockStart Function

Table 4-32 R\_SYS\_LowSpeedClockStart Function Specifications

Format	void R_SYS_LowSpeedClockStart(void)
Description	Starts the operation of the low-speed on-chip oscillator.
Argument	None
Return	None
value	
Remarks	-

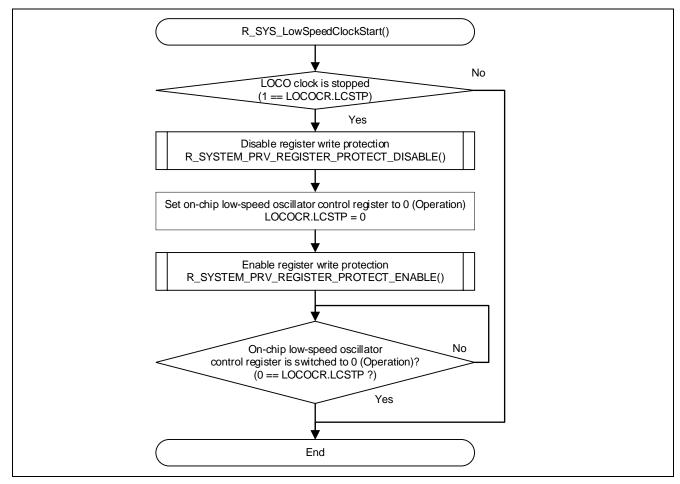


Figure 4.29 R\_SYS\_LowSpeedClockStart Function Processing Flow

## 4.3.24 R\_SYS\_LowSpeedClockStop Function

Table 4-33 R\_SYS\_LowSpeedClockStop Function Specifications

Format	int32_t R_SYS_LowSpeedClockStop(void)
Description	Stops the operation of the low-speed on-chip oscillator.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	1

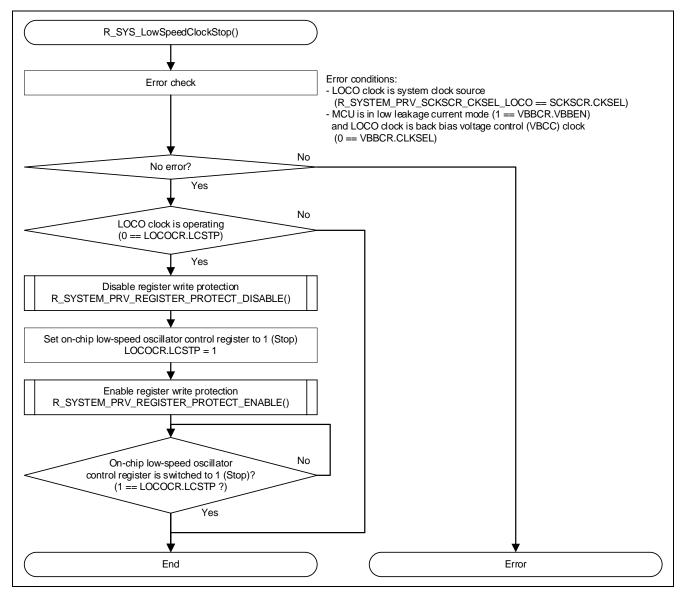


Figure 4.30 R\_SYS\_LowSpeedClockStop Function Processing Flow

## 4.3.25 R\_SYS\_SubOscSpeedClockStart Function

Table 4-34 R\_SYS\_SubOscSpeedClockStart Function Specifications

Format	void R_SYS_SubOscSpeedClockStart(void)
Description	Starts the operation of the sub-clock oscillator.
Argument	None
Return	None
value	
Remarks	_

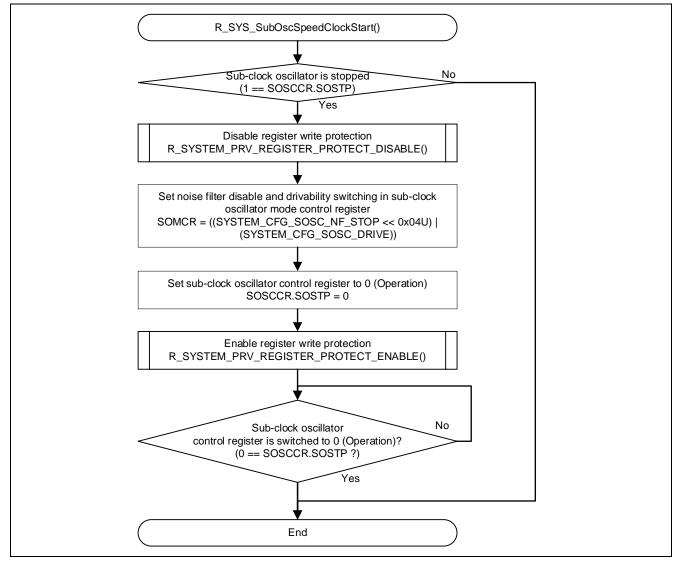


Figure 4.31 R\_SYS\_SubOscSpeedClockStart Function Processing Flow

## 4.3.26 R\_SYS\_SubOscSpeedClockStop Function

Table 4-35 R\_SYS\_SubOscSpeedClockStop Function Specifications

Format	int32_t R_SYS_SubOscSpeedClockStop(void)
Description	Stops the operation of the sub-clock oscillator.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	1

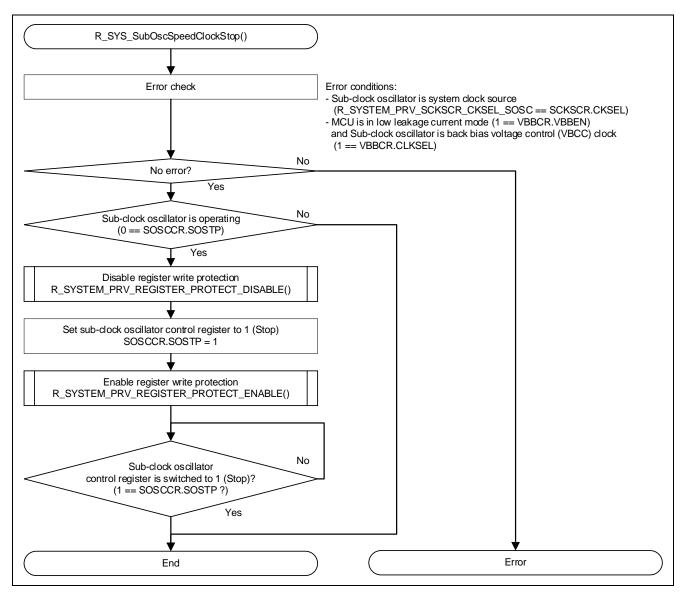


Figure 4.32 R\_SYS\_SubOscSpeedClockStop Function Processing Flow

# 4.3.27 R\_SYS\_PLLSpeedClockStart Function

Table 4-36 R\_SYS\_PLLSpeedClockStart Function Specifications

Format	int32_t R_SYS_PLLSpeedClockStart(void)
Description	Starts the operation of the PLL circuit.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	_

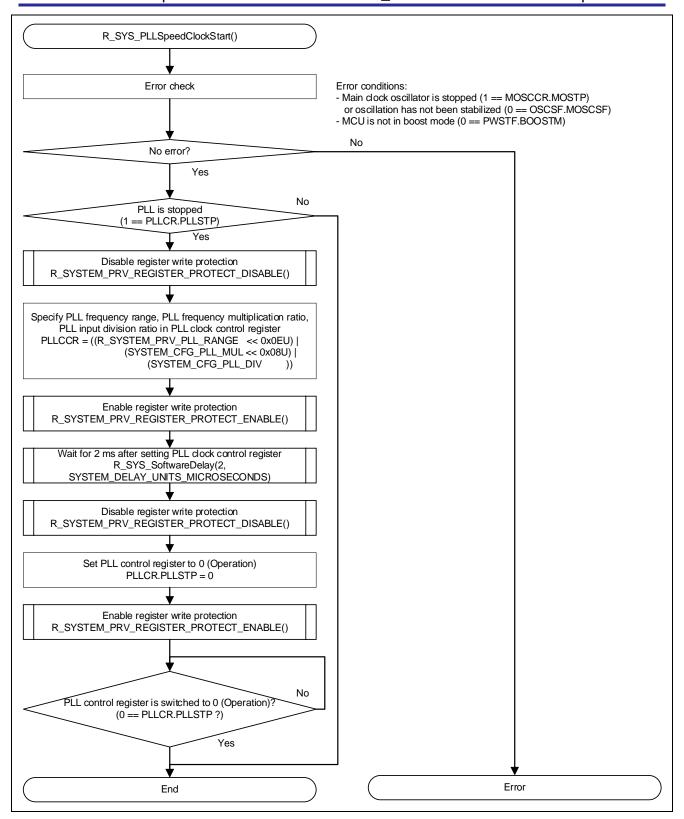


Figure 4.33 R\_SYS\_PLLSpeedClockStart Function Processing Flow

## 4.3.28 R\_SYS\_PLLSpeedClockStop Function

Table 4-37 R\_SYS\_PLLSpeedClockStop Function

Format	int32_t R_SYS_PLLSpeedClockStop(void)
Description	Stops the operation of the PLL circuit.
Argument	None
Return	Normal (0)
value	Abnormal (-1)
Remarks	1

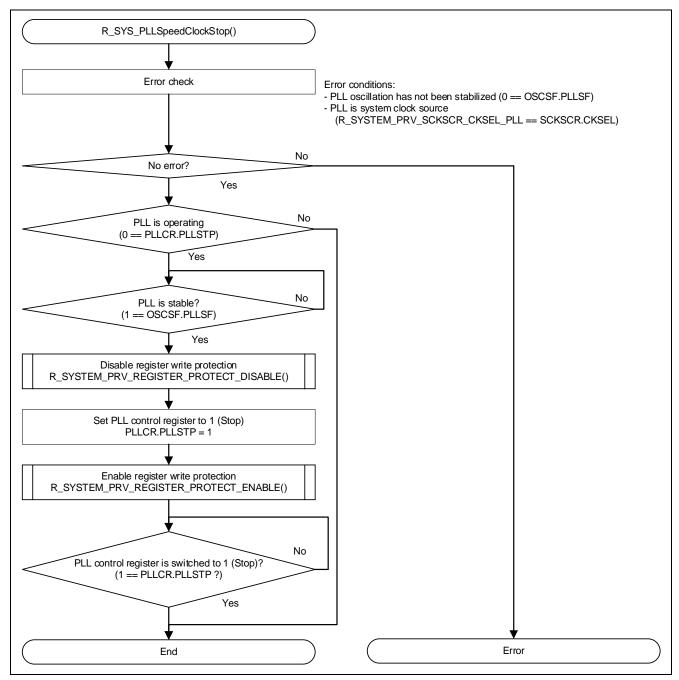


Figure 4.34 R\_SYS\_PLLSpeedClockStop Function Processing Flow

# 4.3.29 R\_SYS\_OscStabilizationFlagGet Function

Table 4-38 R\_SYS\_OscStabilizationFlagGet Function

Format	uint8_t R_SYS_OscStabilizationFlagGet(void)
Description	Obtains the value of the OSCSF register.
Argument	None
Return	uint8_t: Returns the value of the OSCSF register.
value	
Remarks	-

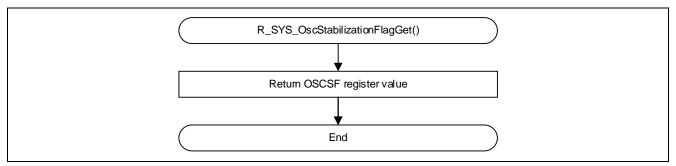


Figure 4.35 R\_SYS\_OscStabilizationFlagGet Function Processing Flow

## 4.3.30 R\_SYS\_IrqEventLinkSet Function

Table 4-39 R\_SYS\_IrqEventLinkSet Function Specifications

Format	int32_t R_SYS_IrqEventLinkSet(IRQn_Type irq, uint32_t iels_value, system_int_cb_t callback)
Description	Registers an interrupt handler as a callback function.
	This callback function is called from the interrupt handler of a specified IELx_IRQn number.
Argument	IRQn_Type irq [Input]: Specifies an event link number (0 to 31).
	uint32_t iels_value [Input]: Specifies a value of the event link signal to set in the
	IELSRn.IELS register.
	system_int_cb_t callback [Input]: Specifies a callback function.
Return	Normal (0)
value	Abnormal (-1)
Remarks	

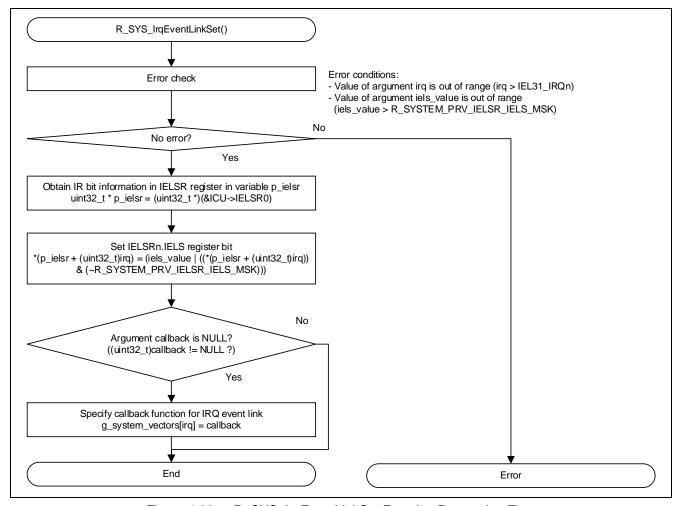


Figure 4.36 R\_SYS\_IrqEventLinkSet Function Processing Flow

## 4.3.31 R\_SYS\_IrqStatusGet Function

Table 4-40 R\_SYS\_IrqStatusGet Function Specifications

Format	int32_t R_SYS_IrqStatusGet(IRQn_Type irq, uint8_t * p_ir)
Description	Obtains the status of the IR flag of a specified IELx_IRQn number.
Argument	IRQn_Type irq [Input]: Specifies an event link number (0 to 31).
	uint8_t * p_ir [Input]: Specifies the location for storing the obtained IR flag.
Return	Normal (0)
value	Abnormal (-1)
Remarks	

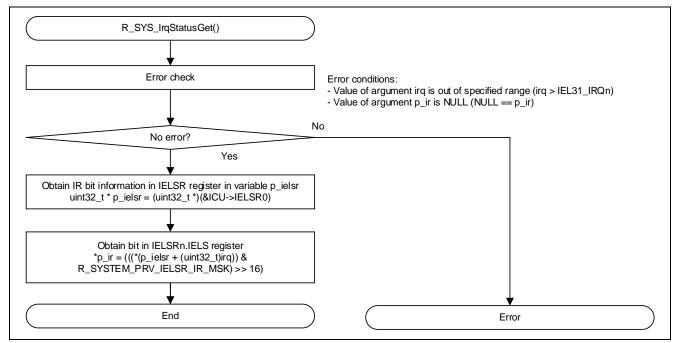


Figure 4.37 R\_SYS\_IrqStatusGet Function Processing Flow

## 4.3.32 R\_SYS\_IrqStatusClear Function

Table 4-41 R\_SYS\_IrqStatusClear Function Specifications

Format	int32_t R_SYS_IrqStatusClear(IRQn_Type irq)
Description	Clears the status of the IR flag of a specified IELx_IRQn number.
Argument	IRQn_Type irq [Input]: Specifies an event link number (0 to 31).
Return	Normal (0)
value	Abnormal (-1)
Remarks	-

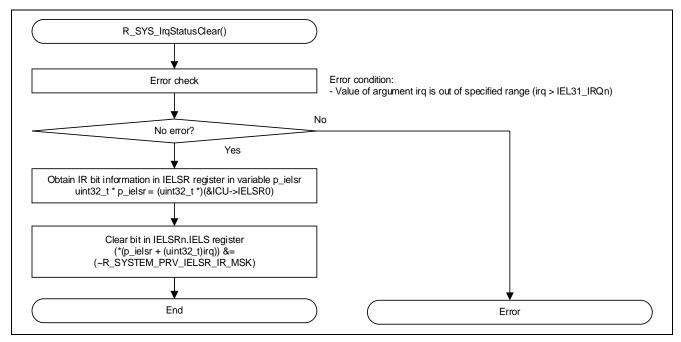


Figure 4.38 R\_SYS\_IrqStatusClear Function Processing Flow

RENESAS

## 4.3.33 R\_SYS\_EnterCriticalSection Function

Table 4-42 R\_SYS\_EnterCriticalSection Function Specifications

Format	void R_SYS_EnterCriticalSection(void)
Description	Strts prohibiting interrupts
Argument	None
Return	None
value	
Remarks	-

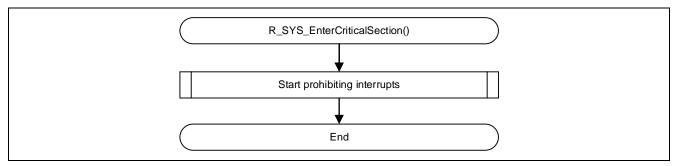


Figure 4.39 R\_SYS\_EnterCriticalSection Function Processing Flow

## 4.3.34 R\_SYS\_ExitCriticalSection Function

Table 4-43 R\_SYS\_ExitCriticalSection Function Specifications

Format	void R_SYS_ExitCriticalSection(void)
Description	Stops prohibiting interrupts
Argument	None
Return	None
value	
Remarks	-

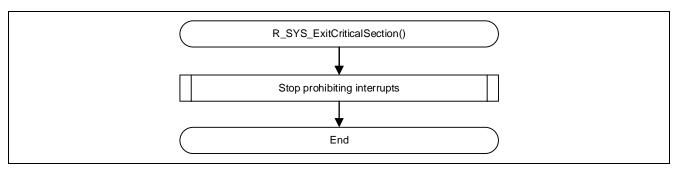


Figure 4.40 R\_SYS\_ExitCriticalSection Function Processing Flow

## 4.3.35 R\_SYS\_ResourceLock Function

Table 4-44 R\_SYS\_ResourceLock Function Specifications

Format	int32_t R_SYS_ResourceLock(e_system_mcu_lock_t hw_index)
Description	Locks a hardware resource.
Argument	e_system_mcu_lock_t hw_index [Input]: Specifies a hardware resource number.
Return	Lock succeeded (0)
value	Lock failed (-1)
Remarks	-

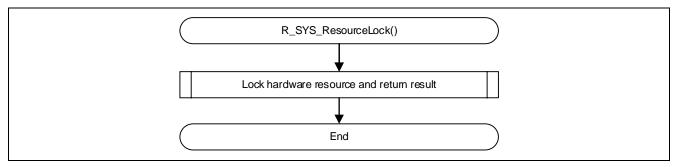


Figure 4.41 R\_SYS\_ResourceLock Function Processing Flow

## 4.3.36 R\_SYS\_ResourceUnlock Function

Table 4-45 R\_SYS\_ResourceUnlock Function Specifications

Format	void R_SYS_ResourceUnlock(e_system_mcu_lock_t hw_index)
Description	Unlocks a hardware resource.
Argument	e_system_mcu_lock_t hw_index [Input]: Specifies a hardware resource number.
Return	None
value	
Remarks	-

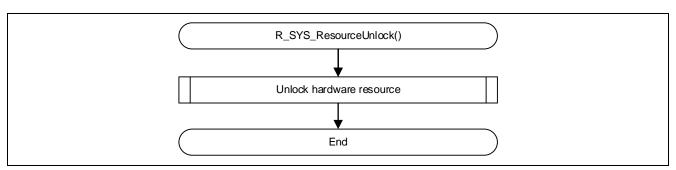


Figure 4.42 R\_SYS\_ResourceUnlock Function Processing Flow

## 4.3.37 R\_SYS\_RegisterProtectEnable Function

Table 4-46 R\_SYS\_RegisterProtectEnable Function Specifications

Format	void R_SYS_RegisterProtectEnable(e_system_reg_protect_t regs_to_protect)
Description	Enables register protection.
Argument	e_system_reg_protect_t regs_to_protect [Input]: Specifies a register protection number.
Return	None
value	
Remarks	-

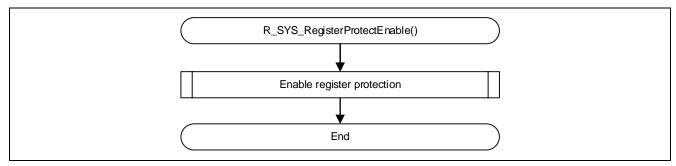


Figure 4.43 R\_SYS\_RegisterProtectEnable Function Processing Flow

# 4.3.38 R\_SYS\_RegisterProtectDisable Function

Table 4-47 R\_SYS\_RegisterProtectDisable Function Specifications

Format	void R_SYS_RegisterProtectDisable(e_system_reg_protect_t regs_to_unprotect)
Description	Disables register protection.
Argument	e_system_reg_protect_t regs_to_unprotect [Input]: Specifies a register protection number.
Return	None
value	
Remarks	_

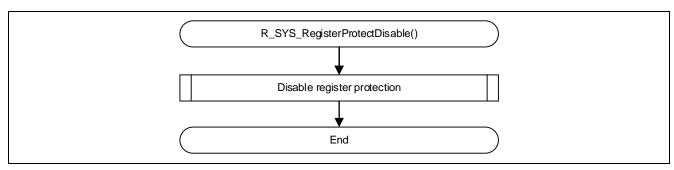


Figure 4.44 R\_SYS\_RegisterProtectDisable Function Processing Flow

# 4.3.39 R\_SYS\_SoftwareDelay Function

Table 4-48 R\_SYS\_SoftwareDelay Function Specifications

Format	void R_SYS_SoftwareDelay(uint32_t delay, e_system_delay_units_t units)
Description	Generates a software delay of the specified number of milliseconds or microseconds.
Argument	uint32_t delay [Input]: Specifies a delay time.
	e_system_delay_units_t units [Input]: Specifies the unit (milliseconds or microseconds) of the delay time.
Return value	None
Remarks	-

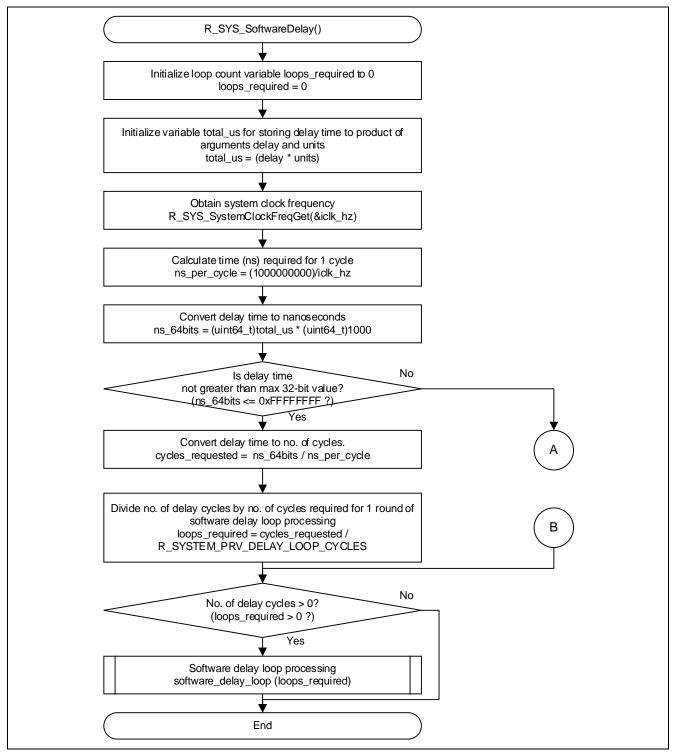


Figure 4.45 R\_SYS\_SoftwareDelay Function Processing Flow (1/2)

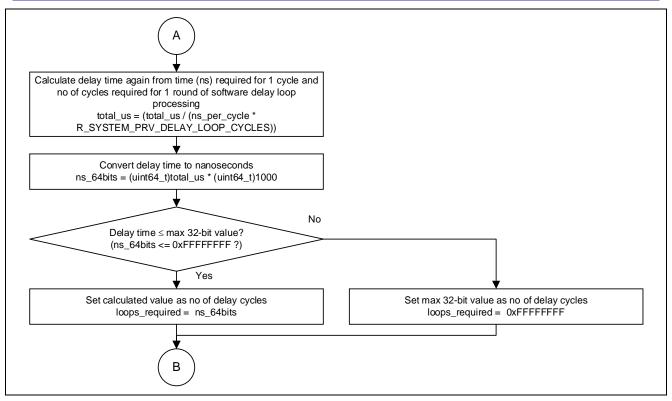


Figure 4.46 R\_SYS\_SoftwareDelay Function Processing Flow (2/2)

## 4.3.40 R\_SYS\_GetVersion Function

Table 4-49 R\_SYS\_GetVersion Function Specifications

Format	uint32_t R_SYS_GetVersion(void)
Description	Obtains the version of the R_SYSTEM driver.
Argument	None
Return	Obtained version of the R_SYSTEM driver
value	
Remarks	_

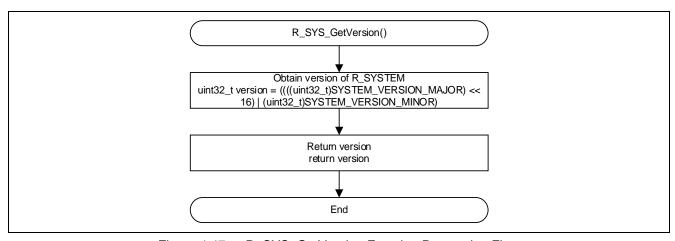


Figure 4.47 R\_SYS\_GetVersion Function Processing Flow

## 4.3.41 r\_sys\_BoostFlagGet Function

Table 4-50 r\_sys\_BoostFlagGet Function Specifications

Format	int32_t r_sys_BoostFlagGet(bool * boost_flg)
Description	Obtains the flag indicating the occurrence of a transition to boost mode.
Argument	bool * boost_flg [Input]: Specifies the location for storing the obtained flag indicating a transition to boost mode.
Return value	Normal end (0)
Remarks	boost_flg == true: Transition to boost mode occurred.
	boost_flg == false: Transition to boost mode has not occurred.

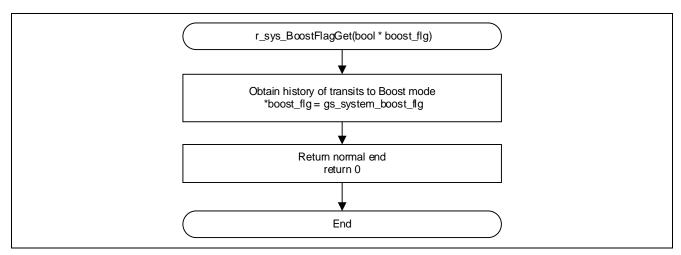


Figure 4.48 r\_sys\_BoostFlagGet Function Processing Flow

## 4.3.42 r\_sys\_BoostFlagSet Function

Table 4-51 r\_sys\_BoostFlagSet Function Specifications

Format	int32_t r_sys_BoostFlagSet(void)
Description	Sets the flag indicating the occurrence of a transition to boost mode.
Argument	None
Return	Normal end (0)
value	
Remarks	

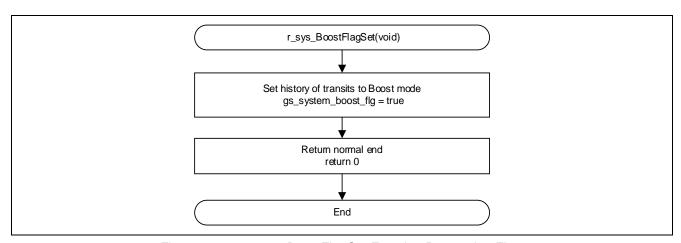


Figure 4.49 r\_sys\_BoostFlagSet Function Processing Flow

## 4.3.43 r\_sys\_BoostFlagClr Function

Table 4-52 r\_sys\_BoostFlagClr Function Specifications

Format	int32_t r_sys_BoostFlagClr(void)
Description	Clears the flag indicating the occurrence of a transition to boost mode.
Argument	None
Return	Normal end (0)
value	
Remarks	_


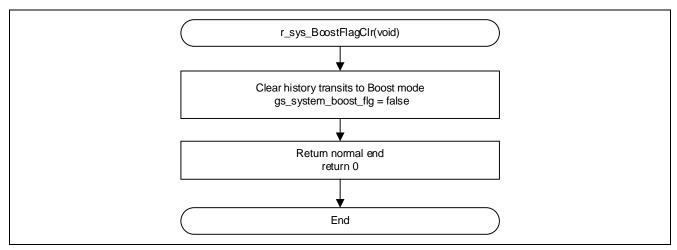


Figure 4.50 r\_sys\_BoostFlagClr Function Processing Flow

## 4.3.44 r\_system\_wdt\_refresh Function

Table 4-53 r\_system\_wdt\_refresh Function Specifications

書式	void r_system_wdt_refresh (void)
仕様説明	Refresh the down-counter of WDT.
引数	None
戻り値	None
備考	This function is implemented as a WEAK function in the R_SYSTEM Driver. Implementing a non-weak function with the same name will disable the corresponding function in R_SYSTEM driver.

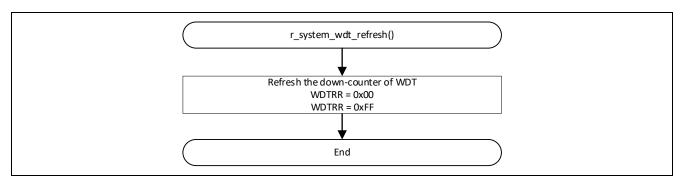

 $\ensuremath{\,\mathbb{Z}}$  4.51 r\_system\_wdt\_refresh Function Processing Flow

# 4.3.45 IELn\_IRQHandler Function (n = 0 to 31)

Table 4-54 IELn\_IRQHandler Function Specifications

Format	void IELn_IRQHandler(void)
Description	Executes the IRQ interrupt handler defined by the event link.
Argument	None
Return value	None
Remarks	-

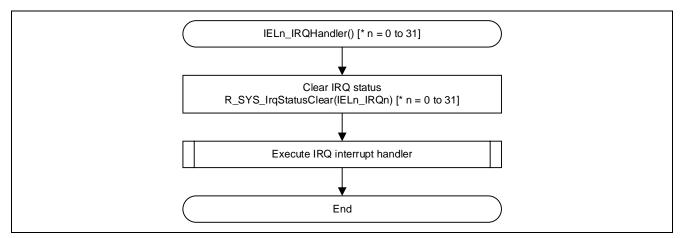


Figure 4.52 IELn\_IRQHandler Function Processing Flow

# 4.3.46 R\_NVIC\_EnableIRQ Function

Table 4-55 R\_NVIC\_EnableIRQ Function Specifications

Format	STATIC_FORCEINLINE void R_NVIC_EnableIRQ(IRQn_Type IRQn)
Description	Enables the interrupt corresponding to an IRQ number of the NVIC defined in Cortex-M0+.
Argument	IRQn_Type IRQn [Input]: Specifies an IRQ number (0 to 31).
Return	None
value	
Remarks	The interrupt is enabled by this function executed via RAM. (The code is to be expanded
	inline.)

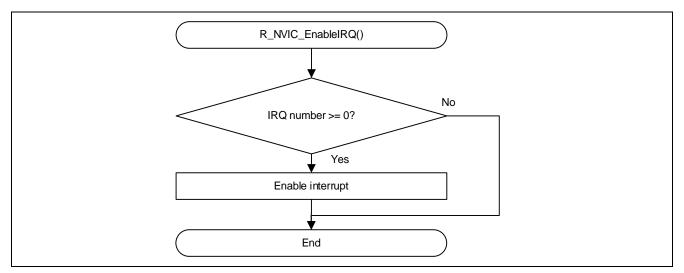


Figure 4.53 R\_NVIC\_EnableIRQ Function Processing Flow

## 4.3.47 R\_NVIC\_GetEnableIRQ Function

Table 4-56 R\_NVIC\_GetEnableIRQ Function Specifications

Format	STATIC_FORCEINLINE uint32_t R_NVIC_GetEnableIRQ(IRQn_Type IRQn)				
Description	Obtains the interrupt setting corresponding to an IRQ number of the NVIC defined in Cortex-M0+.				
Argument	IRQn_Type IRQn [Input]: Specifies an IRQ number (0 to 31).				
Return	Disabled (0)				
value	Enabled (1)				
Remarks	The interrupt setting is obtained by this function executed via RAM. (The code is to be expanded inline.)				

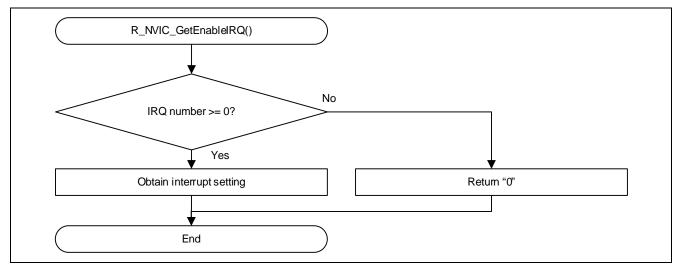


Figure 4.54 R\_NVIC\_GetEnableIRQ Function Processing Flow

## 4.3.48 R\_NVIC\_DisableIRQ Function

Table 4-57 R\_NVIC\_DisableIRQ Function Specifications

Format	STATIC_FORCEINLINE void R_NVIC_DisableIRQ(IRQn_Type IRQn)			
Description	ables the interrupt corresponding to an IRQ number of the NVIC defined in Cortex-M0+.			
Argument	Qn_Type IRQn [Input]: Specifies an IRQ number (0 to 31).			
Return	None			
value				
Remarks	The interrupt is disabled by this function executed via RAM. (The code is to be expanded			
	inline.)			

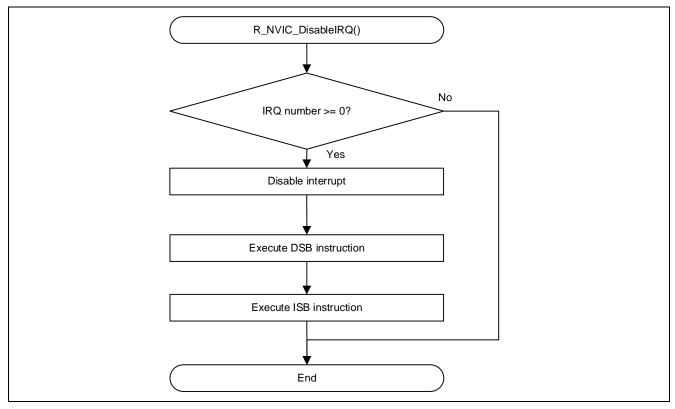


Figure 4.55 R\_NVIC\_DisableIRQ Function Processing Flow

## 4.3.49 R\_NVIC\_GetPendingIRQ Function

Table 4-58 R\_NVIC\_GetPendingIRQ Function Specifications

Format	STATIC_FORCEINLINE uint32_t R_NVIC_GetPendingIRQ(IRQn_Type IRQn)			
Description	Obtains the pending state of the interrupt corresponding to an IRQ number of the NVIC defined in Cortex-M0+.			
Argument	IRQn_Type IRQn [Input]: Specifies an IRQ number (0 to 31).			
Return	No interrupt pending (0)			
value	Interrupt pending (1)			
Remarks The interrupt pending state is obtained by this function executed via RAM. (The o				
	expanded inline.)			

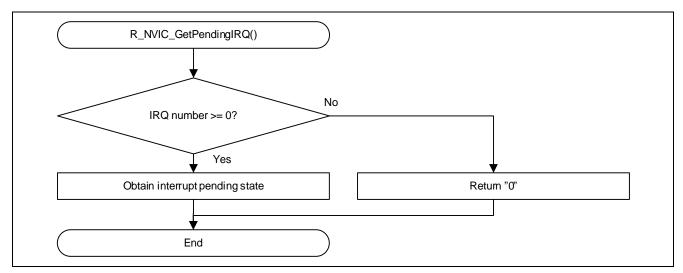


Figure 4.56 R\_NVIC\_GetPendingIRQ Function Processing Flow

## 4.3.50 R\_NVIC\_SetPendingIRQ Function

Table 4-59 R\_NVIC\_SetPendingIRQ Function Specifications

Format	STATIC_FORCEINLINE void R_NVIC_SetPendingIRQ(IRQn_Type IRQn)			
Description	Places the interrupt corresponding to an IRQ number of the NVIC defined in Cortex-M0+ to the pending state.			
Argument	IRQn_Type IRQn [Input]: Specifies an IRQ number (0 to 31).			
Return value	None			
Remarks	The interrupt is placed in the pending state by this function executed via RAM. (The code is to be expanded inline.)			

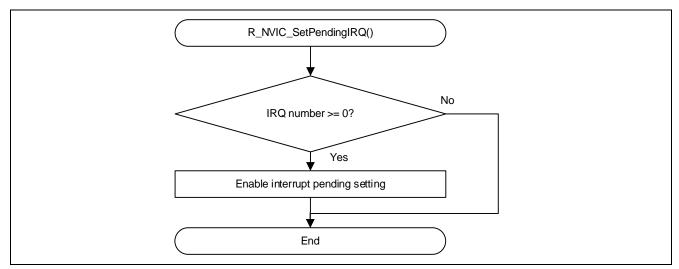


Figure 4.57 R\_NVIC\_SetPendingIRQ Function Processing Flow

## 4.3.51 R\_NVIC\_ClearPendingIRQ Function

Table 4-60 R\_NVIC\_ClearPendingIRQ Function Specifications

Format	STATIC_FORCEINLINE void R_NVIC_ClearPendingIRQ(IRQn_Type IRQn)			
Description	Releases the interrupt corresponding to an IRQ number of the NVIC defined in Cortex-M0+ from the pending state.			
	on the pending state.			
Argument	RQn_Type IRQn [Input]: Specifies an IRQ number (0 to 31).			
Return	None			
value				
Remarks	The interrupt is released from the pending state by this function executed via RAM. (The code is to be expanded inline.)			

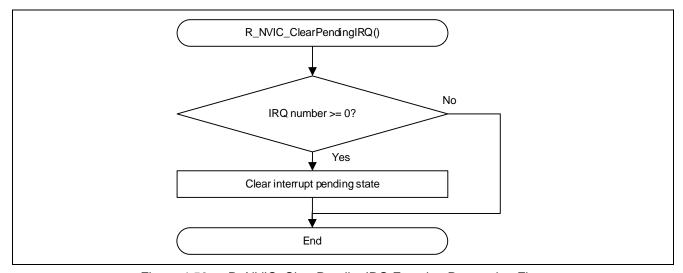


Figure 4.58 R\_NVIC\_ClearPendingIRQ Function Processing Flow

## 4.3.52 R\_NVIC\_SetPriority Function

Table 4-61 R\_NVIC\_SetPriority Function Specifications

Format	STATIC_FORCEINLINE void R_NVIC_SetPriority(IRQn_Type IRQn, uint32_t priority)			
Description	Specifies the priority of the interrupt corresponding to an IRQ number of the NVIC defined in			
	Cortex-M0+.			
Argument	IRQn_Type IRQn [Input]: Specifies an IRQ number (0 to 31).			
	uint32_t priority [Input]: Specifies the priority of the interrupt (0 to 3).			
Return	None			
value				
Remarks	The priority of the interrupt is specified by this function executed via RAM. (The code is to be			
	expanded inline.)			
	The smaller the value, the higher the priority of the interrupt.			

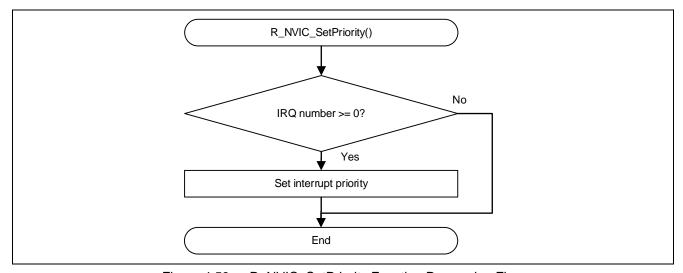


Figure 4.59 R\_NVIC\_SetPriority Function Processing Flow

## 4.3.53 R\_NVIC\_GetPriority Function

Table 4-62 R\_NVIC\_GetPriority Function Specifications

Format	STATIC_FORCEINLINE uint32_t R_NVIC_GetPriority(IRQn_Type IRQn)			
Description	btains the priority of the interrupt corresponding to an IRQ number of the NVIC defined in ortex-M0+.			
Argument	RQn_Type IRQn [Input]: Specifies an IRQ number (0 to 31).			
Return value	Priority of interrupt (0 to 3)			
Remarks	The priority of the interrupt is obtained by this function executed via RAM. (The code is to be expanded inline)  The smaller the value, the higher the priority of the interrupt.			

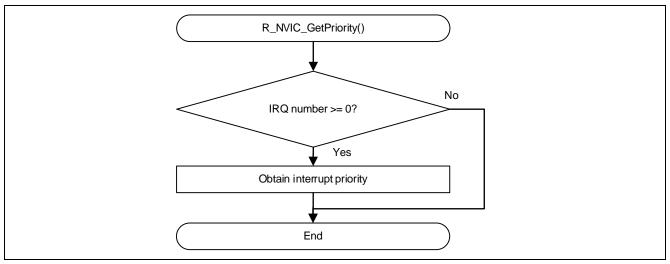


Figure 4.60 R\_NVIC\_GetPriority Function Processing Flow

## 4.3.54 R\_NVIC\_SetVector Function

Table 4-63 R\_NVIC\_SetVector Function Specifications

Format	STATIC_FORCEINLINE void R_NVIC_SetVector(IRQn_Type IRQn, uint32_t vector)			
Description	pecifies the offset address of the vector table from the base address.			
Argument	IRQn_Type IRQn [Input]: Specifies an IRQ number (0 to 31).			
	uint32_t vector [Input]: Specifies an offset address.			
Return	None			
value				
Remarks	The offset address is specified by this function executed via RAM. (The code is to be			
	expanded inline.)			

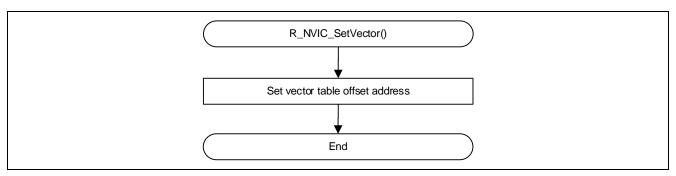


Figure 4.61 R\_NVIC\_SetVector Function Processing Flow

### 4.3.55 R\_NVIC\_GetVector Function

Table 4-64 R\_NVIC\_GetVector Function Specifications

Format	STATIC_FORCEINLINE uint32_t R_NVIC_GetVector(IRQn_Type IRQn)			
Description	Obtains the offset address of the vector table from the base address.			
Argument	IRQn_Type IRQn [Input]: Specifies an IRQ number (0 to 31).			
Return	Offset address			
value				
Remarks	The offset address is obtained by this function executed via RAM. (The code is to be expanded inline)			

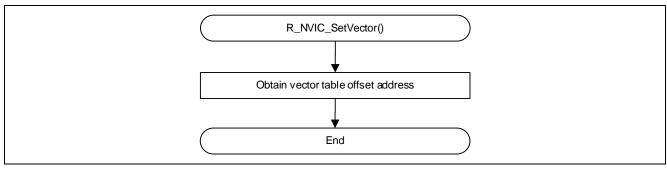


Figure 4.62 R\_NVIC\_GetVector Function Processing Flow

## 4.3.56 R\_NVIC\_SystemReset Function

Table 4-65 R\_NVIC\_SystemReset Function Specifications

Format	_STATIC_FORCEINLINE void R_NVIC_SystemReset(void)			
Description	equests a system-level reset.			
Argument	ne			
Return	None			
value				
Remarks	A reset is requested by this function executed via RAM.			

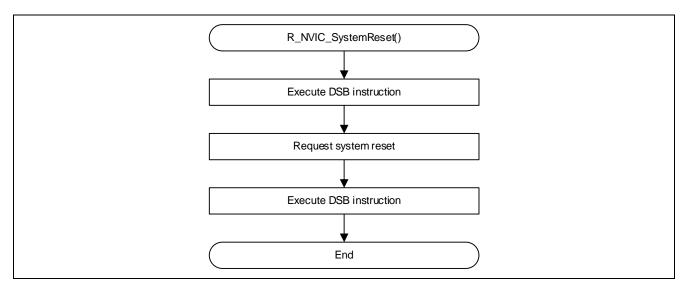


Figure 4.63 R\_NVIC\_SystemReset Function Processing Flow

## Website and Support

Renesas Electronics Website <a href="http://www.renesas.com/">http://www.renesas.com/</a>

Inquiries

http://www.renesas.com/contact/

All trademarks and registered trademarks are the property of their respective owners.



## Revision History

Rev.	Date	Description		
		Page	Summary	
0.72	July 1, 2019	_	First edition issued	
1.00	August. 9, 2019	_	Update to support R_SYSTEM version 1.00	
		_	Renamed document title and file to correspond to the official	
			series name.	
			Change series and group names in the document.	
		3	Added Startup Guide to Development Using CMSIS Package	
			to list of related document.	
		4	Modefied the File Structure of R_SYSTEM Driver in RE 1.5	
		'	MB CMSIS Driver Package.	
		20	Modified the R_SYS_HighSpeedModeSet Function	
		20	Processing Flow.	
		25	Modified the R_SYS_32kHzSpeedModeSet Function	
		20	Processing Flow.	
		53	Modified the R_SYS_SubOscSpeedClockStart Function	
		33	Processing Flow.	
		54	Modified the R_SYS_SubOscSpeedClockStop Function	
		34	Processing Flow.	
		68	Added the r_system_wdt_refresh Function.	
1.10	Mar. 12. 2020	19	Modified the R_SYS_BoostSpeedModeSet Function	
1.10	IVIAI. 12. 2020	19	Processing Flow.	
		21 - 22	Modified the R_SYS_ HighSpeedModeSet Function	
		21-22	Processing Flow.	
		24	Modified the R_SYS_ LowSpeedModeSet Function	
		24	Processing Flow.	
		26	<u> </u>	
		20	Modified the R_SYS_ 32kHzSpeedModeSet Function Processing Flow.	
		45	Modified the R_SYS_MainOscSpeedClockStart Function	
		45	Processing Flow	
		46	Modified the R_SYS_MainOscSpeedClockStop Function	
		40	Processing Flow.	
		48	Modified the R_SYS_HighSpeedClockStart Function	
		40	Processing Flow	
		49	Modified the R_SYS_HighSpeedClockStop Function	
		49	Processing Flow.	
		F0	Modified the R_SYS_MediumSpeedClockStart Function	
		50	Processing Flow	
		51	Modified the R_SYS_MediumSpeedClockStop Function	
		31	Processing Flow.	
		52	Modified the R_SYS_LowSpeedClockStart Function	
		52	Processing Flow	
		53	Modified the R_SYS_LowSpeedClockStop Function	
4.00		55	Processing Flow.	
		54	Modified the R_SYS_SubOscSpeedClockStart Function	
		34	Processing Flow	
		55	Modified the R_SYS_SubOscSpeedClockStop Function	
		33	Processing Flow.	
		57	<u>-</u>	
		31	·	
		<b>F</b> 0	<u> </u>	
		30	_ · · · ·	
	Aug 17 0000	E 4	<u>-</u>	
1.20	Aug. 17, 2020	54	Processing Flow	
1.20	Aug. 17, 2020	57 58 54	Modified the R_SYS_PLLSpeedClockStart Fund Processing Flow  Modified the R_SYS_PLLSpeedClockStop Fund Processing Flow.  Modified the R_SYS_SubOscSpeedClockStart I	

# General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

#### 1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

#### 2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

#### 3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

#### 4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

#### Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

#### 6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.).

#### 7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

#### 8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

#### **Notice**

- 1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
- 2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
- 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
- 4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
- 5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
  - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
  - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

- 6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
- 7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
- 8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
- 10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
- 11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries
- (Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)

#### **Corporate Headquarters**

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan www.renesas.com

#### **Trademarks**

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

#### **Contact information**

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit: <a href="https://www.renesas.com/contact/">www.renesas.com/contact/</a>.