
VALVE DIAGNOSTICS GUIDE

V. 10/21/2026


BRITA | PRO

Quick Guide


NOTE: As an energy saving feature, the control will automatically turn off all SOLID BLUE or SOLID GREEN display illumination and keypad illumination after about 5 minutes of the last key pad button push. Any further keypad touch will cause the re-illumination of the display and keypad, and re-activate keypad control.

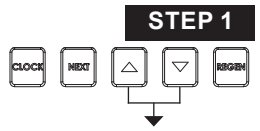

STEP 1 – Press ▲ and ▼ simultaneously for three seconds. If screen in step 2 does not appear in 5 seconds the lock on the valve is activated. To unlock press ▼, NEXT, ▲, and CLOCK in sequence, then press ▲ and a ▼ simultaneously for 3 seconds.

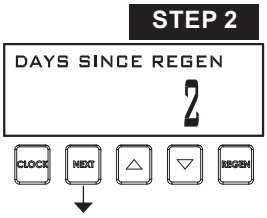


STEP 2 – Days, since last regeneration: This display shows the days since the last regeneration occurred. Press NEXT to go to Step 3. Press REGEN to exit Diagnostics.

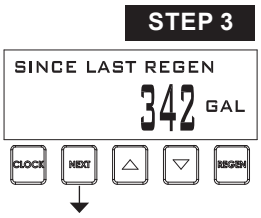


STEP 3 – Volume, since last regeneration: This display shows the volume of water that has been treated since the last regeneration. This display will equal zero if a water meter is not installed. Press NEXT to go to Step 4. Press REGEN to return to previous step.



STEP 4 – Reserve History Volume used for last 7 days: If the valve is set up as a softener, a meter is installed and Set Volume Capacity is set to "Auto," this display shows 0 day (for today) and the reserve capacity. Pressing ▲ will show day 1 (which would be yesterday) and the reserve capacity used. Pressing ▲ again will show day 2 (the day before yesterday) and the reserve capacity. Keep pressing ▲ to show the capacity for days 3, 4, 5 and 6. ▼ can be pressed to move backwards in
or alternator regeneration is selected. Press NEXT at any time to go to Step 5. Press REGEN to return to previous step.

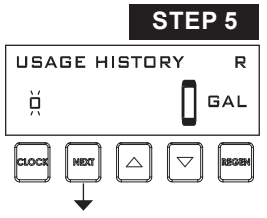

STEP 5 - Volume, 63-day usage history: This display shows day 0 (for today), day 1 (for yesterday), etc., and the volume of water treated that day. Press ▲ to show the volume of water treated for the last 63 days. If a regeneration occured on the day the letter "R" will also be displayed. This display will show dashes if a water meter is not installed. Press NEXT at any time to go to Step 6. Press REGEN to return to previous step.

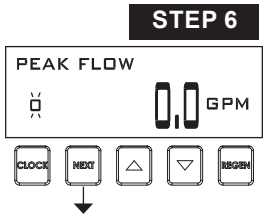

STEP 6 - Flow rate, maximum last seven days: Use ▲ or ▼ to display the maximum flow rate in gallons per minute that occurred in each of the last seven days. This display will equal zero if a water meter is not installed. Press NEXT to go to Step 8D. Press REGEN to return to previous step.

RETURN TO NORMAL MODE


VALVE HISTORY GUIDE

V. 10/21/2026

BRITA | PRO


Quick Guide

NOTE: As an energy saving feature, the control will automatically turn off all SOLID BLUE or SOLID GREEN display illumination and keypad illumination after about 5 minutes of the last key pad button push. Any further keypad touch will cause the re-illumination of the display and keypad, and re-activate keypad control.

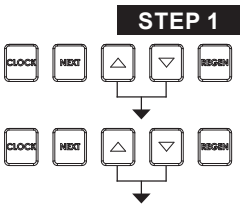


STEP 1 – Press ▲ and ▼ simultaneously for three seconds and release. Then press ▲ and ▼ simultaneously and release.


STEP 2 - If screen in step 2 does not appear in 5 seconds the lock on the valve is activated. To unlock press ▼, NEXT, ▲, and CLOCK in sequence, then press ▲ and ▼ simultaneously for 3 seconds and release. Then press ▲ and ▼ simultaneously and release.

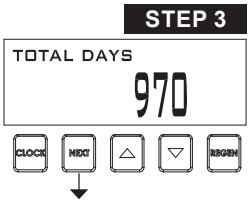


STEP 3 – Days, total since start-up: This display shows the total days since startup. Press NEXT to go to Step 4. Press REGEN to return to previous step.

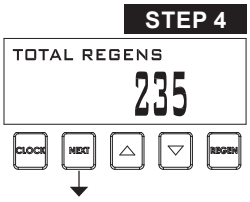


STEP 4 – Regenerations, total number since start-up: This display shows the total number of regenerations that have occurred since startup. Press NEXT to go to Step 5. Press REGEN to return to previous step.

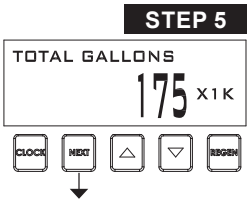


STEP 5 – Volume, total used since start-up: This display shows the total gallons treated since startup. This display will equal zero if a water meter is not installed. Press NEXT to go to Step 6. Press REGEN to return to previous step.

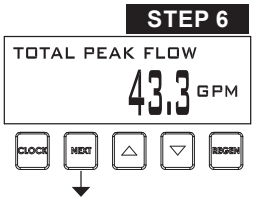

STEP 6 - Flow rate, Total Peak Flow: This display shows the maximum flow rate since startup. Press NEXT to go to Step 7. Press REGEN to return to the previous step.

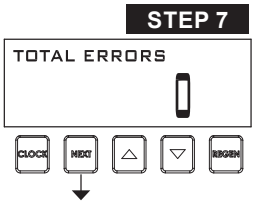

STEP 7 – Total Errors: This displays the total number of errors detected since startup. Press NEXT to go to Step 8. Press REGEN to return to the previous step.

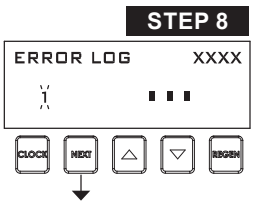


RETURN TO NORMAL MODE

STEP 8 – Log of the last 10 Error Codes generated by the control, including the number of days ago that it occurred (0-999). Press ▲ or ▼ to view each error recorded. Press NEXT to exit Valve History. Press REGEN to return to the previous step.

PLATINUM VALVE QUICK-START GUIDE

V. 10/21/2026

Quick Guide: For complete instructions refer to the manual.

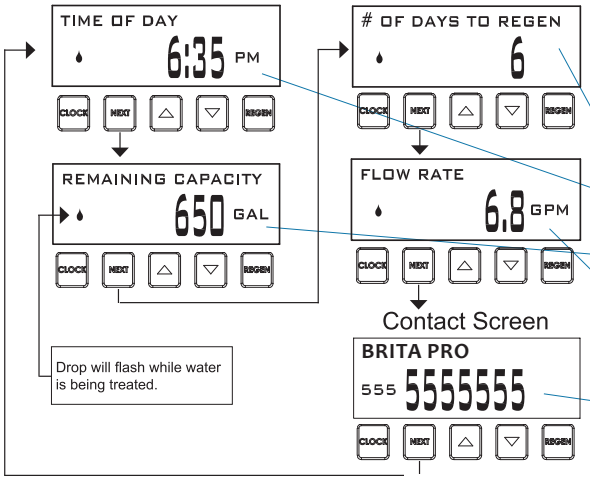


User Displays

When the system is in normal service mode, one of up to five available User Displays will be shown. Pressing NEXT will alternate between the following displays:

- Current time of day
- Remaining capacity of treated water available
- Remaining days to regeneration (if Day Override is programmed)
- Treated water flow rate
- Service contact name and phone number (if entered)

Set Time of Day

Current time of day needs to be entered during initial installation, and adjusted when daylight saving time begins or ends. If an extended power outage occurs and depletes the on-board non-rechargeable coin cell battery, when power resumes the time of day should be reset and battery replaced.

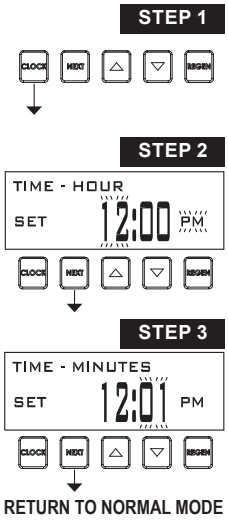

STEP 1 - Press CLOCK.

STEP 2 - Current Time (hour): Set the hour of the day using ▲ or ▼. AM/PM toggles aftr 12. Press NEXT to go to Step 3.

STEP 3 - Current Time (minutes): Set the minutes of the day using ▲ or ▼. Press NEXT to exit Set Time of Day. Press REGEN to return to previous step.


Low Battery

A non-rechargeable coin cell battery is located on the circuit board, used only to maintain the time of day during power outages (all other information will be stored in memory no matter how long the power outage). The screen displays **LOW BATTERY** when the battery needs to be replaced. The screen will remain illuminated solid blue when **LOW BATTERY** is displayed. Initially **LOW BATTERY** display will alternate with the User display, finally displaying only **LOW BATTERY**. User displays are still accessible by pressing **NEXT**.


Quick Guide: For complete instructions refer to the manual.

Installer Displays


Adjust Hardness, Days between Regenerations, or Time of Regeneration



STEP 1 - Press NEXT and ▲ simultaneously for 3 seconds.

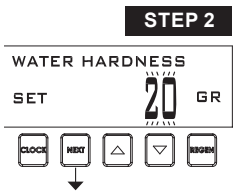

STEP 2 - Hardness: Set the amount of hardness in grains of hardness as calcium carbonate per gallon using ▲ or ▼ buttons. The default is 20 with value ranges from 1 to 150 in 1 grain increments. Note: The grains per gallon can be increased if soluble iron needs to be reduced. Press NEXT to go to Step 3. Press REGEN to exit Installer Display Settings.

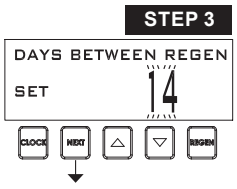


STEP 3 - Day Override: Set the **maximum** number of days between regenerations. If value set to "OFF", regeneration initiation is based solely on volume used. If value is set as a number (allowable range from 1 to 28) a regeneration initiation will be called for on that day even if sufficient volume of water were not used to call for a regeneration. Set Day Override using ▲ or ▼ buttons.

- Number of days between regeneration (1 to 28); or
- "OFF"

Press NEXT to go to Step 4. Press REGEN to return to previous step.



STEP 4 - Next Regeneration Time (hour): Set the hour of day for regeneration using ▲ or ▼ buttons. AM/PM toggles after 12. The default time is 2:00 AM. Press NEXT to go to Step 5. Press REGEN to return to previous step.

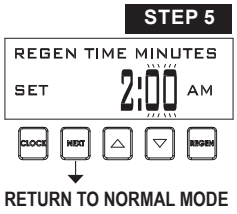

STEP 5 - Next Regeneration Time (minutes): Set the minutes of day for regeneration using ▲ or ▼ buttons. Press NEXT to exit Installer Display settings. Press REGEN to return to previous step.

Water Shut-Off

To shut-off water to the system, position arrow handles as shown in the **Bypass Operation** *(see figure 2 diagram)*. If your valve doesn't look like the diagram below, contact your service technician for instructions on how to shut-off water.

Figure 1

NORMAL OPERATION

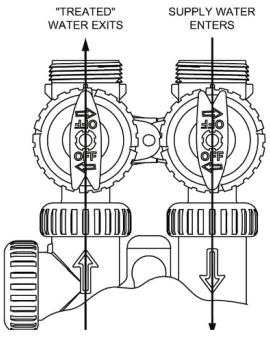


Figure 2

BYPASS OPERATION

