PROFESSIONAL INSTALLATION, OPERATING AND SERVICE MANUAL

4 STAGE QT RO

☐ BPQCRO-75

Replacements:
BPGT-SED5-75 - Prefilter Sediment
BPGT-CB5-75 - Prefilter Carbon
BPGT-TW75 - Membrane
BPGT-CB5P-75 - Filter Carbon

☐ BPQCRO-75BF

Replacements:
BPGT-SED5-75BF - Prefilter Sediment
BPGT-CB5-75BF - Prefilter Carbon
BPGT-TW75BF - Membrane
BPGT-CB5P-75BF - Filter Carbon

BRITA|PRO
POST CARBON
MEMBRANE
PRE CARBON
SEDIMENT

PLATINUM SERIES

4 STAGE QUICK TWIST REVERSE OSMOSIS SYSTEM

Reduces Lead, Arsenic, Taste & Odor

BRITA|PRO®

Table of Contents

Initial Inspection 3
Operation Parameters 4
Plumbing Schematic 5
Pre-Installation 6
Faucet Installation 6-8
Angle stop valve adaptor Installation 8-9
Self-Piercer Installation 10
Flowlok Leak Control Valve 10
Drain Saddle Installation 11
Tank Placement 11
R.O. Unit Placement & Mounting 12
Tubing Connections 12-14
System Start-Up 15
Flushing the R.O. System 15
Filter Replacement 16
Replacement Filters 17
Pump Hook Up 18
Troubleshooting 18-20
Product Warranty 21
Contact Information and Support 22

LEGEND	
⚠	CAUTION / WARNING
👓	EYE PROTECTION
⚡	ELECTRICAL WARNING
🍷	FRAGILE

⚠ **WARNING: READ ENTIRE MANUAL. FAILURE TO FOLLOW ALL GUIDES AND RULES COULD CAUSE PERSONAL INJURY OR PROPERTY DAMAGE.**

Check with your state and/or local public works department for plumbing codes.
You must follow their guides as you install the Water Filtration system.

NOTE: Failure to comply with these installation instructions will void the product Warranty, and the installer will be responsible for any service, repair or damages caused thereby.

⚠ **WARNING: DO NOT USE WITH WATER THAT IS MICROBIOLOGICALLY UNSAFE OR OF UNKNOWN QUALITY WITHOUT ADEQUATE DISINFECTION BEFORE OR AFTER THE SYSTEM.**

TOOLS & MATERIALS NEEDED FOR NORMAL INSTALLATION:

- Cordless Drill
- Carbide grinding burr
- 1/4" (6 mm) drill bit
- 7/16" (11 mm) drill bit
- 1/2" (13 mm) and 5/8" (16 mm) open-end wrenches (or adjustables)
- Phillips screwdriver
- Flashlight or droplight
- Teflon tape
- Protective eye wear (i.e. goggles)

If the above tools are not available, contact your local dealer/distributor for assistance.

REVERSE OSMOSIS SYSTEM INCLUDES

1. Reverse Osmosis System
2. FLOWLOK™ - Safety Tray
3. FLOWLOK™ - Leak Detector
4. SHOKBLOK™ - System Protection Valve*
5. Storage Tank
6. LF-EC23 Faucet (with mounting hardware)

FLOWLOK™

USA Patent Number: US 9,212,787 B1

** The Shok Blok is a pressure limiting device that works under flow to help protect water filtration devices, water coolers, ice machines and other devices from the effects of water hammer. Shok Blok is NOT a pressure regulator. Static pressure will equalize with no flow through device.*

PARTS (already pre-installed to R.O. system)

7. Connection Tubing
8. 5 Micron Sediment Prefilter
9. 5 Micron Carbon Block Prefilter
10. 50 Gallon per day Membrane
11. 5 Micron Carbon Block Post Filter
12. Inline Flow Restrictor
13. Fixed Elbow

ACCESSORIES (Included in installation packet)

14. Angle stop valve adaptor
15. Tank ball valve
16. Drain saddle

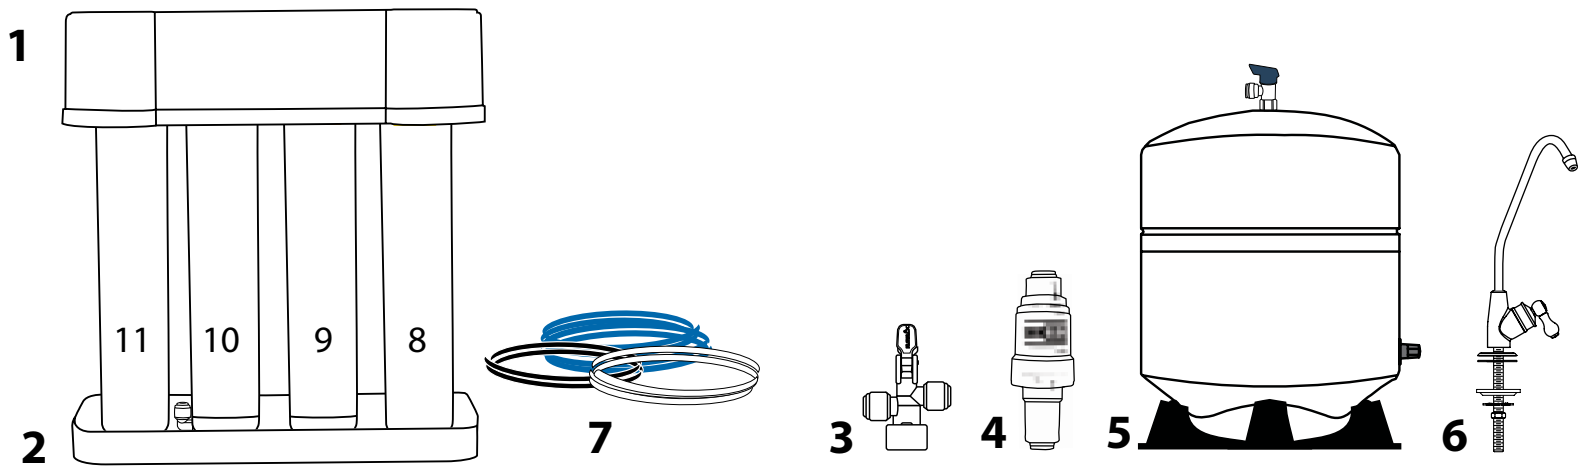

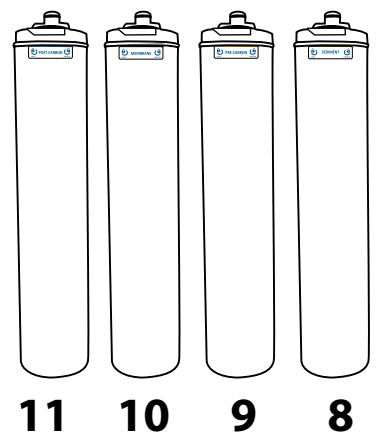

(Pre-installed in Unit)



(Exploded View)

ACCESSORIES *(Included in installation packet)*



Operation Parameters

WARNING!! The following conditions for feed water supply must be met or Warranty will be void.

1. **Unit MUST be connected to a municipal or well water source that is treated and tested on a regular basis to insure water is microbiologically safe.**
2. **Operating temperatures:**

   Maximum: 105° F (40.6° C)
   Minimum: 33° F (0.55° C)
3. **Inlet Pressure MUST NOT EXCEED 80 PSI (5.6 kg/cm2)**

CAUTION!! DO NOT ALLOW SYSTEM TO FREEZE. The membrane always contains water and will be destroyed if frozen.

WARNING!! DO NOT PLUMB SYSTEM TO HOT WATER. This will destroy the membrane and void the Warranty and manufacturer's responsibility.

4. **Operating pressure:**

   Maximum: 80 PSI (5.6 kg/cm2)
   Minimum: 40 PSI (2.95 kg/cm2)

This reverse osmosis system is designed to operate at a water pressure in the range of: 40 to 80 PSI (2.95 kg/ cm2 to 5.6 kg/ cm2).

- At pressures lower than this, the quantity as well as quality will be reduced.
- At higher pressure, severe damage to the system may result.

A pressure regulator MUST be installed on the feed water source, which reduces the water pressure coming into the system.

WARNING!! Warranty voided and manufacturer assumes no responsibility for damage to system or property if pressure exceeds 80 PSI.

5. **Turbidity:** <5 NTU
6. **pH:** 4 to 11
7. **Recommended hardness NOT TO EXCEED 7 grains per gallon, or 120 PPM.**

(If the hardness of your water is above 10 gpg (171mg/L), lime scale will build up rapidly on the membrane. Scale buildup will plug the membrane and make the system ineffective. We do not recommend these reverse osmosis systems be used with water in excess of 10 gpg (171 mg/L) hardness, unless the water is softened prior to the reverse osmosis system.).

- **Sulfide, Iron and Manganese:** less than 0.01 ppm.
- **Chlorine In Water Supply:** less than 2 ppm.
- **Water Supply pH Limits:** 4-11.
- **Turbidity:** 1 NTU Max.

RECOMMENDATION: If your water hardness exceeds 7 grains per gallon, or 120 PPM you may wish to purchase a water softener. Contact your local dealer or distributor for pricing and availability.

8. **Recommended Total Dissolved Solids (TDS) NOT TO EXCEED 1,000 ppm.**

SPECIFICATIONS FOR REVERSE OSMOSIS SYSTEM

- **System Dimensions:** 3.75"w x 4.75"d x 12.75"h
  (349 mm x 121 mm x 318 mm).
- **System Weight:** 6.1 lbs. (2.7 kg).
- **Tank Dimensions:** 11.3"d x 16.75"h
  (287 mm x 425 mm) (with valve).
- **Tank Capacity:** 1.9–3.2 gal. (7.2–12.1L)
  (Depending on water pressure).
- **Tank Weight:** Full - 40 lbs. (18.2 kg.)
  (Depending on water pressure).

PLUMBING SCHEMATIC FOR REVERSE OSMOSIS SYSTEM

(Twist Reverse Osmosis System - 4 Stage, 4 Stage with Pump)

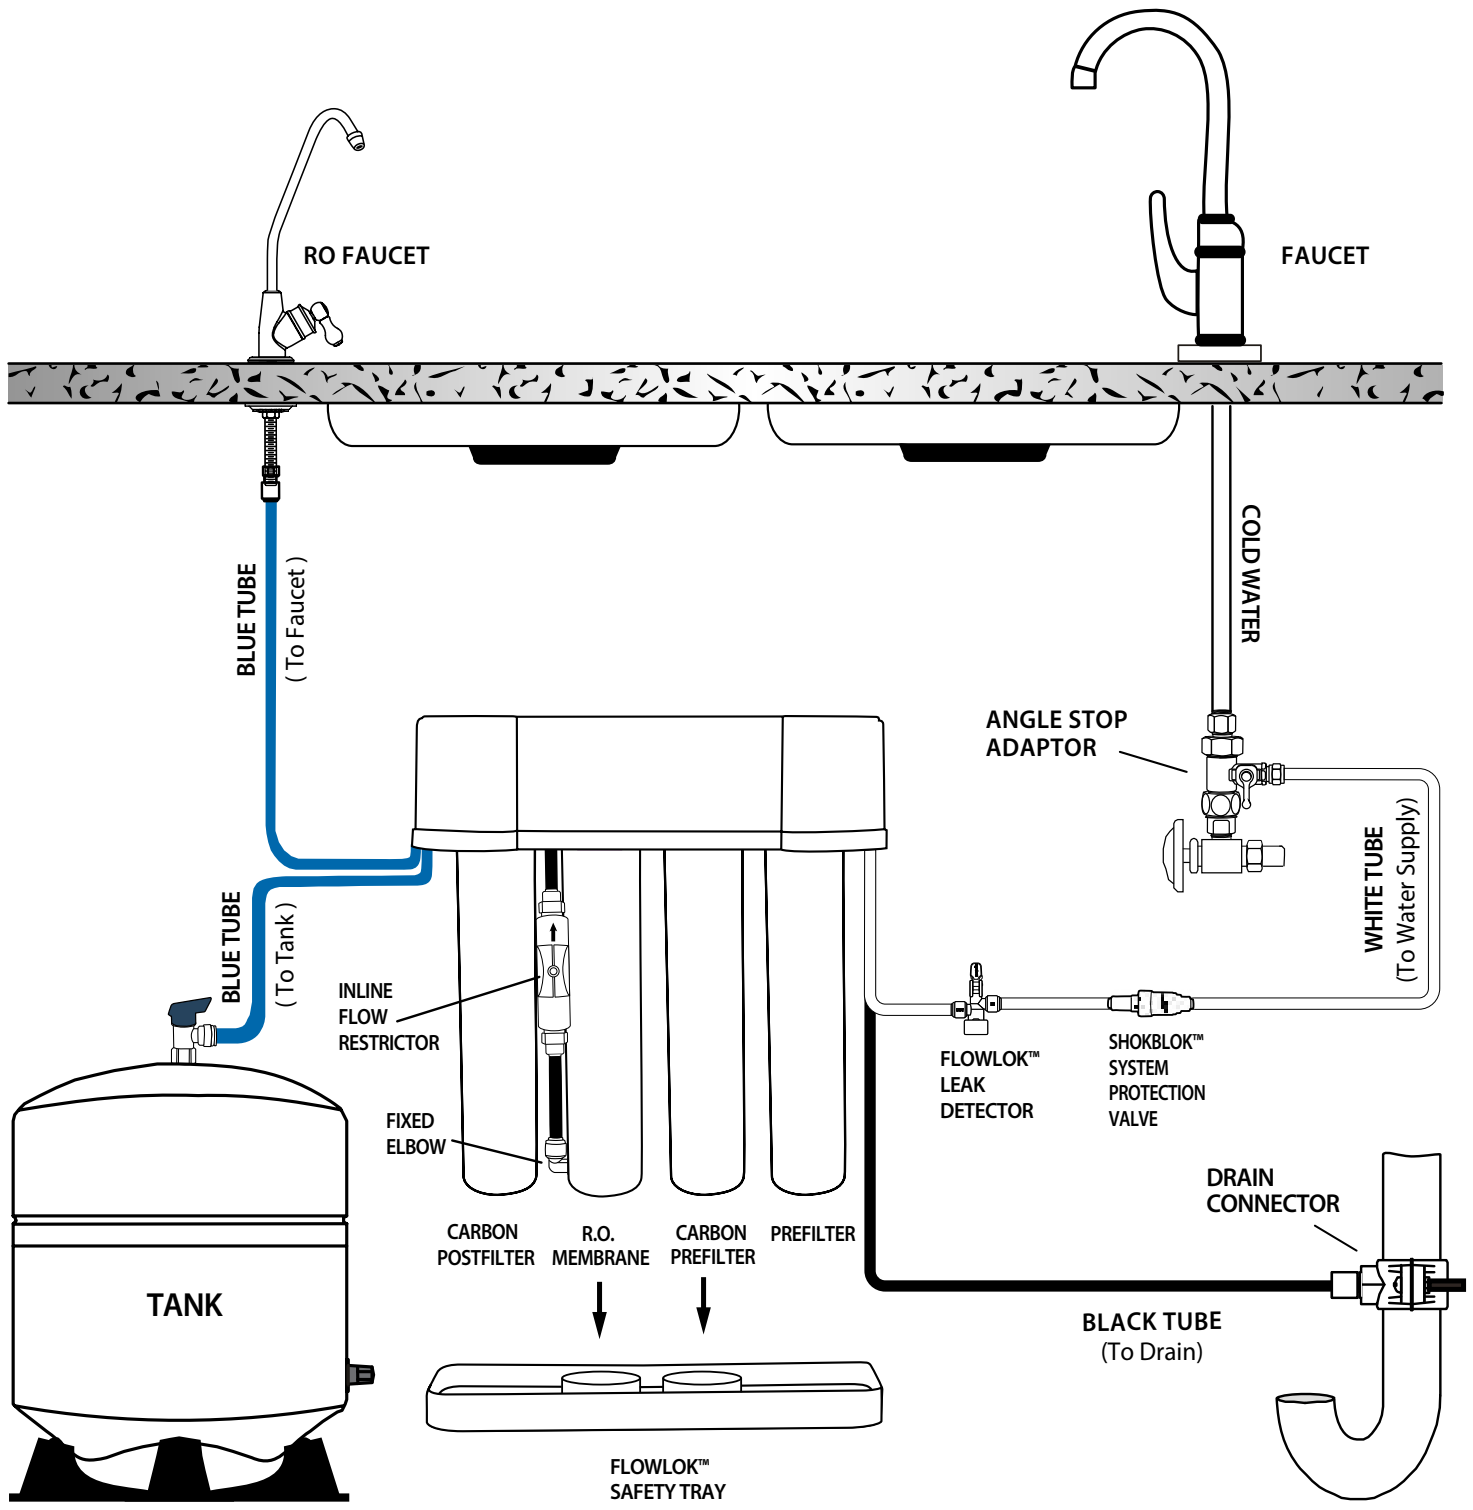
RO FAUCET
FAUCET
BLUE TUBE
(To Faucet)
COLD WATER
ANGLE STOP
ADAPTOR
WHITE TUBE
(To Water Supply)
BLUE TUBE
(To Tank)
INLINE
FLOW
RESTRICTOR
FLOWLOK™
LEAK
DETECTOR
SHOKBLOK™
SYSTEM
PROTECTION
VALVE
FIXED
ELBOW
DRAIN
CONNECTOR
CARBON
POSTFILTER
R.O.
MEMBRANE
CARBON
PREFILTER
PREFILTER
TANK
BLACK TUBE
(To Drain)
FLOWLOK™
SAFETY TRAY

NOTE: The reverse osmosis system may be mounted to the side of the sink cabinet or set on the floor of the sink cabinet near the facet tube to maximize flow rate

⚠ **IMPORTANT!! PLEASE READ, FOLLOW AND SAVE THIS INSTRUCTION MANUAL.**

1. PRE-INSTALLATION PROCEDURE

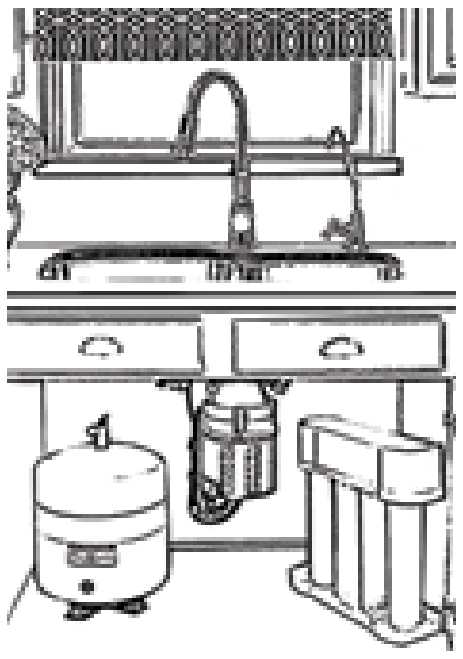

DIAGRAM A

1. This unit includes a standard sink top faucet without an air-gap. In localities where plumbing codes require installation of an air-gap, contact your local distributor to obtain a code approved drain line adaptor.
2. The reverse osmosis system may be mounted to the side of the sink cabinet or set on the floor of the sink cabinet. It must be positioned to allow access for service and filter changes. The assembly should be relatively near the faucet to maximize flow rate. (*See DIAGRAM A for a positioning example.)*
3. The storage tank should be located where it can be removed if necessary. The storage tank may be placed in either the vertical or horizontal position without affecting the system performance. If there is insufficient space under the sink for placement, the tank may be located in an adjacent cupboard up to 50 ft. away. (*See DIAGRAM A for a positioning example.)*
4. The faucet should be positioned to allow a free flow pattern into the sink. It must be positioned to allow ready access to the mounting hardware under the sink. (*See DIAGRAM A for a positioning example.)*

2. FAUCET INSTALLATION

⚠ **CAUTION!! Extreme care must be taken in drilling the hole for the sink-top faucet. The surface material of most sinks is extremely hard and brittle and can be easily chipped or cracked. If you are uncomfortable performing the following procedure it is recommended that your local distributor or experienced plumber be consulted for techniques, installation or other assistance. The system's manufacturer accepts no responsibility for sink top damage resulting from system installation. EXTREME CAUTION SHOULD BE TAKEN WITH GRANITE, MARBLE AND LIKE MATERIAL.**

CAUTION!! Before grinding or drilling put on appropriate eye protection (i.e. goggles) to protect yourself from porcelain or metal chips.

⚠ **CAUTION!! To avoid damaging the sink, consult a qualified plumber or installer for drilling procedures. Special drill bits may be needed for porcelain or stainless steel.**

⚠ **WARNING: Many homes are electrically grounded through the plumbing. To protect yourself from serious injury or fatal shock, use a battery-powered hand drill only to make the hole. DO NOT USE AN ELECTRIC DRILL.**

1. BEFORE DRILLING: Check under the sink in the area that you plan to install the faucet and make sure that there is a flat surface to secure the mounting hardware. A flat space of approximately 2 inches in diameter is needed.

RECOMMENDATION: Before drilling or grinding mask off the immediate area surrounding the grinding/drilling location preferably with duct tape or if duct tape is unavailable masking tape may be used. This procedure should help prevent scratching of the sink surface.

2. REMOVE EVERYTHING FROM INSIDE THE SINK AND SURROUNDING AREA. Place paper towels in the sink to catch the shavings from the grinding and drilling.

3. Using a cordless drill with a carbide grinding burr, gently grind away enough porcelain or enamel to more than accommodate the 7/16" (11 mm) drill bit. Approximately the size of a dime. Enough surface material must be removed to expose the base metal.

CAUTION!! Porcelain or enamel must be completely removed in the drilling area to prevent immediate dulling of drill bit.

4. Remove everything from under the sink.

5. Place newspaper or paper towels directly under drilling location in order to catch the drill shavings.

6. Using the 1/2" (12 mm) drill bit, drill a centering or pilot hole in the center of the desired faucet location.

NOTE: this centering/pilot hole will make it easier for the 7/16" (11 mm) drill bit to cut through the sink. Operate the drill slowly and carefully— Especially when the drill bit is about to penetrate the metal. Otherwise, damage to sink may occur. Use lubricating oil to keep the drill bit cool while drilling.

7. Discard paper towels and newspaper used in sink and below sink. Be very careful not to drop any shavings in sink or on the floor as they will oxidize and stain surfaces very quickly.

HELPFUL HINT: If you notice any rust spots from dropped shavings you should be able to get rid of them by scrubbing them with a cleaning chemical.

8. Cover the drilled hole with your finger **BE VERY CAREFUL NOT TO CUT YOURSELF ON SHARP EDGES!** Rinse sink then scrub with cleaner to prevent any rusting from shavings and to prepare for faucet installation. Plug hole again while rinsing off cleaner. Hole must be plugged in order to avoid water dripping below into sink cabinet, which may cause damage.

9. Remove faucet from package.

For steps 10-13 refer to DIAGRAM B on page 8.

10. Slip the small, thin rubber gasket over the faucet shank. Next slip the chrome trim plate (escutcheon plate) over the faucet shank. Finally, slip the large, thin rubber gasket over the faucet shank.

11. Place the faucet shank complete with only hardware installed in step 11 though the drilled hole.

12. From under the sink slip the large, black plastic, locating washer over the faucet shank. Next, slip the lock washer over the faucet shank followed by the thin chrome nut.

13. While holding the faucet assembly above the sink tighten the chrome nut below the sink with an adjustable wrench. Tighten the chrome nut until the faucet assembly does not move.

CAUTION!! DO NOT OVERTIGHTEN THE CHROME NUT. Overtightening can cause damage to the sink or faucet assembly.

Diagrams B, C, D, & E

DIAGRAM B

For Faucet Installation
Steps 10-13 on page 7

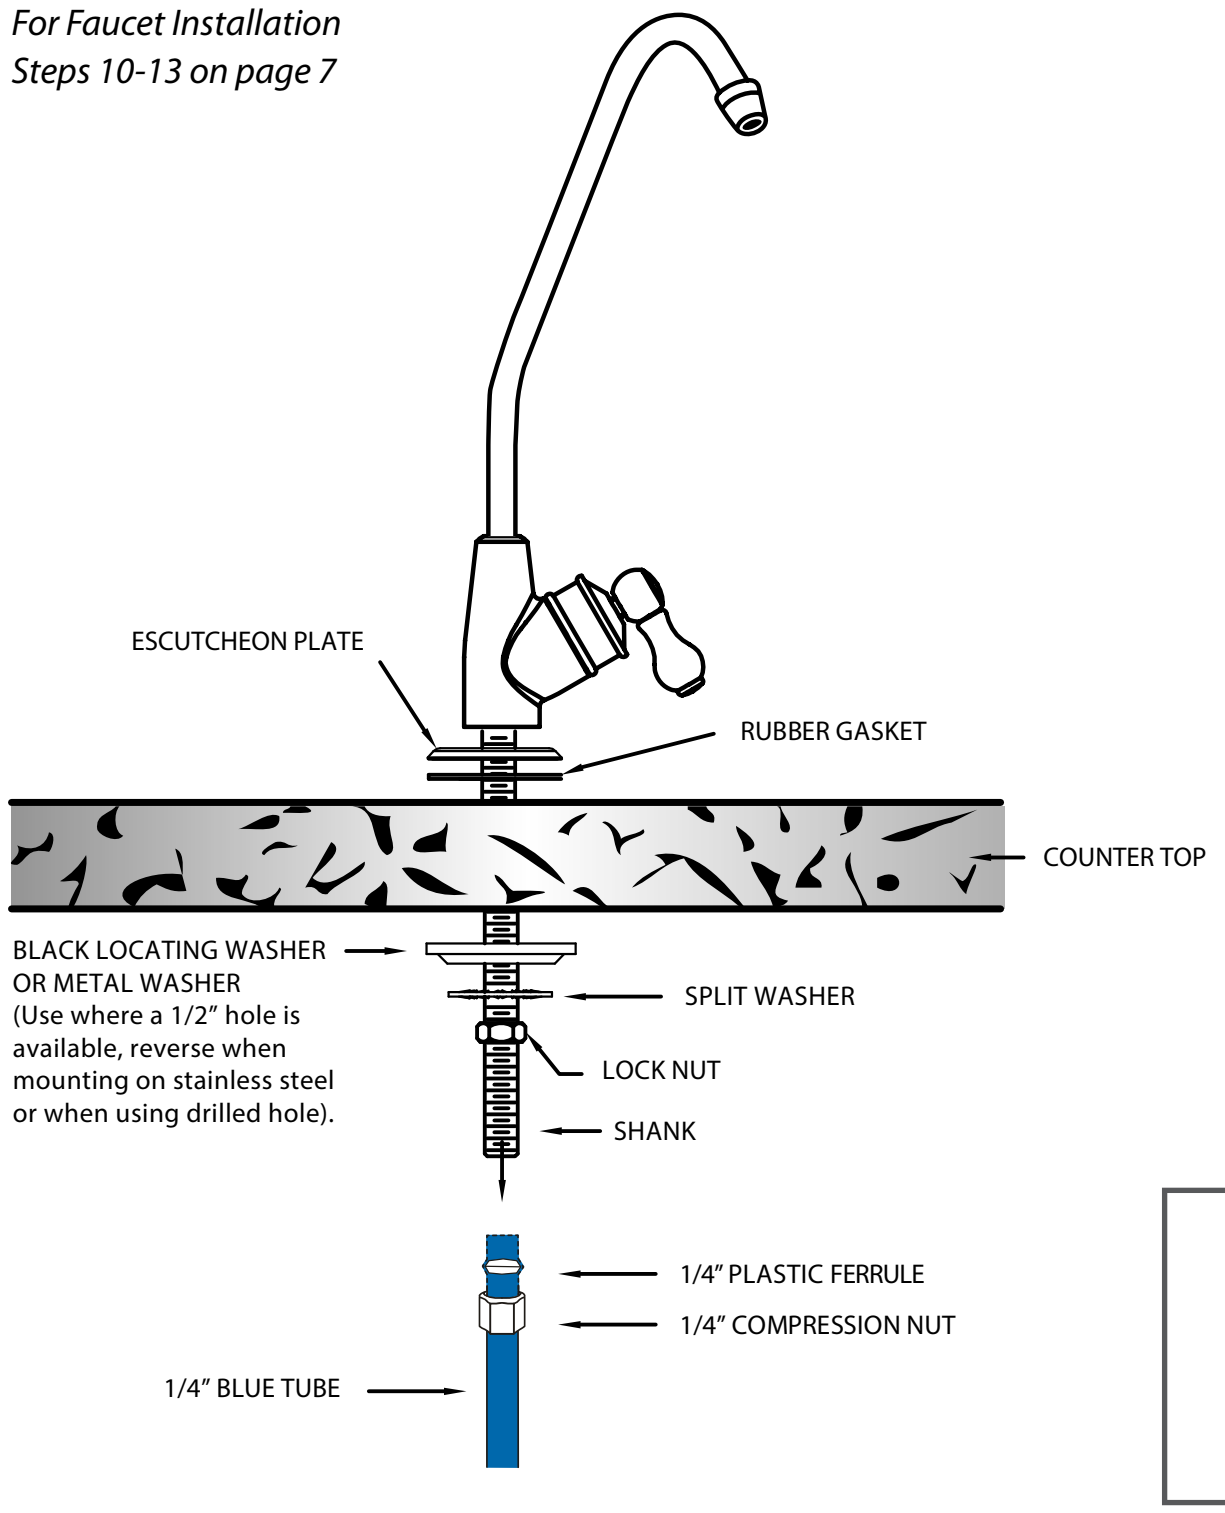
ESCUTCHEON PLATE
RUBBER GASKET
COUNTER TOP
BLACK LOCATING WASHER
OR METAL WASHER
(Use where a 1/2” hole is
available, reverse when
mounting on stainless steel
or when using drilled hole).
SPLIT WASHER
LOCK NUT
SHANK
1/4” PLASTIC FERRULE
1/4” COMPRESSION NUT
1/4” BLUE TUBE

DIAGRAM C



DIAGRAM D

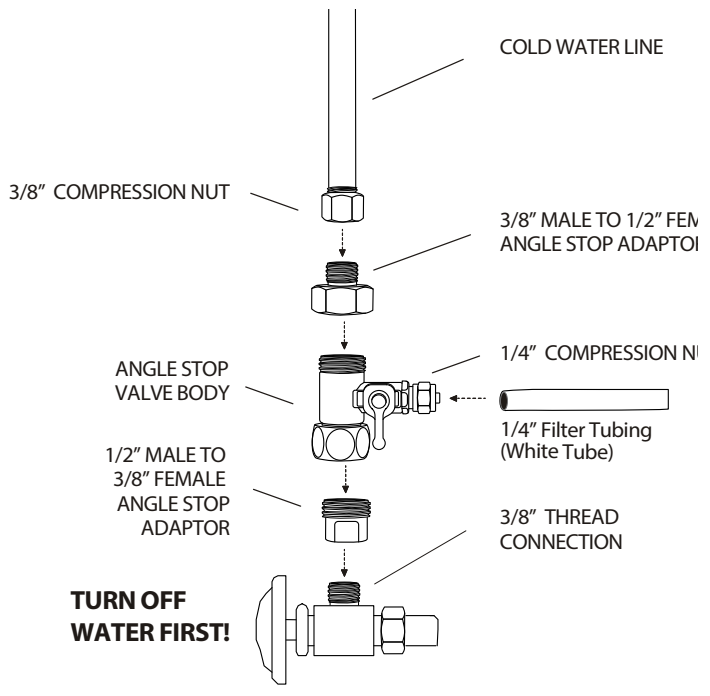
COLD WATER LINE
3/8” COMPRESSION NUT
3/8” MALE TO 1/2” FEM
ANGLE STOP ADAPTO
1/4” COMPRESSION N
ANGLE STOP
VALVE BODY
1/4” Filter Tubing
(White Tube)
1/2” MALE TO
3/8” FEMALE
ANGLE STOP
ADAPTOR
3/8” THREAD
CONNECTION
TURN OFF
WATER FIRST!

DIAGRAM E

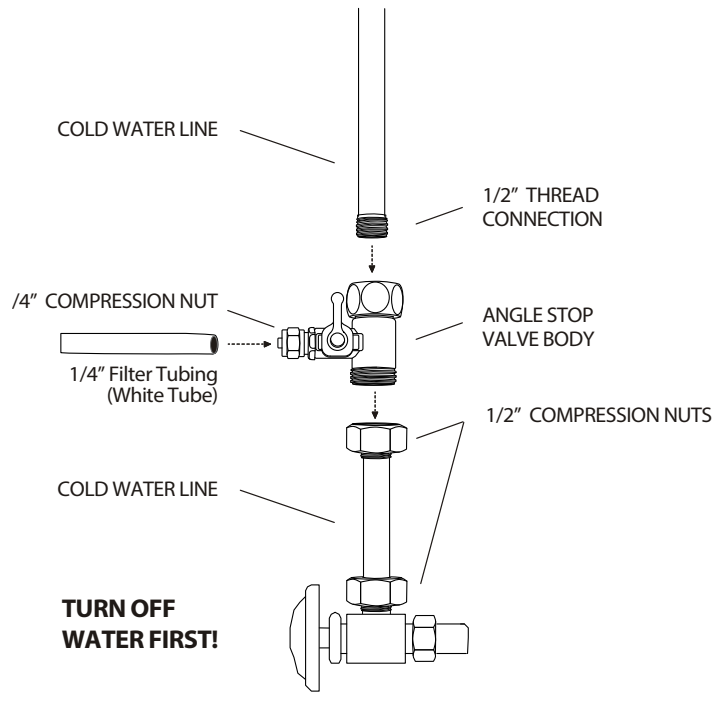
COLD WATER LINE
1/2” THREAD
CONNECTION
/4” COMPRESSION NUT
ANGLE STOP
VALVE BODY
1/4” Filter Tubing
(White Tube)
1/2” COMPRESSION NUTS
COLD WATER LINE
TURN OFF
WATER FIRST!

3. INSTALLATION OF ANGLE STOP VALVE ADAPTOR

CAUTION!! For your safety and protection, do not use where water is microbiologically unsafe or of unknown quality. The water supply to your system MUST be from the COLD WATER LINE! Hot water will severely damage your reverse osmosis system!

If you have a self-piercer assembly skip to step # 7 on page 10.

1. Turn off cold water supply to the sink using the supply valve located under the sink.

NOTE: In some cases the supply valve may leak or may not work at all. If this happens turn off the water at the main water shut off for the entire house. In extreme cases the house shut off valve does not work. If this happens shut the water off at the street and replace the defective valves immediately. Locate the type of shut off valve you have under your sink and follow that step for connecting the feed water.

2. Some shut off valves have an extra port for an icemaker hookup. You will not need the angle stop adaptor for this type of installation. (*See DIAGRAM C*)

3. On some shut off valves you can install the angle stop adaptor directly to the valve. Tighten angle stop adaptor to the valve with an adjustable wrench. Tighten until snug. DO NOT OVERTIGHTEN! *(See DIAGRAM D)*

   Most under sink shut off valves have a built in smooth or corrugated riser going up to the faucet. (*Refer to DIAGRAM E* for help with this type of valve.)

   Secure an adjustable wrench to the fitting on the cold water side of the sink faucet -- NOT THE R.O. Faucet! Secure another adjustable wrench to the smooth/corrugated riser line nut. Gently undo the riser line from the sink faucet. Do not be alarmed! There will be water left in the line—this is normal. However, if the flow does not stop you probably haven't shut the water off properly.
   (See the NOTE in Step # 1, Section # 3 if you need help with water shut off.)

4. Screw the two supplied 1/2" adaptors onto the fitting coming from the cold water side of the sink faucet. Hand tighten the angle stop adaptor to the cold water line. Take extreme care not to twist or damage the connection to the cold water connection.

CAUTION!! Tightening the connector improperly to the faucet could cause irreparable damage to the faucet.

5. Connect the riser from the water shut off valve to the angle stop adaptor. Ensure that the cone washer on the riser tube is in good condition. Connect the riser to the angle stop adaptor. **DO NOT OVERTIGHTEN!** This can cause damage to the riser connection.
6. Insert the 1/4" white tube into angle stop adaptor and then into the SHOK BLOK™ provided. (*If not already inserted into the SHOK BLOK™*)

Follow steps 7 and 8 below if not already Pre-installed:

7. After installing the SHOK BLOK™ (be sure to follow flow direction) insert white tubing into the "IN" on the FLOWLOK™ safety device.

8. From the "OUT" on the FLOWLOK™ device insert 1/4" white tubing to the inlet of the system.

9. Self-piercer assembly can only be installed on smooth riser lines. (*Sold Separately)*

10. Clamp the self-piercer onto the riser tube. Fit the adjustable aluminum bracket to the size of your riser tube. Then tighten locking nut until clamp is firmly attached to riser line.

CAUTION!! Do Not Overtighten!! This will crush the riser tube and destroy it.

11. To pierce the line simply screw the T-handle valve clockwise until it stops.

NOTE: If hole in copper tube (cold water line) is not adequately pierced, this may prevent sufficient cold water supply to the system and reduce the performance of R.O. processing. In this event, open and close the self-piercing valve several times.

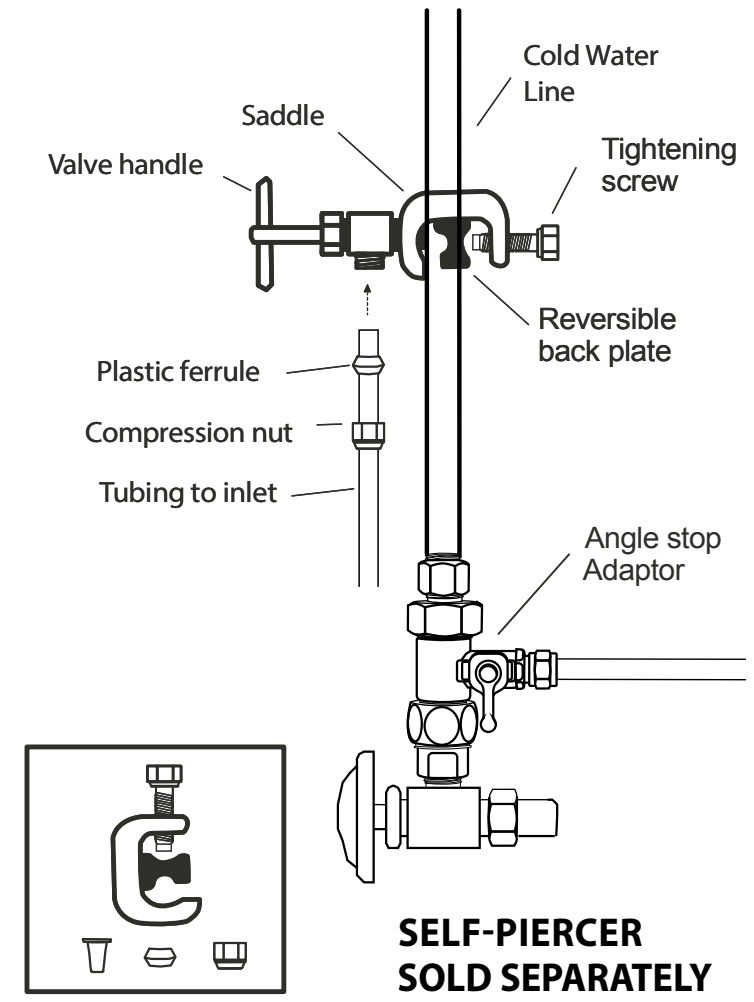
Cold Water Line
Saddle
Tightening screw
Valve handle
Reversible back plate
Plastic ferrule
Compression nut
Tubing to inlet
Angle stop Adaptor

SELF-PIERCER SOLD SEPARATELY

4. INSTALLATION OF FLOWLOK LEAK CONTROL VALVE

(*If pre-installed, skip this steps*)

FLOWLOK is a specially designed shut off valve that turns off your water when a leak is detected. The FLOWLOK valve uses a compressed textile disc which expands upon water contact and pushes the valve lever up to the closed position to stop all water flow into the drinking water system.

NOTE: The FLOWLOK will not shut off any water leak originating from the stop valve or any other connection which feeds water to it. FLOWLOK is designed to shut off water which is going into the drinking water system. (Please note that you can order replacement textile discs through you local dealer in case a disc accidentally becomes wet and expands.)

WARNING!!! The FLOWLOK valve MUST be installed to prevent any water leaks occurring from the drinking water system. Failure to install the FLOWLOK valve will automatically void the product warranty.

1. Locate compressed textile disc and set aside.
2. Place FLOWLOK into fixed position in tray and screw down. *(If tray not use proceed to step 3)*.
3. Place FLOWLOK 2 inches from side wall of cabinet and 4 - 6 inches from the drinking water systems inlet side.
4. Affix the FLOWLOK with screws to the cabinet base (floor) with screws.
5. Lift FLOWLOK Lever to off position.
6. Once final connection is made, remove lever pusher and insert textile disc with the pronounced part towards the bottom and reinsert lever pusher. Lower on/off lever to allow water to flow thru the system.

To view FLOWLOK video go to:
http://hydronixwater.com/flowlok-products

USA Patent Number: US 9,212,787 B1

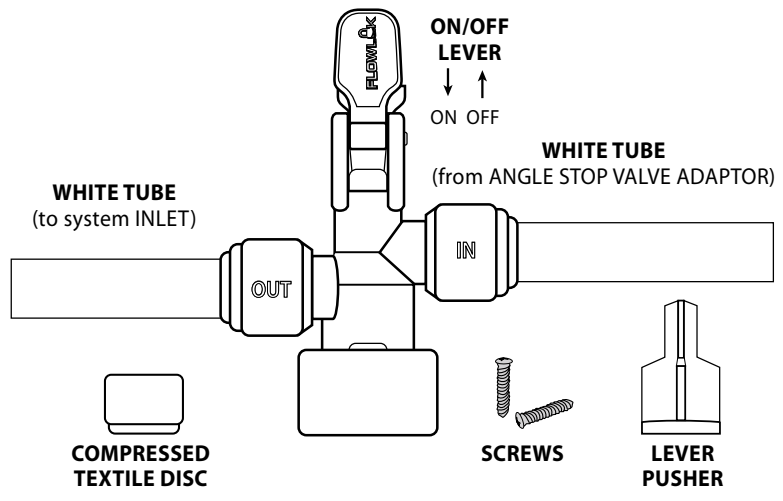
FLOWLOK
ON/OFF LEVER
↓ ↑
ON OFF
WHITE TUBE (from ANGLE STOP VALVE ADAPTOR)
WHITE TUBE (to system INLET)
OUT
IN
COMPRESSED TEXTILE DISC
SCREWS
LEVER PUSHER

FLOWLOK™
LEAK DETECTOR | WATER SHUT-OFF VALVE

5. INSTALLATION OF DRAIN SADDLE

1. Open the package containing the drain saddle. (*See DIAGRAM F*)
2. Peel the protective film off of the sponge gasket. Apply gasket to inside of drain saddle, using care to align sponge gasket hole with drain port.
3. Position the drain saddle on the vertical or horizontal drainpipe from your sink. Position as far away from the garbage disposal as possible.

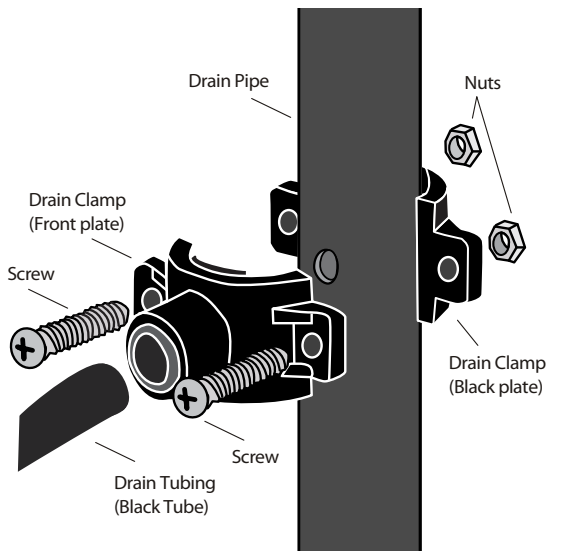

DIAGRAM F

DANGER!! The drain saddle MUST be installed on the side of the P-trap that goes to the sink drain!! If installed on the wrong side of the P-trap sewer gas could enter the unit and damage it.

CAUTION!! DO NOT INSTALL THE DRAIN LINE DOWNSTREAM OF A DISPOSER OR IN A HORIZONTAL PIPE.

4. Drill 1/4" (6mm) hole into the drainpipe.

CAUTION!! Be very careful when drilling into drainpipe to not drill all the way through—stop after piercing the first wall of the pipe.

5. Mount the drain saddle. Align the drain saddle port with the 1/4" drilled hole using a small drill bit or other small straight object.
6. **GENTLY TIGHTEN** the two screws evenly on both sides of the clamp until the clamp is snug on the pipe.

CAUTION!! To avoid breaking plastic saddle or crushing drainpipe DO NOT OVERTIGHTEN!

6. TANK PLACEMENT

1. Wrap 4 to 5 wraps of Teflon tape around the tank threads at the top of the tank.
2. Hand tighten the plastic shut off ball valve to tank stem.

CAUTION!! Hand tighten the valve only! DO NOT OVERTIGHTEN! If valve is overtightened it will crack and will leak.

IMPORTANT!! The tank pressure must be between 5-7 psi when measured empty. This must be measured with a good dial or digital pressure gauge. A pop-up tire gauge will not give you an accurate reading. If you do not have access to a good gauge contact your local distributor to purchase one. If your tank pressure is above 7 PSI use the tank Schrader valve to release pressure until there is between 5-7 psi. If your tank pressure is below 5 psi use a bicycle pump or compressed air to increase pressure to between 5-7 psi.

3. The storage tank should be located where it can be removed if necessary. The storage tank may be placed in either the vertical or horizontal position without affecting the system performance. If there is insufficient space under the sink for placement, the tank may be located in an adjacent cupboard up to 50 ft. away.

7. R.O. UNIT PLACEMENT AND MOUNTING

1. Determine if mounting of the reverse osmosis system is necessary or desired. The system does not need to be mounted on the wall of the cabinet if there is room for it to sit on the floor. However, if it is mounted to the side of the cabinet it is easier to change the filters and does not take up floor space.

IMPORTANT!! Be very careful not to kink any of the tubing on the reverse osmosis system. If tubing is kinked the tubing can rupture and leak.

2. Position the system on the wall at the desired mounting location 2 - 3 inches from base of cabinet. Using the bracket holes on the back of the bracket, mark on the wall with a pencil where the screws need to be inserted.
3. Set the system aside.
4. Screw the two (2) Phillip head screws *(supplied in the installation packet)* into the wall at the marked positions.

NOTE: Let the screw heads protrude from the wall enough to hang the reverse osmosis system safely.

5. Mount the reverse osmosis system onto the screws.

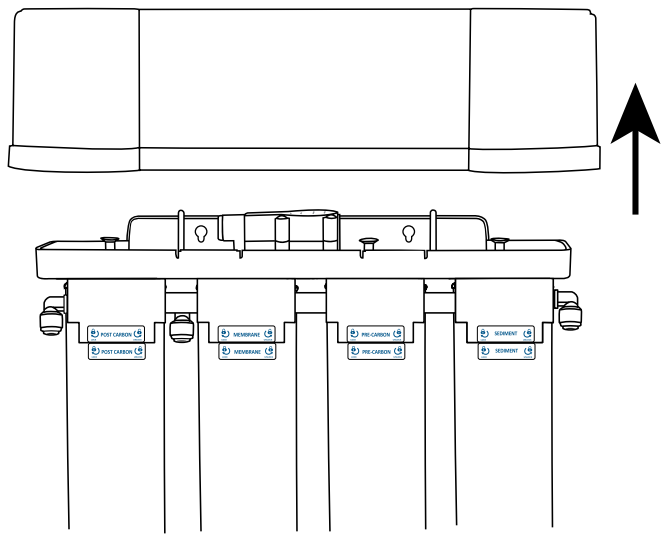

LIFT COVER TO REVEAL BRACKET HOLES

8. TUBING CONNECTIONS

IMPORTANT!! Be very careful not to kink any of the tubing on the reverse osmosis system. If tubing is kinked the tubing can rupture and leak.

CONNECTING THE SYSTEM:

(WHITE TUBING - From system faucet port. This is from port labeled faucet)

1. Connect the white tubing to the faucet by slipping the 1/4" chrome nut over the tubing followed by the nylon ferrule.

   NOTE: It is not necessary to have a 1/4" nylon insert in this line as it would restrict the flow through the faucet.

2. Push the white line all the way into the faucet stem and tighten the chrome nut.
   DO NOT OVERTIGHTEN!!

CONNECTING THE FEED WATER:

1. Locate the cold water angle stop, turn off cold water and open cold faucet line to de-pressurize.
2. Once de-pressurized remove 3/8" line from your "COLD" water angle stop, screw the angle stop valve adaptor onto the 3/8" angle stop hand tight.
3. Replace 3/8" line from above onto the angle stop valve adaptor male side and tighten accordingly.

4. Insert one end of the extra piece of white tubing into the inlet of the angle stop adaptor.
5. From the inlet of the angle stop adaptor connect the white tubing to the SHOK BLOK™ system protection valve and ensure the flow arrow is in the correct direction towards the unit.

Follow steps 6 and 7 if not already Pre-installed:

6. From the out let of the Shok Blok™ connect one side of the white tubing to the port marked "In" on the flow lok leak control valve.
7. From the "out" port on the FLOWLOK™ leak detector connect the white tubing to the RO system marked "In".

CONNECTING THE TANK:

(WHITE TUBING - From system tank port)

Insert the white tubing from the RO system "Tank" Into the Quick Connect Tank Valve provided on top of the the tank.

CONNECTING THE DRAIN SADDLE:

(BLACK TUBING - From system drain port)

Insert the 1/4" black tubing into the Quick Connect Drain Saddle.

HOW TO MAKE QUICK CONNECT FITTINGS CONNECTIONS

1. CUT THE TUBING

-Cut the tube cleanly and squarely. Ensure that the tube has a smooth outside diameter without any burrs, chamfers or score marks prior to inserting it into the fitting. Tubing that has not been cut properly can cause drips and leaks.

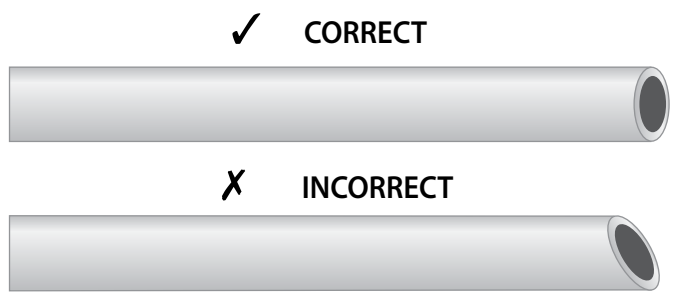

(Continues on page 14...)

HOW TO MAKE QUICK CONNECT FITTINGS CONNECTIONS: (Continued)

2. **INSERT TUBING**
Push the tubing through the collet and o-rings until it bottoms out against the tube stop. The collet holds the tube in place and the o-ring provides a leak resistant seal. If you need to remove the tubing always re-cut before connecting tubing again. Scores on tubing can cause failure.

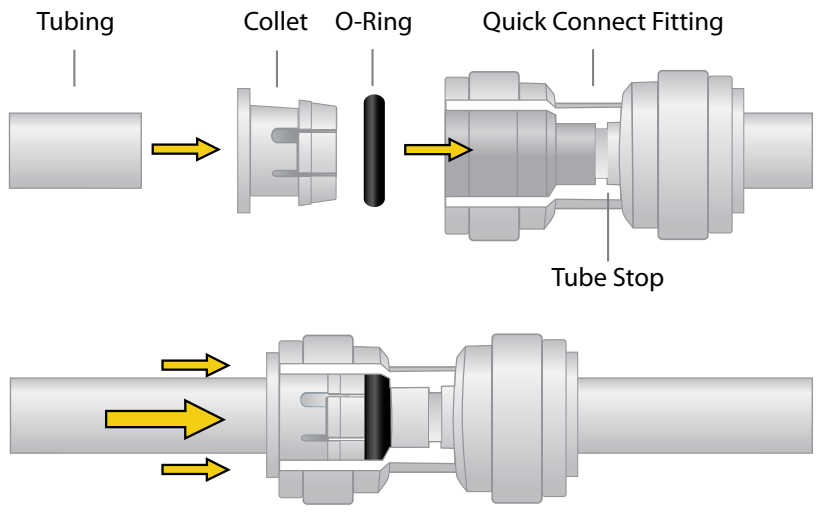

3. **INSPECT AND TEST**
Push and pull the tubing toward and away from the fitting to ensure that it has been installed properly. Test and inspect the installation for any leaks.



4. **TUBE REMOVAL**
Relieve pressure from the tubing and fitting. Push the collet flange against the fitting body while pulling the tubing away from the fitting to release it.



CAUTION!! IT IS RECOMMENDED THAT TUBING AND QUICK CONNECTION FITTINGS INSTALLATIONS ARE INSPECTED A MINIMUM OF ONCE PER YEAR AND PARTS REPLACED AS NEEDED.

9. SYSTEM START-UP

1. With all connections complete, turn on the cold water supply to the reverse osmosis system

IMPORTANT!! The Reverse Osmosis Main Water Shut Off valve must be open. This means the white handle on the valve must be in the horizontal position.

2. Immediately check entire reverse osmosis system and tank for leaks. If you notice any leaks turn off cold water supply and fix the leak.

IMPORTANT!! Ensure that the ball valve on the storage tank is open. This means that the valve handle is in line with the white tubing.

3. Once no leaks have been determined. Lift the lever on the Flowlok Valve and place compressed textile disc in holding cup and lower lever to allow water back into the system.

10. FLUSHING THE R.O. SYSTEM

1. The tank will fill in approximately 4-5 hours.
2. After the tank has filled, open the faucet and drain all the water from the tank until it is empty.
3. Within 2-3 hours after draining the first tank or water the water is ready for drinking.

CAUTION!! DO NOT USE FIRST TANK OF WATER FROM YOUR SYSTEM! The membrane contains a food grade preservative to protect it while in storage. This preservative is not harmful, however it does not have a pleasant taste. Therefore, do not use the first tank of water, which flushes the entire system removing any preservatives used during storage and preparing it to produce quality water.

CAUTION!! If installing the unit in new construction, ensure that house plumbing is flushed thoroughly before opening the water supply valve.

WARNING!! Discard all unused parts and packaging material after installation. Small parts remaining after the installation could be a choke hazard.

11. FILTER REPLACEMENT INSTRUCTIONS

STEP 1

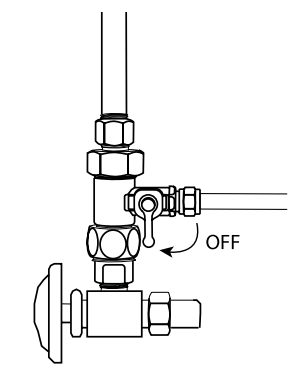

TURN WATER OFF

Shut-Off the water supply and tank valve. Open the faucet and let water run to aprox. 1-2 minutes to depressurize the system

Note: Place a towel or rag under the system to avoid water spills

STEP 2



DISCONNECT

Remove black Tubing with Inline Flow Restrictor and Fixed Elbow from Membrane

Note: See Section 8 on Page 14 for Tubing connection and disconnection instructions

STEP 3

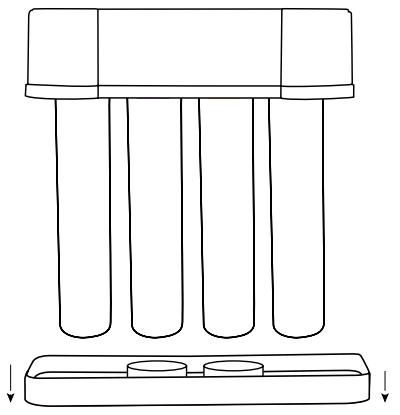

REMOVE TRAY

While the system is still mounted pull down on the safety tray and remove it.

CAUTION: Please be careful with tubing connections especially if system is not mounted.

STEP 4

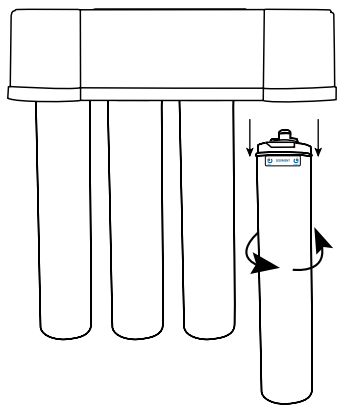

TWIST-OFF

Twist-off (towards the right) by hand each cartridge and pull down to remove

STEP 5

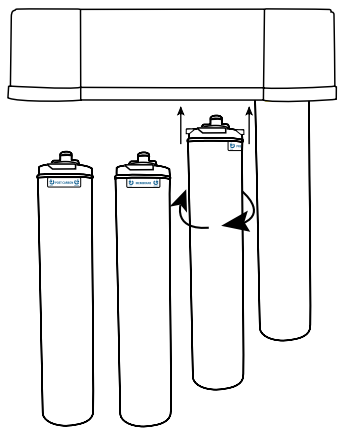

REPLACE FILTER

Insert and twist (towards the left) a new cartridge back on by hand. Cartridges labels must match and align.

Note: Make sure to discard all used cartridges according to your local law.

STEP 6



RECONNECT

Reinsert black Tubing with Inline Flow Restrictor and Fixed Elbow to Membrane

(Flow arrow on Flow Restrictor MUST face up)

STEP 7

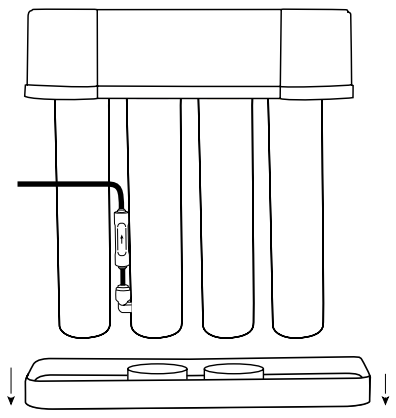

TRAY BACK ON

Insert safety tray back on by securing two of the middle cartridges down with hardware provided

STEP 8



TURN WATER ON

Turn-On the water supply and tank valve (Turn handle to horizontal position)

STEP 9

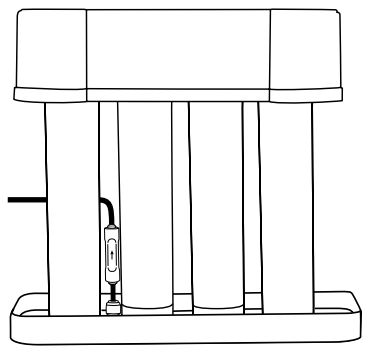

PURGE SYSTEM

See page 13 (Section 8 & 9) for instructions.

Note: Remove towel/rag once system has run and no leaks have been found

REVERSE OSMOSIS SYSTEM REPLACEMENT FILTERS

4 stage filtration offers you 5 Stage quality with only 4 filters to replace!



STAGE 1

SEDIMENT
PART#: BPGT-SED5-75

Replace Filter Every:
6 months - 1 year

Five Micron Sediment Prefilter reduces dirt, sand, silt, sediment, and rust.



STAGE 2

PRE-CARBON
PART#: BPGT-CB5-75

Replace Filter Every:
6 months - 1 year

Five Micron Coconut Shell Carbon Block Prefilter reduces chloramines, chlorine taste, and odor.



STAGE 3

MEMBRANE
PART#: BPGT-TW75

Replace Filter Every:
2 years

50 Gallon Per Day - Semi permeable Reverse Osmosis Membrane for reduction of dissolved solids, including a wide range of toxic heavy metals like lead and Pentavalent arsenic, Giardia Lamblia, Cryptosporidium cysts, Barium, Cadmium, Copper, Hexavalent & Trivalent Chromium, Cyst, Fluoride, Nitrate/Nitrite, Radium 226/228, Selenium, TDS and Turbidity. *Patent Pending*



STAGE 4

POST-CARBON
PART#: BPGT-CB5P-75

Replace Filter Every:
6 months - 1 year

Five Micron Coconut Shell Carbon Block Post/Polishing Filter works as a final stage filter for great tasting crystal clear water.

NOTE: The life of the filters and membrane depend on the quality of water supplied to the reverse osmosis system.

12. PUMP HOOK UP

1. Cut the white line going to your tank.
2. Take the union tank shut-off switch (TSO) and connect one side of the union to right side of cut tubing. Connect the other side of the union to the left side of the cut tubing.
3. Connect the TSO wire harness to the pump wire harness.
4. Plug the transformer wire harness to the pump wire harness.
5. Once secure, plug the transformer into an appropriate voltage electrical outlet.

TROUBLESHOOTING

NOT ENOUGH WATER FROM HOLDING TANK

POSSIBLE	CAUSE / SOLUTION
Angle Stop valve is plugged or closed.	Open valve or unclog.
Sediment/Carbon prefilter or Carbon Post Filter is clogged.	Replace Filters.
Low incoming water pressure.	Incoming water pressure must be above 40 PSI. Install a Booster Pump or Permeate Pump.
Reverse Osmosis Membrane is fouled.	Make sure incoming water pressure is within operating limits. Make sure drain line is not clogged. (See High TDS) Correct cause of fouling and replace RO Membrane.
Air pressure in holding tank is incorrect.	Empty water from holding tank. Air pressure in valve stem should be between 5 - 7 PSI.
Air Bladder in Holding Tank is ruptured.	Replace Holding Tank.
Holding Tank valve is closed.	Open valve.
No water to drain. Drain Flow Restrictor is clogged.	Replace Drain Flow Restrictor.
No water to drain. Air Gap Faucet is clogged.	Clear or replace Air Gap Faucet.
Check Valve on RO Membrane Housing is stuck.	Replace Check Valve.
The Automatic Shut-Off Valve is Malfunctioning.	Replace Automatic Shut-Off Valve. Replace Automatic Shut-Off Valve.

LOW WATER PRESSURE FROM DISPENSING FAUCET

POSSIBLE	CAUSE / SOLUTION
Air Pressure in Holding Tank is incorrect. This is the #1 reason for low flow from Reverse Osmosis Faucet.	Open faucet and empty water from holding tank. Shut off feed water to system and remove holding tank from under sink. (The tank is easier to work on.) Locate the air valve stem (just like on a car or bicycle tire) and add air. If there is still water in the tank, continue to add air until all the water is removed. Once all the water is removed, continue to add air and pressurize to 7 PSI. Re-install the tank under the sink, turn on the feed supply to the system and allow the tank to fill.
Carbon Post Filter is clogged.	Replace Post Filter.
Holding Tank Valve is partially closed.	Open Valve.
The Faucet is out of adjustment or faulty.	Repair or replace Faucet.
Heavy water use. Holding Tank is empty.	Allow Holding Tank to refill.
Low Water Production.	See previous section on Low Quantity of Water From Holding Tank.

TASTES AND ODORS IN PRODUCT WATER

POSSIBLE	CAUSE / SOLUTION
Carbon Post Filter is exhausted.	Replace Filter.
There is foreign matter in Holding Tank.	Clean, flush and sanitize the Holding Tank. Replace filters.
Product water and Drain water lines are reversed.	Correct plumbing.
Dissolved gases in feed water.	Pre-treat feed water to remove gases.
Increase in Product Water TDS.	See next table: High TDS in Product water and drain water lines are reversed CAUSE / SOLUTION Section.

DRAIN WATER OVERFLOWS AT THE AIR GAP FAUCET

POSSIBLE	CAUSE / SOLUTION
Air Gap is clogged.	Clear Air Gap
Drain line is clogged.	Clear tubing.
Drain flow rate is too high.	Replace Flow Restrictor.

PRODUCT WATER IS HIGH IN TOTAL DISSOLVED SOLIDS (TDS)

POSSIBLE	CAUSE / SOLUTION
Clogged Prefilter.	Replace Filter.
Low incoming water pressure.	Incoming water pressure must be above 40 PSI. Install a Booster Pump or Permeate Pump.
Reverse Osmosis Membrane is not correctly sealed in Membrane Housing.	Check that RO Membrane is correctly installed.
Reverse Osmosis membrane is expended.	If Membrane life is unusually short, find and correct the problem. (Average life is 2 - 3 years.) Replace RO Membrane.
Product water and drain water lines are reversed.	Correct plumbing.
No water to drain. Drain Flow Restrictor is clogged.	Replace Drain Flow Restrictor.
No water to drain. Air Gap Faucet is clogged.	Clear or replace Air Gap Faucet.
The Automatic Shut-Off Valve is not closing.	Repair or replace Automatic Shut-Off Valve.
New Carbon Postfilter has not been rinsed completely.	Drain Holding Tank twice to rinse new Carbon Postfilter.
The incoming feed water TDS has increased.	An increase in feed water TDS will also give an increase in Product Water TDS.

FAUCET LEAKS OR DRIPS

POSSIBLE	CAUSE / SOLUTION
Water leaks from faucet spout.	Adjust faucet by turning the tee bar located under the handle to provide a small amount of free play in the handle when shut off. Should this not work, repair or replace the faucet.
Leaks from beneath the handle.	Repair or replace the faucet.

NO WATER

POSSIBLE	CAUSE / SOLUTION
Water is shut off at stop valve	Open main stop valve. (See diagram on page 15)
Flowlok is set to off position	Make sure Flowlok main lever is in OPEN position. Lever should be lowered. (See diagram on page 10)

NOTICE

We recommend that before installing a water filtration system you have the water tested to determined actual water filtering needs.

NOTICE

If the filter housing is provided without filter cartridge it can be selected in the literature and pamphlets made available by Brita PRO Water System Authorized Dealers.

NOTICE

Use only original Brita PRO Water System Filter Cartridges. The use of non-original Brita PRO Water System cartridges voids the warranty.

NOTICE

Refer to the Brita PRO Platinum 4-Stage Quick Twist RO Warranty Form for complete warranty details.

Brita PRO by Protect Plus Pro LLC

420 3rd Avenue NW • Hickory, NC 28601 • (866) 985-2900
www.britapro.com

BRITA PRO® trademark and logo are registered trademarks of Brita LP and used under license by Protect Plus, LLC. All rights reserved.