WARRANTY INFO

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.
For Full Warranty Details, Visit: www.lacrossetechnology.com/support

CARE + MAINTENANCE

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use.
- Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov

LA CROSSE® TECHNOLOGY


WIRELESS TEMPERATURE SENSOR



Model: TX141-B4
DC: 081221

Power up

Insert 2-AA batteries into your Outdoor Sensor.

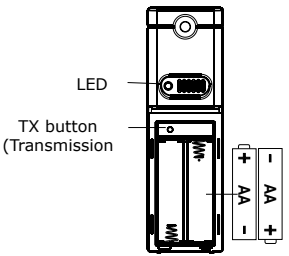

Power up as a Replacement Sensor

Refer to the owner's manual for your clock or weather station to see if you can Search for Sensor. If so, enable a search and press the TX button (transmission) on your sensor.

If there is no Search option, try this:

1. Bring your sensor inside next to the station and remove batteries from both devices.
2. Press any button at least 20 times, and then wait 15 minutes.
3. After the wait, install fresh batteries into both your sensor and station. Your outdoor temperature should return within the next few minutes.
4. Keep your sensor next to the station for another 15 minutes to establish a strong connection.
5. Once connection is reestablished, place sensor outside in a shaded location.

Position Sensor

Option 1:

- Install one mounting screw into a wall.
- Place the transmitter onto the screw.

Option 2:

- Insert the mounting screw through the front of the sensor and into the wall.
- Tighten the screw to snug (do not over tighten).
- Mount the temperature sensor on a north-facing wall or in any well shaded location. Sun will make it read high.
- Under an eave or deck rail is preferred.
- Be sure the outdoor sensor is mounted vertically to drain moisture.
- The maximum wireless transmission range to the weather station is over 330 feet (100 meters) in open air, not including walls or floors.

Watch sensor mounting video: bit.ly/TH_SensorMounting

Specifications

Temperature range: -40°F to 140°F (-40 °C to 60 °C)

Transmission range: Up to 330 feet
Transmission frequency: 433 MHz

Power requirements: 2 "AA" Alkaline batteries (not included)

Dimensions: 1.58" L x 0.83" W x 5.08" H