HP Chromebook 11 G6

Battery Replacement

HARDWARE REPAIR GUIDE | 8 STEPS | MODERATE



TOOLS NEEDED

#1 — **Phillips #1 screwdriver**
For the bottom-cover and battery screws.

PICK — **Plastic opening pick**
For releasing the keyboard/top-cover clips.

ESD — **ESD-safe workspace**
Recommended when working around internal components.

REPAIR OVERVIEW



Eight bottom screw locations



Battery removal / replacement

BEFORE YOU BEGIN

- Shut down the Chromebook completely and disconnect the charger and accessories.
- Work on a clean, flat, static-safe surface.
- Keep removed screws organized during the repair.
- Use a plastic opening tool around the keyboard assembly; avoid metal prying tools.

1 REMOVE THE BOTTOM SCREWS



WHAT TO DO

Turn the Chromebook upside down. Use a Phillips #1 screwdriver to remove the eight bottom screws.

NOTE

Keep the screws organized so each one can return to its original location.

2 RELEASE THE KEYBOARD ASSEMBLY




WHAT TO DO

Turn the Chromebook over and open the display. Insert a plastic opening pick into the seam around the keyboard assembly and carefully work along the edge to release the clips.

TIP

Use only enough force to release the clips. Do not push the opening tool deeply inside.

3 LIFT THE KEYBOARD CAREFULLY

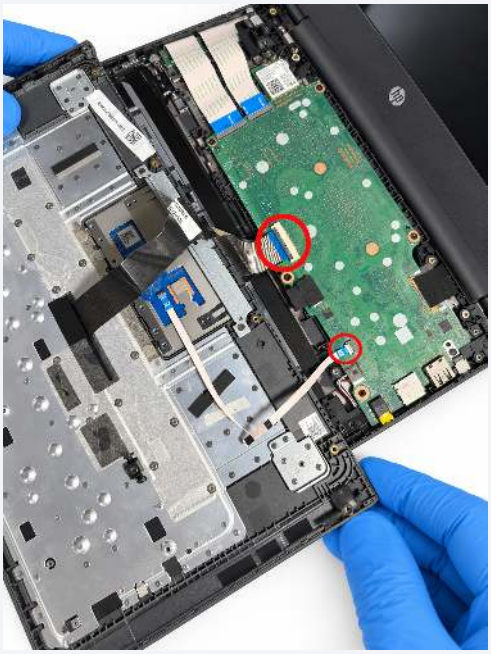


WHAT TO DO

Slowly lift the keyboard assembly and gently lay it down. The keyboard and touchpad ribbon cables are still connected to the motherboard.

WARNING

Do not yank or quickly lift the keyboard. The ribbon cables and connectors can be damaged.

4 DISCONNECT THE KEYBOARD RIBBON CABLE

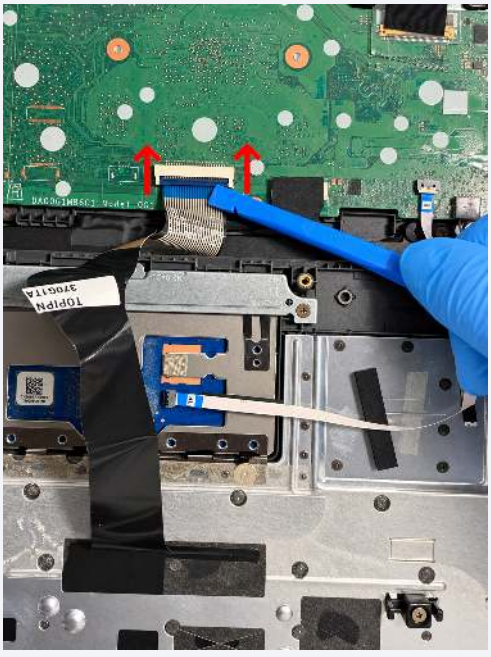

WHAT TO DO

Locate the larger keyboard ribbon cable. Gently lift the locking tab on the ZIF connector, then slide the ribbon cable straight out.

WARNING

The ZIF locking tab is small and fragile. Do not force it.

5 DISCONNECT THE TOUCHPAD RIBBON CABLE



WHAT TO DO

Repeat the same process for the smaller touchpad ribbon cable. Lift the ZIF connector's locking tab, then gently slide the ribbon cable out.

TIP

Pull the ribbon cable straight out rather than at an angle.

6 DISCONNECT THE BATTERY



WHAT TO DO

Lift the black protective tape covering the battery connector. Grip the connector itself and gently disconnect the battery cable from the motherboard.

TIP

Pull from the connector rather than tugging on the wires.

7 REMOVE THE BATTERY SCREWS



WHAT TO DO

Use the same Phillips #1 screwdriver to remove the screws that secure the battery to the Chromebook.

NOTE

Place the battery screws somewhere safe for reassembly.

8 REMOVE AND REPLACE THE BATTERY



WHAT TO DO

Carefully lift the battery out of the Chromebook. Position the replacement battery in the same location, then follow the previous steps in reverse order to reassemble the device.

TIP

Before closing the Chromebook, confirm that both ribbon cables and the battery connector are fully seated.