

NOTES: (UNLESS OTHERWISE SPECIFIED)

1) BL DATA SELECT: PLACE JUMPER OVER PINS 1 & 2 OF JP1/JP2 TO SELECT DATA INPUT FROM BACKLIGHTING BUS. PLACE JUMPER OVER PINS 2 & 3 OF JP2/JP3 TO SELECT DATA FROM THE RADAR ALTIMETER CONTROLLER MCU.
2) J17 IS USED FOR BOTH AN ENCODER AND LINEAR POTENTIOMETER. DO USE BOTH SIMULTANEOUSLY.
   USE PINS 1 – 3 FOR THE POT.
   USE PINS 2 – 4 FOR THE ENCODER.
3) SURFACE MOUNT COMPONENTS ARE ALL ON THE BACK SIDE OF THE BOARD.
4) THERE ARE THROUGH HOLE COMPONENTS ON BOTH SIDES. PLEASE REFER TO MODEL AND SILKSCREEN FOR PROPER PLACEMENT.
5) THIS IS A 6-LAYER PCB.


SERVO CONTROL DRIVER

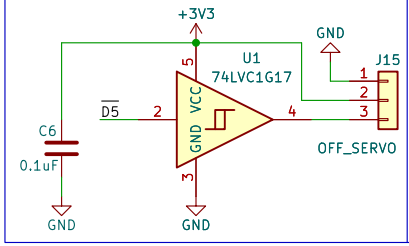


ENCODER OR POTENTIOMETER

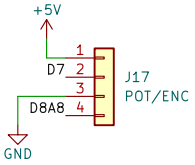


BL CONNECTORS

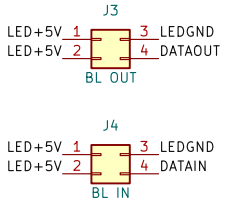


DIAL READOUT W/ LED'S

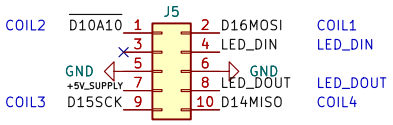


PUSH BUTTON




DIAL FACE INDICATOR LED'S

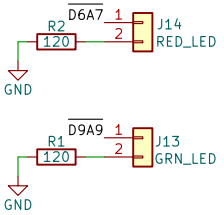


12V POWER CONDITIONING (12V –> 7.3V)

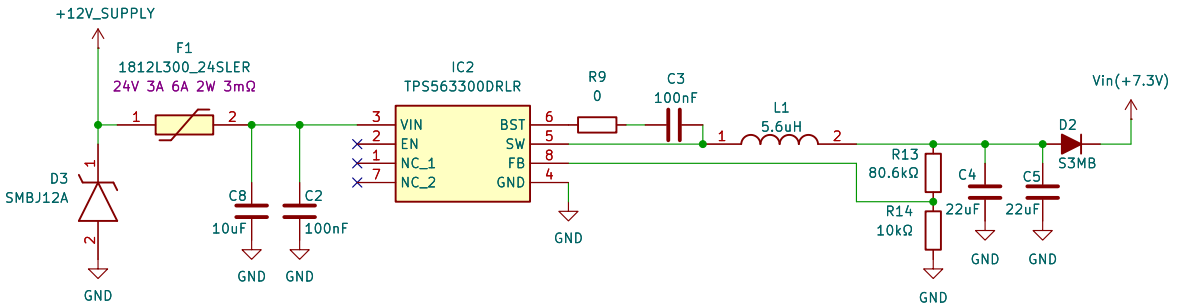


U0 ProMicro

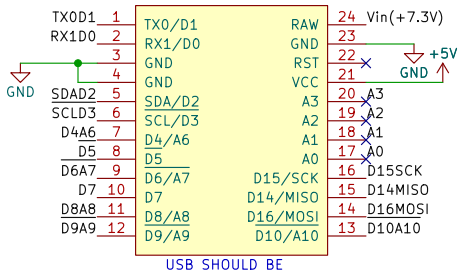


USB SHOULD BE ACCESSIBLE FOR PROGRAMMING



ABSIS BUS CONNECTORS



RS485 BUS CONTROLLER

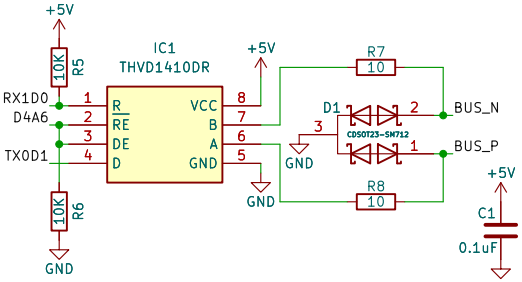

FIDUCIALS



MOUNT HOLES



PWR FLAGS



OPEN HORNET
www.openhornet.com

Sheet: CONTROLLER_Radar Altimeter
File: CONTROLLER_Radar Altimeter.kicad_sch

Title: Radar Altimeter Controller

Size: A	Date: 2026-10-12	**Rev: 5**
License: CC BY-NC-SA		Id: 1/1