
# Find the part. Then act.

Match each numbered marker on the drawing to its name. Every later page uses these names.

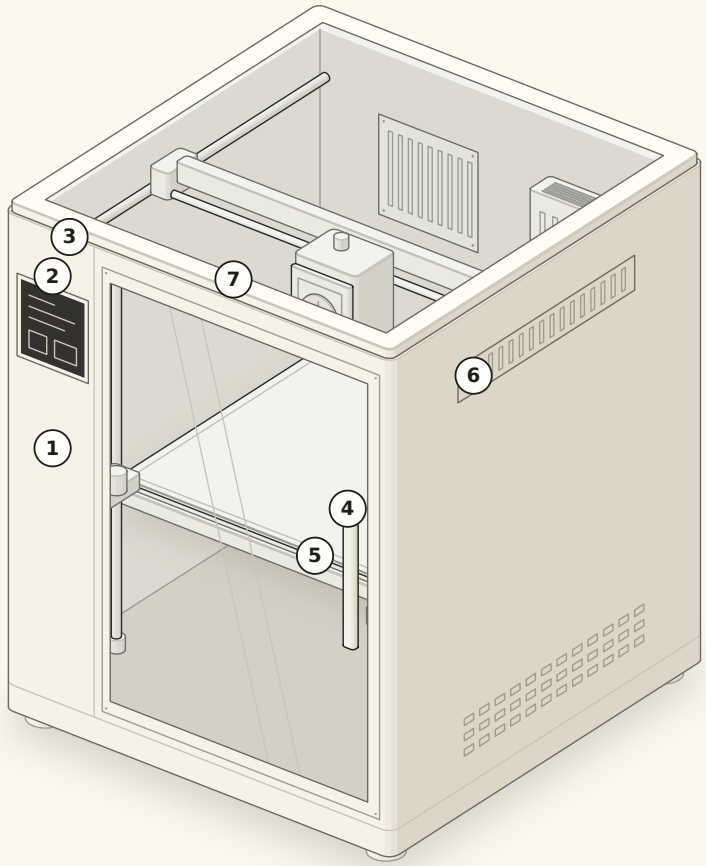


**FRONT + RIGHT SIDE**
Door glass and top glass drawn see-through to show the chamber.

1. **USB port**
   Front left, below the screen. Not a care point.
2. **Screen**
   Read messages and service reminders here. Photograph any error.
3. **Camera**
   Small lens at the upper left inside the chamber. Clean monthly, page 4.
4. **Door**
   Hold the handle on its right edge. Open it to reach the print and plate.
5. **Heated bed + plate**
   The thin print plate rests on the bed, held by two rear pins.
6. **Air intake / handle**
   Slotted recess high on the right side. Keep it clear; lift here.
7. **Top glass**
   The AMS can sit on top. Keep the glass clean and unloaded at its edges.




**Before inside work:** let it cool, switch off and unplug. Keep hands out while parts move. The bed and nozzle stay hot for several minutes after a print.

Drawn from the Bambu Lab P2S User Manual, p. 11 (front view). Inner parts are placed schematically.
HELLHOUND AUDIO / FIELD EDITION 03

# Reset the station

Finish with a clear plate, a clear waste path and tools put away, so the next person starts clean.

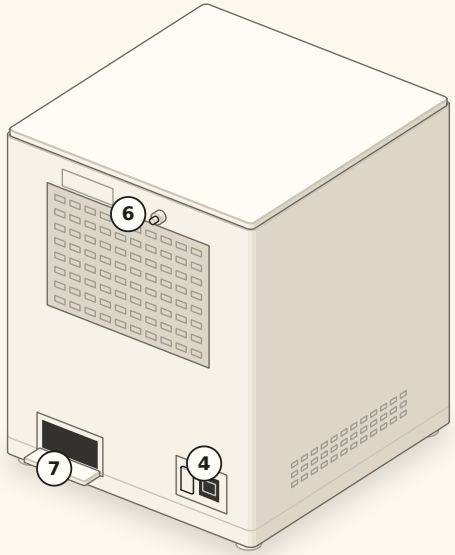



**BACK + LEFT SIDE**
Numbers match Bambu's rear drawing.

**4 Power switch + socket**
Lower corner of the back. After cooling: switch off, then unplug at the wall.

**7 Waste outlet**
The chute at the bottom of the back. Clear loose scraps; empty the bin below it.


**6 Rear vents**
The large grille. Keep the waste bin, cables and boxes at least a hand's width away.

## 1 Lift the cool plate

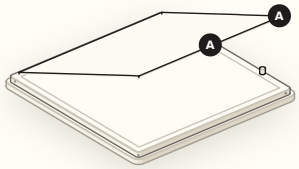



Wait until the bed is cool. Hold the plate at its edges (**A**) and lift it off the pins.

## 2 Flex, then clear

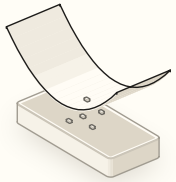

Over the bin, bend the plate gently to pop the print and loose bits off. Never bend it sharply.

## 3 Seat it flat ✓

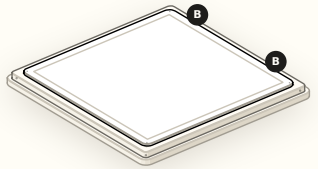


No bits under it. Slide its rear edge against the two pins (**B**) so it lies flat.


If waste is stuck inside the outlet, stop and follow the P2S clog guide. Do not poke blindly into the chute.

Drawn from the Bambu Lab P2S User Manual, p. 12 (rear view). Action drawings are simplified.

# Wash the print plate


Take the plate to the sink. Water stays away from the printer. Fingerprints are the usual reason prints stop sticking.

### 1 Grip the edges

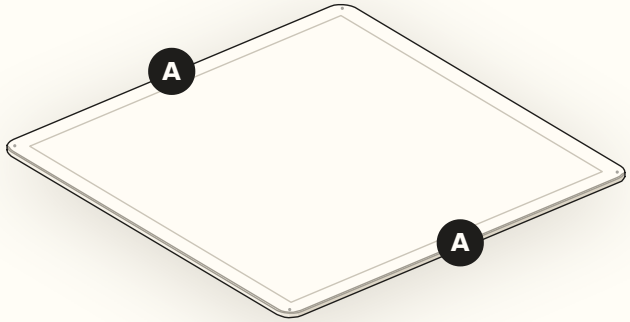



Cool first. Hold the plate only at its edges (**A**); keep fingers off the print surface.

### 2 Wash with soap

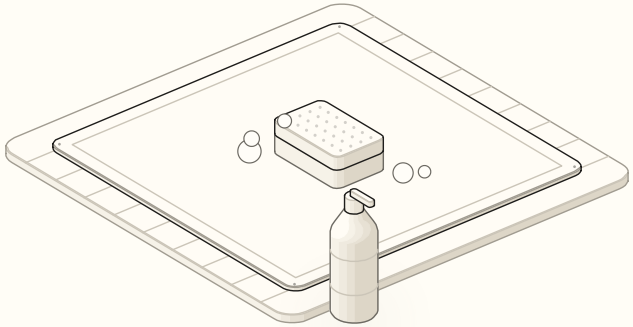


Warm water, a few drops of dish soap and the soft side of a sponge. Wash the whole surface.

### 3 Rinse and dry

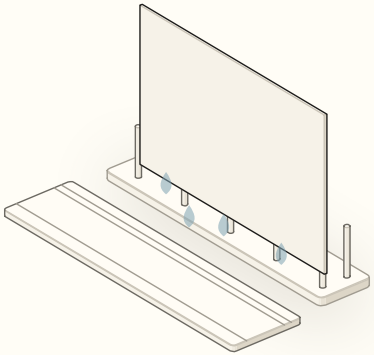

Rinse off all soap; leftover soap stops adhesion too. Stand it to drain, then dry both sides with a lint-free towel.

### 4 Check, then set down ✓

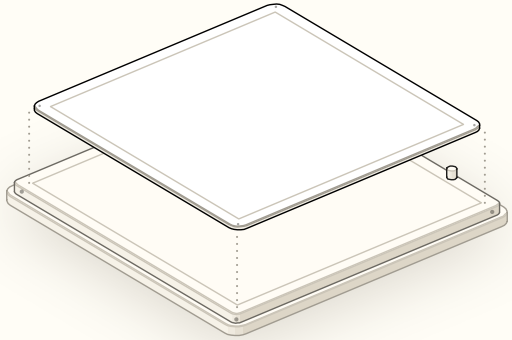


Clear any bits on the bed. Lower the plate straight down onto the pins. It should lie flat.

For the textured PEI plate in your photo. Do not scrape it with a sharp metal blade, and do not use abrasive pads or solvent wipes.

Care reference: Bambu Lab P2S User Manual, pp. 109-110. Diagrams show the actions, not scale.

# Clear dust from the right spots


Use a soft cloth or brush. Pick dust up; do not blow it deeper inside.

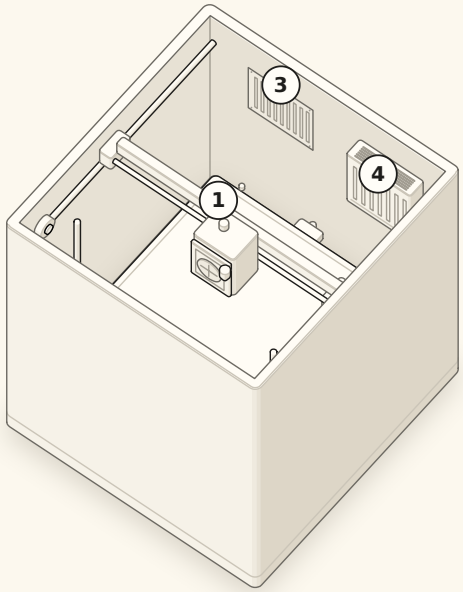


**VIEW FROM ABOVE**
Top glass omitted to show the chamber.


1. **Purge wiper**
   Rear left of the chamber. Remove loose scraps around it with tweezers.
3. **Air filter cover**
   Slotted cover on the back wall. Brush dust off the slots.
4. **Airflow unit**
   Back wall, right. Keep the air path open and the grille free of strings.

## A Camera: once a month



Upper-left inside corner (part 3, page 1). Wipe the lens with a lightly damp swab. No spray.

## B Filter: check every 3 months

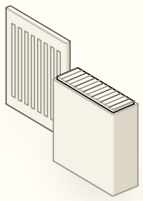

Dust off the cover. Replace a dirty or used-up filter with the right P2S filter, using the P2S steps.


Cool, switch off and unplug before cleaning. Never spray liquid into the printer.

Drawn from the Bambu Lab P2S User Manual, p. 13; care instructions pp. 105-111. Inner positions are schematic.

# Keep filament dry and free


Filament is the plastic thread. It needs a smooth, dry path from the spool to the printer.

## 1 Check the roll ✓

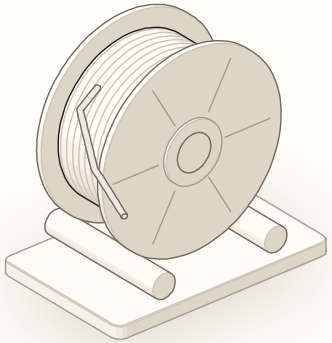


The spool must turn freely on its rollers. Remove tangles and crossed loops before use.

## 2 Check the tube path

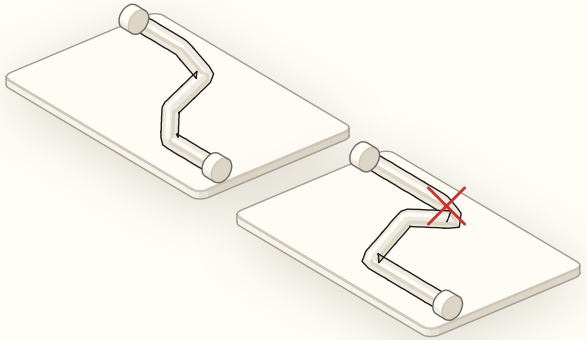


Use gentle bends (left). A sharp kink (right) pinches the tube and stalls the feed.

## 3 Close and check

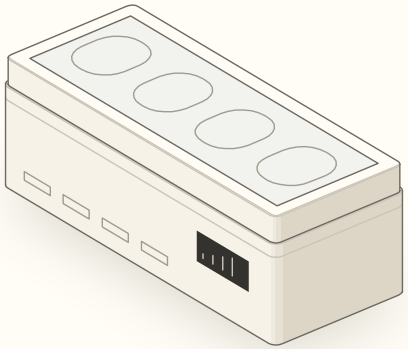

Shut the AMS lid fully. Check its humidity reading on the screen or in the app.

## 4 Store the loose end

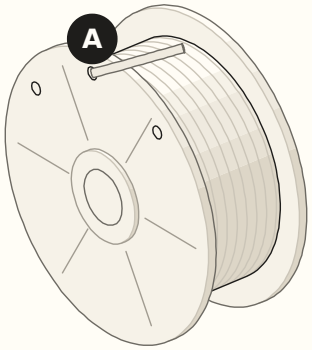


Push the end through a flange hole (**A**) so it cannot unwind and tangle.


Drying packs absorb moisture; replace used-up packs. For heat drying, use the material's own settings.

AMS guide: wiki.bambulab.com/en/ams-2-pro/maintenance/basic-maintenance. Drawings are schematic.

# Match the part to the lube


Clean first: wipe off old oil, grease and dust. Use the P2S guide to reach and move each part safely.

### A Smooth rod → oil




Smooth, shiny sides. Wipe clean, then apply a small drop of oil as the guide shows.

### B Threaded screw → grease

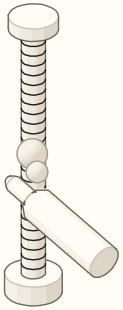


Spiral grooves. Spread a thin layer of grease along the long threaded part.

### C Belt → no lube ✕

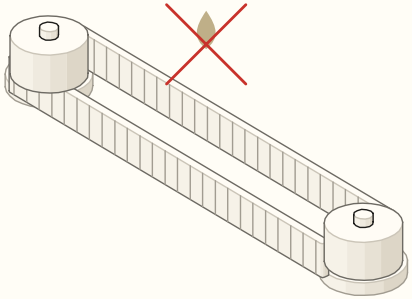

Toothed rubber belts stay dry. Never put oil or grease on them.

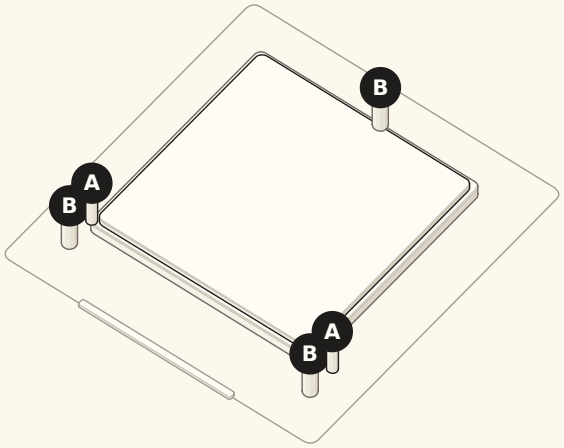


**WHERE TO LOOK**

**A Front corners**
Each front corner has a smooth rod (A) next to a threaded screw (B).

**B Rear centre**
One more threaded screw sits near the centre of the back.


**↑ Up top**
The X/Y guide rods also take oil. Follow the linked P2S guide.

This is a part map, not a take-apart guide. Base bearings have separate oil points: use Bambu's steps.

Lubrication reference: Bambu Lab P2S User Manual, pp. 107-109. Locations are schematic, not dimensions.

# Know the print head

Use this map to name the part before you clean it or ask for help.

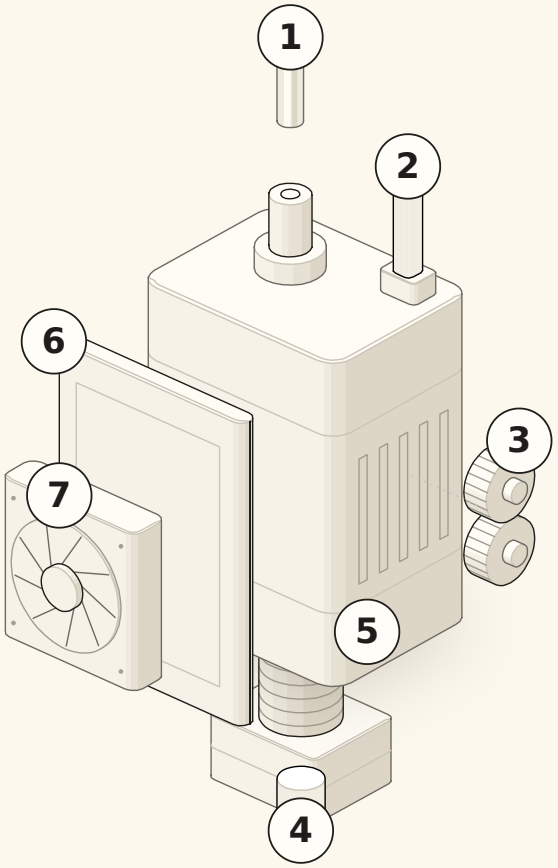



**EXPLODED VIEW**
For finding parts only.

1. **Filament inlet**
   Where the plastic enters, through the tube coupler on top.
2. **Cutter lever**
   Moves the filament cutter. Do not force it.
3. **Feed gears**
   Two toothed gears that grip and push the plastic.
4. **Hotend**
   Heatsink, heater block and nozzle. Melts plastic. Let it cool first.
5. **Body**
   The frame that holds everything.
6. **Front cover**
   Comes off first. Clips to the body.
7. **Fan**
   Cools the print. Keep its blades free of strings.


**LOOK FOR THESE CHANGES**

**No plastic buildup** ✓

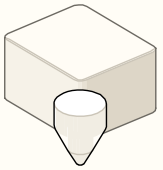

Clean metal tip.

**Stuck plastic: stop** ✗

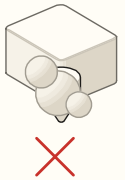

Blob around the nozzle.


Also check the soft nozzle cover, the cutter and the wiping pad. Replace worn parts with the right P2S parts. The exploded view does not show a safe order for taking the head apart.

Drawn after the Bambu Lab P2S User Manual, p. 14. Replacement procedures: pp. 111-114.

# Read the first layer


Watch the first layer through the door. These samples show what to look for.

### Ready ✓

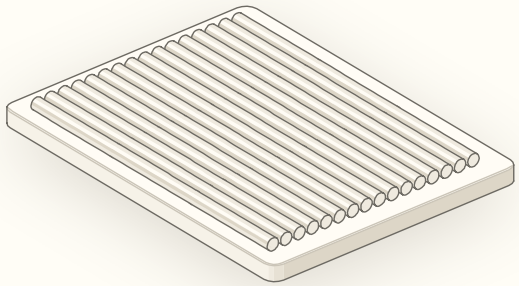


Lines touch each other and lie flat.

### Gaps ✗

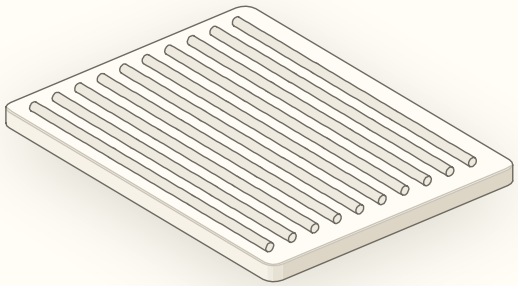

Spaces between the lines.


### Lifting ✗

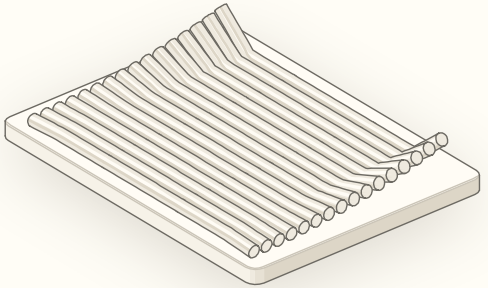

Edges and corners curl off the plate.


**SOMETHING LOOKS OR SOUNDS WRONG? PAUSE AND READ THE SCREEN. THEN:**

### 1 Check the plate

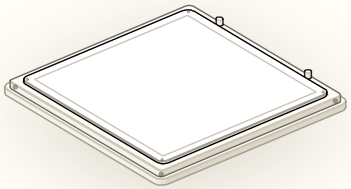


Is it clean (page 3) and flat on its pins (page 2)?

### 2 Check the feed

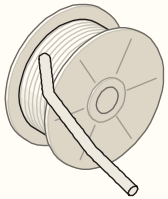

Is a spool stuck or a tube pinched (page 5)?

### 3 Save the error

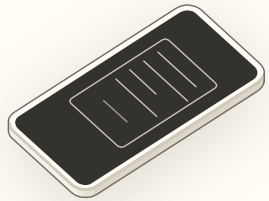

Take a photo of the full message, including the code.

Gaps and lifting can have several causes. Use the error guide before changing settings or retrying.

First-layer reference: Bambu Lab P2S User Manual, pp. 85-86. Samples are enlarged examples.

# Give each task a time

Use this as your shop plan. The printer's own reminders still come first.

| | WHEN | WHAT TO DO | GO TO |
|---|---|---|---|
|  | **After each print** | Clear scraps. Empty waste. Put tools away. | Page 2 |
|  | **Each new spool** | Check the roll, tube path and dry storage. | Page 5 |
|  | **Each week** | Wash the plate. Clear loose dust. | Pages 3-4 |
|  | **Each month** | Clean the camera. Check the print head. | Pages 4 and 7 |
|  | **Every 3 months** | Check the filter cover and filter condition. | Page 4 |
|  | **Service reminder** | Clean and lube the named moving parts. | Page 6 + Bambu guide |
|  | **After moving / service** | Run the printer's calibration check. | Printer calibration menu |

Busy shop? Check more often. If use exceeds 8 hours a day, Bambu calls for shorter service intervals.


Date each service on the next page. A short note is enough for the next person to pick up the work.

Schedule: Bambu Lab P2S User Manual, pp. 105-106. Weekly dust checks are a workshop habit.

# Leave a useful record

Write the date, the task, your initials and the next check. Parts replaced? Note the name. Error? Save the code or a photo.

| DATE | WHAT I DID / WHAT I FOUND | INITIALS | NEXT CHECK |
|---|---|---|---|
| *Oct 8* | *Washed plate; no damage* | *JC* | *Next week* |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

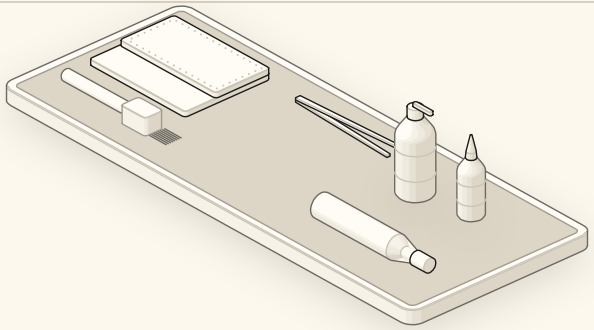

**KEEP NEARBY**

Soft cloth, soft brush, tweezers, dish soap, and the correct oil and grease for the P2S.

Keep this page by the printer. When it is full, print a new copy and file the old one.

Sources: Bambu Lab P2S User Manual; AMS 2 Pro maintenance guide. All drawings are original.