


05 - CONNECTOR WIRING - REV B2

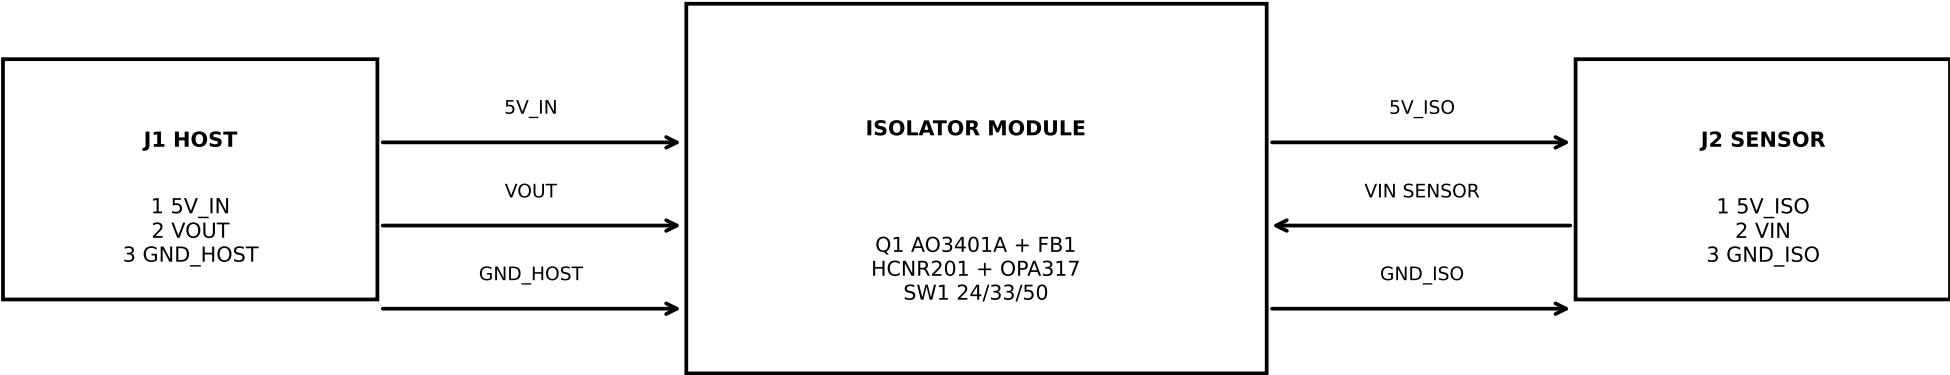

Installation requirements

Use a regulated/current-limited 5 V host supply. Rev B2 has no on-board PPTC and no input TVS.

Do not connect GND_HOST to GND_ISO. The sensor must be powered from J2 pin 1 and J2 pin 3.

Select MODE 24, MODE 33, or MODE 50 before operation. Do not modify the switch while calibrating.

Host-side ADC clamp protection remains the responsibility of the host board.