

7V-F10

4K

MEN




Setup5

1 5/5

Display Media Info.

Version

Setting Reset



? MENU



SONY



Quality/Image Size 1

1/11 ▶

File Format

JPEG

JPEG Quality

Standard

JPEG Image Size

L: 16M

Aspect Ratio

1:1

Panorama: Size

-

Panorama: Direction

-



SONY

MENU



Quality/Image Size2

◀ 2/11 ▶

Long Exposure NR

Off

High ISO NR

Normal

Color Space

sRGB

Lens Comp.



SONY

MENU



Shoot Mode/Drive

< 3/11 >

Shoot Mode**MR Recall Camera Set. 1**

Superior Auto Img. E...

Drive Mode

Single Shooting

Bracket Settings

Interval Shoot Func.

MR Camera Set. Memory

SONY

MENU



AF1

◀ 4/11 ▶

Focus Mode

Manual Focus

Focus Area

Zone

Focus Area Limit

Face/Eye AF Set.

AF w/ shutter

On

Pre-AF



SONY

MENU



AF2

◀ 5/11 ▶

Focus Frame Color

White


AF Area Auto Clear

Off

Disp. cont. AF area

On

AF Micro Adj.



SONY

MENU



Exposure

◀ 6/11 ▶

Exposure Comp. ±0.0

ISO ISO 3200

Metering Mode Multi

Face Priority in Multi... Off

Exposure step 0.3EV



SONY

MENU



Flash

◀ 7/11 ▶

Flash Mode

Flash Off

Flash Comp.

±0.0

Exp.comp.set

Ambient&flash

Wireless Flash

Off

External Flash Set.



SONY



Color/WB/Img. Processing1 ◀ 8/11 ▶

White Balance

C.Temp./Filter

Priority Set in AWB

Standard

DRO/Auto HDR

Off

Creative Style


Standard

Picture Effect

Off

Picture Profile

PP1



SONY



MENU



Color/WB/Img. Processing2 9/11

Soft Skin Effect

Off



SONY

MENU



Focus Assist

< 10/11 >

Focus Magnifier

Focus Magnif. Time 2 Sec

Initial Focus Mag. x1.0

AF in Focus Mag. On

MF Assist On

Peaking Setting



SONY

MENU



Shooting Assist

<11/11

Product Showcase Set Off

Face Registration


Off

Regist. Faces Priority

Self-portrait/ -timer

Off

Off



SONY

MENU



1



2



Movie1

1/9

►■ Shoot Mode

MR Recall Camera Set. 1

S&Q Shoot Mode

Program Auto

►■ USB Streaming


►■ File Format

XAVC S HD

►■ Record Setting

60p 50M Super
35mm

S&Q S&Q Settings



SONY

MENU



1



2



Movie2

◀ 2/9 ▶

Px Proxy Recording

Off

▶■ AF Transition Speed

-

▶■ AF Subj. Shift Sens.

-

▶■ Auto Slow Shutter


On

▶■ Initial Focus Mag.

x1.0

Audio Recording

On




SONY

MENU



Movie1



Movie2



Movie3

3 / 9

Audio Rec Level


Audio Level Display On

Audio Out Timing Live

Wind Noise Reduct. Off

SteadyShot Off

SteadyShot Settings



SONY

MENU



Movie4

◀ 4/9 ▶

▶■ Marker Display

Off

▶■ Marker Settings

▶■ Emph disp dur REC

On

REC Lamp

On

Movie w/ shutter

Off



SONY

MENU



Shutter/SteadyShot

< 5/9 >

Silent Shooting

On

e-Front Curtain Shutter

-

Release w/o Lens

Enable

Release w/o Card

Enable

SteadyShot

Off




SONY


MENU



1



2

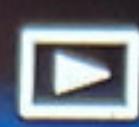

Zoom

◀ 6/9 ▶


Zoom Range

Optical zoom only

Zoom Lever Speed

Custom Key Z. Speed

Remote Zoom Speed



SONY

MENU



1



2



Display/Auto Review

◀ 7/9 ▶

DISP Button

Zebra Setting

Grid Line

Off

Exposure Set. Guide


On

Live View Display

Setting Effect ON

Auto Review

Off



SONY

MENU



1



2



Custom Operation1

8/9

Custom Key

Custom Key

Custom Key



Function Menu Set.

Dial/Wheel Setup

OTv Av

Dial/Wheel Ev Comp

Off




SONY

MENU



1



2



Custom Operation2

◀ 9/9

Func. of Touch Operatiοr

Touch Focus

Dial / Wheel Lock

Unlock

Audio signals

On



SONY

MENU



Network1

1/2 ▶

Smartphone Connect

Send to Smartphone...

PC Remote Function

Airplane Mode

On

Wi-Fi Settings

Bluetooth Settings



?

MENU



SONY

MENU



1



2



Network2

◀ 2/2

□ Location Info. Link Set.

Bluetooth Rmt Ctrl Off

Edit Device Name

Security(IPsec) Off

Reset Network Set.



MENU



SONY

MENU



1



2



Playback1

1/3 ▶

Protect

Rotate

Delete

Rating

Rating Set(Custom Key)

Specify Printing



SONY

MENU



1



2



Playback2

◀ 2/3 ▶

Photo Capture

Enlarge Image

Enlarge Initial Mag.

Standard. Mag.

Enlarge Initial Position

Focused Position

Cont. PB for Interval

PB Speed for Interval

9 (Fast)



SONY

MENU



1



2



Playback3

◀ 3/3

Slide Show

View Mode

Image Index

Display as Group

On

Display Rotation

Auto

Image Jump Setting



? MENU



SONY

MENU



1



2



Setup1

1/5 ▶

Monitor Brightness

Manual

Gamma Disp. Assist

Off

Volume Settings

7

Delete confirm.

"Cancel" first

Display Quality

Standard

Power Setting Option



SONY

MENU



1



2



Setup2

2/5

NTSC/PAL Selector

Cleaning Mode

Touch Operation

Off

TC/UB Settings

HDMI Settings

4K Output Select



SONY

MENU



1



2



Setup3

◀ 3/5 ▶

USB Connection

USB LUN Setting

Single

USB Power Supply

Off

Language

English

Date/Time Setup

Area Setting



SONY

MENU



Setup4

◀ 4/5 ▶

Format


Select REC Folder

New Folder

File/Folder Settings

File Settings

Recover Image DB



SONY

MENU



1



2



Setup5

◀ 5/5

Display Media Info.

Version

Setting Reset



?

MENU



SONY

MENU



1



2



My Menu1

1/3 ▶

File Format

JPEG

Aspect Ratio

1:1

High ISO NR

Normal

Shoot Mode

MR Recall Camera Set. 1


Drive Mode

Single Shooting

Interval Shoot Func.

SONY

MENU

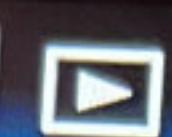

My Menu2

◀ 2/3 ▶

MR Camera Set. Memory

White Balance

C.Temp./Filter

Picture Profile

PP1



SONY

Fn



MENU



1



2



My Menu Setting

3/3

Add Item

Sort Item

Delete Item

Delete Page

Delete All

Display From My Menu

Off



?

MENU



SONY



Shoot Mode/Drive

◀ 3/11 ▶

Shoot Mode

Recall Camera Set. 1

Superior Auto Img. E...


Drive Mode

Single Shooting

Bracket Settings

Interval Shoot Func.

Camera Set. Memory



SONY

Interval Shoot Func.

1 2

Interval Shooting Off

Shooting Start Time 1sec

Shooting Interval 3sec

Number of Shots 30

AE Tracking Sensitivity Mid

Shooting Time: 0h01min27sec

SONY

Interval Shoot Func.

1 2

Silent Shoot. in Interval

On

Shoot Interval Priority

Off

Shooting Time: 0h01min27sec

SONY

MR Memory

1

M1 M2 M3 M4



M

2"

F--

ISO
3200



1:1 16M

STD

60p

MF



[] AF
ON

OFF

A-B: A0

G-M: G0

±0

±0

±0

K

4000K

D-R

OFF

Std.

OFF

Select Enter

SONY



Fn

DI



+

Registered.

SONY

MR1 M

NO CARD

1:1 16M

STD

100%




R



OFF

7



MF

4000K



D-R

AF
ON

OFF

OFF

Std.

±0±0±0

2"

F--

M.M. -2.0

Av

Tv

OFF

ISO 3200

SONY

Fn



MENU



1



2



Color/WB/Img. Processing 1 8/11

White Balance

C.Temp./Filter

Priority Set in AWB

Standard

DRO/Auto HDR

Off

Creative Style

Standard

Picture Effect

Off

Picture Profile

PP1



SONY

MENU

▲
WB
◆

AWB



K
◆

1

2

▼

White Balance

C.Temp./Filter



4000K

A-B: 0
G-M: 0

↔ Select Color Temp. MENU Cancel

SONY



Fn





Color/WB/Img. Processing1 8/11

White Balance

C.Temp./Filter

Priority Set in AWB

Standard

DRO/Auto HDR

Off

Creative Style


Standard

Picture Effect

Off

Picture Profile

PP1



SONY

MENU

Picture Profile

PP1

PP
OFF

PP1

PP2

PP3

↔ Select • Enter MENU Cancel

SONY

MENU

PP1

Black Level

0

Gamma

Still

Black Gamma

Knee

Color Mode

Still

Saturation

0

MENU




SONY

MENU



1



2



Movie3

◀ 3/9 ▶

Audio Rec Level

Audio Level Display

On

Audio Out Timing

Live

Wind Noise Reduct.

Off

▶■ SteadyShot

Off

▶■ SteadyShot Settings



Fn

SONY

AV-FIN 4K
► SteadyShot Settings

1

► SteadyShot Adjust.

Manual

► (Hand icon) Focal Length



SONY



Fn





1



2



Shutter/SteadyShot

5/9


Silent Shooting On

e-Front Curtain Shutter -

Release w/o Lens Enable

Release w/o Card Enable

SteadyShot Off



SONY

MEN



Network1

1/2 ▶

Smartphone Connect

Send to Smartphone...

PC Remote Function

Airplane Mode

On

Wi-Fi Settings

Bluetooth Settings



MENU



SONY

ME

Smartphone Connect

1

Smartphone Connection **Off**

Connection

Cnct. while Power OFF **Off**

Remote Shoot Setting

Always Connected **Off**



?

MENU



SONY



1



2



Network1

1/2 ▶

Smartphone Connect

Send to Smartphone...

PC Remote Function

Airplane Mode

On

Wi-Fi Settings

Bluetooth Settings



MENU



SONY

PC Remote Function

1 2 3

PC Remote

On

PC Remote Cnct Method

USB

Pairing

Cannot recognize the USB cable.

SONY



1



2



Network1

1/2 ▶

Smartphone Connect

Send to Smartphone...

PC Remote Function

Airplane Mode

On

Wi-Fi Settings

Bluetooth Settings



MENU



SONY

7V-F10

4K

MENU

Wi-Fi Settings

1

WPS Push

Access Point Set.

Display Wi-Fi Info.

SSID/PW Reset



MENU



SONY



Network1

1/2 ▶

Smartphone Connect

Send to Smartphone...

PC Remote Function

Airplane Mode

On

Wi-Fi Settings

Bluetooth Settings



SONY

Bluetooth Settings

1

Bluetooth Function Off

Pairing

Disp Device Address



SONY



Setup4

◀ 4/5 ▶

Format

Select REC Folder

New Folder

File/Folder Settings

File Settings

Recover Image DB



SONY

 File/Folder Settings

1

File Number

Series

Set File Name

DSC

Folder Name

Standard Form

DSC01234

SONY